

LS-A0055


Scale Model 1/14

TecniModel.com

www.tecnimodel.com

mail: support@tecnimodel.com

tel: 04 75 03 13 87

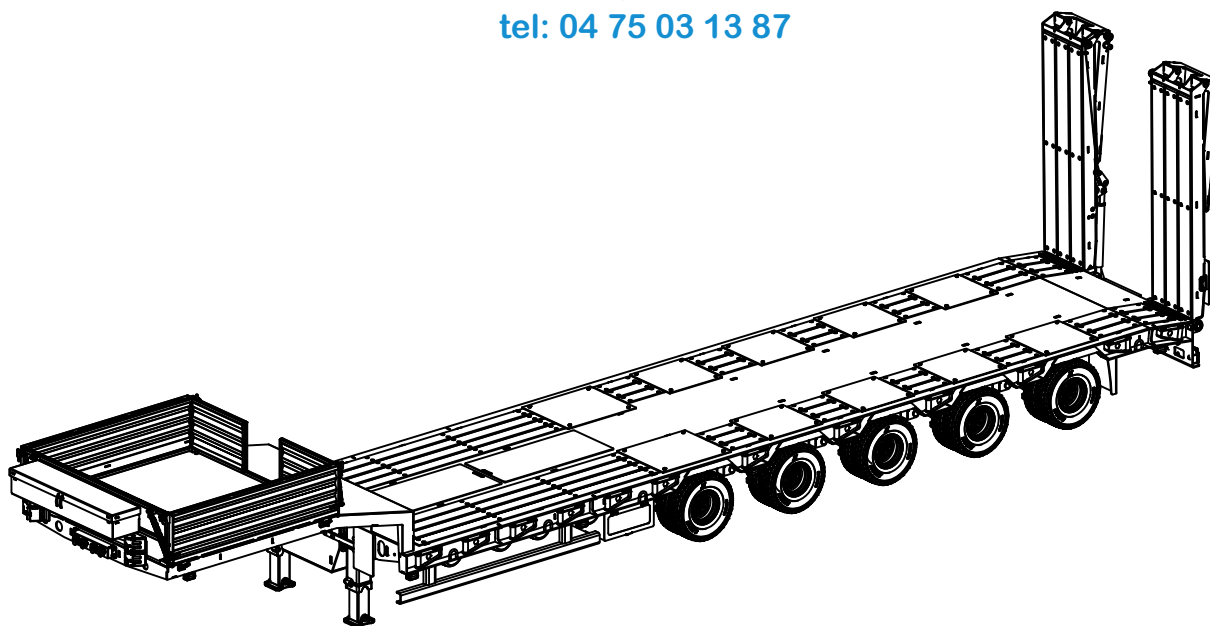

致谢

非常感谢您对雷鲨模型科技有限公司产品的信任与支持，请在使用或安装本产品之前，请先阅读本产品使用安装说明书，以便正确且安全的使用，谢谢。说明书最终解释权归雷鲨模型科技有限公司所有。如果想关注最新产品资讯请访问www.rclesu.com或者lesu168.taobao.com。或者关注微信公众号RCLESU



注意事项

非常重要：使用前请仔细阅读该说明书，熟悉安装流程及产品特性。错误的操作，会对产品、个人及他人财产和人身安全造成损害。这是一个复杂的LESU产品，不是一个玩具。所以需要具有一定的机械常识，且在安装过程中需要小心谨慎。如果不能在安全的情况下操作本产品，可能会导致产品或其他财产受到损坏。儿童在使用本产品时必须要有成年人监督。除雷鲨模型科技有限公司提供的使用说明外，不得与不兼容的组件一起使用或更改本产品本手册所包含的安全、操作和维护说明。在安装或使用前，请务必阅读并遵循手册中的所有说明和警告，以便正确操作，避免产品损坏或受到人身伤害。安装完成之后请保留此安装说明书，以供日后参考。

本产品并非玩具，不建议14岁以下儿童使用。

- 1、该模型由无线电信号控制，可能会受到您控制范围之外的其他因素干扰。这种因素可能会导致失控，因此建议始终保持在安全范围之内操作，这将可以避免受到碰撞或者伤害。
- 2、请勿在遥控器电量低情况下操作模型。
- 3、严禁在车辆、人流密集等场所操作模型，请在空旷的场所下操作。
- 4、请仔细遵守本说明书以及您使用的其他设备（充电器，可充电电池组等）的说明和警告。
- 5、将产品中所包含的液体物品、小零件和电子设备放在儿童接触不到的地方，谨防吞食。
- 6、使用螺丝刀、美工刀或其他工具时请务必小心，防止受伤。
- 7、某些零件可能存在锋利的边缘，在安装及维护过程中请小心。
- 8、在操作模型过程中请遵循以下步骤，否则将可能导致失控等事故。
 - (1)首先将模型放置盒子或者架子上，使模型的车轮或者履带不接触地面。
 - (2)打开遥控器。
 - (3)打开接收器。
 - (4)连接电池。关闭的顺序相反。
 - (1)断开电池。
 - (2)关闭接收器。
 - (3)关闭遥控器。
- 9、在操作过程中请勿触摸旋转中的零件，例如车轮、齿轮、轴等零件，否则可能会夹住手指、头发或者衣服，从而导致事故的发生。
- 10、电池、电机散热器等在使用过后温度可能会升高，请先等待冷却之后再进行拆卸。
- 11、在电子产品接线时需要注意绝缘，否则可能引起短路，导致产品损坏或人员受伤。



LESU
MODEL RACING

TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

NOTICE

All instructions, warranties and other collateral documents are subject to change at the sole discretion of LESU Model Technology Co.,Ltd.

LESU Model Technology Co., Ltd For up-to-date product literature, visit www.rclesu.com or lesu168.taobao.com and click on the products tab for this product.

SAFETY PRECAUTIONS AND WARNINGS

WARNING: Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury. This is a sophisticated LESU Model Technology Co., Ltd product and NOT a toy. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this Product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. Do not use with incompatible components or alter this product in any way outside of the instructions provided by LESU Model Technology Co., Ltd.

This manual contains instructions for safety, operation and maintenance. It is essential to read and follow all the instructions and warnings in the manual, prior to assembly, setup or use, in order to operate correctly and avoid damage or serious injury. Please keep all instruction information for future reference

Age Recommendation: Not for Children under 14 years. This is not a toy.

- 1、 This model is controlled by a radio signal subject to interference from many sources outside your control. This interference can cause momentary loss of control, so it is advisable to always keep a safe directions around your model as this margin will help avoid collisions or injury.
- 2、 Never operate your model with low transmitter batteries.
- 3、 Always operate your model in open spaces away from full-size vehicles, traffic and people.
- 4、 Carefully follow the directions and warnings for this and any optional support equipment(chargers, rechargeable battery packs, etc.)you use.
- 5、 Keep all chemicals, small parts and anything electrical out of the reach of children.
- 6、 Exercise caution when using tools and sharp instruments.
- 7、 Take care during maintenance as some parts may have sharp edges.
- 8、 Always follow the correct R/C model turning on/shutting down procedures outlined below. or R/C model may run out of control resulting in a serious accident.
 - (1)Place R/C model on a box or a stand so that its wheels do not contact the ground.
 - (2)Switch on transmitter.
 - (3)Switch on receiver.
 - (4)Connect running battery.Opposite sequence for shutting down R/C model.
 - (1)Disconnect running battery.
 - (2)Switch off receiver.
 - (3)Switch off transmitter.
- 9、 never touch any rotating parts such as wheels, shafts or gears as your finger, hair, clothes, etc. may get caught leading to serious injury.
- 10、 battery motor and heat sink become extremely hot after use allow parts to cool before re-moving.
- 11、 take maximum care in wiring connecting and insulating cables.









安装前请准备下列物品(以下工具或设备需要自备)

items required(Not included in this kit)


安装工具

Tools recommended

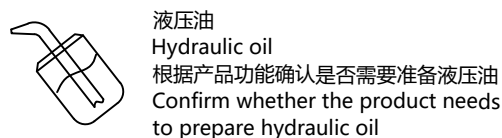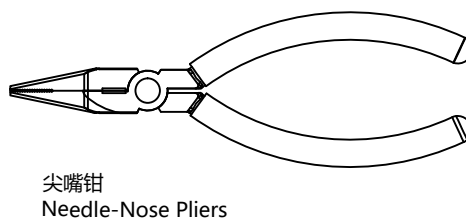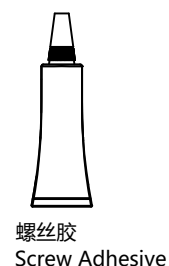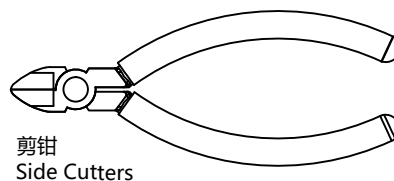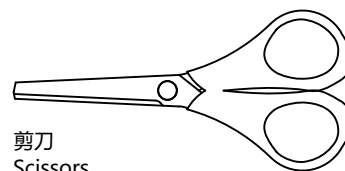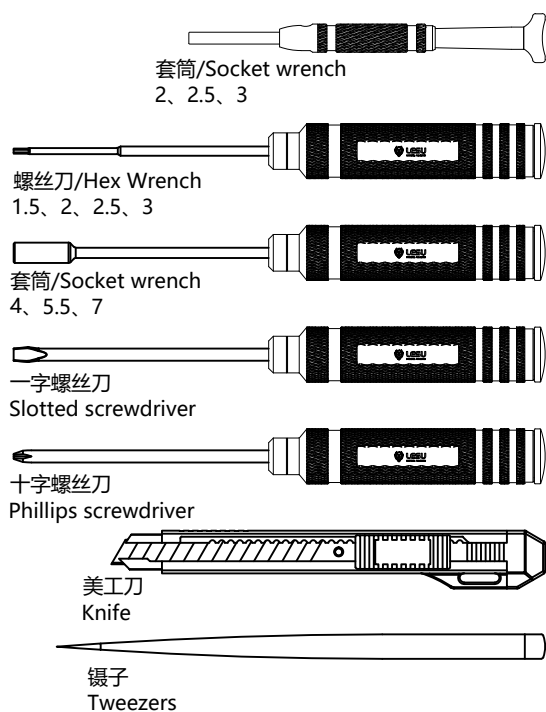


电子产品(图片仅供参考)

Electronics(The image is only a reference)

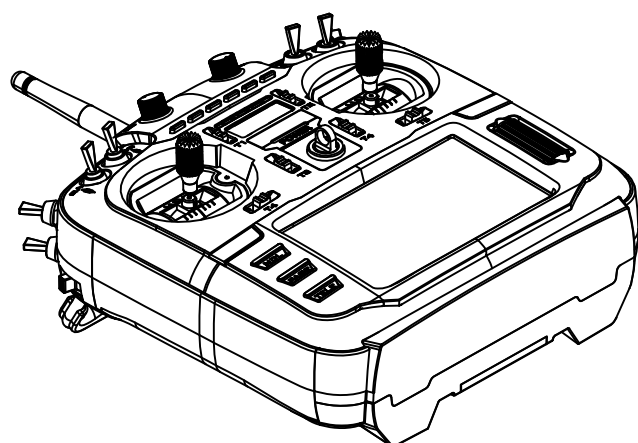

遥控器/Remote control

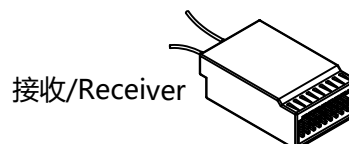

有关遥控器和接收器的选择, 请咨询您当地的经销商。
For remote control and receiver selection,
please consult your local distributor.



LESU
MODEL RACING

TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

如何粘贴水贴

How to apply decals

如果产品中包含水贴，请参照以下步骤进行操作

The decals used for this model kit are particular, Please follow the instruction below when applying decals.

首先用美工刀裁剪出对应的形状。

Cut out the decal into the desired shape by scissors and cutter.

将裁剪好的水贴纸放入清水中10-20秒。

Dip the decal in water for 10 to 20 seconds.

用镊子将水贴纸从白板上滑出，贴在产品上，并调整好位置，完成后用软布将贴纸下的水渍和气泡擦除。

Put the decal on the desired place and slide it gently from its backing sheet by tweezers.

Adjust the decal position and dry excess water with a soft cloth.

在组装过程中请注意以下标志

Please pay attention to the following signs during the assembly process



加入润滑油 / 润滑脂
Inject Lubricating oil / grease



修剪
CUT/Trim



以同样的方式组装另一侧零件
Assemble Other Side the Same



加入液压油
Inject hydraulic oil



特别注意
Pay Special Attention



重复/安装多个
Repeat/Build Multiple



使用螺丝胶安装
Use Screw Adhesive



确保零件安装后能自由活动
Ensure Free Movement



不需要全部拧紧
Screw Partially



使用快干胶安装
Use Instant Adhesive



确保零件安装后能自由旋转
Ensure Free Rotation



不要过度拧紧
Don't Over Tighten/Snug Tight



双面胶
Double-sided tape



保持合适的方向
Ensure Proper Orientation



拧紧
Tighten



喷漆
spray paint



侧视图
Side Shown



推进/压入
Push on



该位置禁止喷漆
Don't spray paint

其他注意事项，请咨询您当地的经销商。

For other precautions, please consult your local distributor.

关于雷鲨模型科技有限公司售后与服务政策

- 1、质量问题一年内由雷鲨模型科技有限公司全免费保修（由雷鲨模型科技有限公司承担邮费，用户需提供保修卡及购买凭证，缺一不可。）
- 2、人为损坏或正常使用磨损根据实际情况联系雷鲨模型科技有限公司进行售后，往返运费由买家承担。
- 3、二手购买或者转赠他人的模型车和配件等，雷鲨模型科技有限公司原则上给予保修，但是需要提供一手人购买凭证。
- 4、售后与服务政策条例最终解释权归雷鲨模型科技有限公司所有。


LESU Model Technology Co., Ltd. After sales and service

- 1、The quality problem is guaranteed by LESU Model Technology Co., Ltd. within one year. (LESU Model Technology Co., Ltd. bears the postage, users need to provide a warranty card and proof of purchase, indispensable.)
- 2、Artificial damage or normal wear and tear according to the actual situation, contact LESU Model Technology Co., Ltd. for after-sales, the round-trip freight is borne by the buyer.
- 3、LESU Model Technology Co., Ltd. provides warranty for second-hand purchase or transfer of other model cars and accessories. However, it is necessary to provide first-hand purchase certificates.
- 4、The final interpretation of after-sales and service policies and regulations belongs to LESU Model Technology Co., Ltd.

请咨询您当地的经销商以获取更多信息

Please consult your local dealer for more information



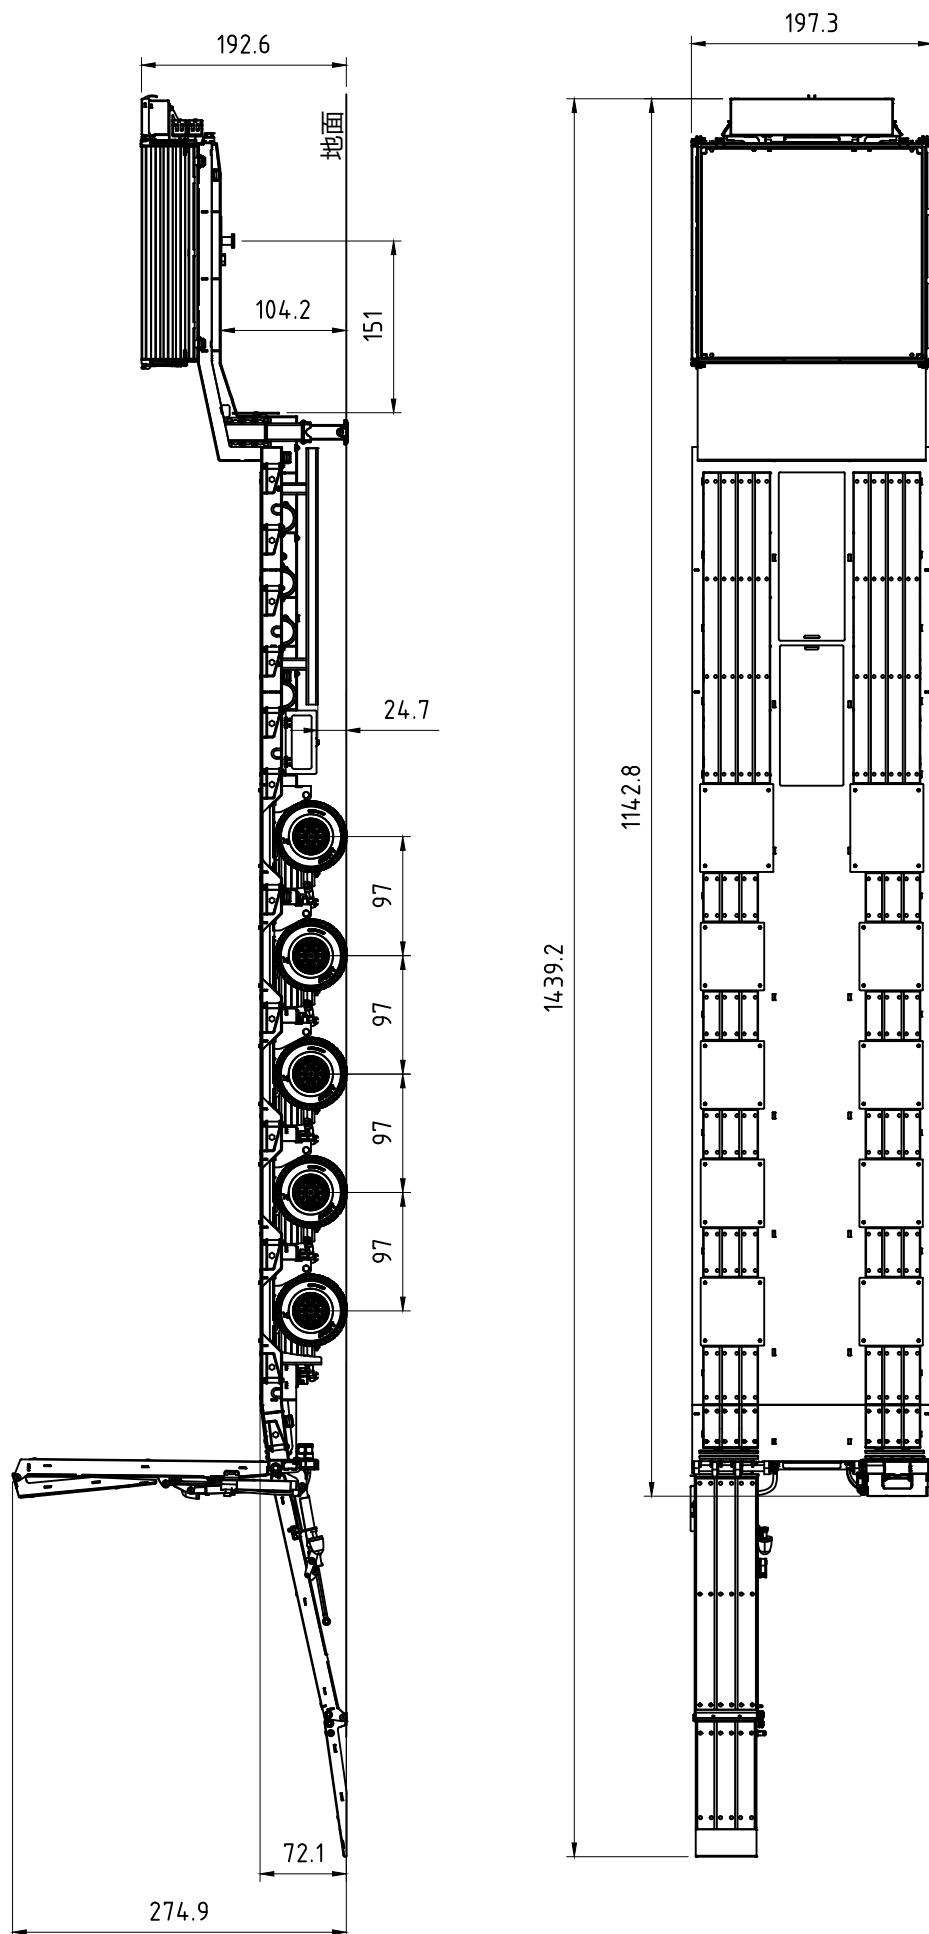


LESU
MODEL RACING

TecniModel.com


Tecnimodel sàrl - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

液压管路图
Hydraulic pipeline diagram

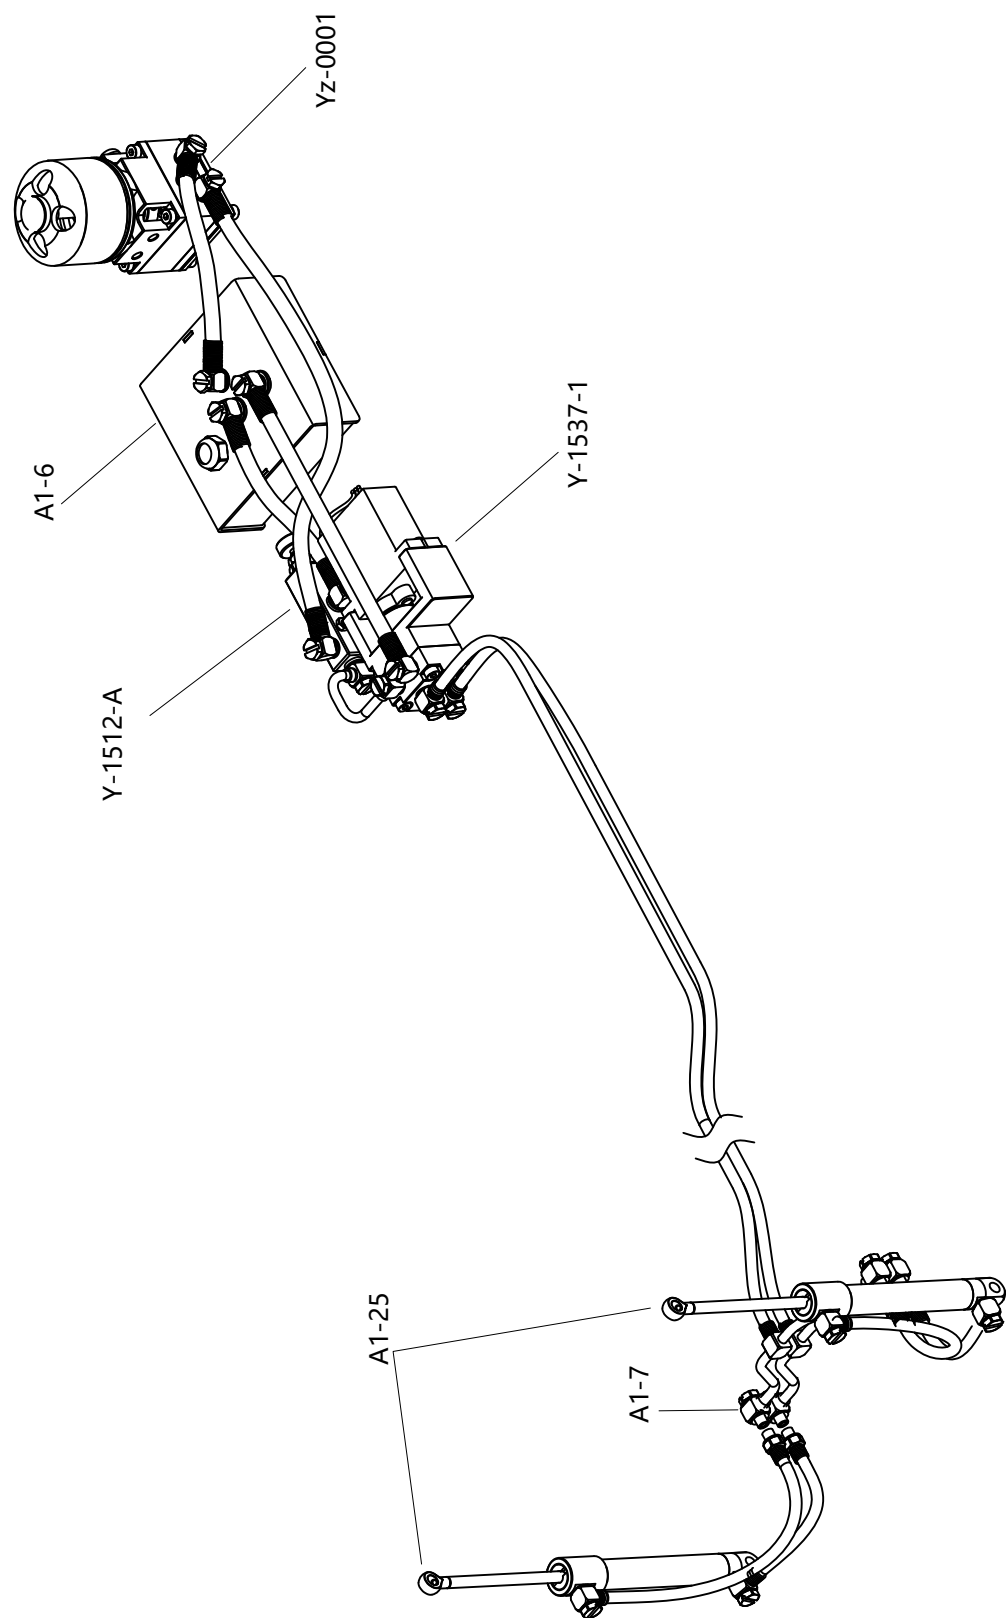

电子接线图

Electronic wiring diagram

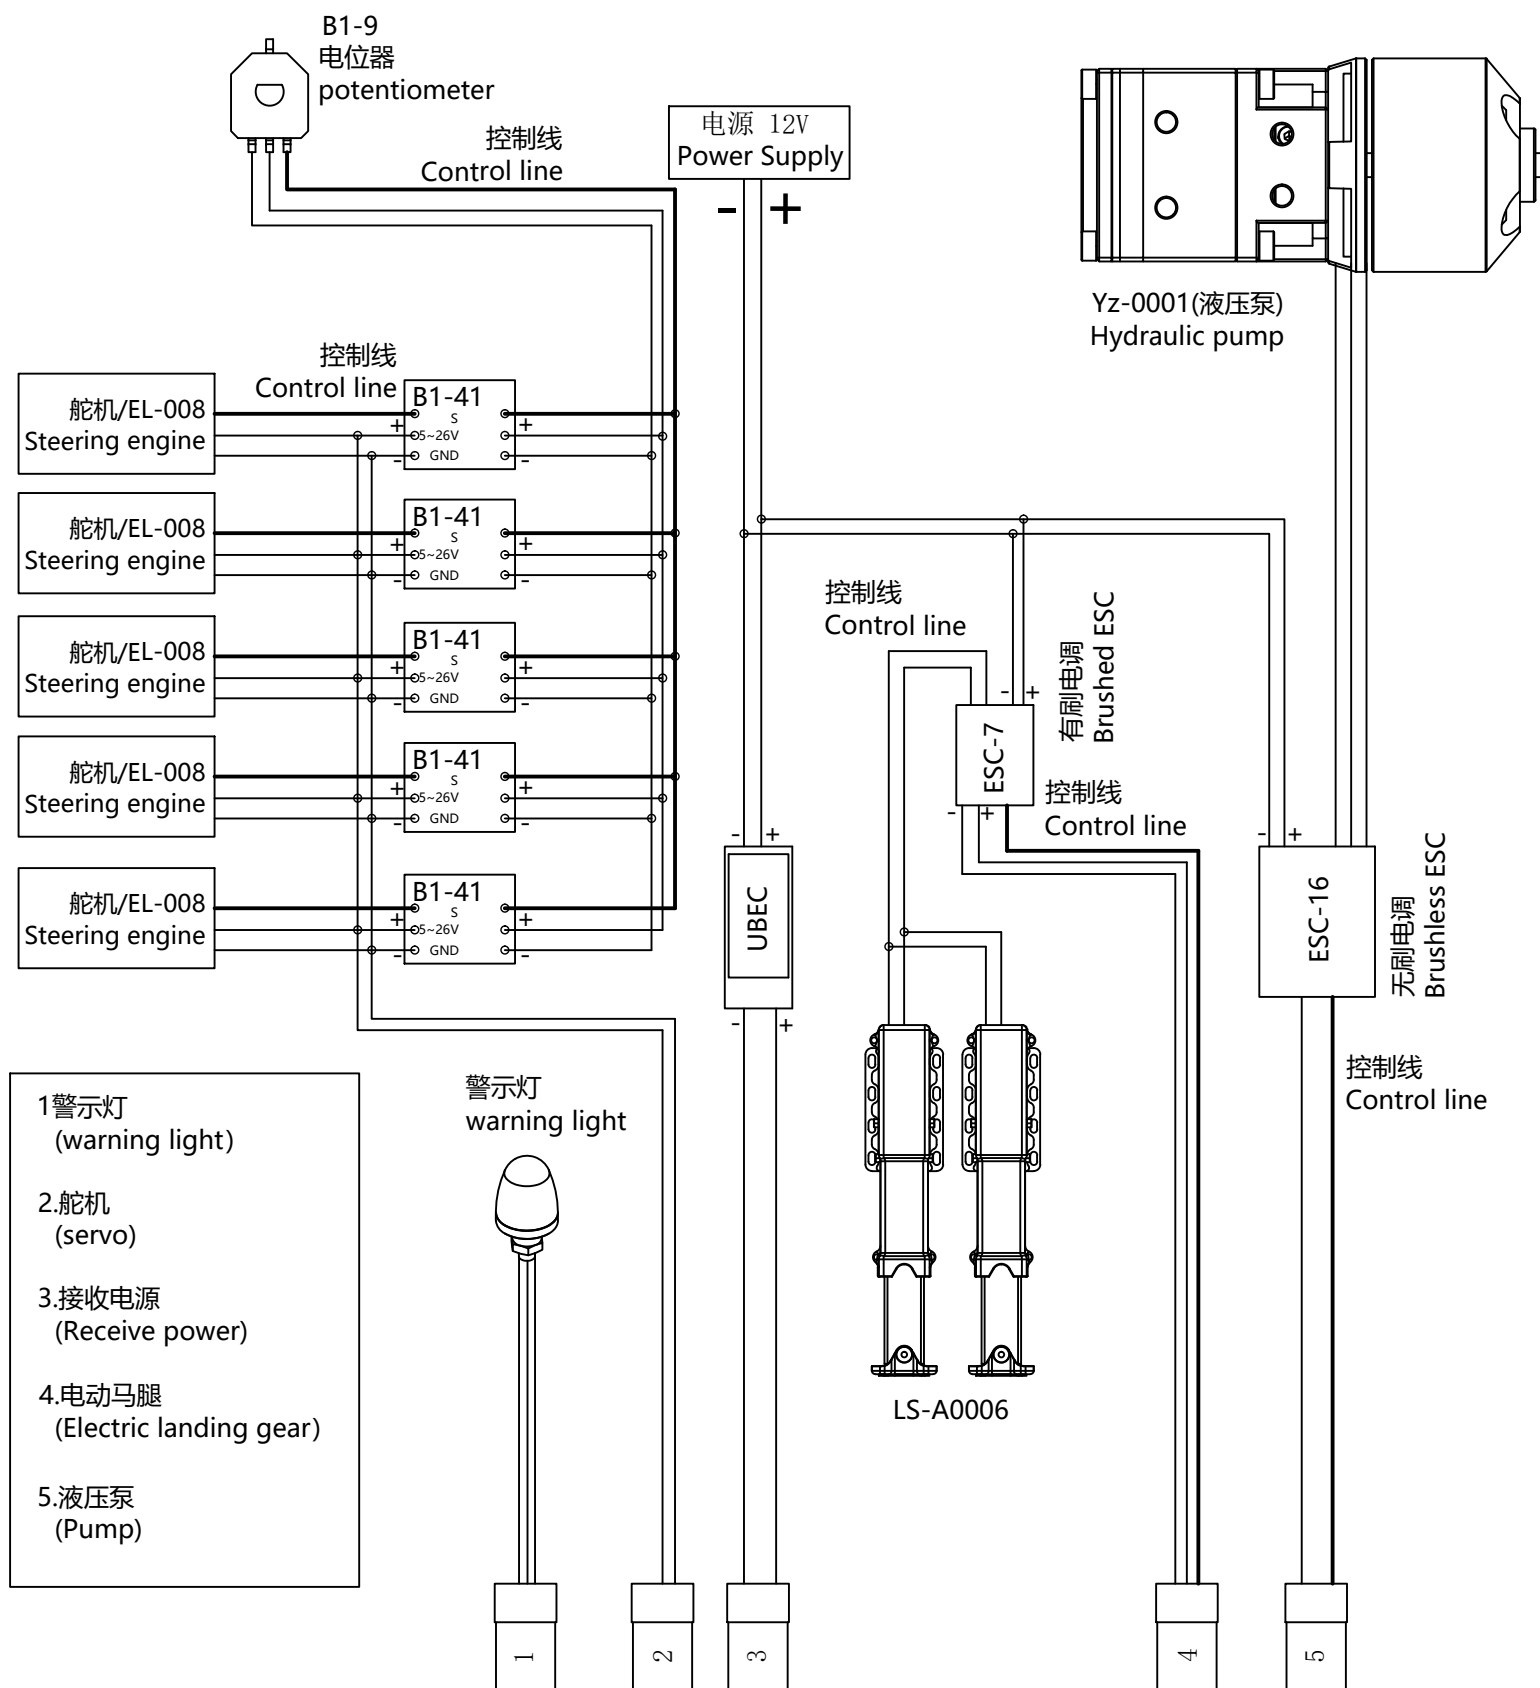

电调等电子零件图示仅供接线参考，不代表实物。
The illustrations of electronic parts such as ESCs are for wiring reference only and do not represent the actual product.




LESU


MODEL RACIN **TecniModel.com**

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

电子接线图

Electronic wiring diagram

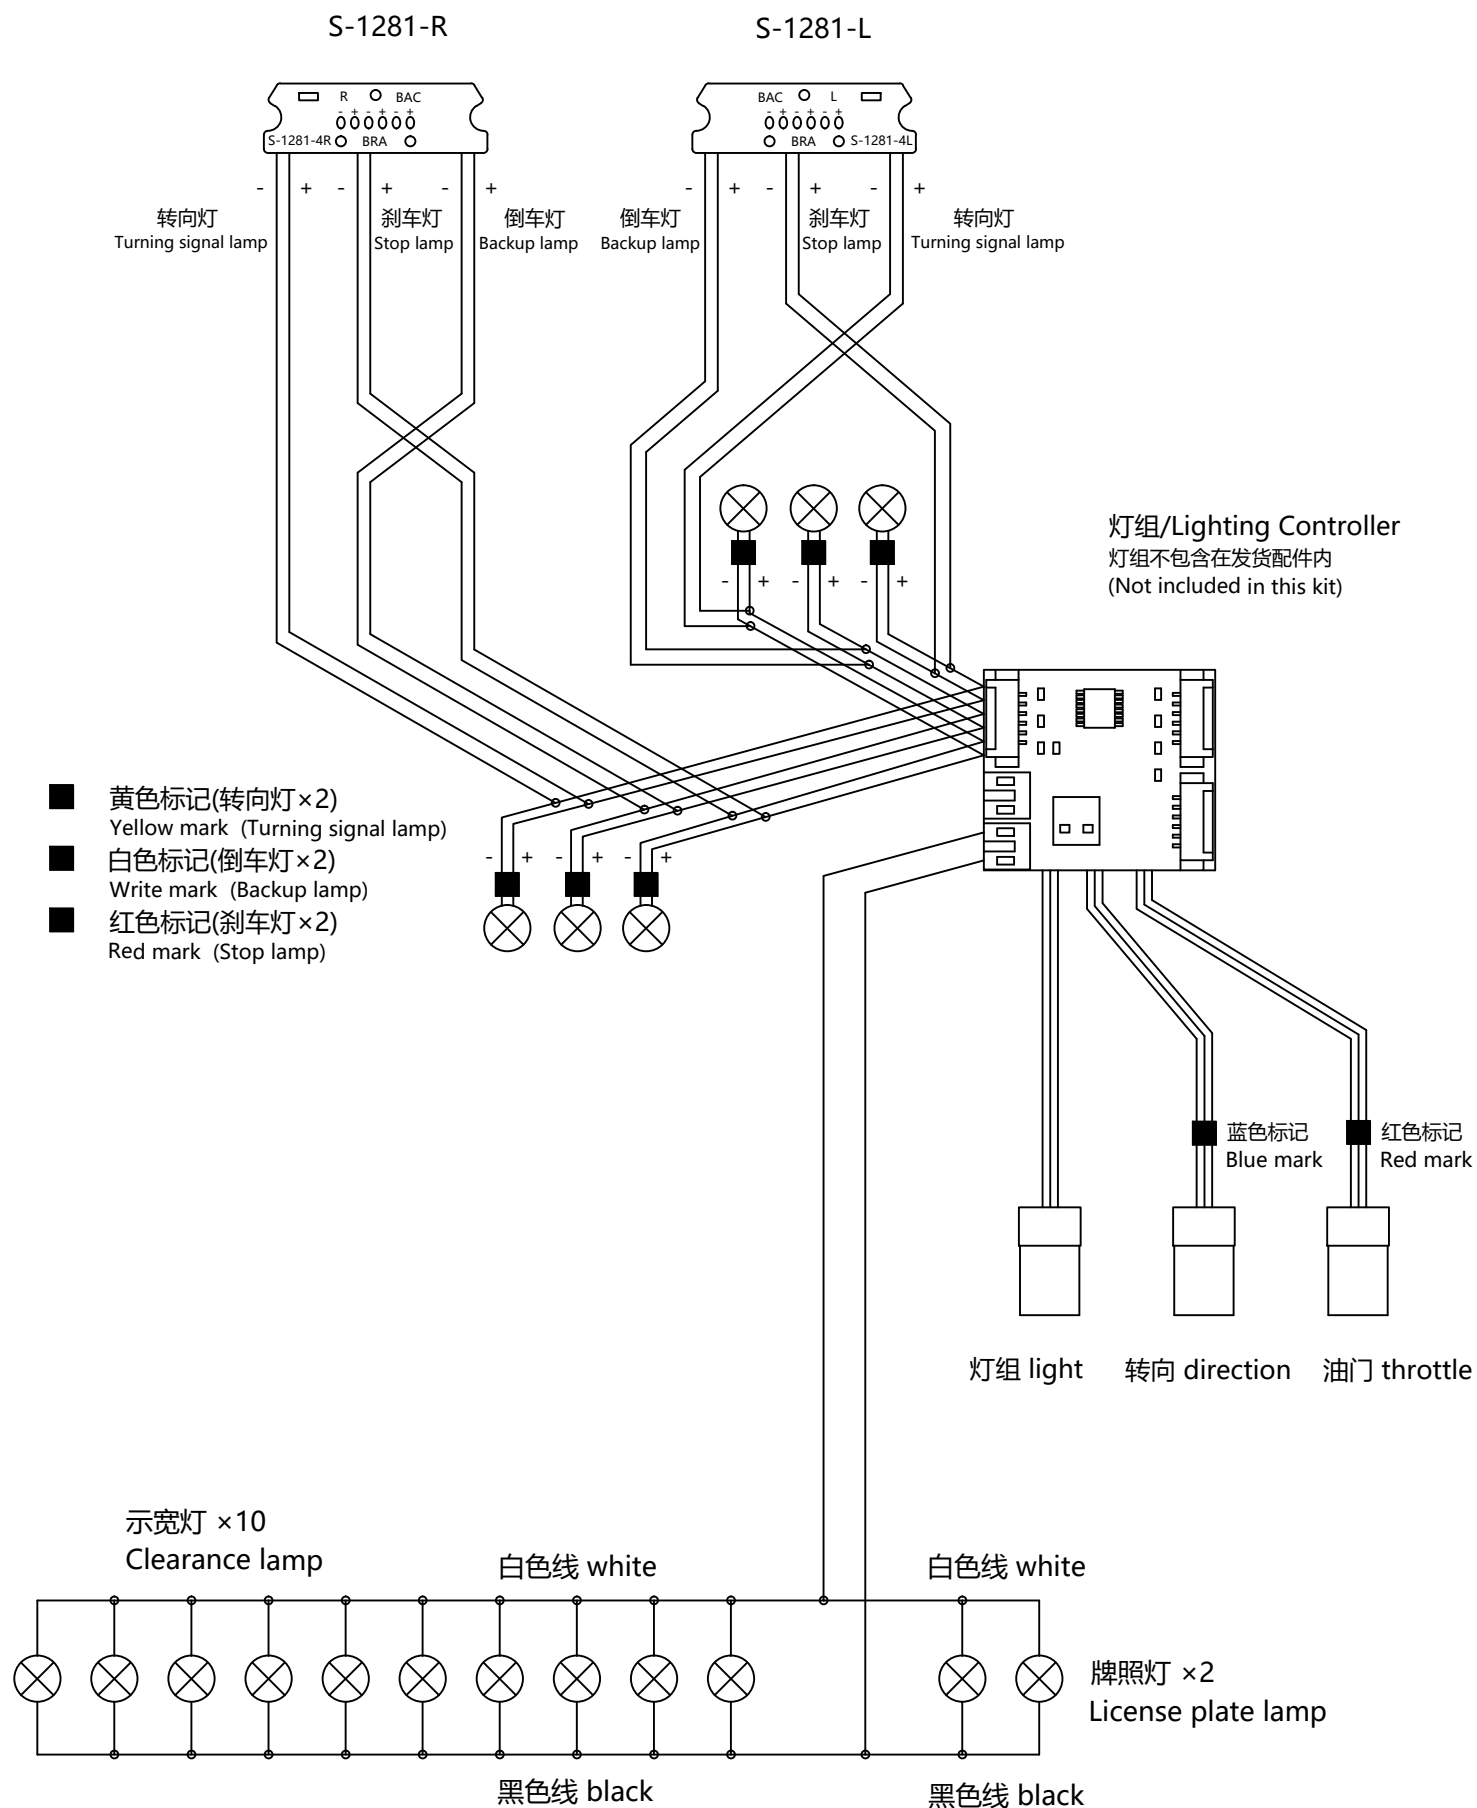


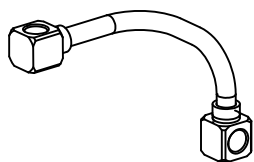

A1-2 □




A1-3 ×6 □

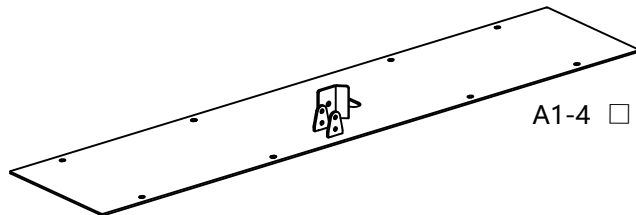


A1-4 □




A1-5 □

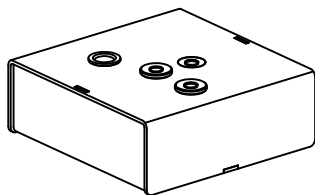


A1-6 □

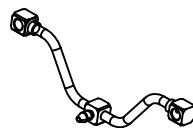


A1-7 ×2 □

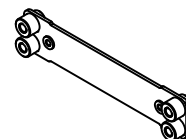


A1-8 □

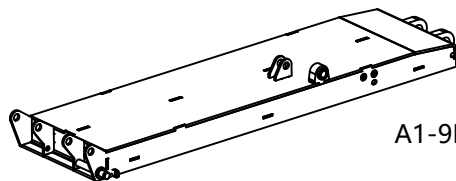


A1-9L □

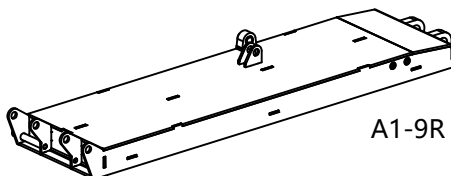


A1-9R □

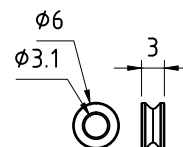


A1-10 ×4 □

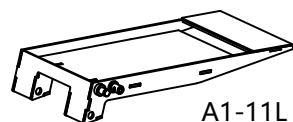


A1-11L □

 


A1-11R □

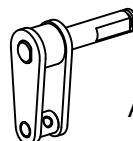

A1-13L □

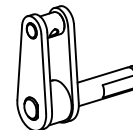

A1-13R □

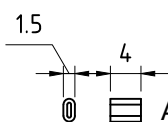

A1-14(铝扣) ×2 □




A1-15 ×2 □




A1-18 □



A1-19 ×2 □

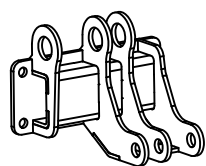


A1-20L □

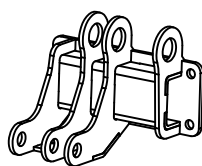


A1-20R □



 
A1-22 ×2 □




A1-23 ×2 □

 


A1-24 ×2 □

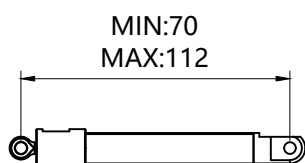


A1-25 ×2 □

 


A1-26 ×2 □

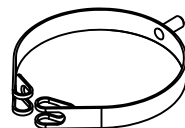

A1-29 ×16 □

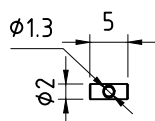


A1-30 ×16 □

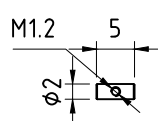


A1-31 ×16 □




A1-28 ×2 □

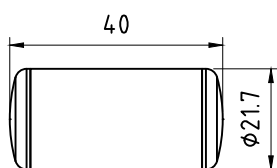

A1-32 ×8 □

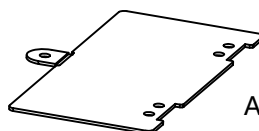

A1-33 ×2 □

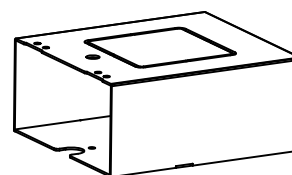


A1-34 ×2 □




LESU

MODEL RAGIN

 Tecnimodel.com



A1-35 ×2 □

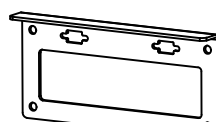



A1-36 □



A1-37 ×10 □

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

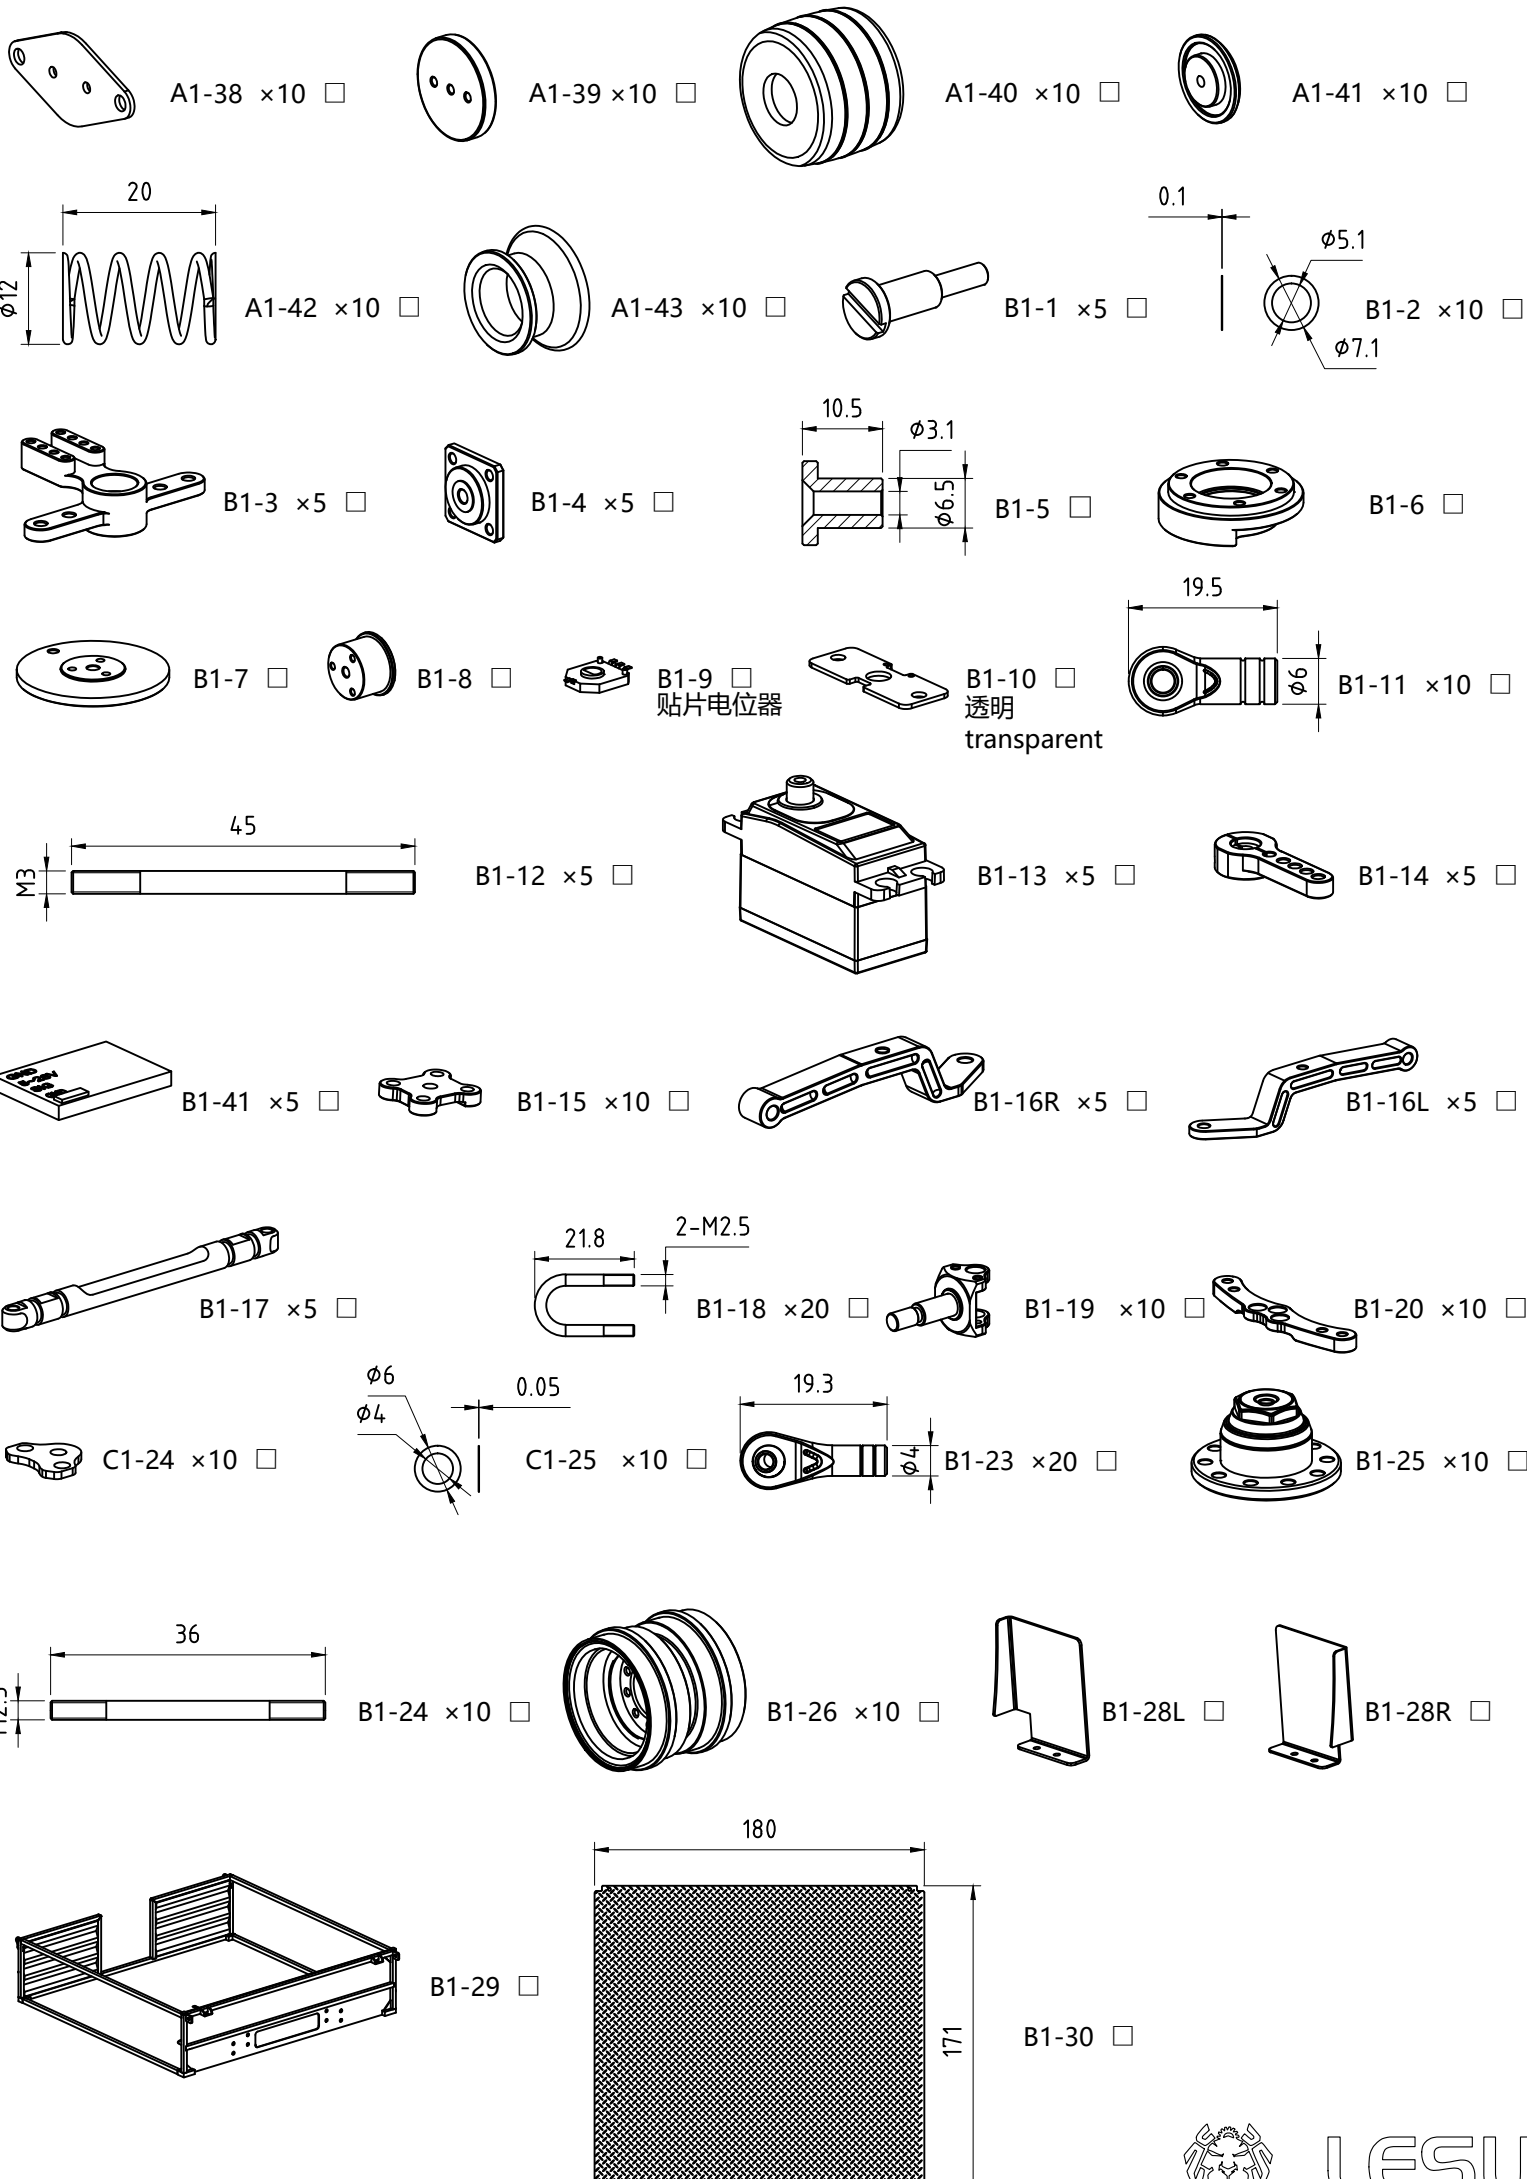

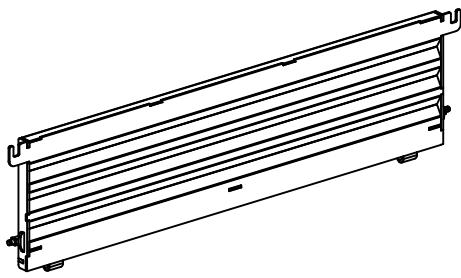

B1-31 x2 □



 
B1-32 x4 □




B1-34 x2 □




B1-35 x2 □




B1-36 x4 □

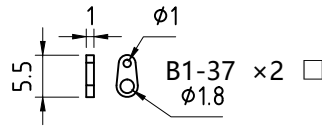


B1-37 x2 □

 

B1-38 x2 □

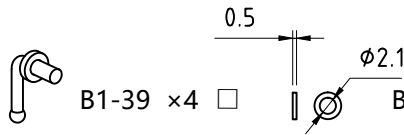


B1-39 x4 □

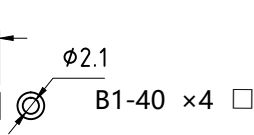

B1-40 x4 □




C1-1 x4 □

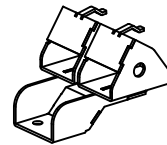


C1-2 x2 □



C1-3 x4 □

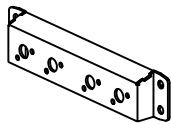


C1-4 □

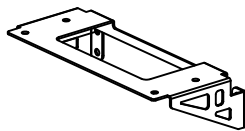


C1-5 □



 
C1-23 □




C1-8 x12 □

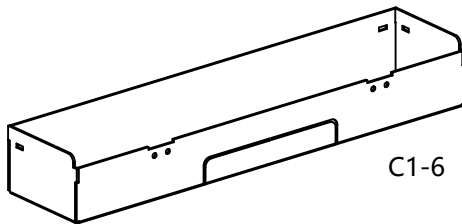


C1-6 □

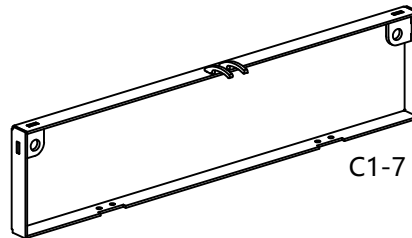


C1-7 □

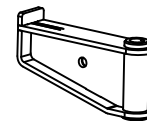


C1-9 x12 □

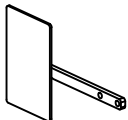


C1-10 x2 □

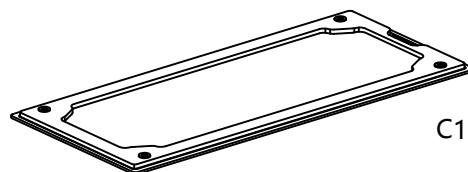


C1-11 □

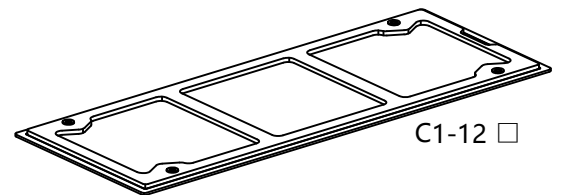


C1-12 □

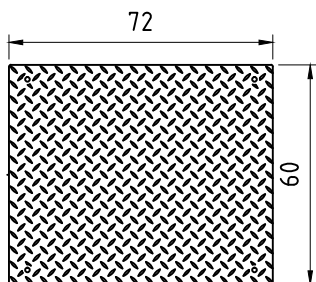


C1-13 x2 □

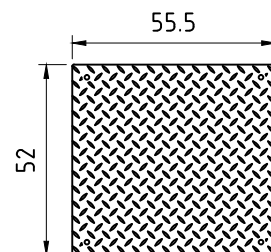


C1-14 x8 □

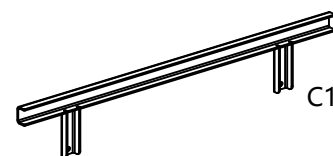

C1-15 x2 □

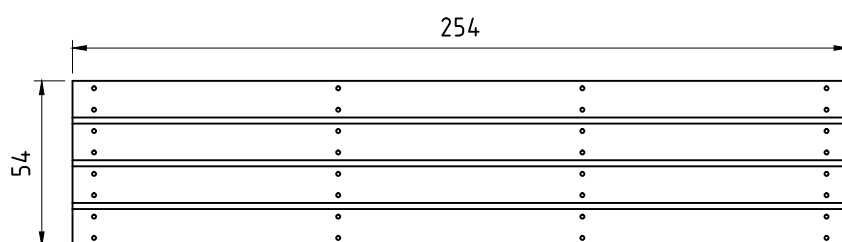

C1-16 x2 □

 

















C1-17 x256 □



LESU
MODEL RACING


TecniModel.com

      Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

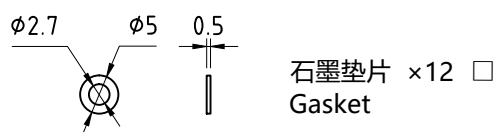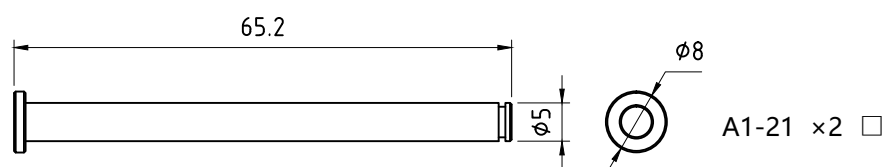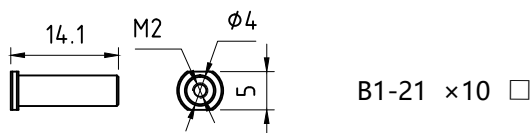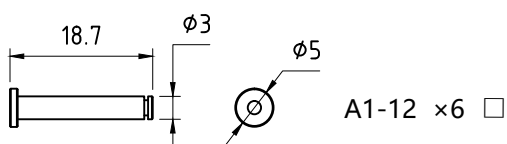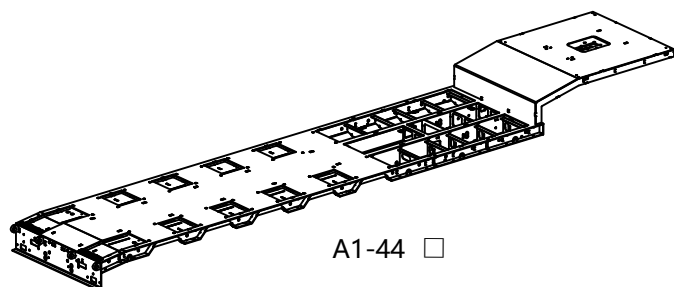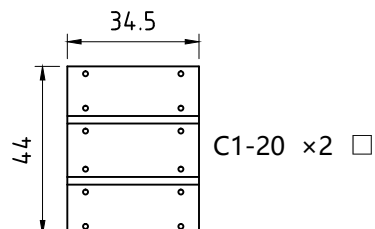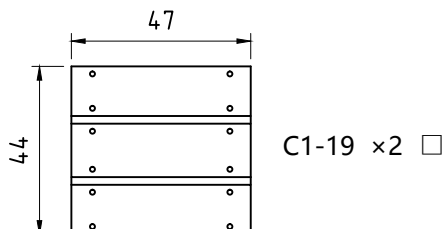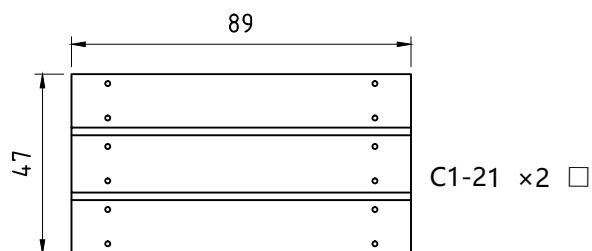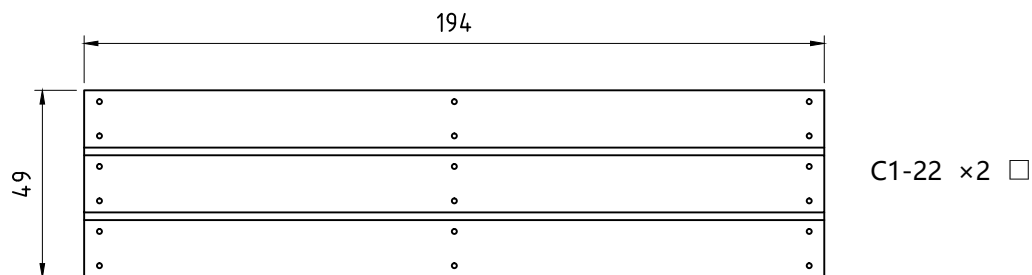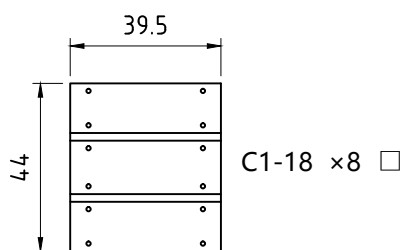





A1-1 ☐

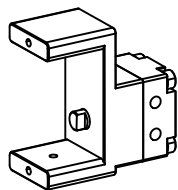

Y-1537-1 ☐

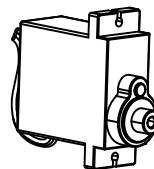


EL-009 ☐

 

M3

M3堵头 ×2 ☐
M3 plug

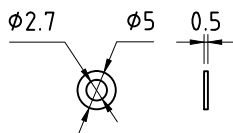

石墨垫片 ×2 ☐
Gasket

完成安装后发货



紧定螺丝M3-4 ×2 ☐
Hexagon socket set screw



半圆头M2-6 ×2 ☐
Hexagon socket button head screw



LESU
MODEL RACING

TecniModel.com


Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.



十字盘头M1-3 ×18 □
Cross pan head screw



 半圆头M3-6 ×45 □
Hexagon socket button head screw




十字盘头M1.2-8 ×16 □
Cross pan head screw



半圆头M3-8 ×6 □
Hexagon socket button head screw



 外六角M1.2-3 ×48 □
Hexagon screw



半圆头M3-12 ×10 □
Hexagon socket button head screw




外六角M1.6-4 ×20 □
Hexagon screw



杯头M1.6-6 ×100 □
Hexagon socket head cap screw



 外六角M2-4 ×10 □
Hexagon screw



杯头M1.6-12 ×2 □
Hexagon socket head cap screw



半圆头M1.6-4 ×8 □
Hexagon socket button head screw



杯头M2-5 ×5 □
Hexagon socket head cap screw



半圆头M2-3 ×8 □
Hexagon socket button head screw



法兰外六角M3-4 □
Hexagon flange screw



半圆头M2-4 ×81 □
Hexagon socket button head screw



十字沉头M1.6-3 ×16 □
Cross recessed countersunk head screw




十字沉头M1.6-4 ×40 □
Cross recessed countersunk head screw




半圆头M2-5 ×14 □
Hexagon socket button head screw



 
沉头M2-6 ×33 □
Hexagon socket countersunk head screw



半圆头M2-12 ×20 □
Hexagon socket button head screw

 

沉头M3-18 □
Hexagon socket countersunk head screw

 

半圆头M2-16 ×24 □
Hexagon socket button head screw



M1六角螺母 ×18 □
Hexagon nut



半圆头M3-4 ×42 □
Hexagon socket button head screw



M1.2六角螺母 ×16 □
Hexagon nut



 
M1.6螺母 ×34 □
Hexagon nut



M2六角螺母 ×12 □
Hexagon nut



M3六角螺母 ×10 □
Hexagon nut



LA-LNM2.5-2.5-SUS ×20 □



LA-LNM2-2螺母 ×20 □



M2自锁螺母 ×10 □
Self-locking nut



M2.5自锁螺母 ×40 □
Self-locking nut



M3自锁螺母 ×5 □
Self-locking nut



M4自锁螺母 ×10 □
Self-locking nut



 
Y-1511-M3B ×8 □
零件Y-1511-M3B为KIT版本, 说明书另附
Part Y-1511-M3B is the KIT version,
see the attachment for the instructions




Y-1519-M3B ×2 □
零件Y-1519-M3B为KIT版本, 说明书另附
Part Y-1519-M3B is the KIT version,
see the attachment for the instructions




Y-1544-M3B ×4 □
零件Y-1544-M3B为KIT版本, 说明书另附
Part Y-1544-M3B is the KIT version,
see the attachment for the instructions




An-0012 ×4 □

 


磁铁 ×48 □
(沉孔磁极相吸,数量各半)
magnet

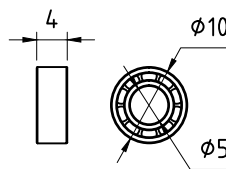

MR105ZZ ×10 □
深沟球轴承
外径10内径5厚度4

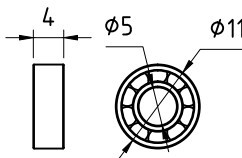


MR115ZZ ×20 □
深沟球轴承
外径11内径5厚度4

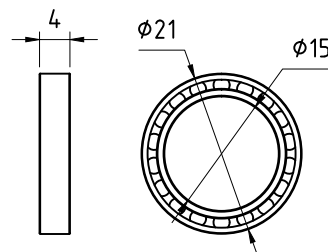


6702ZZ ×2 □
深沟球轴承
外径21内径15厚度4



 
Y-1544-M3A ×4 □
零件Y-1544-M3A为KIT版本, 说明书另附
Part Y-1544-M3A is the KIT version,
see the attachment for the instructions




An-0017-D1 ×8 □

 


An-0011-B1 ×2 □

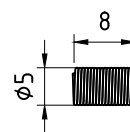


An-0011-A1 ×7 □

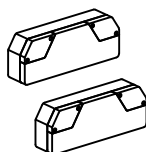

 S-1281 □
零件S-1281为KIT版本, 说明书另附
Part S-1281 is the KIT version, see the
attachment for the instructions



 S-1288 ×5 □
零件S-1288为KIT版本, 说明书另附
Part S-1288 is the KIT version,
see the attachment for the instructions




S-1263-B □




LESU
MODEL RACING

TecniModel.com


Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

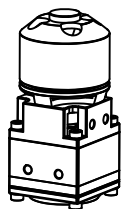


Yz-0001油泵 ☐
Oil pump

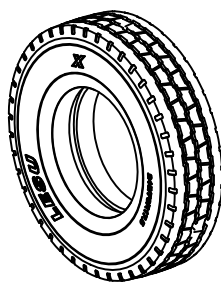


S-1279-1 ×20 ☐

 


Y-1512-A ☐

 


无刷电调 ESC-16 ☐
Brushless ESC-16

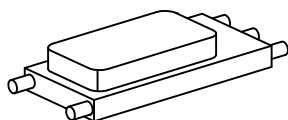

UBEC供电模块 ☐
UBEC Power Supply Module

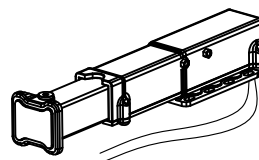

LS-A0006 ×2 ☐

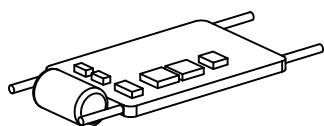

有刷电调 ESC-7 ☐
Brushed ESC-7



油管 ☐
oil hose
直径4内径2.5总长度460mm
Diameter 4 inner diameter 2.5
Total length 460mm



 
油管 ☐
oil hose
直径3内径2总长度1750mm
Diameter 3 inner diameter 2
Total length 1750mm



油管 ☐
oil hose
直径2内径1总长度 500mm
Diameter 2 inner diameter 1
Total length 500mm



钢丝绳 ☐
steel cable
总长度340mm
Total length 340mm




热缩管/Heat shrink tube ☐
内径0.8mm 长度3.2m
Outer diameter 0.8mm
length 3.2m



热缩管/Heat shrink tube ☐
内径1mm 长度1.2m
Outer diameter 1mm
length 1.2m



 
热缩管/Heat shrink tube ☐
内径2mm 长度1m
Outer diameter 2mm
length 1m



热缩管/Heat shrink tube ☐
内径3mm 长度500mm
Outer diameter 3mm
length 500mm



 热缩管/Heat shrink tube ☐
内径10mm 长度200mm
Outer diameter 10mm
length 200mm



缠绕管 ☐
cable sleeve
长度 800 mm
length 800 mm



3.1mm×2.8mm贴片LED灯(白光) ×2 ☐
(线长400mm)
SMD LED light (white light)
(Line length 400mm)

18AWG电线 ☐

wire
长度 1.2 m
length 1.2 m
(黑红两种颜色各600mm)

28AWG舵机线 ☐

servo line
(不含插头)
长度 1.5 m
length 1.5 m

0.4mm灯线 ☐

Light wire
长度 1.4m
length 1.4m




LESU
MODEL RACING


TecniModel.com

Tecnimodel sàrl - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

1

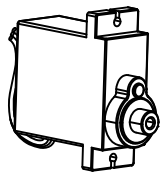




EL-009

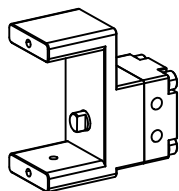


Y-1537-1



  A1-1

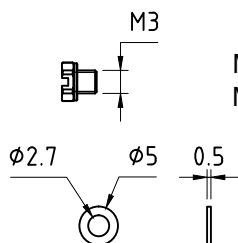


注意：安装舵机前需通电以使舵机回中。
Note: Before installing the servo, power must be applied to return the servo to the center.

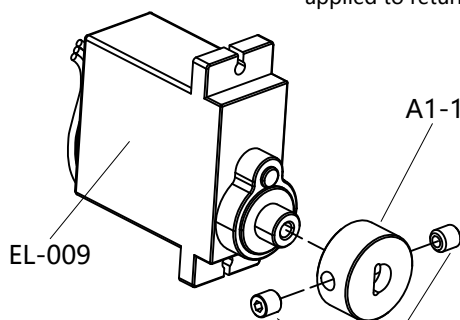

紧定螺钉 M3-4

此步骤已预装配
This step has been pre-assembled

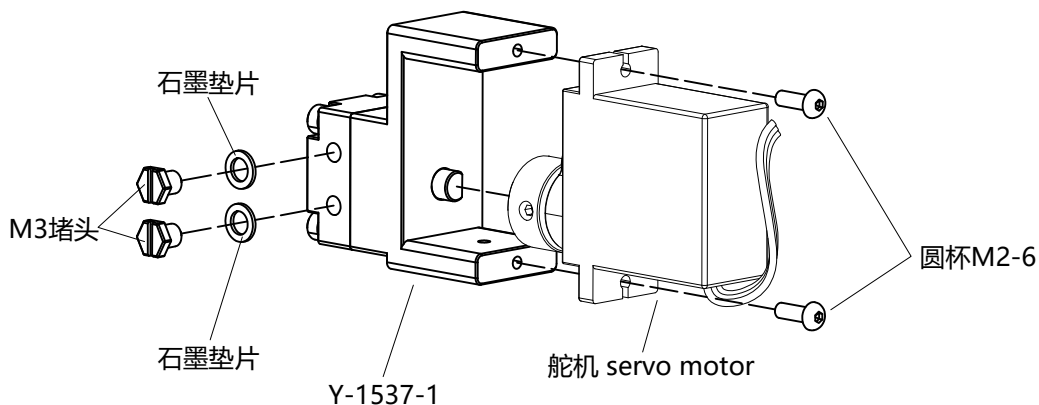


此步骤已预装配
This step has been pre-assembled

2





Y-1511-M3B $\times 2$

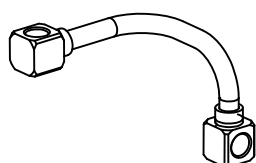



A1-2



 
A1-3 $\times 2$

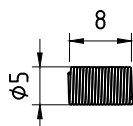


直径4内径2.5总长度80mm
 Diameter 4 inner diameter 2.5
 Total length 55mm
 L1 = 55mm

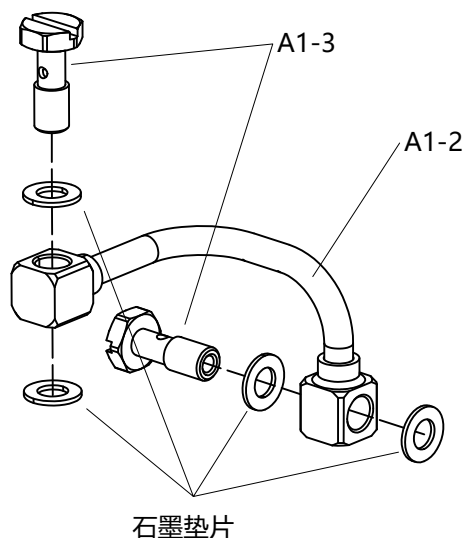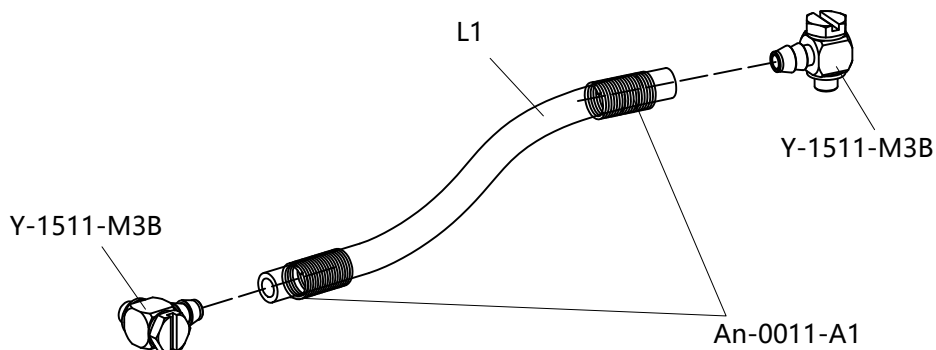

3

 


Y-1512-A

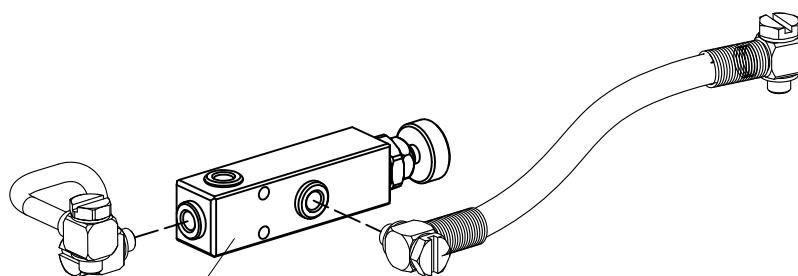

Y-1512-A


4

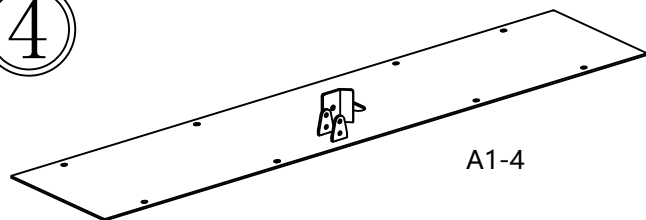

A1-4



 
半圆头M2-4
Hexagon socket
button head screw




杯头M1.6-12 ×2
Hexagon socket
head cap screw



M1.6螺母 ×2
Hexagon nut

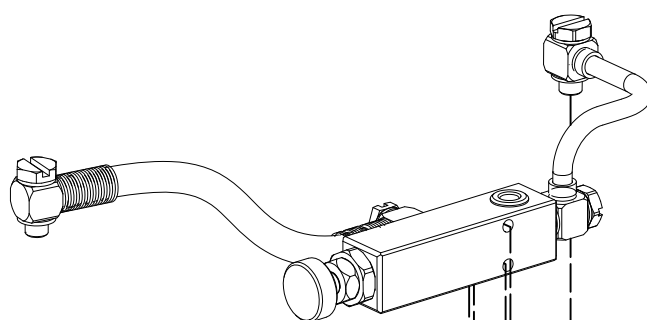

步骤①

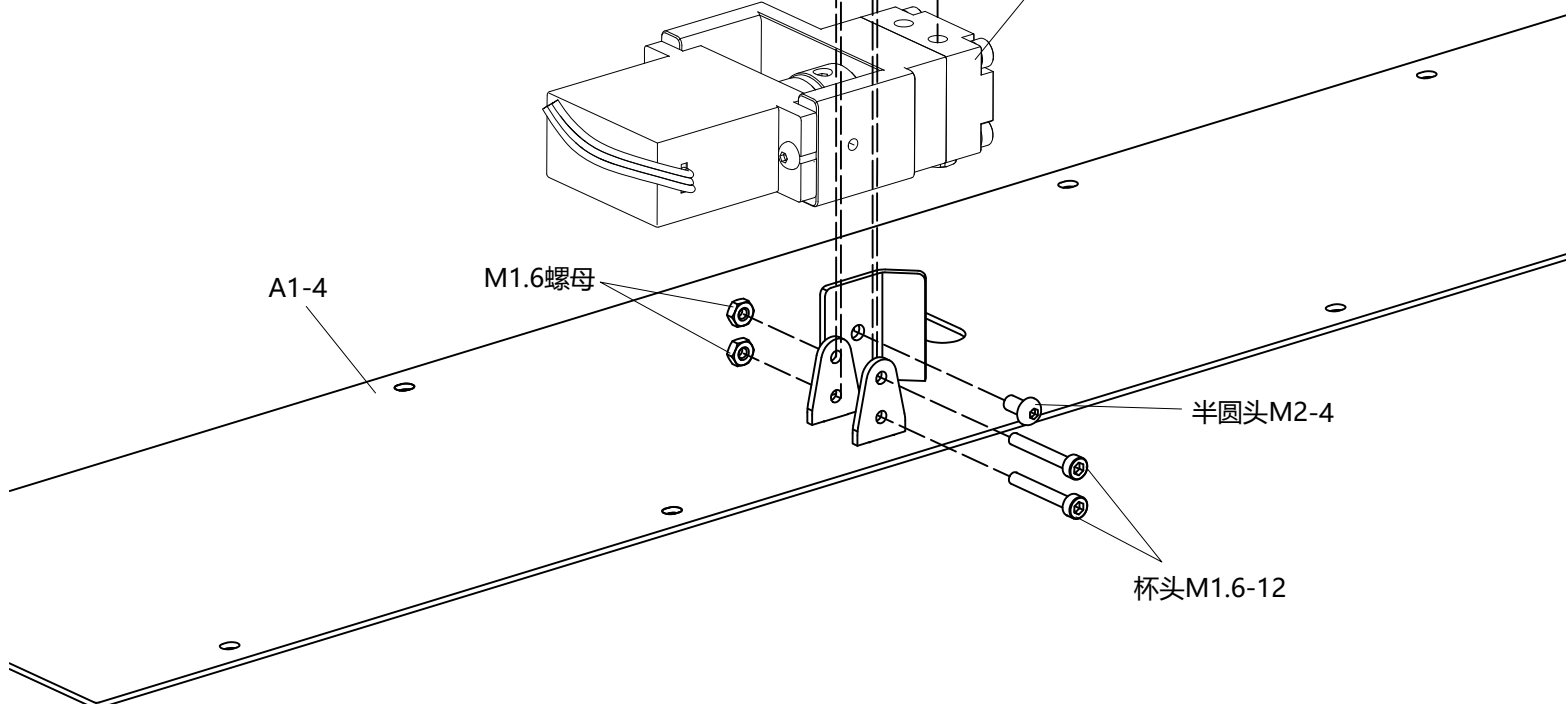

A1-4

M1.6螺母

半圆头M2-4

杯头M1.6-12



LESU
MODEL RACING

TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.


5



Y-1519-M3B×2



Y-1511-M3B ×2

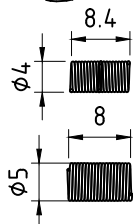

An-0011-B1 ×2

An-0011-A1 ×2

油管
oil hose

直径3内径2总长度1.6m
Diameter 3 inner diameter 2
Total length1.6m
L2=800m,L3=800m

油管
oil hose

直径4内径2.5总长度80mm
Diameter 4 inner diameter 2.5
Total length80mm
L4=85mm

An-0011-B1

油管
直径4内径2.5

Y-1519-M3B

An-0011-A1

Y-1511-M3B


L4

油管
直径3内径2

L2


L3

请参考液压管路图
Please refer to the Hydraulic
pipeline diagram
请如图所示安装油管
Please install the oil hose as shown

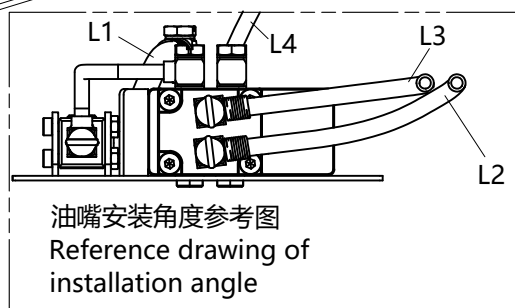


油嘴安装角度参考图
Reference drawing of
installation angle

6

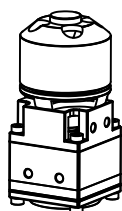


Yz-0001油泵
Oil pump

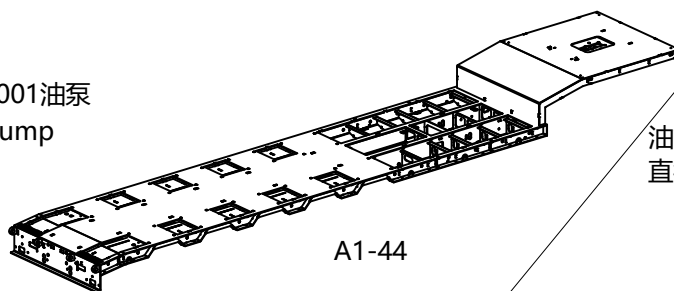

A1-44



Y-1511-M3B ×4

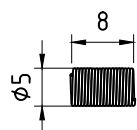


An-0011-A1 ×4



半圆头M3-4 ×2
Hexagon socket
button head screw

油管
oil hose
直径4内径2.5总长度140mm
Diameter 4 inner diameter 2.5
Total length140mm
L5=70mm,L6=140mm

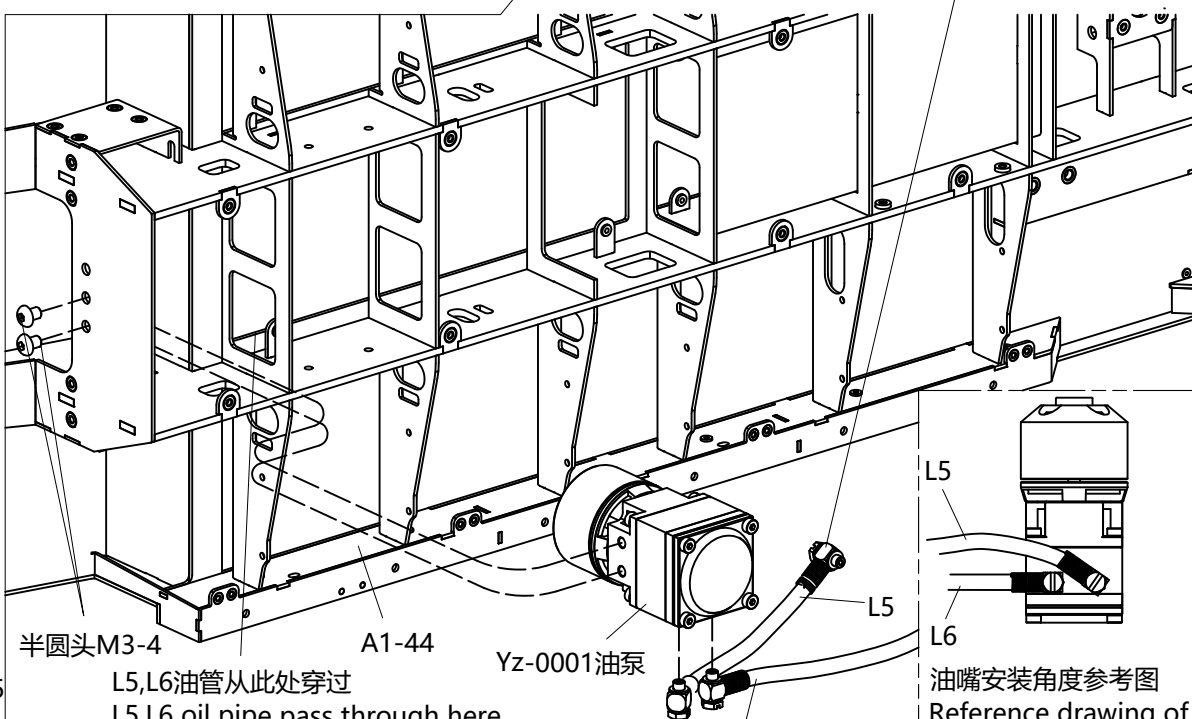

半圆头M3-4

A1-44

Yz-0001油泵


L5,L6油管从此处穿过
L5,L6 oil pipe pass through here
请参考液压管路图
Please refer to the Hydraulic
pipeline diagram

An-0011-A1

油管
直径4内径2.5

Y-1511-M3B



油管
直径4内径2.5

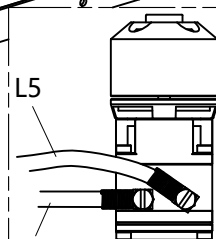


油嘴安装角度参考图
Reference drawing of
installation angle



9

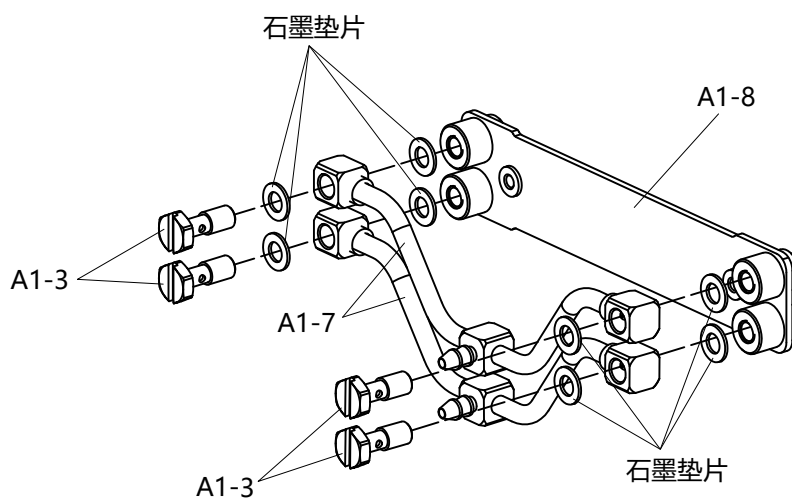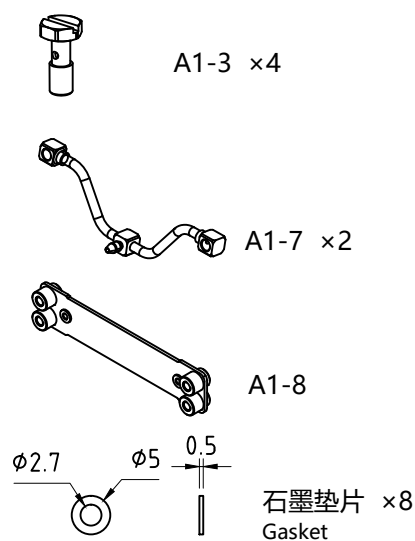

10

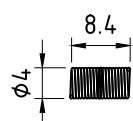


An-0011-B1 x2






外六角M2-4 x2
Hexagon screw

X2

重复/安装多个
Repeat/Build Multiple

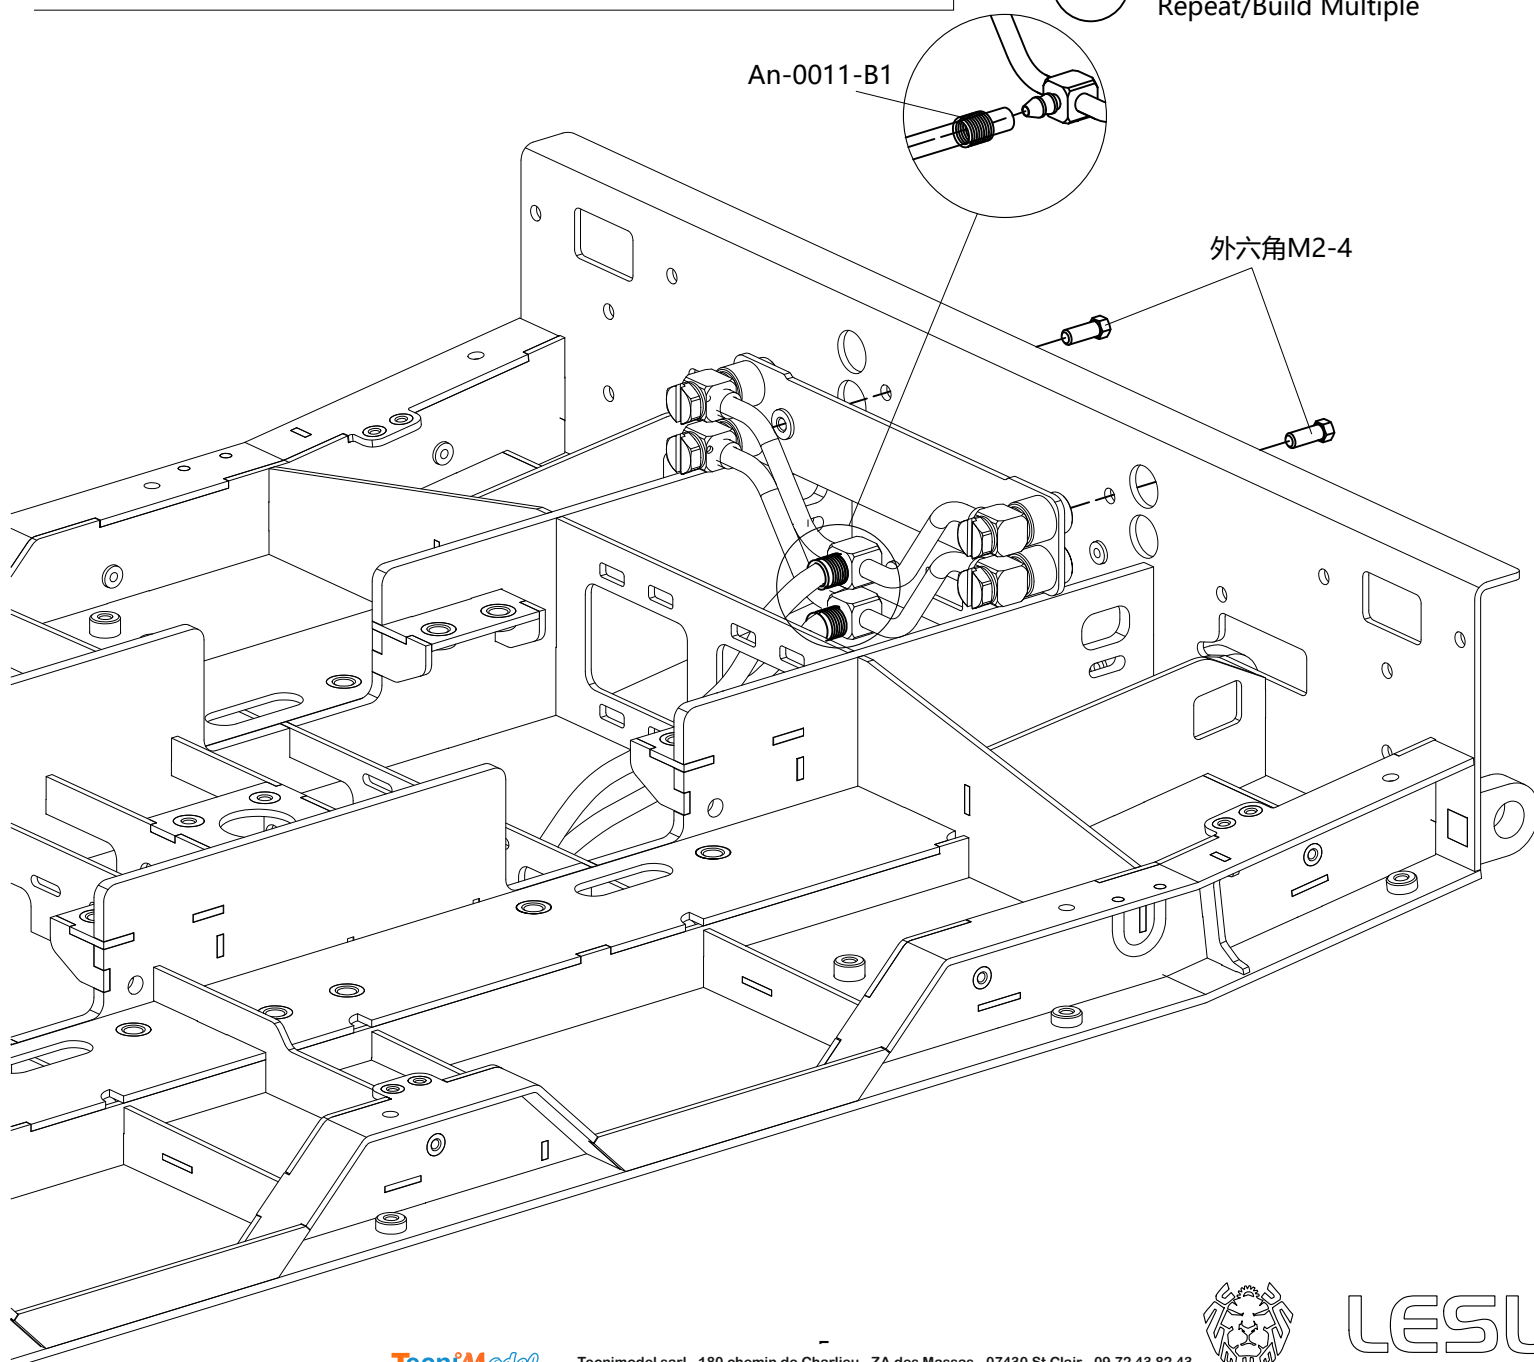


11

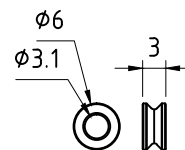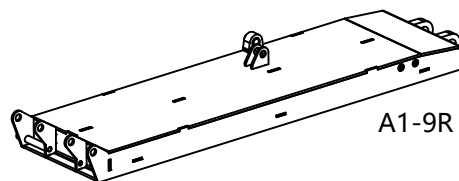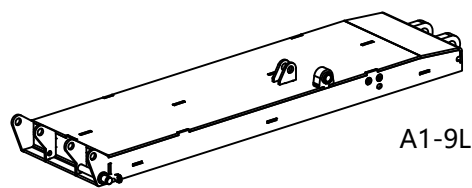




A1-10 ×2



$\phi 2$ E卡 ×2
"E" rings

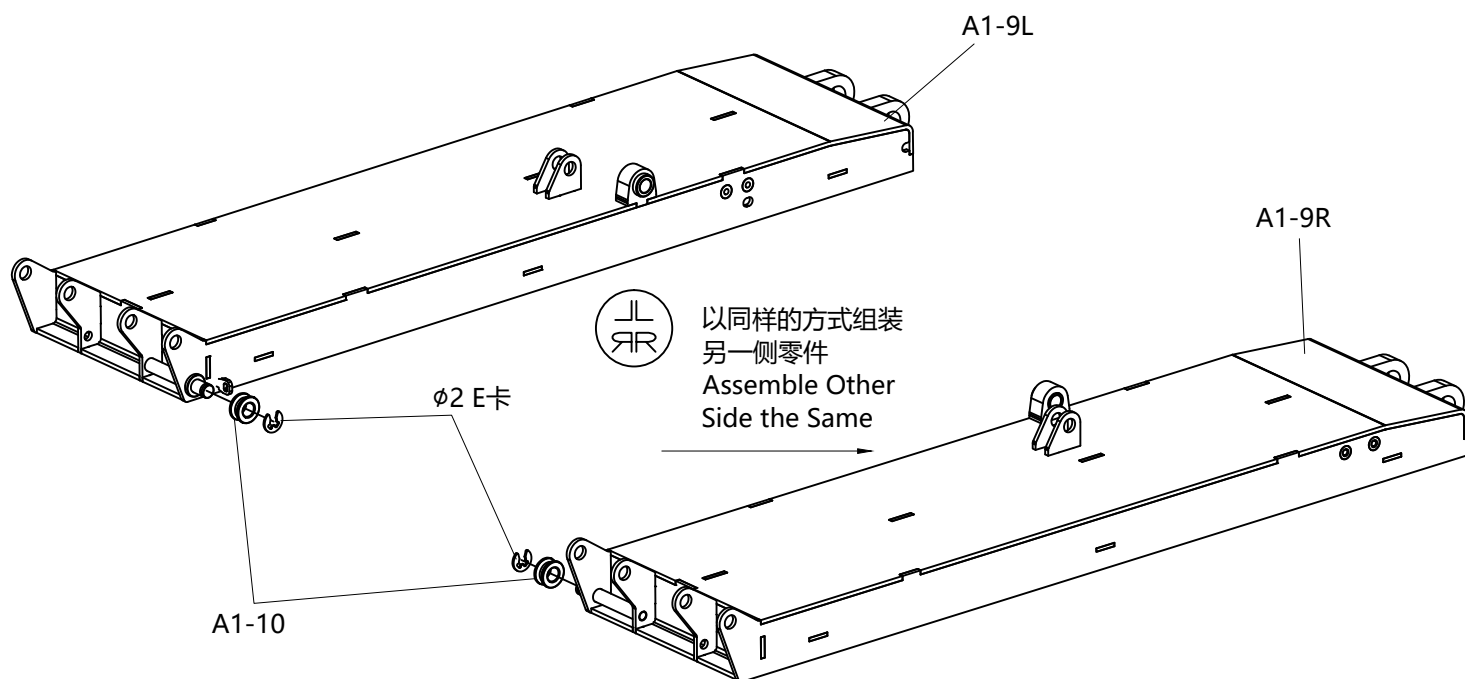


12

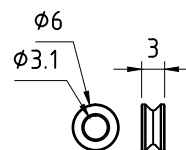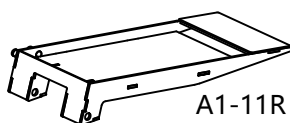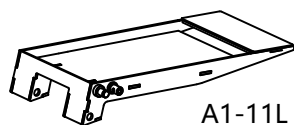

A1-10 ×2



$\phi 2$ E卡 ×2
"E" rings

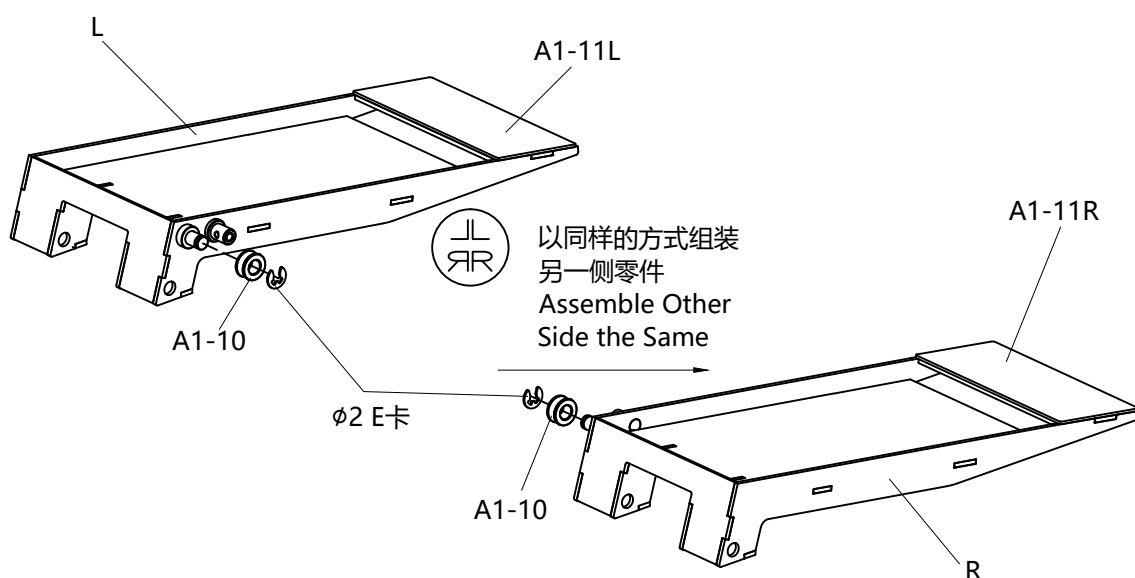


LESU
MODEL RACING


TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.


13

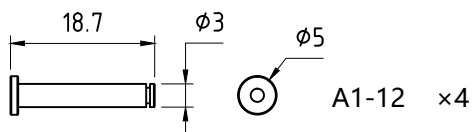


$\phi 2$ E卡 $\times 4$
"E" rings

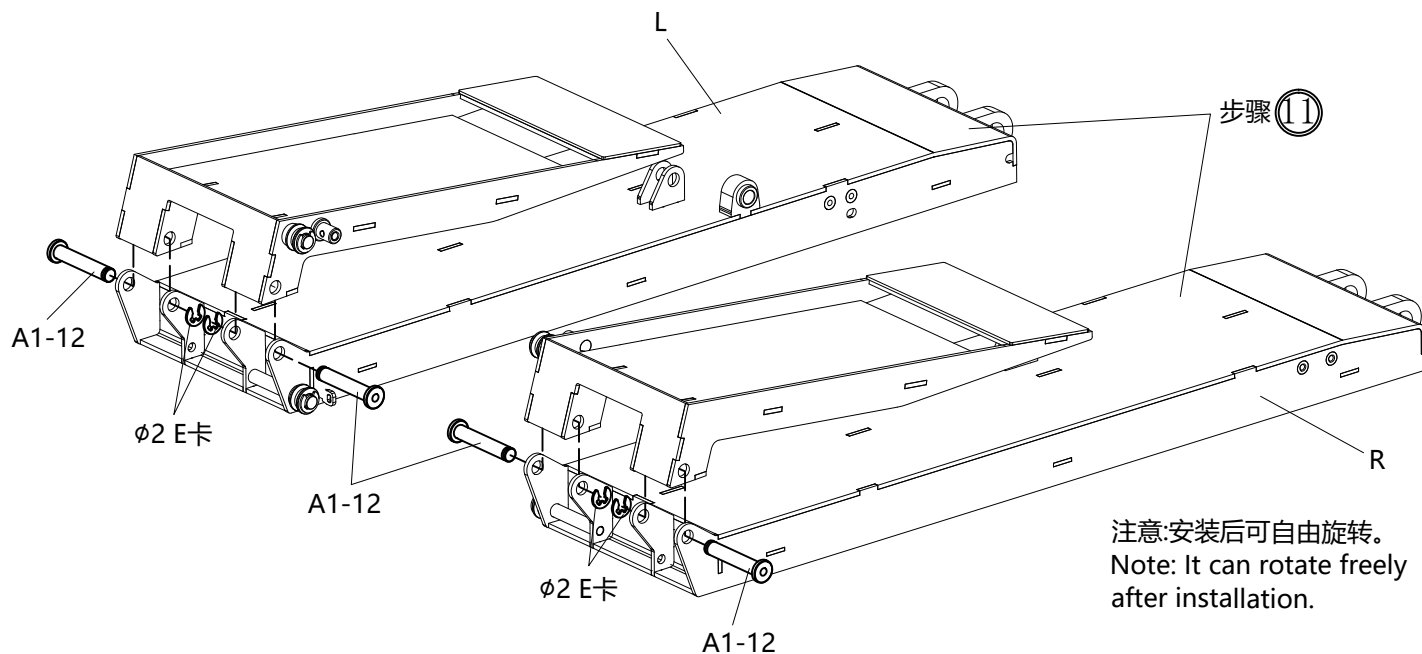


14

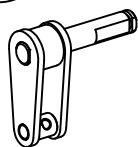

A1-13L

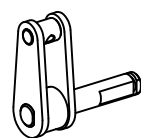

A1-13R

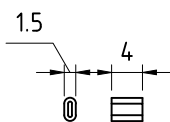


A1-14(铝扣) $\times 2$



钢丝绳
steel cable
总长度340mm
Total length 340mm

注意: 钢绳穿好后使用钳子紧压零件A1-14, 确保钢绳不松动。

Note: After wearing the steel cable, use pliers to firmly press the part A1-14 to ensure that the steel cable is not loose.

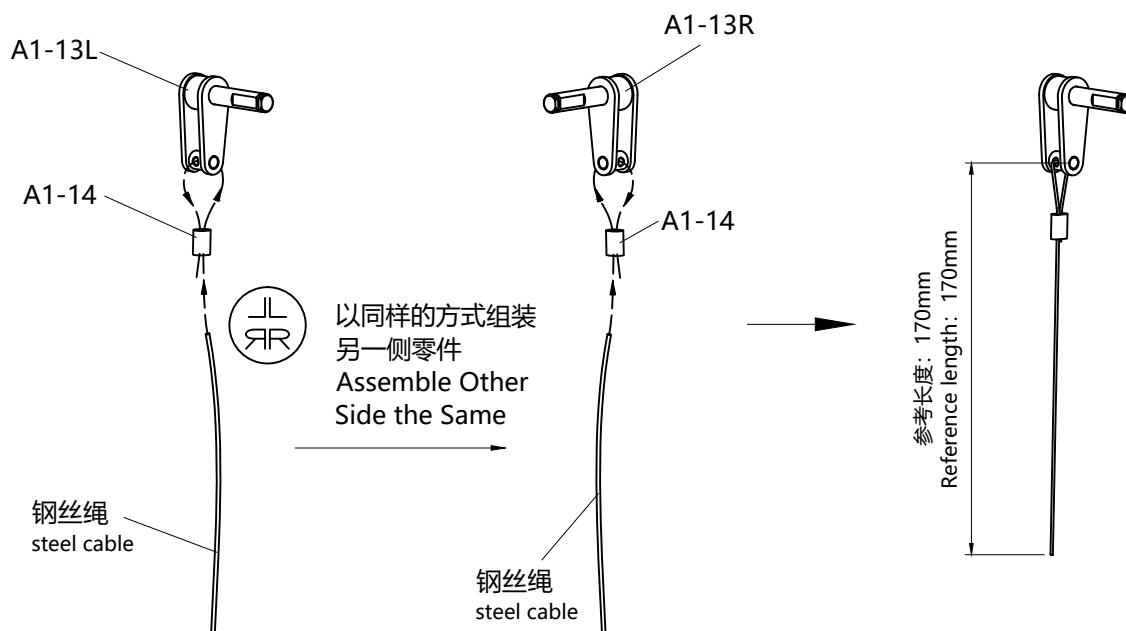

钢丝绳
steel cable

钢丝绳
steel cable

参考长度: 170mm
Reference length: 170mm

15




A1-15 ×2




φ2 E卡 ×2
"E" rings



半圆头M2-4 ×2
Hexagon socket button head screw

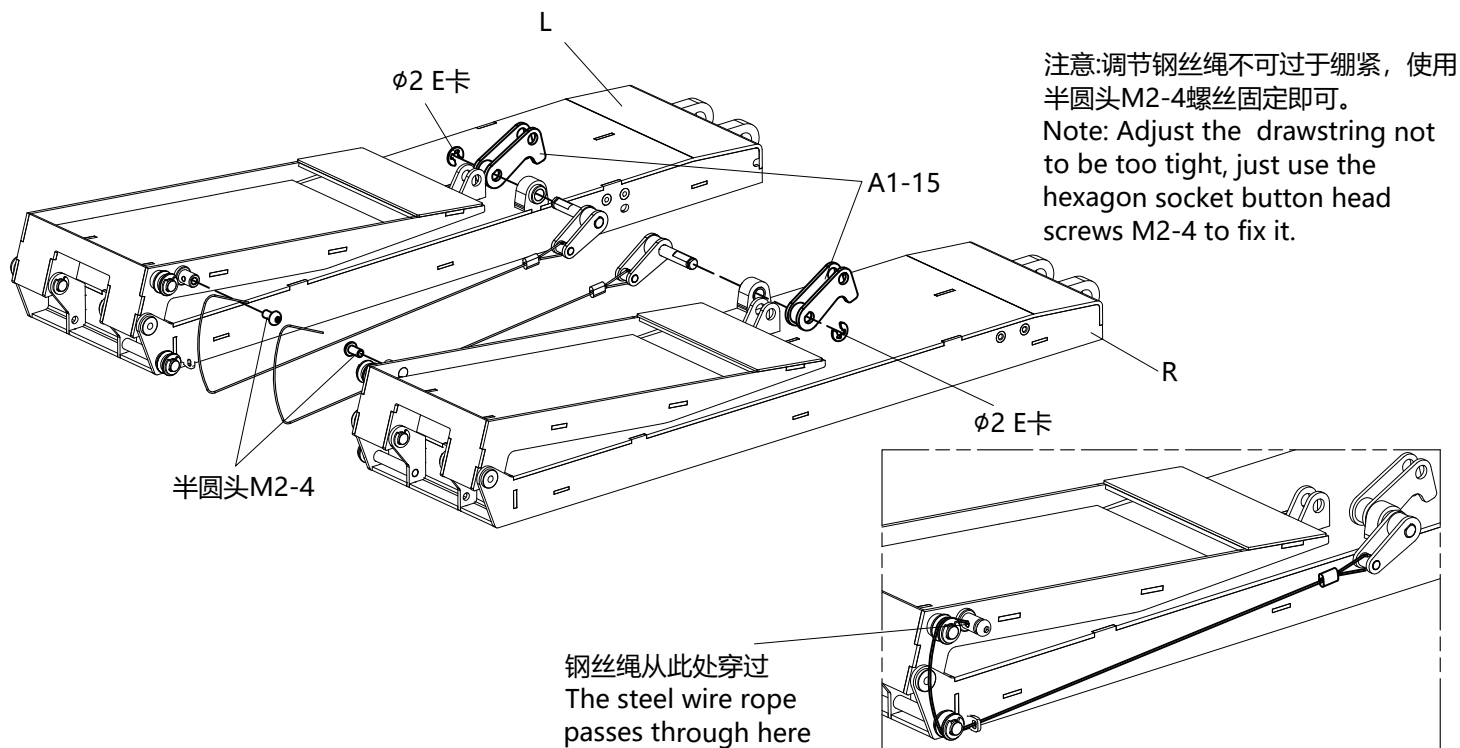

16

 

S-1263-B



A1-18




外六角M1.6-4 ×2
Hexagon screw



热缩管/Heat shrink tube

内径1mm 长度600m
Outer diameter 1mm
length 600m

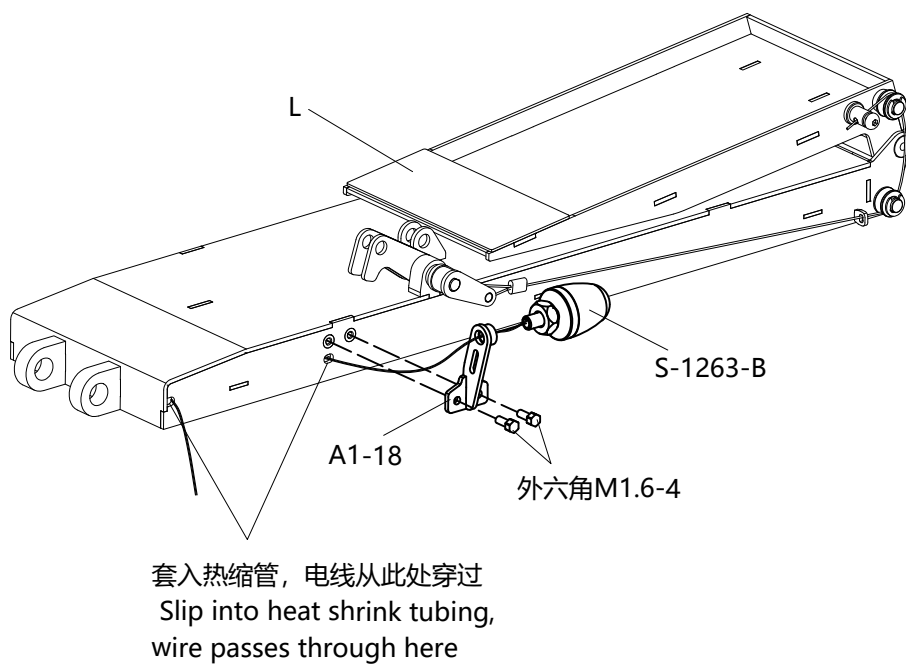

LESU
MODEL RACING

TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

17




A1-19 ×2




外六角M1.6-4 ×4
Hexagon screw




以同样的方式组装另一侧零件
Assemble Other Side the Same

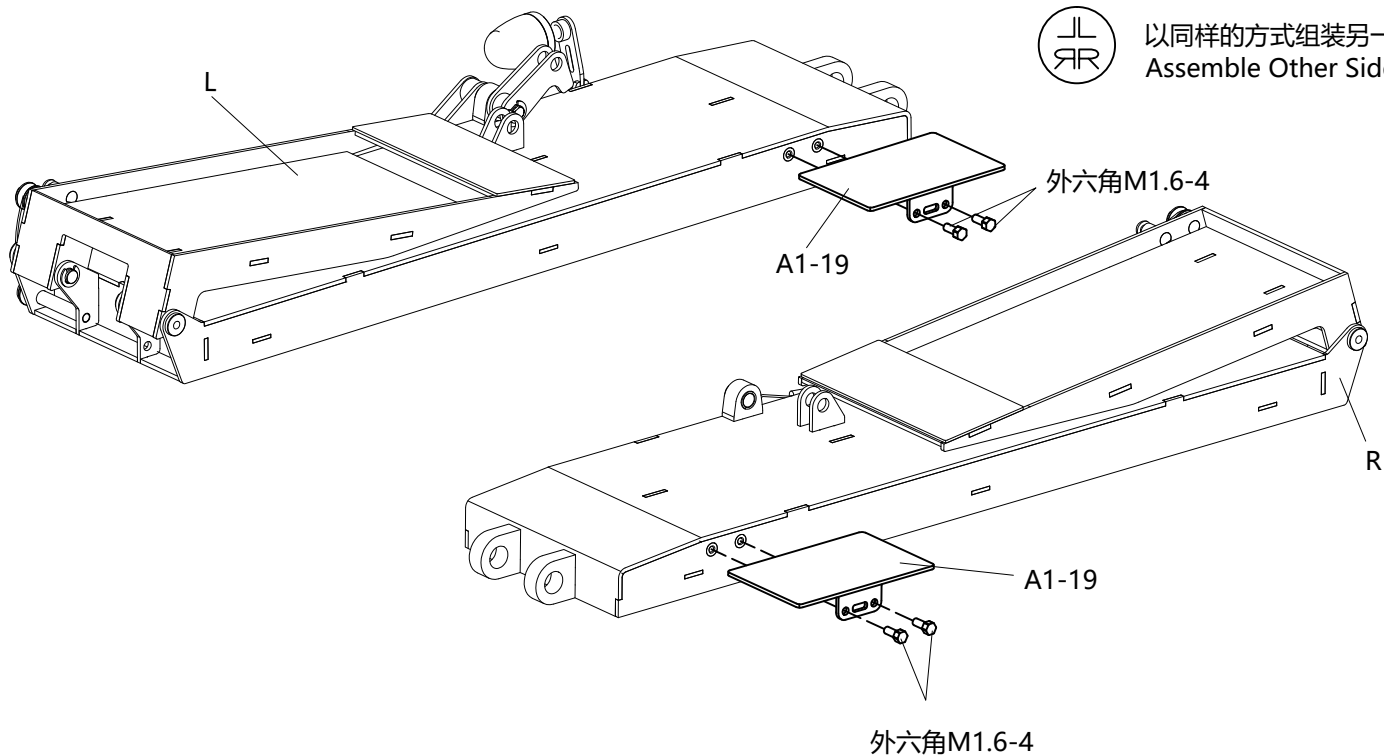

18

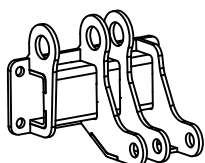

A1-20L

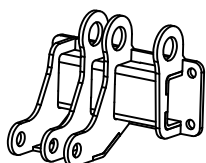


A1-20R




半圆头M2-4 ×8
Hexagon socket button head screw




M2六角螺母 ×8
Hexagon nut

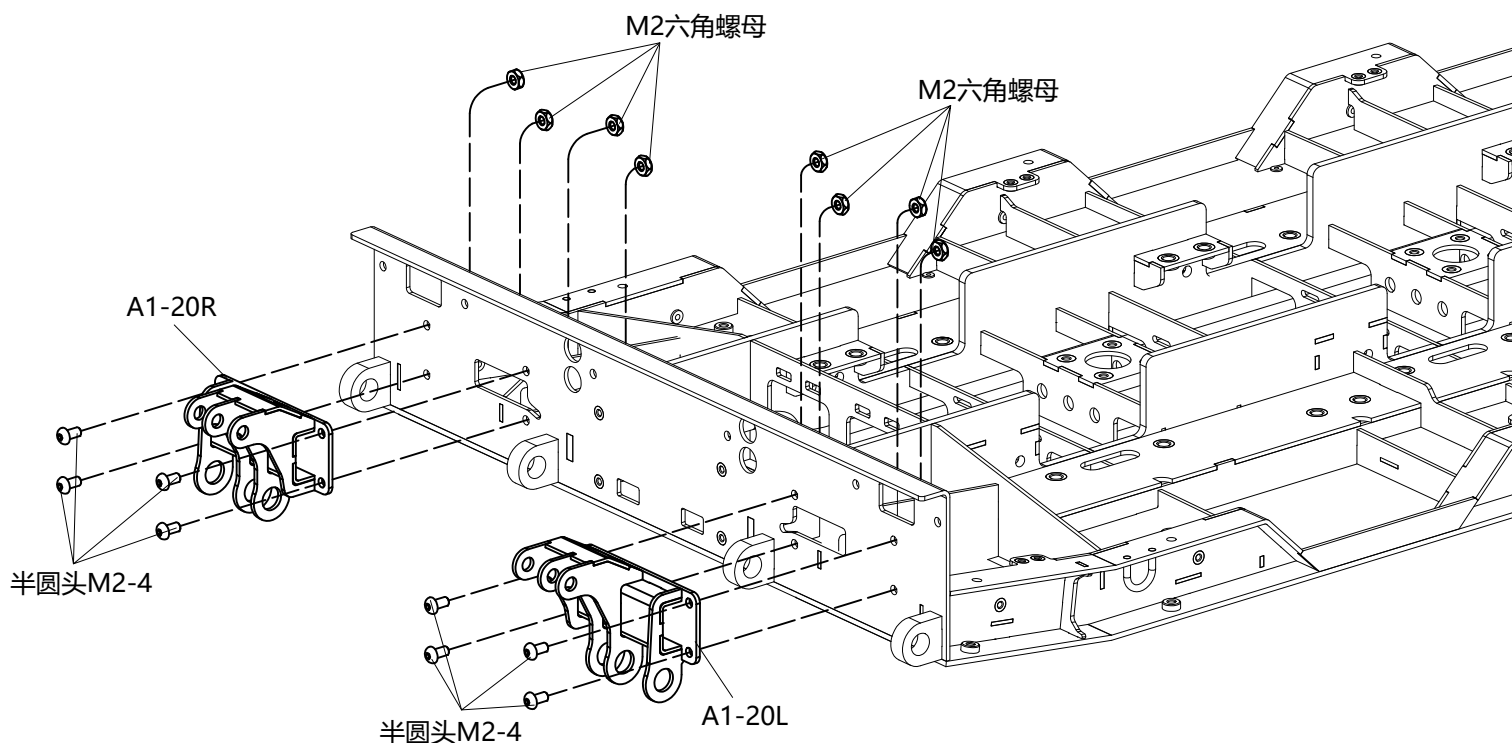

19

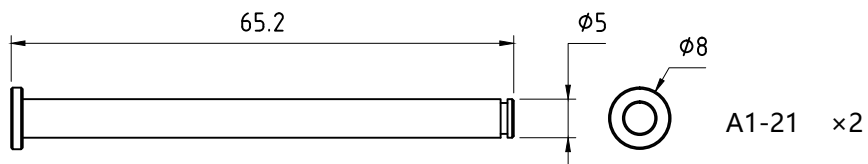

$\phi 4$ E卡 x2
"E" rings

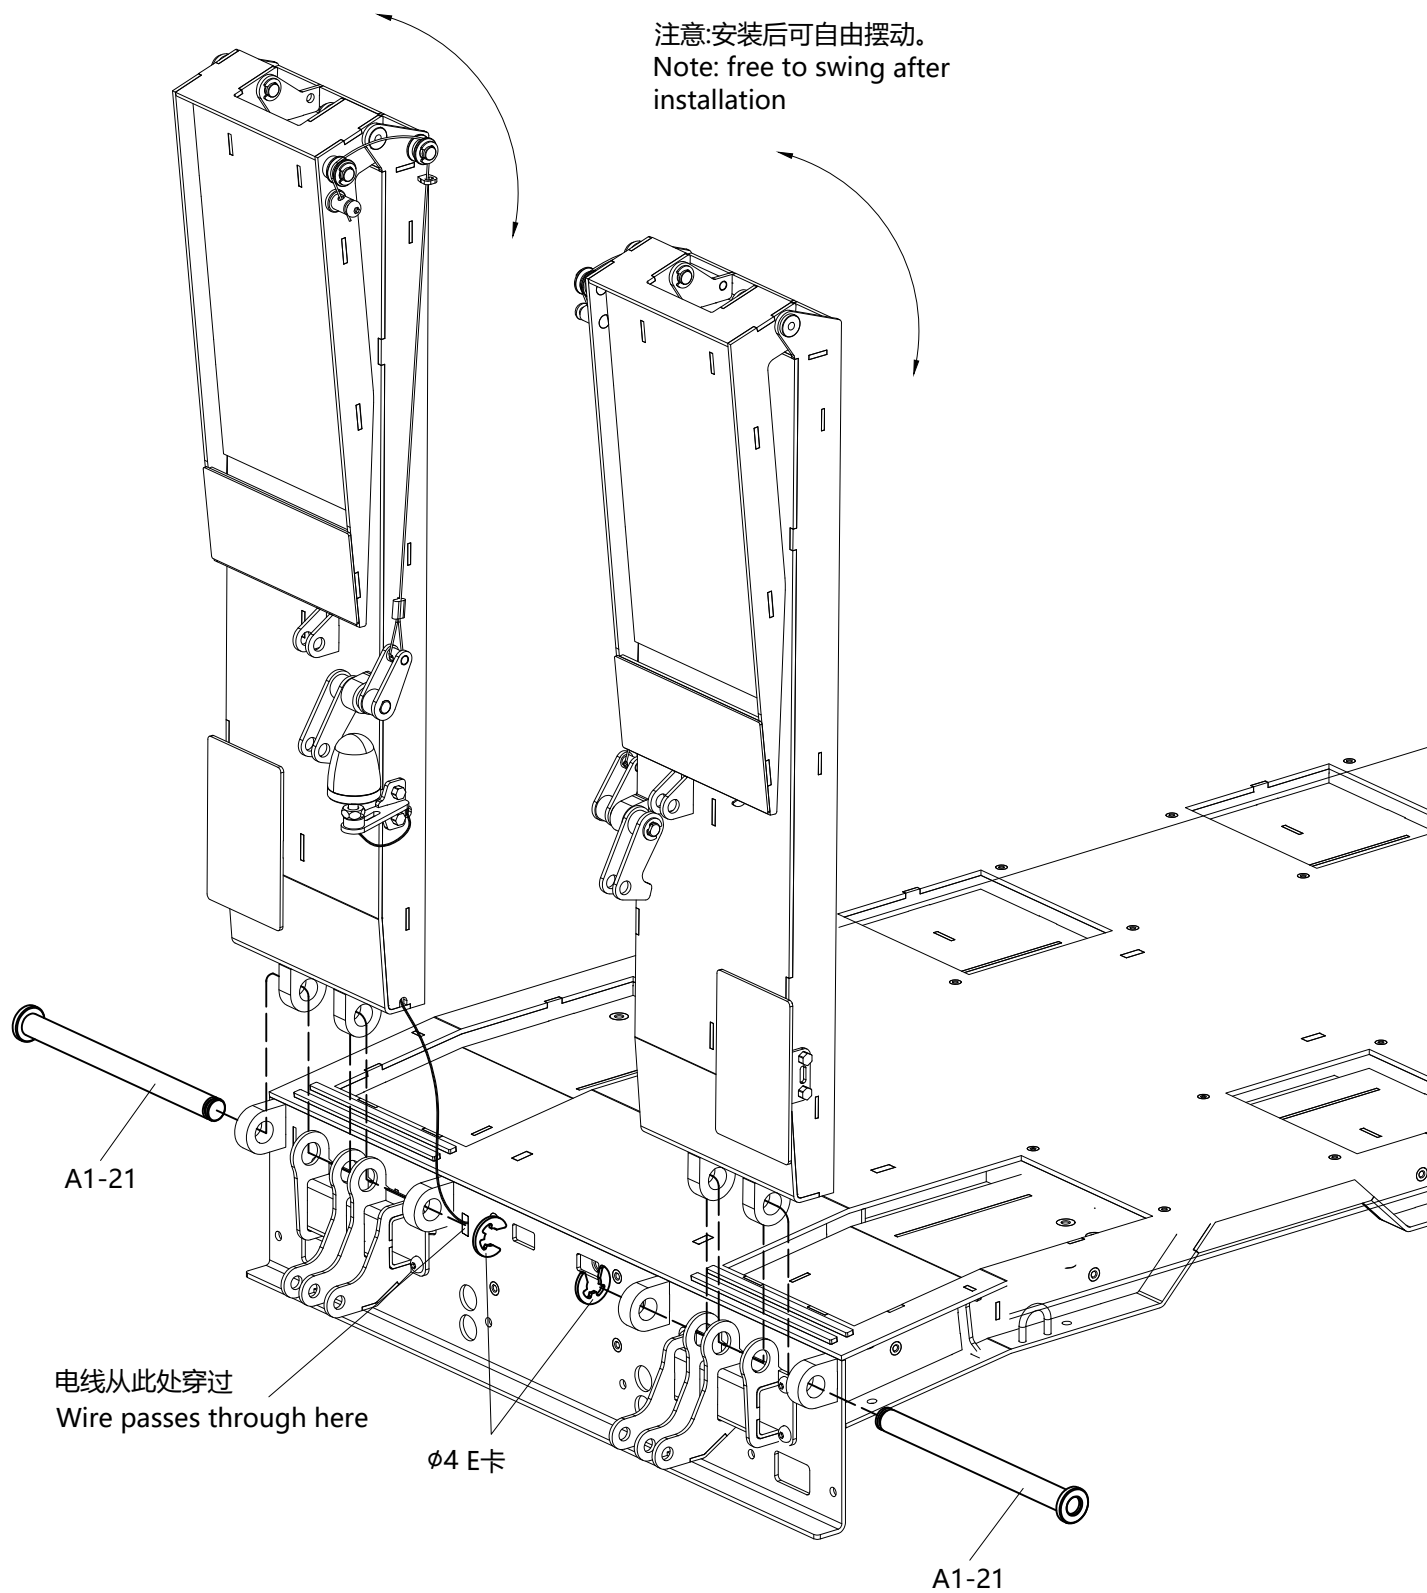

LESU
MODEL RACING

 
TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

20




A1-22 x2



A1-23 x2




A1-24 x2

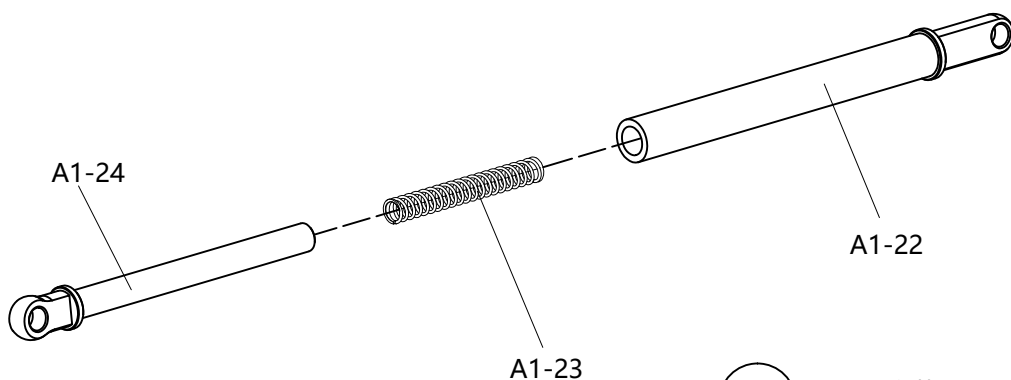


X2

重复/安装多个
Repeat/Build Multiple


21

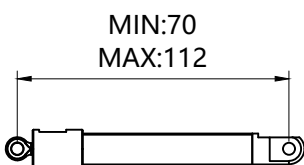


A1-25 x2

 

A1-26 x2

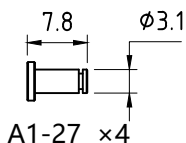

A1-27 x4

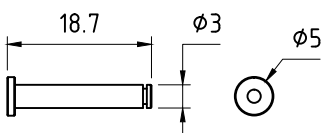


A1-12 x2

φ2 E卡 x6
"E" rings

注意:调节钢丝绳, 使A1-11L和A1-11R零件
在下落时可自由展开。

Note: Adjust the wire rope so
that the A1-11L and A1-11R parts can
unfold freely when falling.

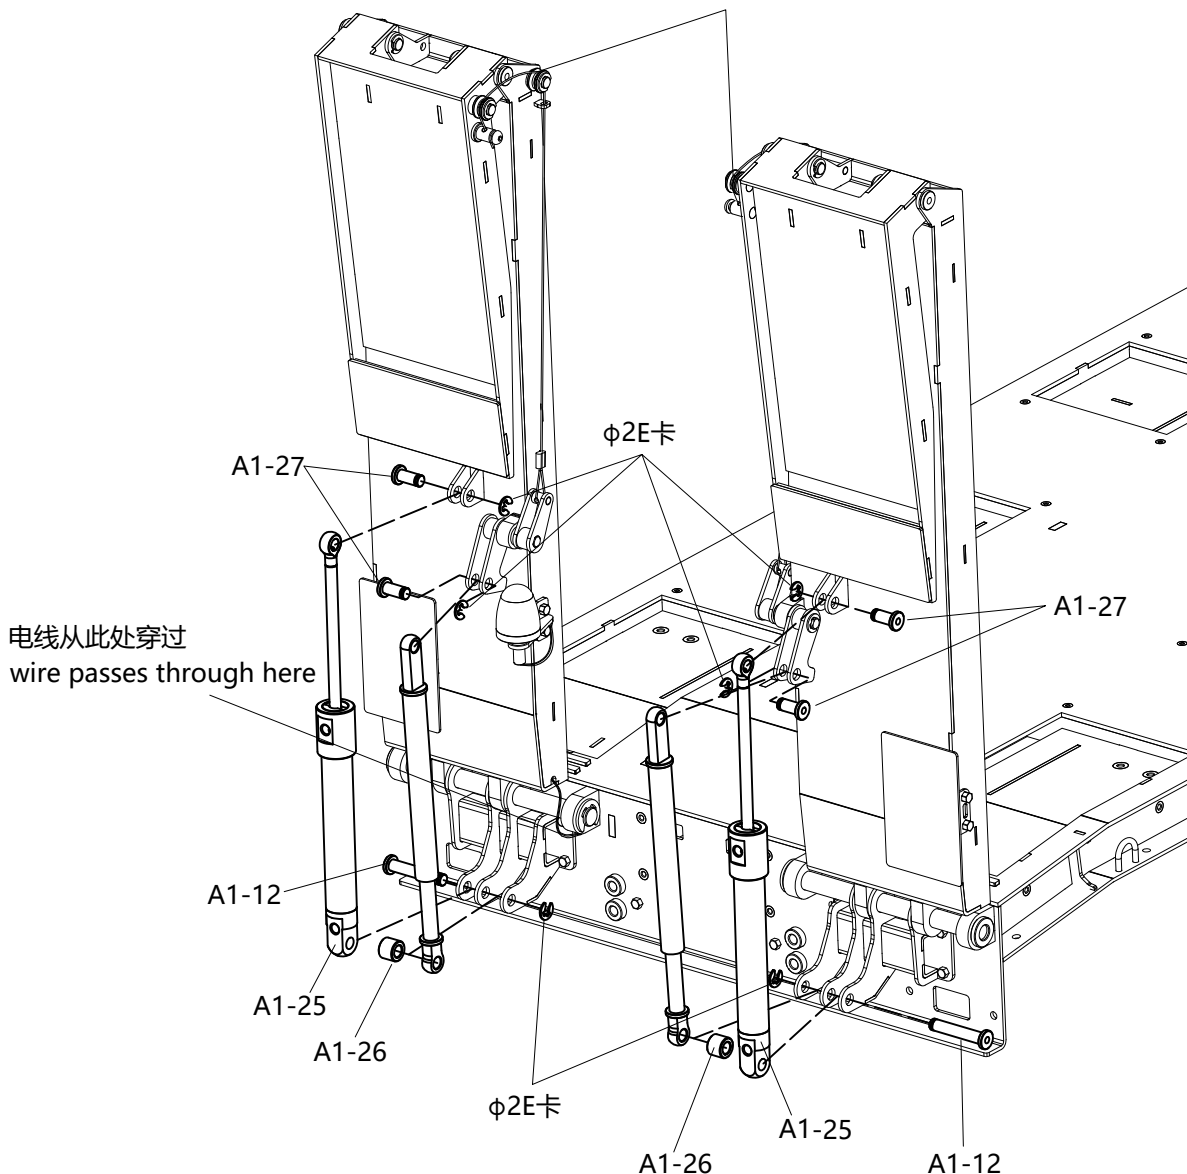

电线从此处穿过
wire passes through here

 
22



Y-1544-M3A ×4



Y-1544-M3B ×4



An-0017-D1 ×8

油管

oil hose

直径2内径1总长度270mm

Diameter 2 inner diameter 1

Total length 280mm

L7= 90mm,L8=50mm

X2

重复/安装多个
Repeat/Build Multiple

Y-1544-M3A

L7=90

An-0017-D1


An-0017-D1

Y-1544-M3B

Y-1544-M3A

L8=50

安装后，保证A1-9L与A1-9R可自由摆动。
After installation, ensure that A1-9L and A1-9R can swing freely.

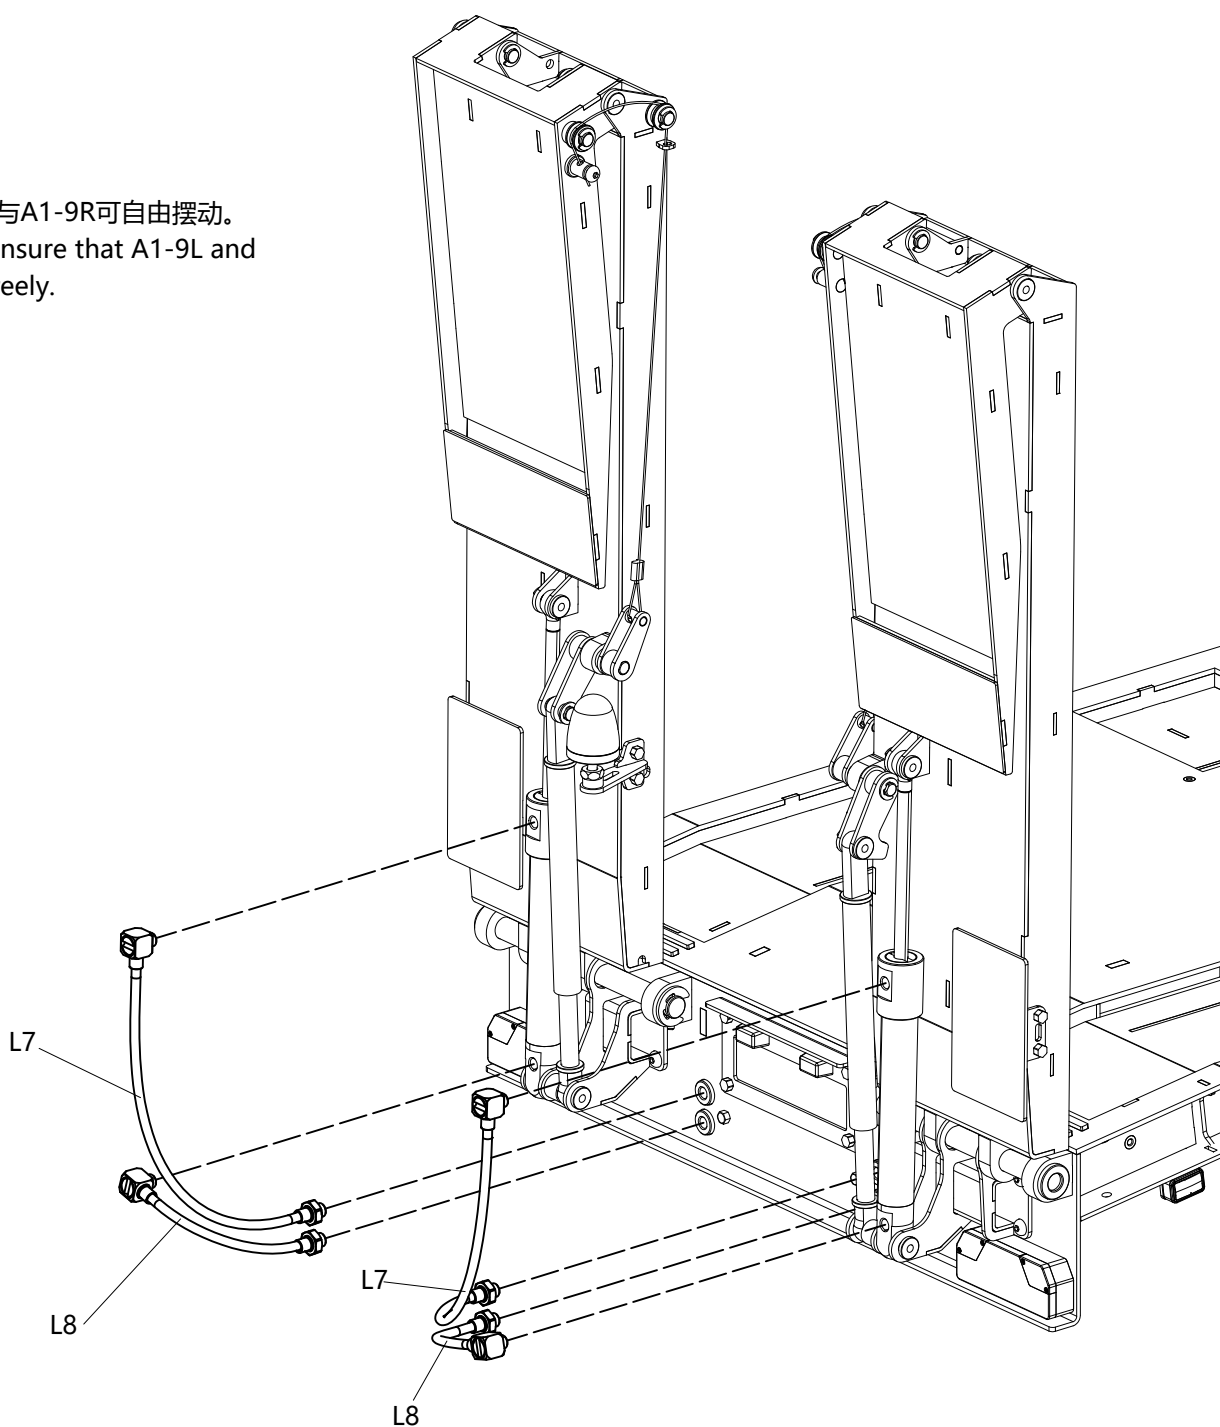


LESU
MODEL RACING


TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.


23

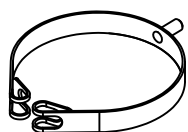


A1-29 ×16

 


A1-30 ×16

 

A1-31 ×16

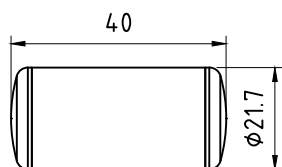

A1-32 ×8

 

十字盘头M1.2-8 ×16
Cross pan head screw

X16

重复/安装多个
Repeat/Build Multiple


A1-31 A1-30

A1-29

盘头十字M1.2-8

注意:只需要将M1.2螺丝拧在A1-31零件上即可, 不需要拧紧。

Note: Only need to screw the M1.2 screw on the A1-31 part, no need to tighten.

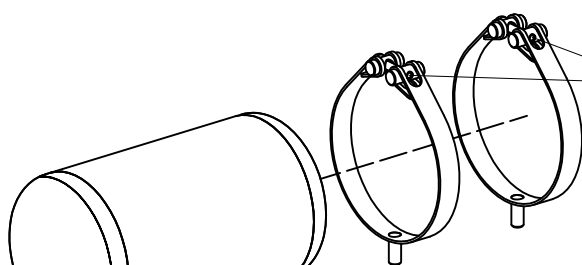


X8

重复/安装多个
Repeat/Build Multiple

A1-32

注意: 将气罐安装好之后, 拧紧十字盘头螺丝M1.2-8。

Note: After installing the gas tank, tighten the Pan head screws with cross recess M1.2-8 .

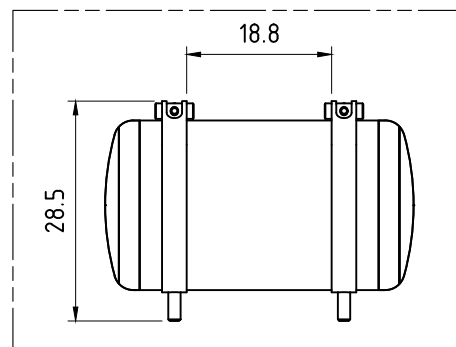


24




M1.6六角螺母 ×16
Hexagon nut


M1.6六角螺母

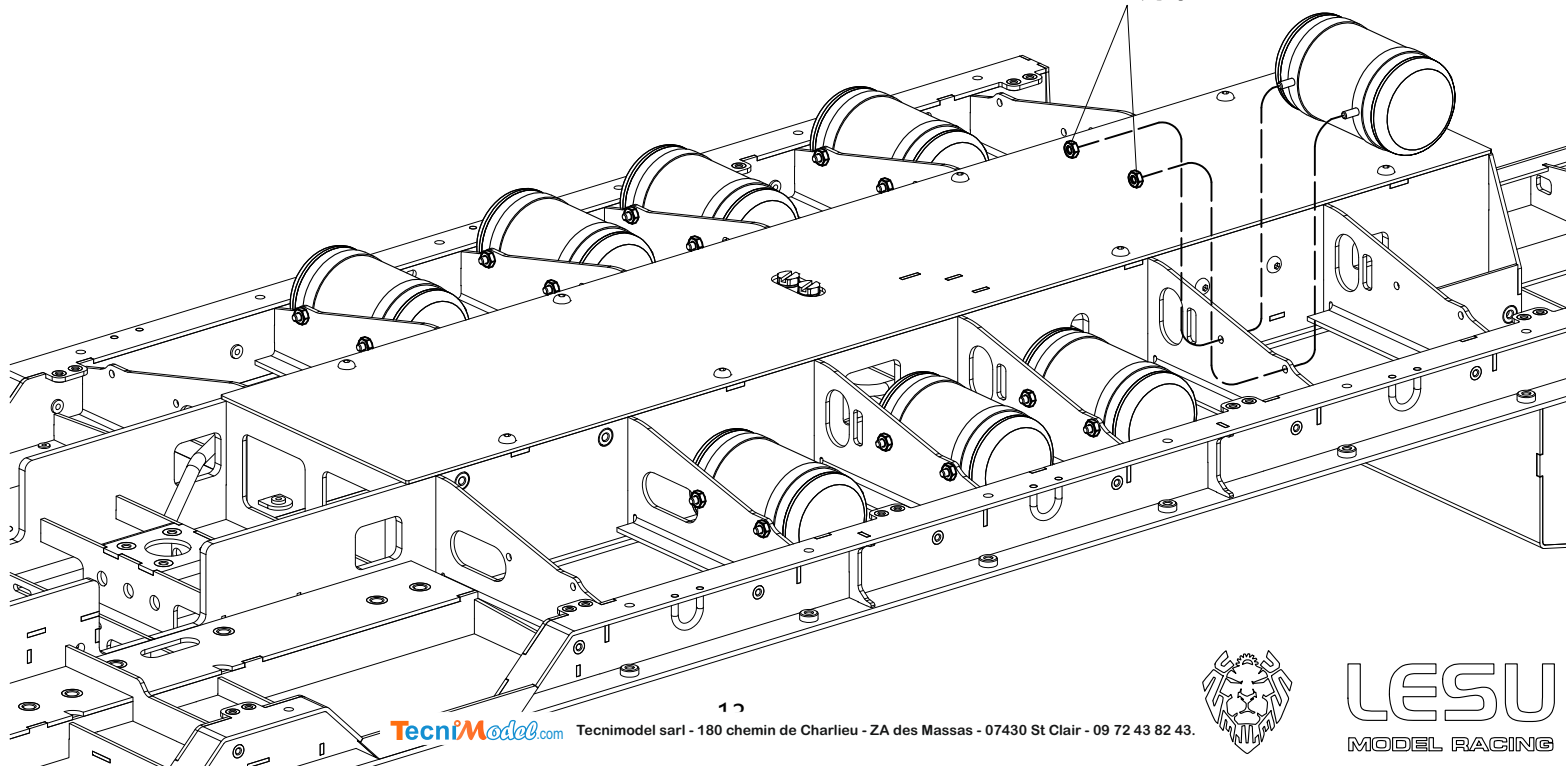

25

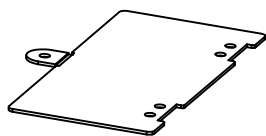

A1-33 ×2

 


磁铁 ×2
magnet



M1.6六角螺母 ×2
Hexagon nut



十字沉头M1.6-4 ×2
Cross recessed countersunk head screw

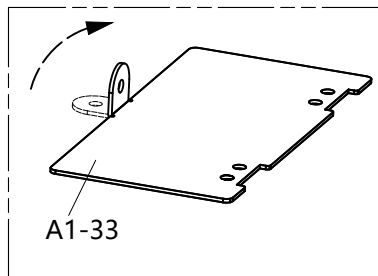

M1.6六角螺母

磁铁

十字沉头M1.6-4



特别注意

Pay Special Attention

对比第26步，注意磁铁磁极方向。


Compare with step 26, pay attention to the direction of magnet pole.




重复/安装多个

Repeat/Build Multiple

26

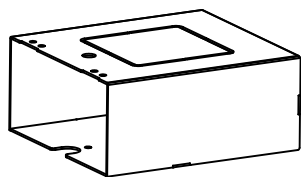

A1-34 ×2

 


磁铁 ×2
magnet



M1.6六角螺母 ×2
Hexagon nut



十字沉头M1.6-4 ×2
Cross recessed countersunk head screw

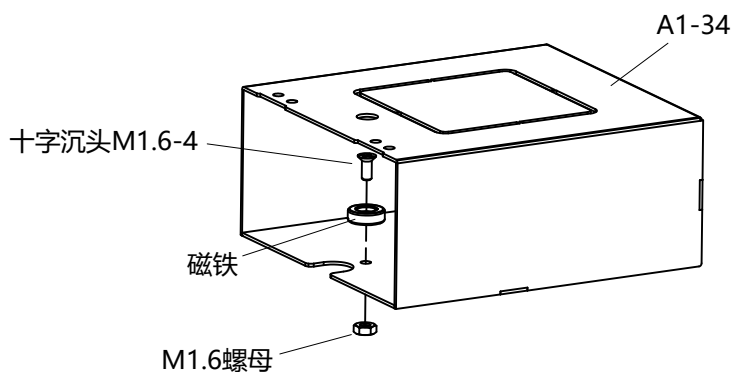

A1-34

十字沉头M1.6-4

磁铁

M1.6螺母



特别注意

Pay Special Attention

对比第25步，注意磁铁磁极方向。

Compare with step 25, pay attention to the direction of magnet pole.



重复/安装多个

Repeat/Build Multiple

27




An-0012 ×2



外六角M1.2-3 ×8
Hexagon screw



M1.2六角螺母 ×8
Hexagon nut

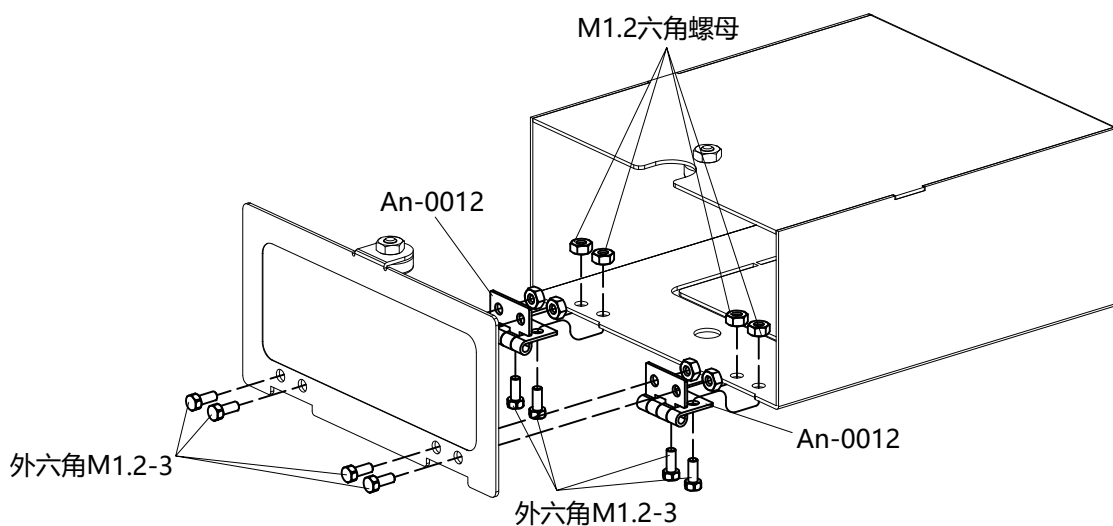

M1.2六角螺母

An-0012

An-0012

外六角M1.2-3

外六角M1.2-3



LESU
MODEL RACING


TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

28



半圆头M2-4 ×4
Hexagon socket button head screw

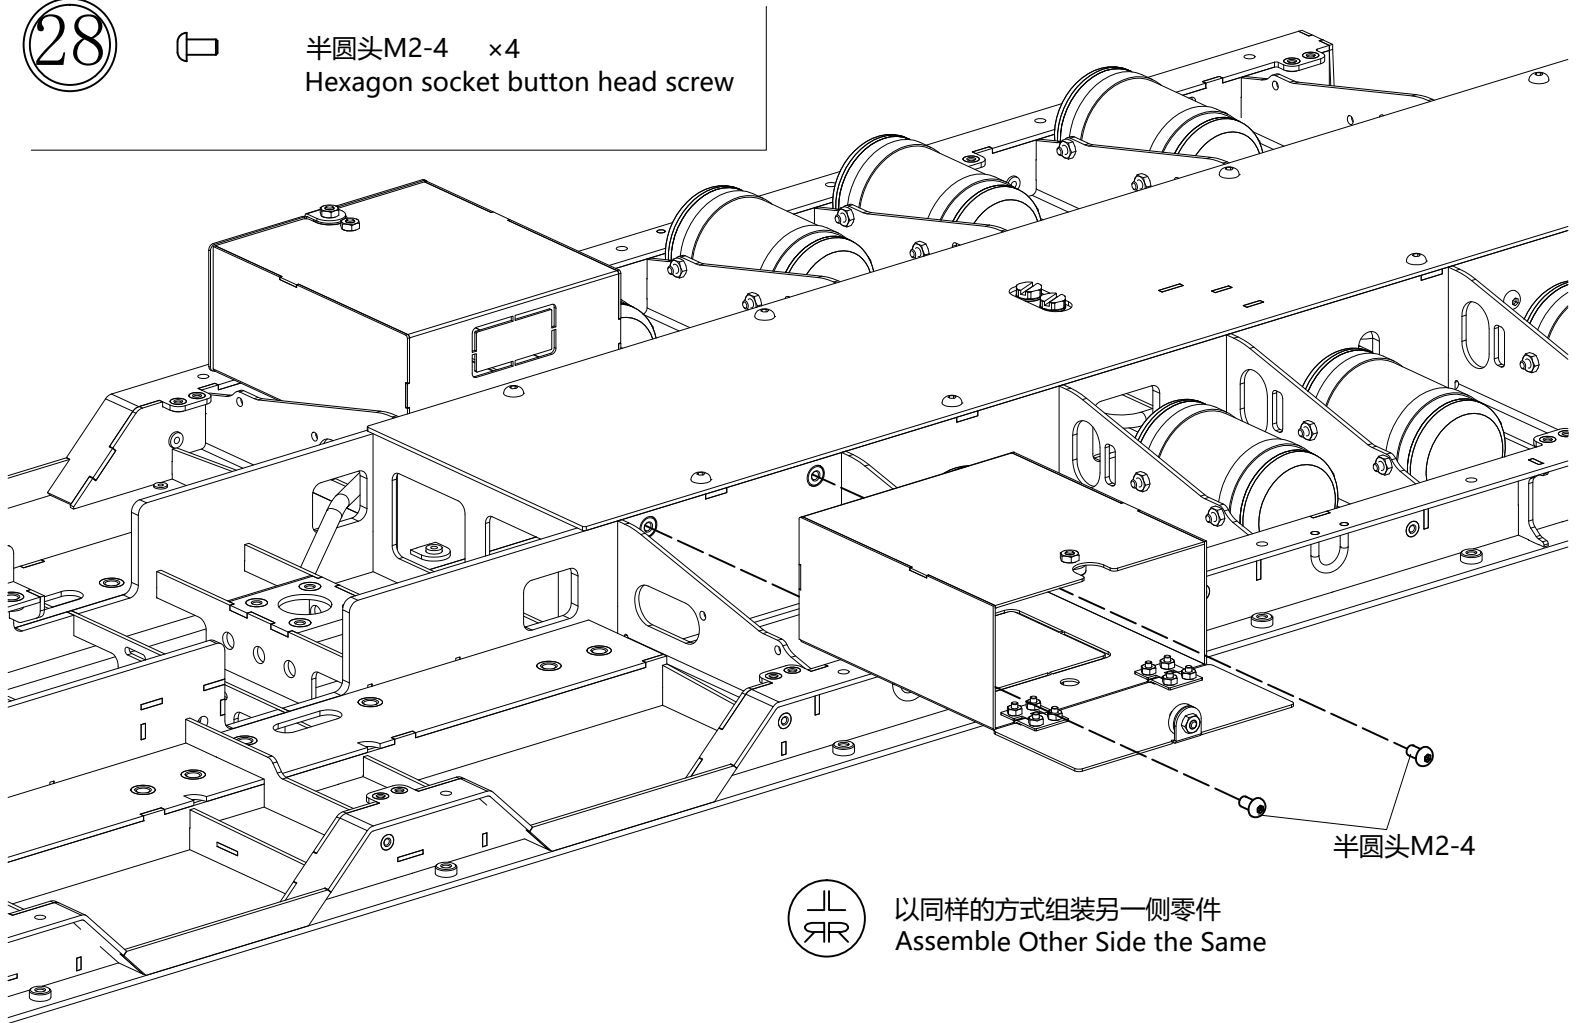


半圆头M2-4



以同样的方式组装另一侧零件
Assemble Other Side the Same

 
29



S-1288 ×5
零件S-1288为KIT版本，说明书另附
Part S-1288 is the KIT version,
see the attachment for the instructions

热缩管/Heat shrink tube
内径0.8mm 长度2.4m
Outer diameter 0.8mm
length 2.4m

0.4mm电线
wire
长度 800 m
length 800 mm

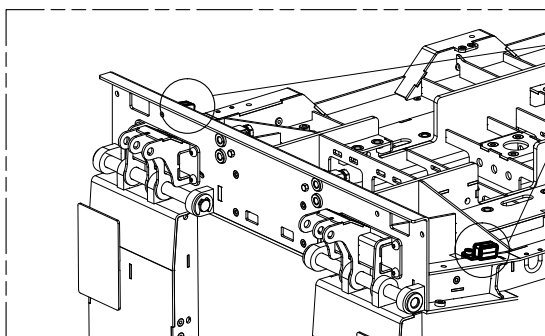


S-1288

X10

重复/安装多个
Repeat/Build Multiple

S-1288


S-1288中附带的杯头M1.6-4
Hexagon socket head cap
screw M1.6-4 attached to S-1288

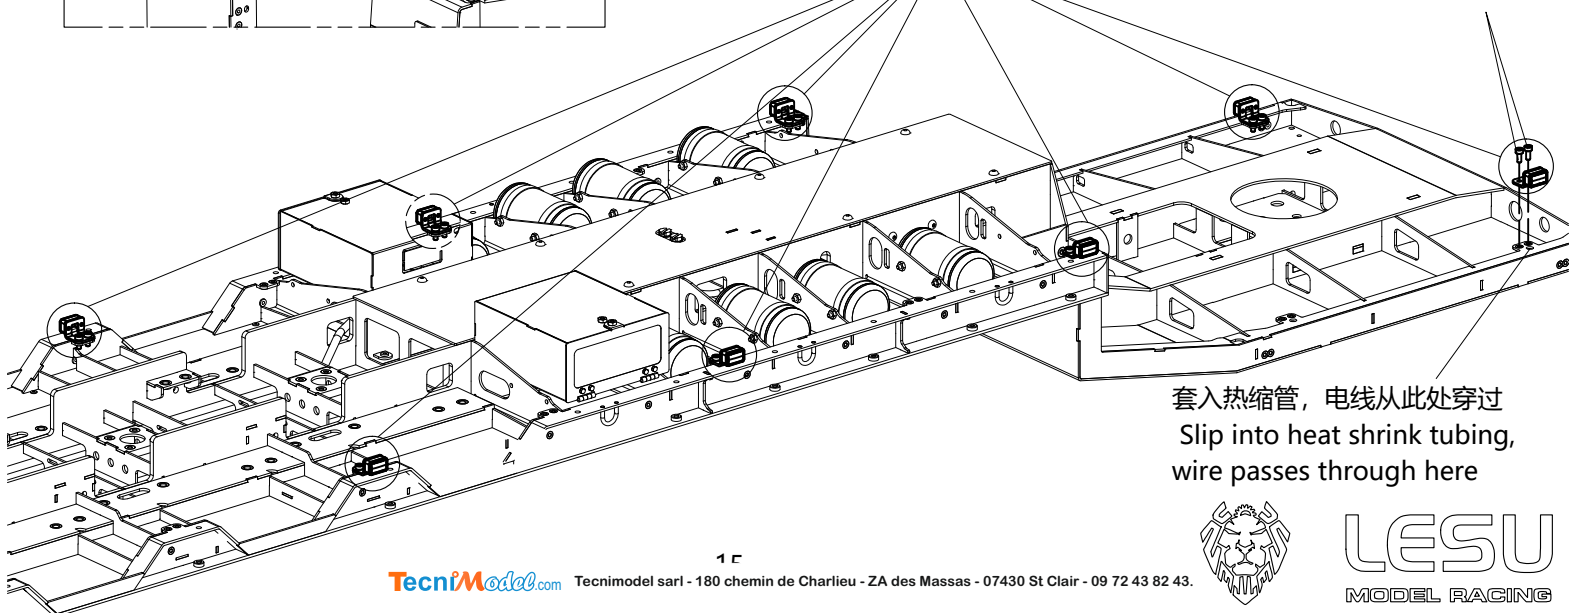

套入热缩管，电线从此处穿过
Slip into heat shrink tubing,
wire passes through here



LESU
MODEL RACING

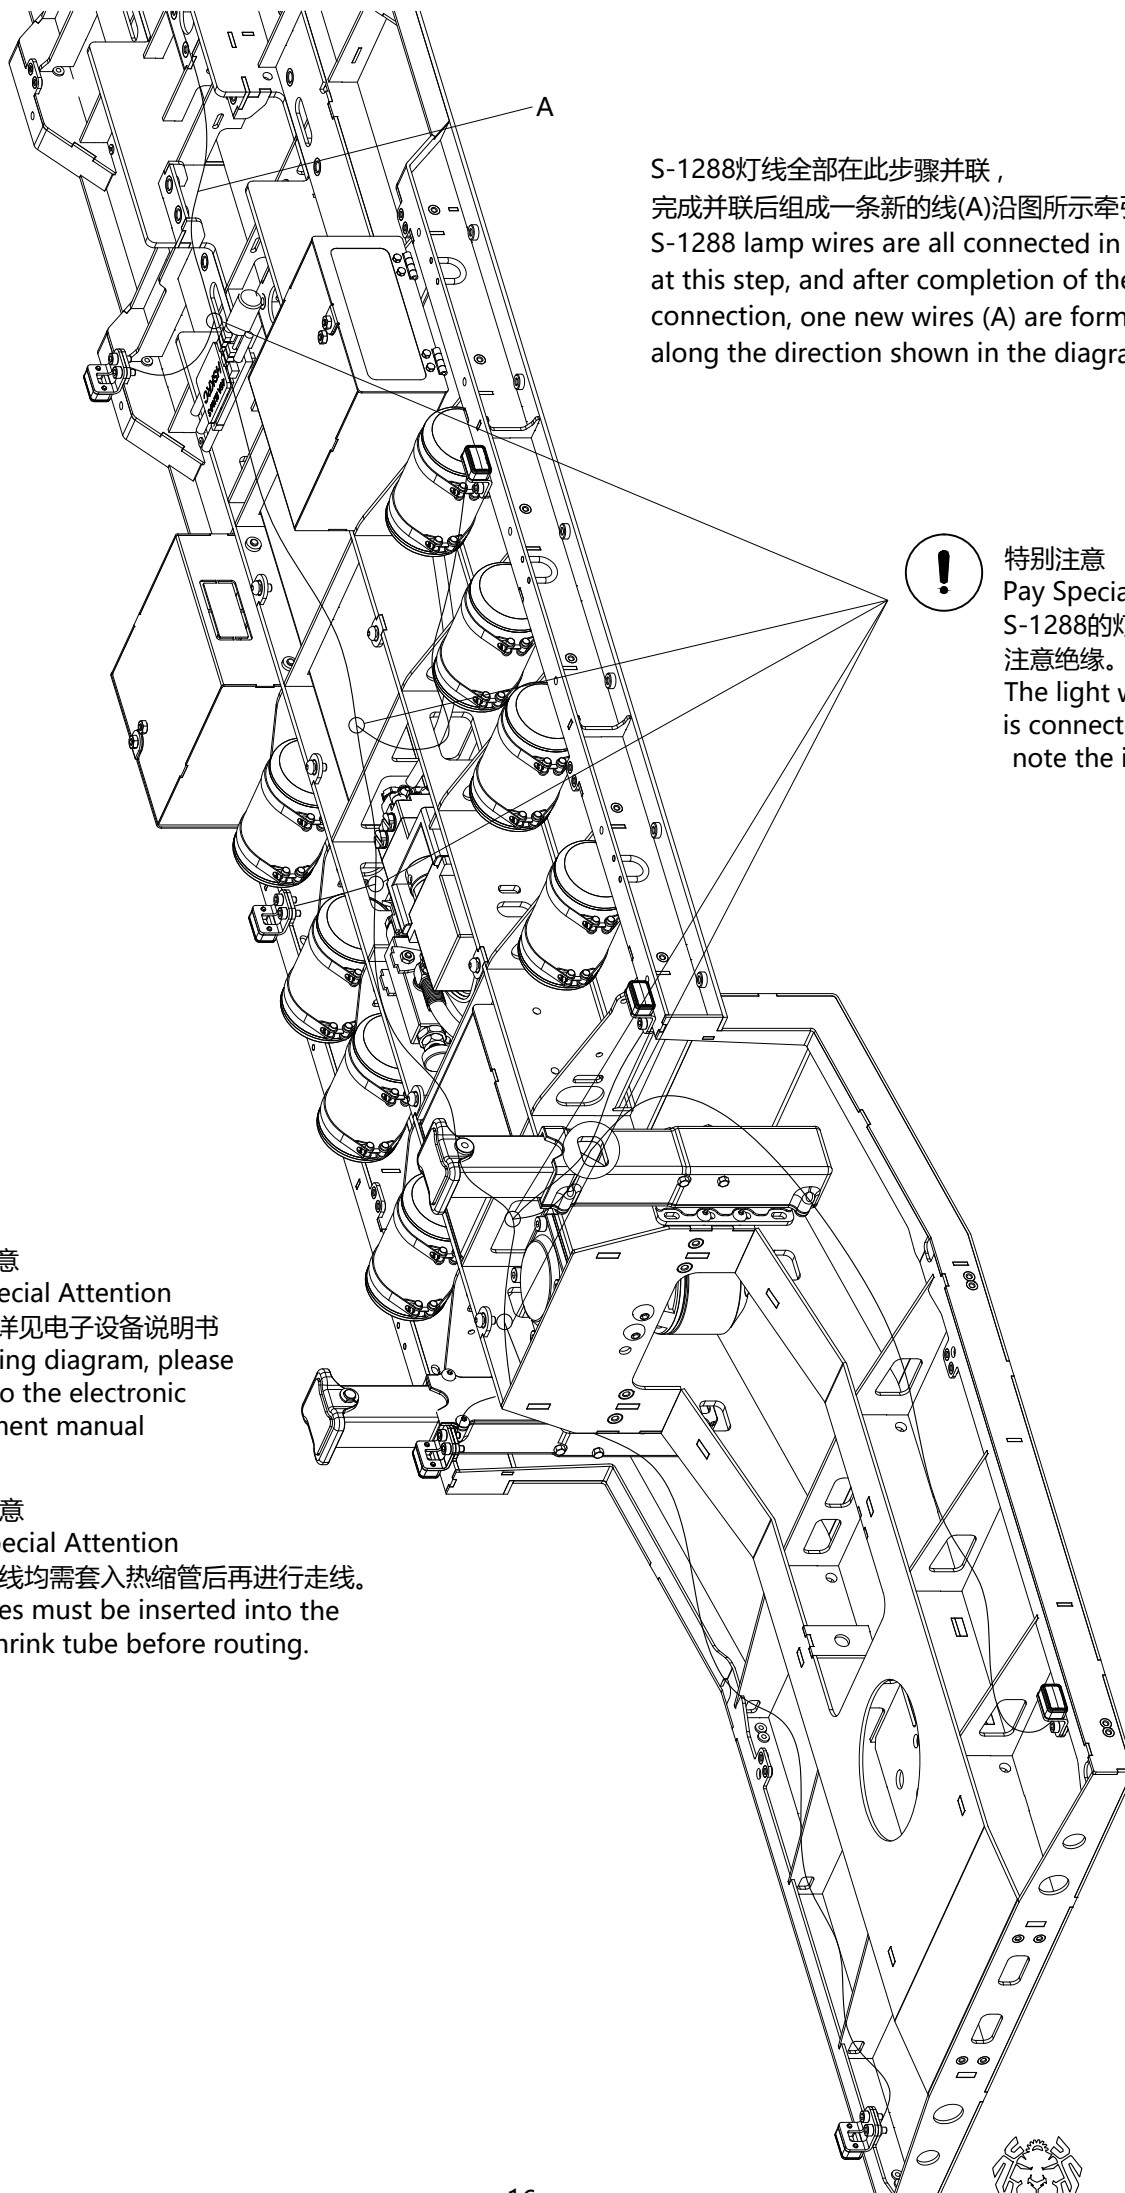

S-1288灯线全部在此步骤并联，
完成并联后组成一条新的线(A)沿图所示牵引出来。
S-1288 lamp wires are all connected in parallel
at this step, and after completion of the parallel
connection, one new wires (A) are formed and pulled
along the direction shown in the diagram.



特别注意
Pay Special Attention
S-1288的灯线在此处并联，
注意绝缘。
The light wire of S-1288
is connected in parallel here,
note the insulation.



特别注意
Pay Special Attention
接线图详见电子设备说明书
For wiring diagram, please
refer to the electronic
equipment manual



特别注意
Pay Special Attention
所有灯线均需套入热缩管后再进行走线。
All wires must be inserted into the
heat shrink tube before routing.




特别注意

Pay Special Attention

接线图详见电子设备说明书

For wiring diagram, please
refer to the electronic
equipment manual

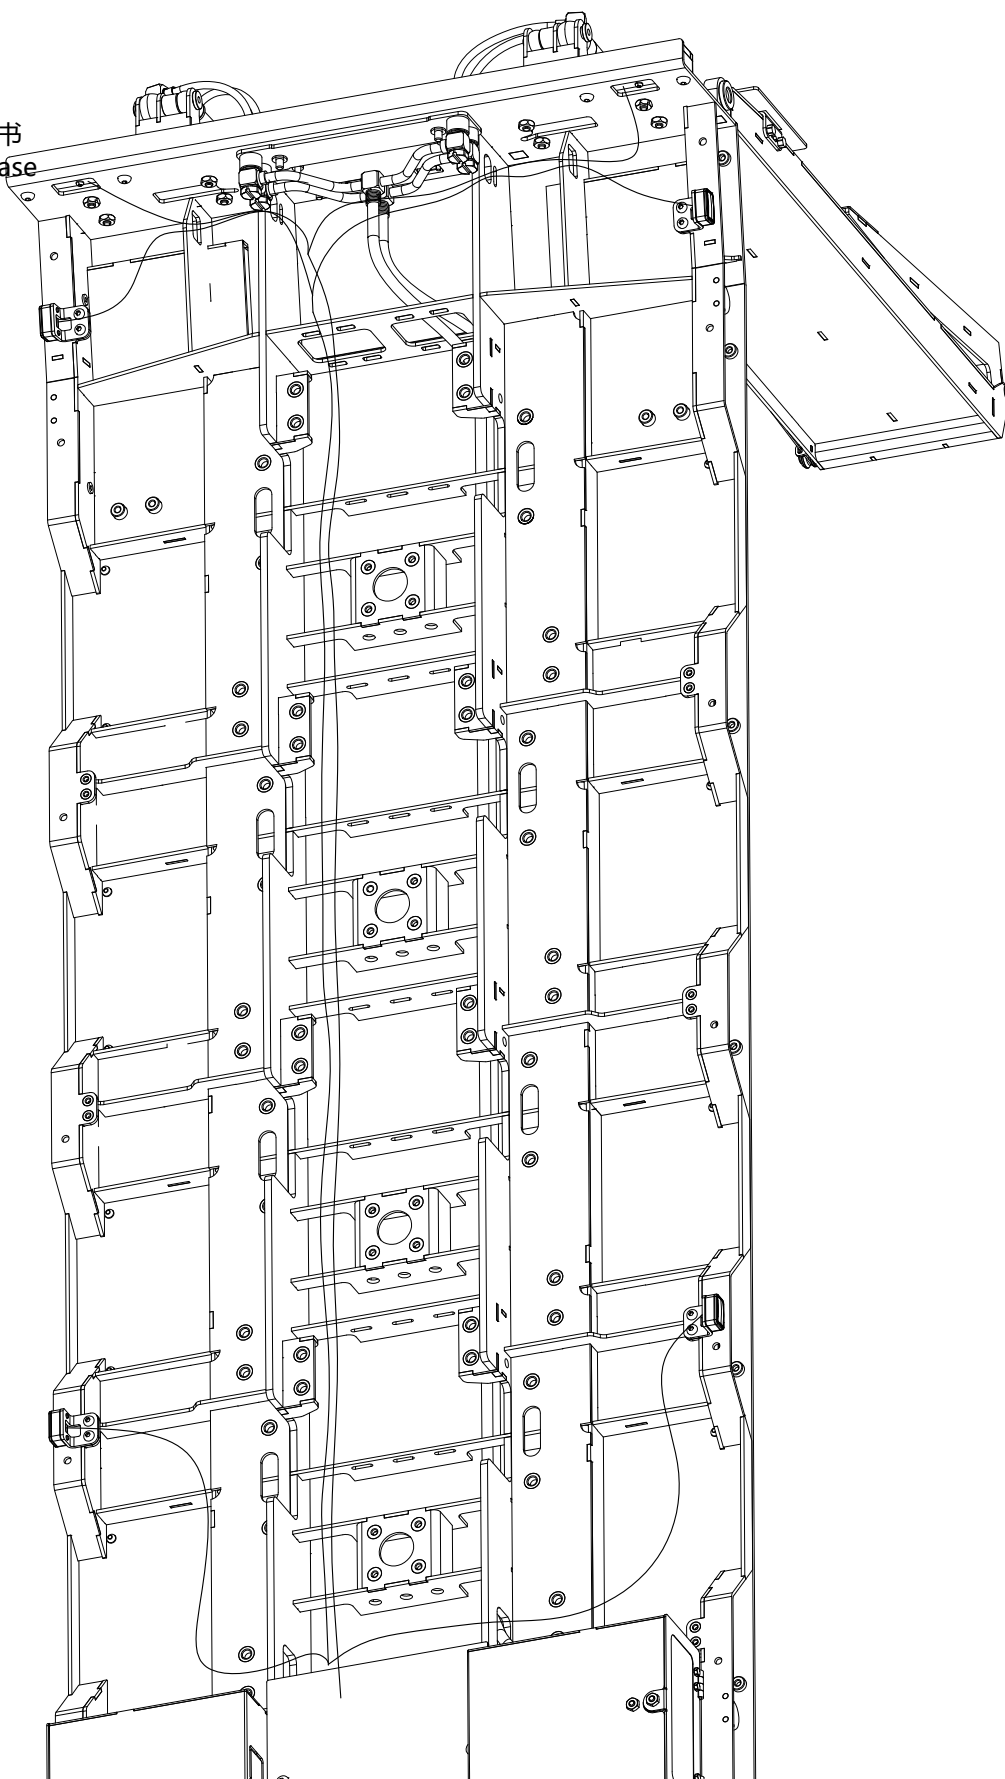

特别注意

Pay Special Attention

所有灯线均需套入热缩管后再进行走线。

All wires must be inserted into the
heat shrink tube before routing.



LESU
MODEL RACING

 
TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

30




A1-28 ×2



透明
transparent



A1-35 ×2

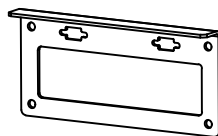

A1-36



3.1mm×2.8mm贴片LED灯(白光) ×2
(线长400mm)
SMD LED light (white light)
(Line length 400mm)


热缩管/Heat shrink tube
内径0.8mm 长度800m
Outer diameter 0.8mm
length 800m



用快干胶安装
Use Instant Adhesive
注意胶水用量，过量胶水
会引起零件发白，影响效果
Pay attention to the amount
of glue, excessive glue will
cause the parts to turn white
and affect the effect




用快干胶安装
Use Instant Adhesive

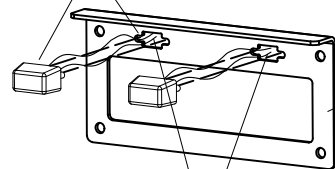

A1-36

套入热缩管，电线从此处穿过
Slip into heat shrink tubing,
wire passes through here

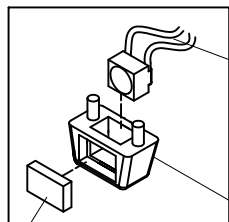

LED贴片灯

A1-28

A1-35

31



外六角M1.6-4 ×4
Hexagon screw

0.4mm电线
wire
长度 600 m
length 600 mm

热缩管/Heat shrink tube
内径0.8mm 长度600m
Outer diameter 0.8mm
length 600m



特别注意
Pay Special Attention
接线图详见电子设备说明书
For wiring diagram, please
refer to the electronic
equipment manual



特别注意
Pay Special Attention
灯线穿过此处后并联，
注意绝缘。
The light wire is
connected in parallel after
passing through here,
pay attention to insulation.

外六角M1.6-4




LESU
MODEL RACING

TecniModel.com


Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

32

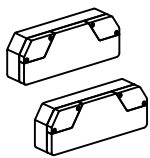


S-1281
零件S-1281为KIT版本，说明书另附
Part S-1281 is the KIT version, see the
attachment for the instructions

热缩管/Heat shrink tube
内径1mm 长度600m
Outer diameter 1mm
length 600m

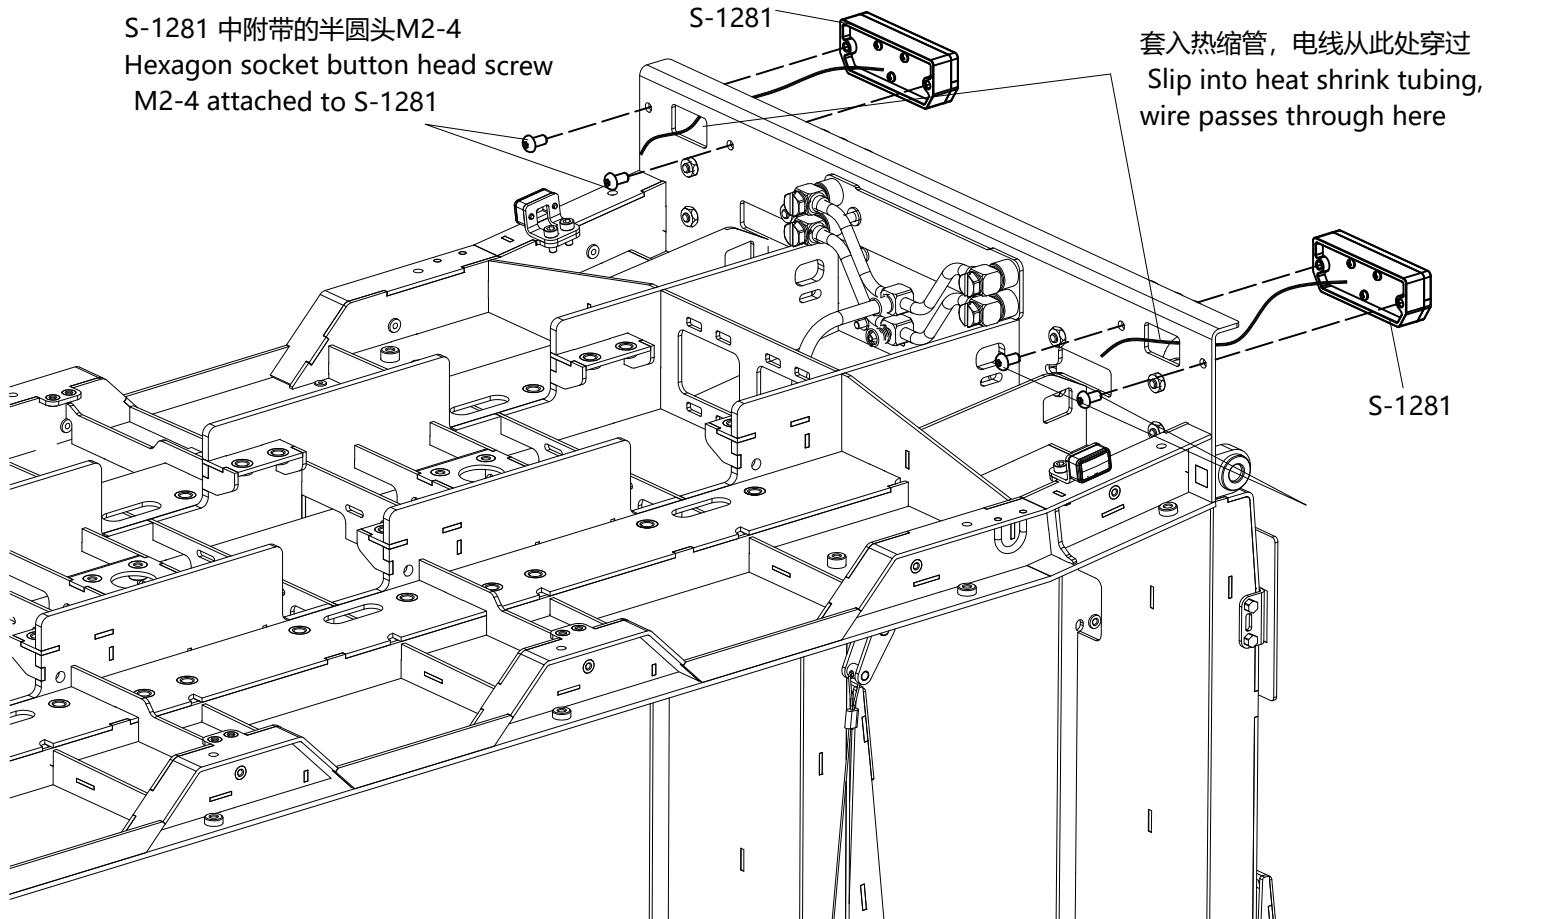


33

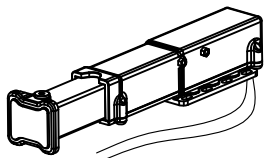


LS-A0006 ×2




 半圆头M2-4 ×8
Hexagon socket button head screw

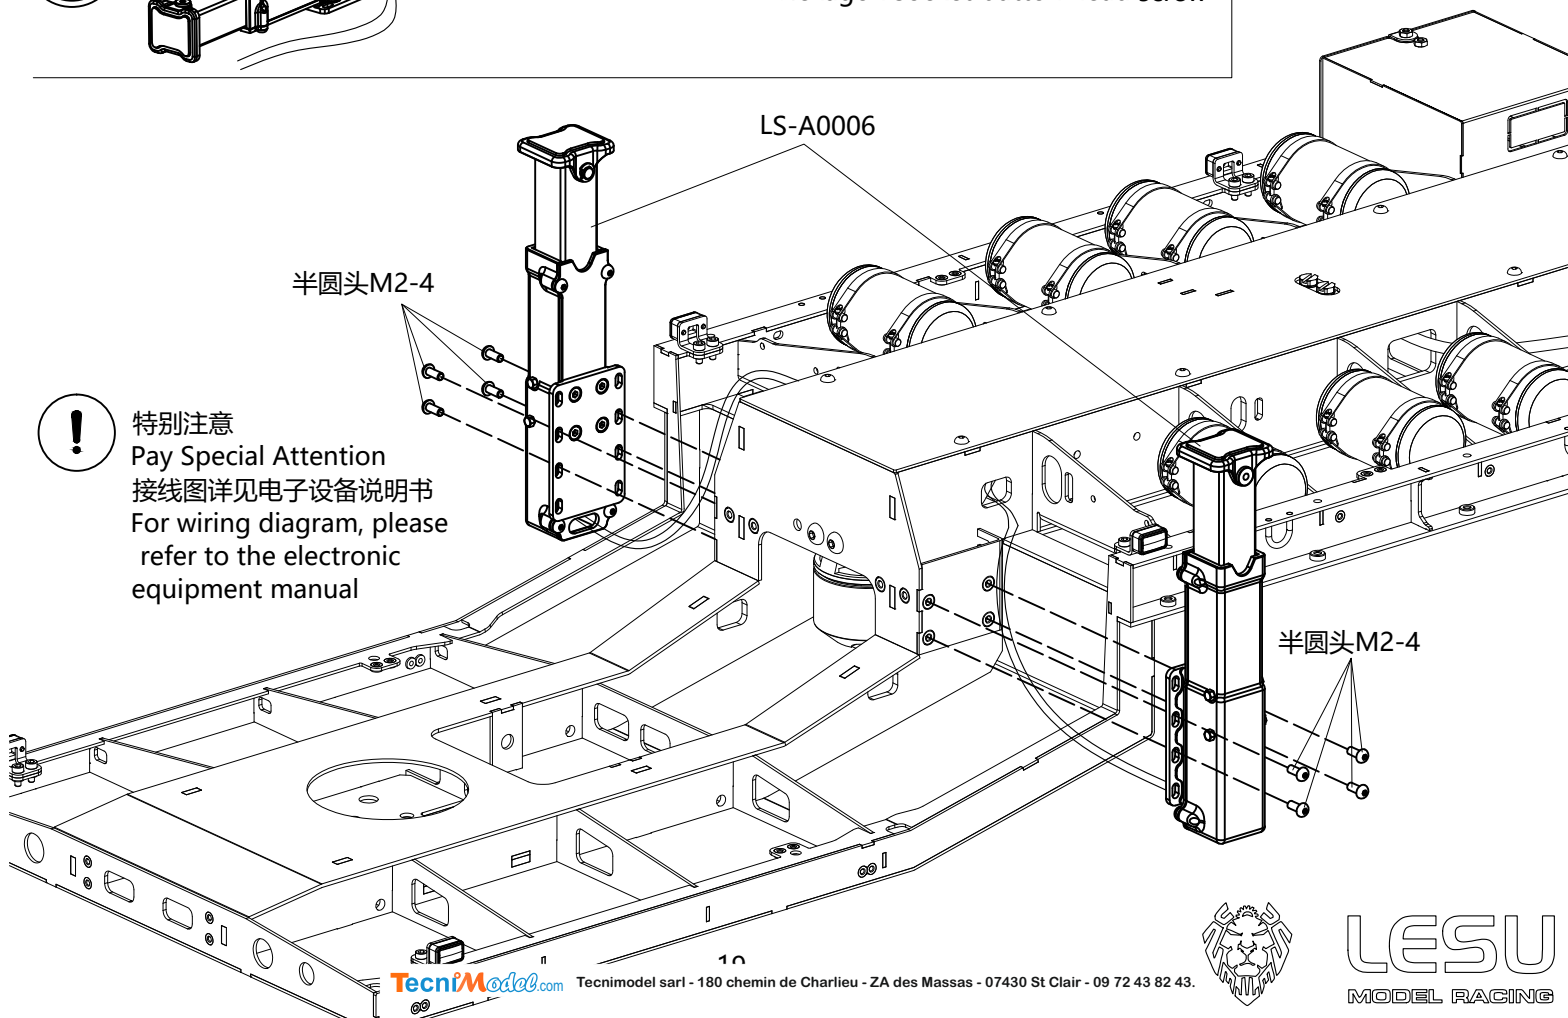




 
双向无刷电调 ESC-16
One-way brushless
electronic speed controller



UBEC供电模块
UBEC Power Supply Module

 

320A双向有刷电调 ESC-7
320A bidirectional brushed ESC

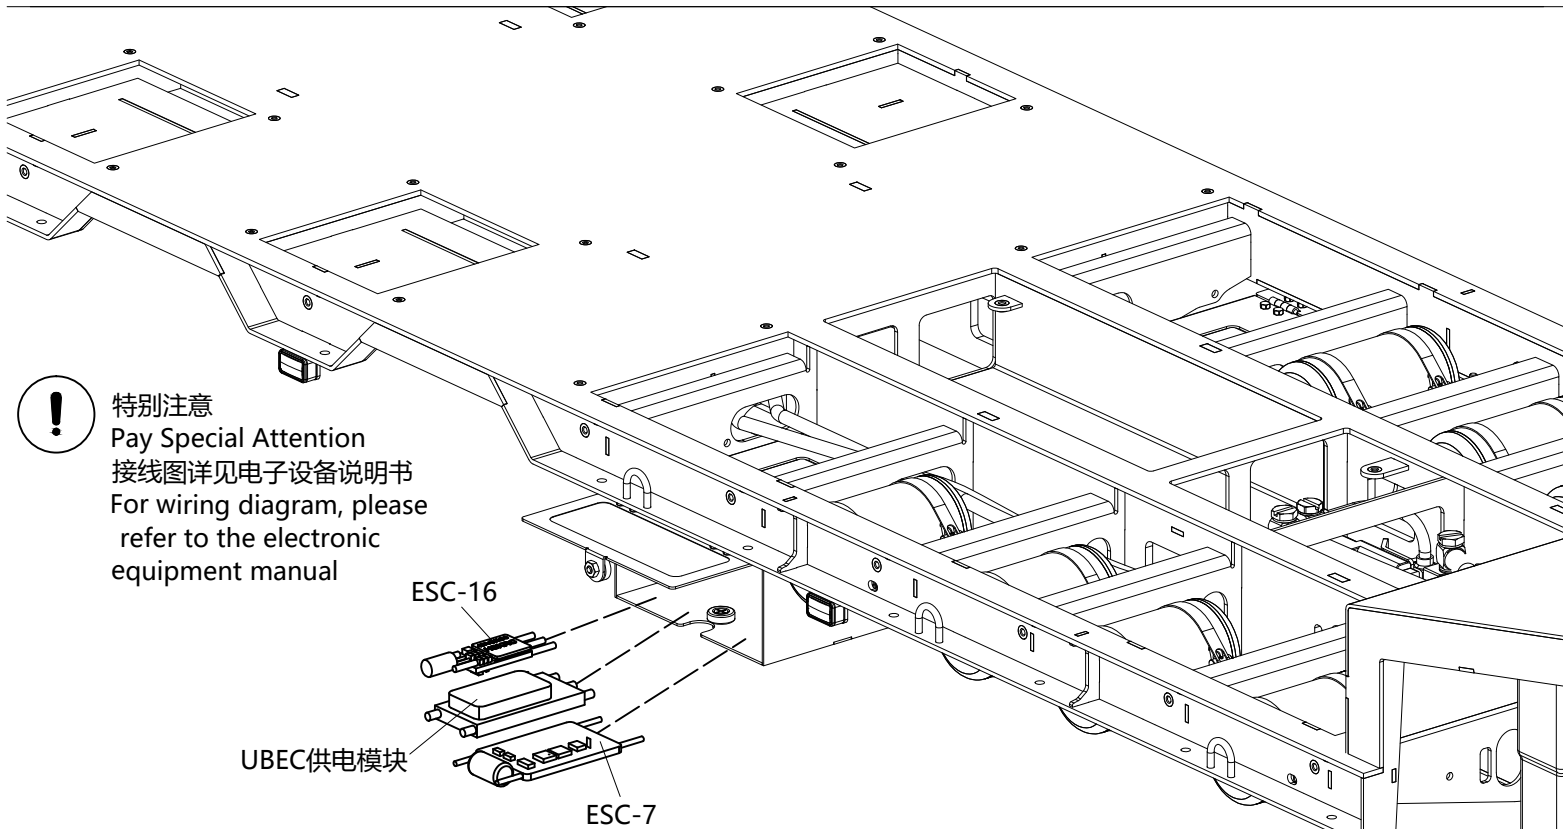


特别注意
Pay Special Attention
接线图详见电子设备说明书
For wiring diagram, please
refer to the electronic
equipment manual



特别注意
Pay Special Attention
接线图详见电子设备说明书
For wiring diagram, please
refer to the electronic
equipment manual

注意零件LS-A0006与液压泵的走线
Pay attention to the routing of part
LS-A0006 and the hydraulic pump

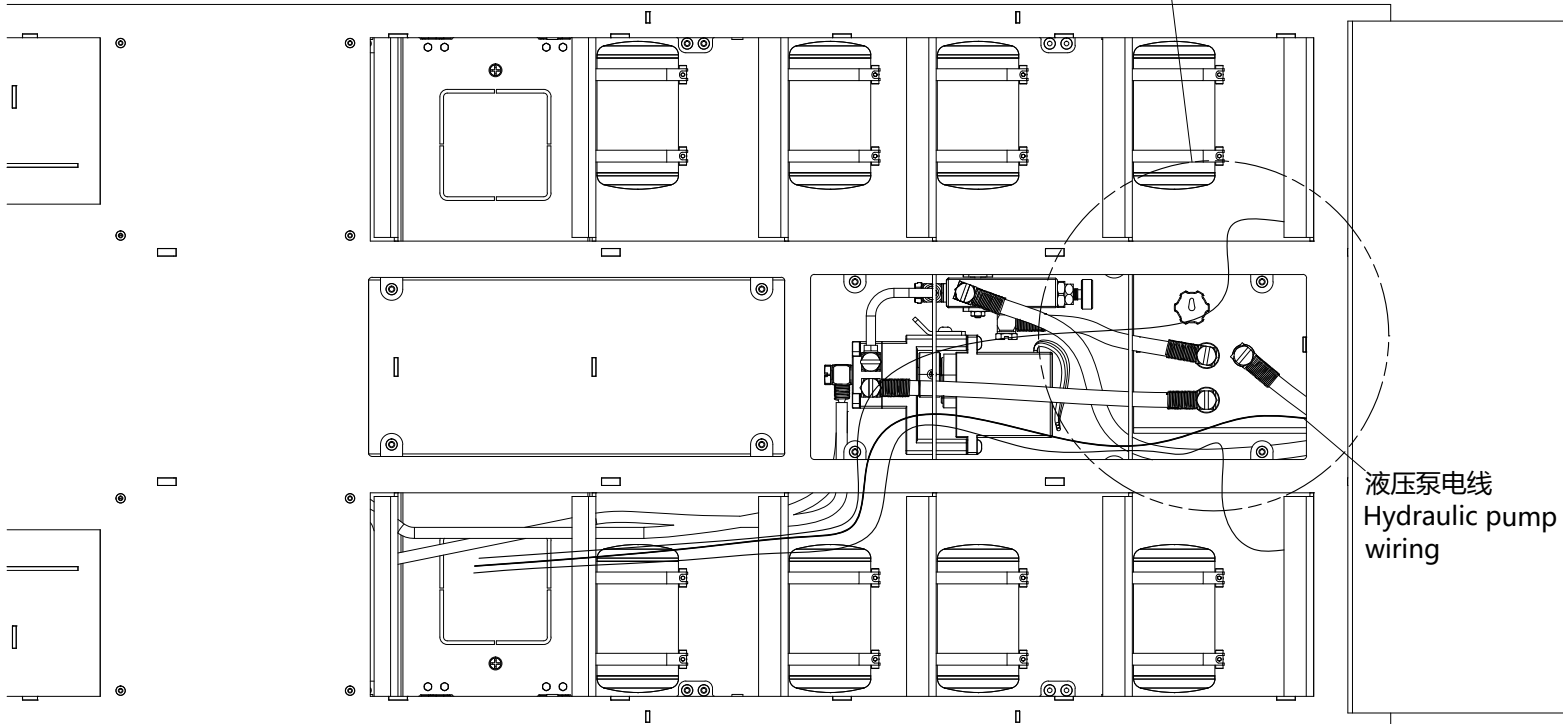

液压泵电线
Hydraulic pump
wiring


35



A1-37 ×10




半圆头M3-4 ×20
Hexagon socket button head screw

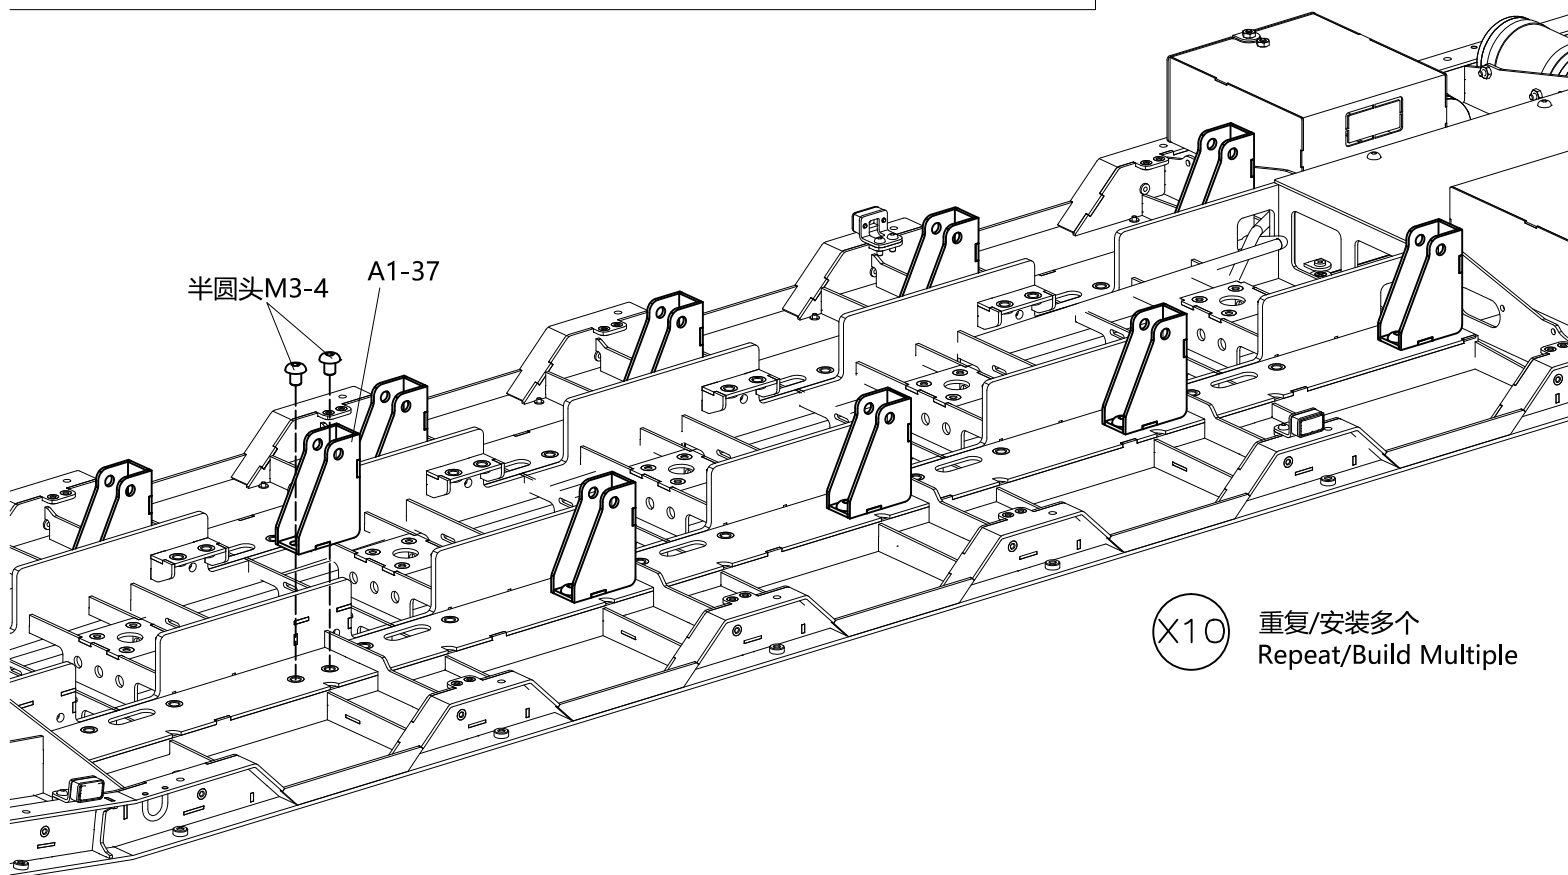

×10

重复/安装多个
Repeat/Build Multiple

 
36



A1-38 ×10




A1-39 ×10

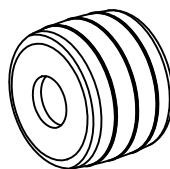


A1-40 ×10



A1-41 ×10

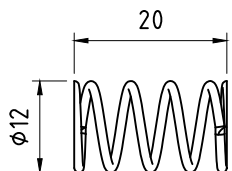

A1-42 ×10

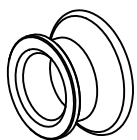


A1-43 ×10



半圆头M2-4 ×20
Hexagon socket button head screw



半圆头M2-5 ×10
Hexagon socket button head screw

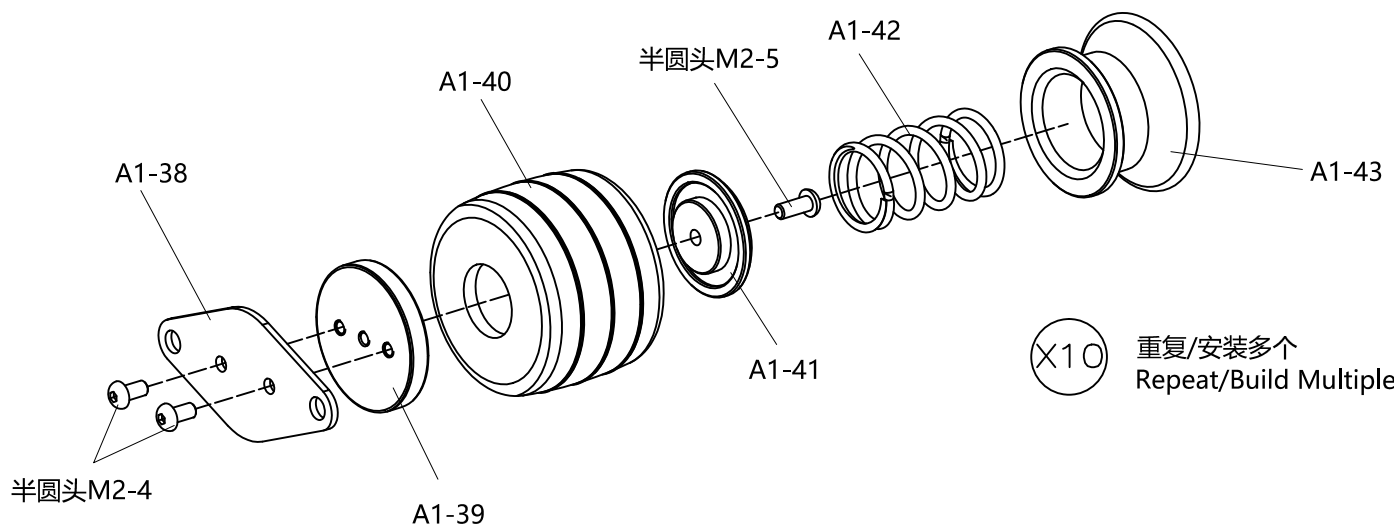

×10


重复/安装多个
Repeat/Build Multiple



37




半圆头M3-6 ×20
Hexagon socket button head screw

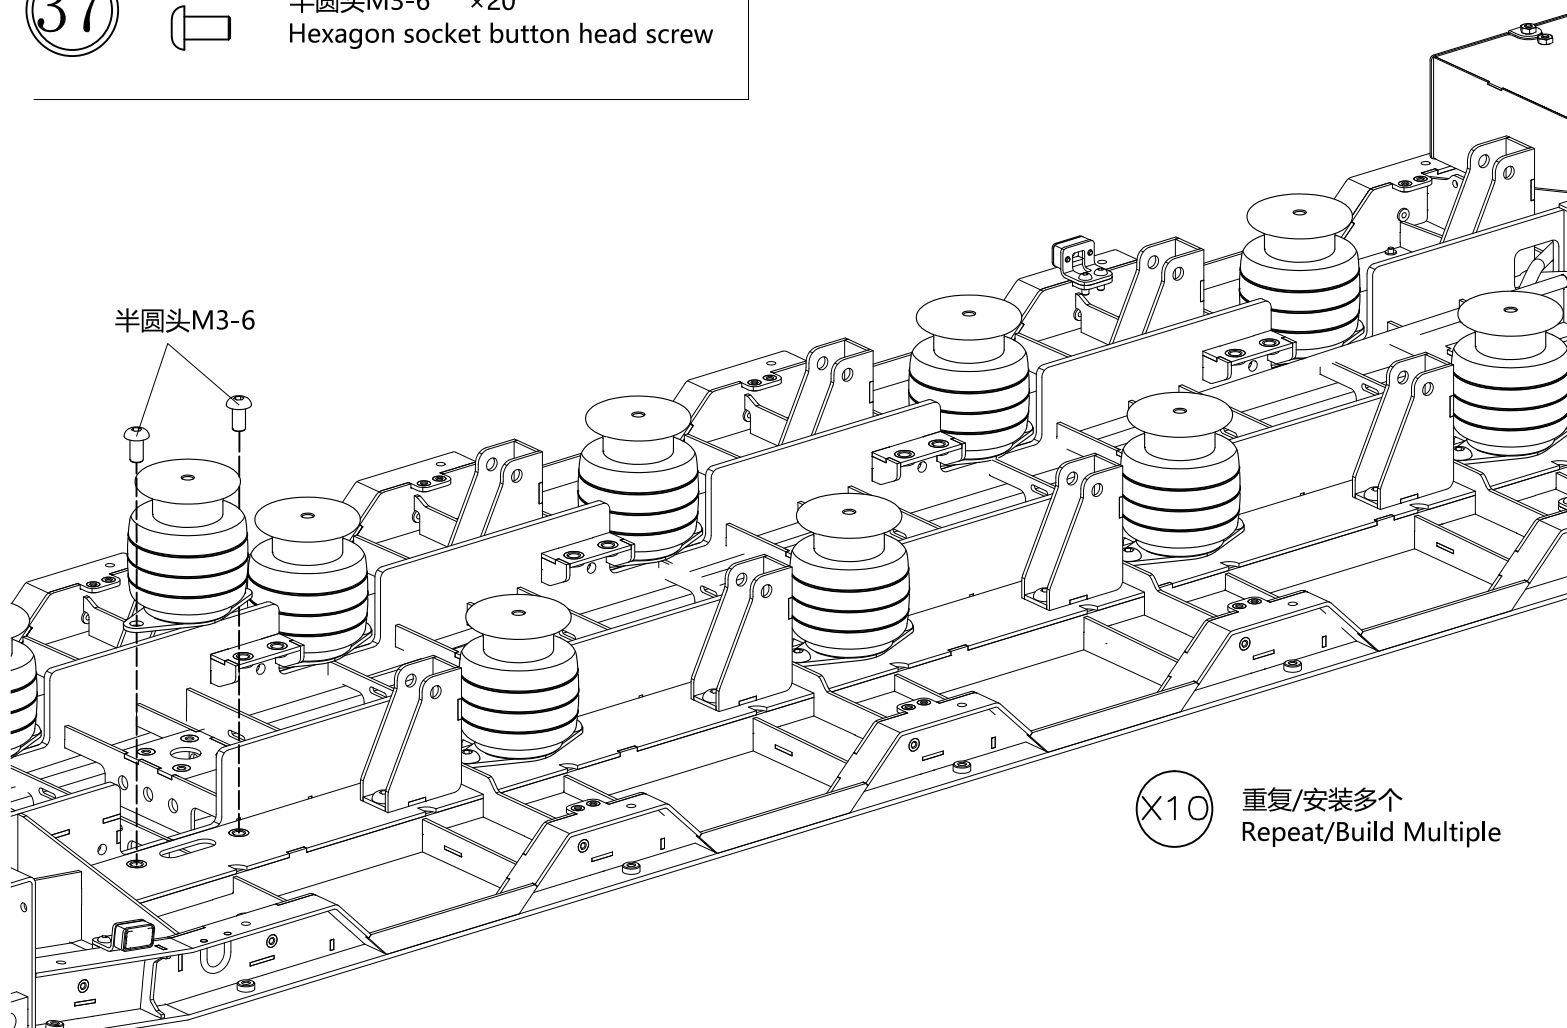


X10

重复/安装多个
Repeat/Build Multiple

 
38




B1-1 ×5

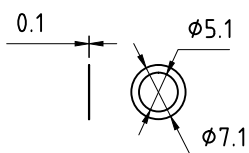

B1-2 ×10

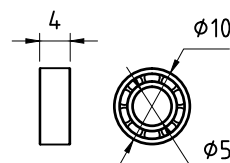

MR105ZZ ×10
深沟球轴承
外径10内径5厚度4

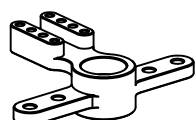


B1-3 ×5



B1-4 ×5



M3自锁螺母 ×5
Self-locking nut

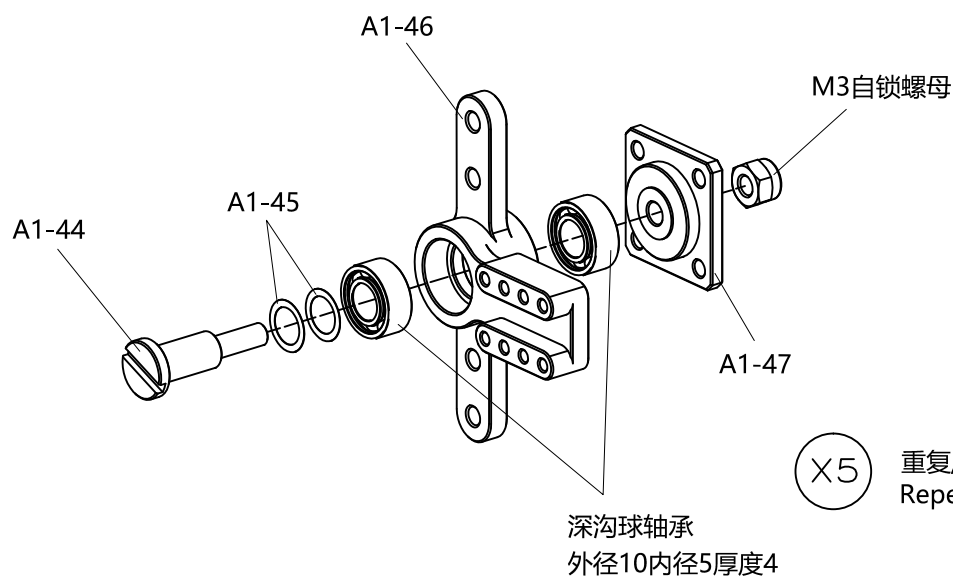

X5

重复/安装多个
Repeat/Build Multiple

深沟球轴承
外径10内径5厚度4



LESU
MODEL RACIN


TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

39




半圆头M2-4 ×20
Hexagon socket
button head screw

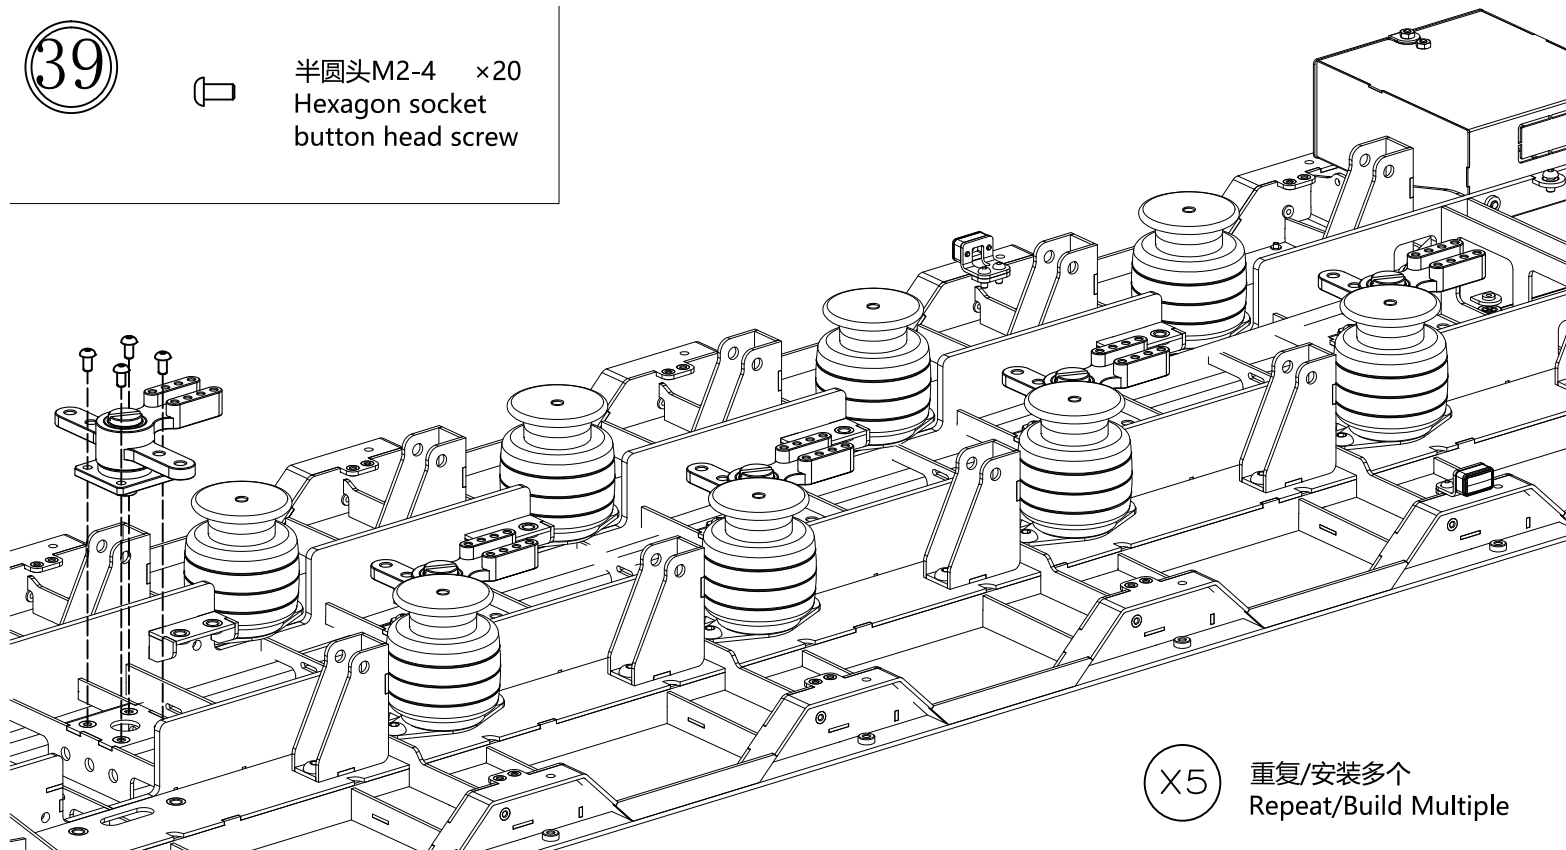

X5

重复/安装多个
Repeat/Build Multiple


40

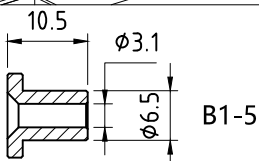

B1-5



 
B1-6




B1-7



B1-8

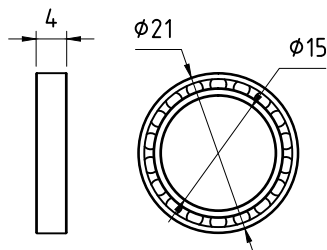

6702ZZ ×2
深沟球轴承
外径21内径15厚度4

 

沉头M3-18
Hexagon socket
countersunk head screw




沉头M2-6 ×3
Hexagon socket
countersunk head screw




法兰外六角M3-4
Hexagon flange screw

安装时需要注意零件B1-8平面平行于零件B1-7的平面
When installing, make sure that the plane of part
B1-8 is parallel to the plane of part B1-7.

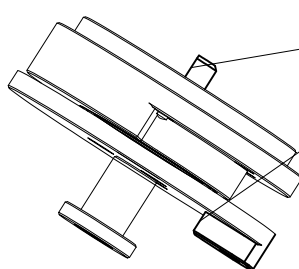

深沟球轴承
外径21内径15厚度4

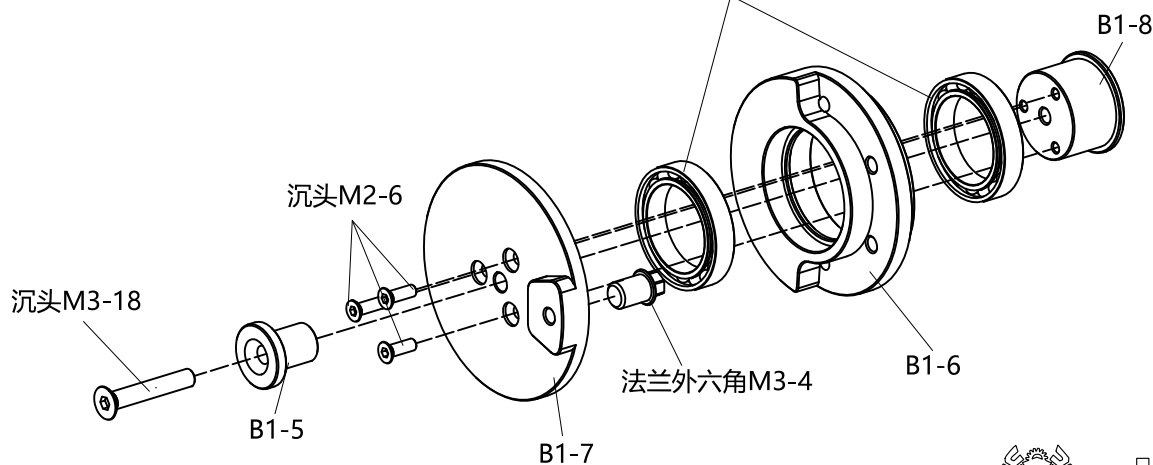

41



B1-9



B1-10
透明
transparent



半圆头M3-8 ×6
Hexagon socket button head screw


热缩管/Heat shrink tube
内径 1mm 长度800m
Outer diameter 1mm
length 800m




特别注意
Pay Special Attention
接线图详见电子设备说明书
For wiring diagram, please
refer to the electronic
equipment manual

半圆头M3-8


热缩管/Heat shrink tube
外径1/Outer diameter 1mm

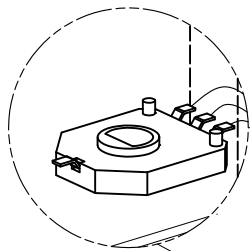

注意零件B1-9的安装方向
Pay attention to the installation
direction of part B1-9

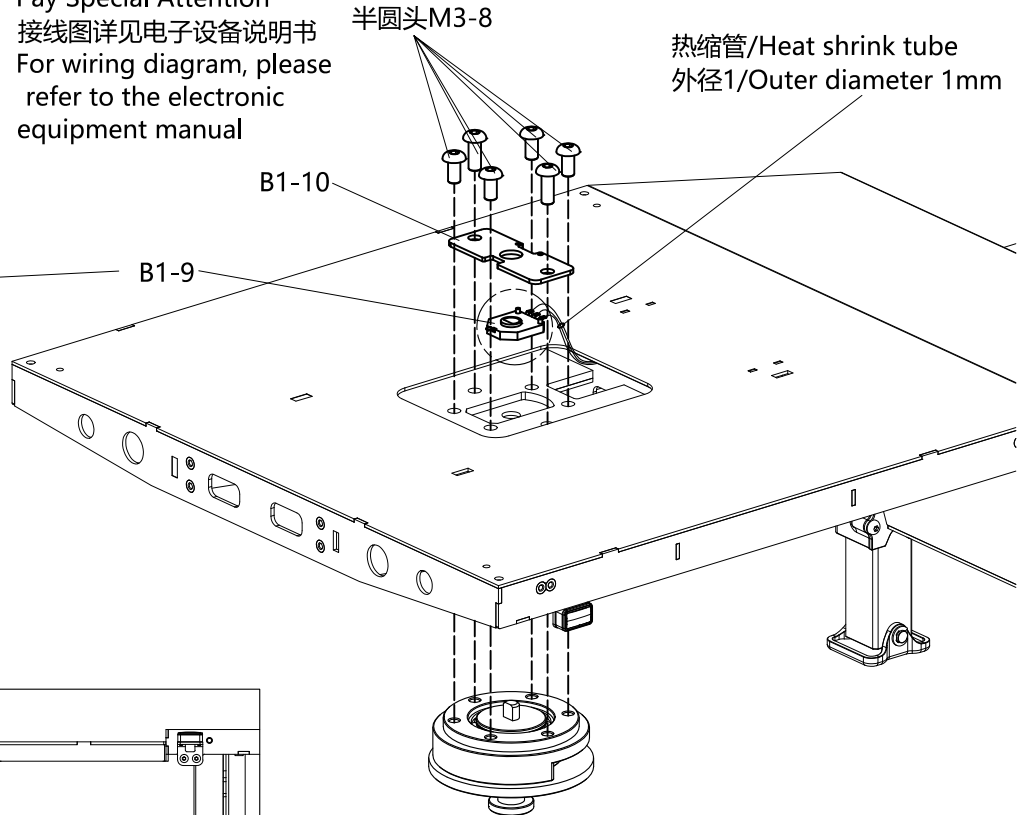


补充视图
Supplementary View

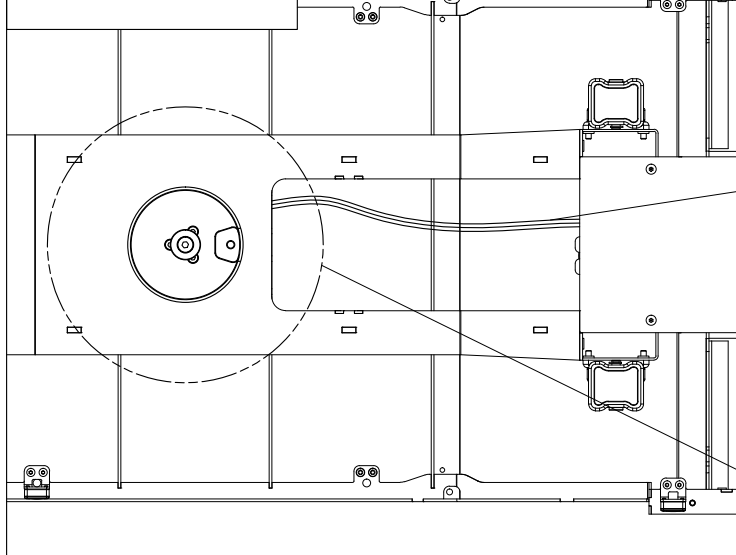


注意电线从此处穿过
Caution: electrical wires pass through here

注意零件B1-7安装的位置要求:完成安装后如图中所示,
处于中间位置
Pay attention to the installation position requirements of
part B1-7: after installation is complete, it should be in the
middle position as shown in the diagram.

42

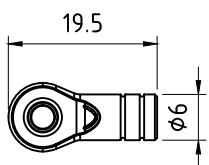


B1-11 ×10

 


B1-12 ×5



M3六角螺母 ×10
Hexagon nut

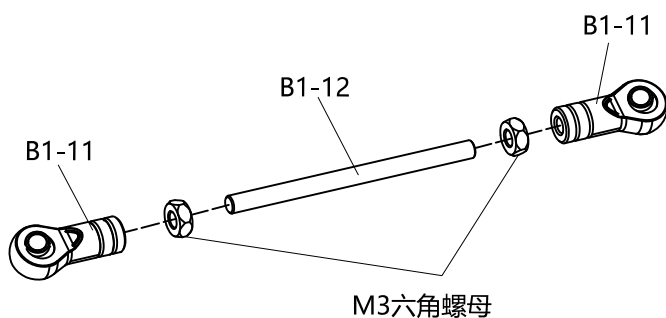

M3六角螺母

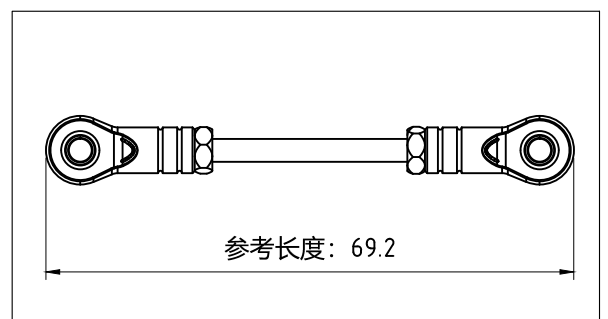

参考长度: 69.2

X5

重复/安装多个
Repeat/Build Multiple




LESU
MODEL RACIN


TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

43

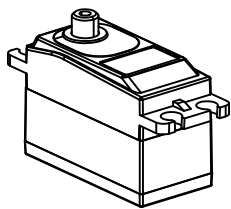

B1-13 ×5

 

B1-14 ×5



B1-41 ×5


杯头M2-5 ×5
Hexagon socket head cap screw



半圆头M3-4 ×20
Hexagon socket button head screw



 
半圆头M3-6 ×5
Hexagon socket button head screw



半圆头M3-12 ×10
Hexagon socket button head screw

缠绕管
cable sleeve
长度 800 mm
length 800 mm


热缩管/Heat shrink tube
内径 10mm 长度200m
Outer diameter 10mm
length 200m

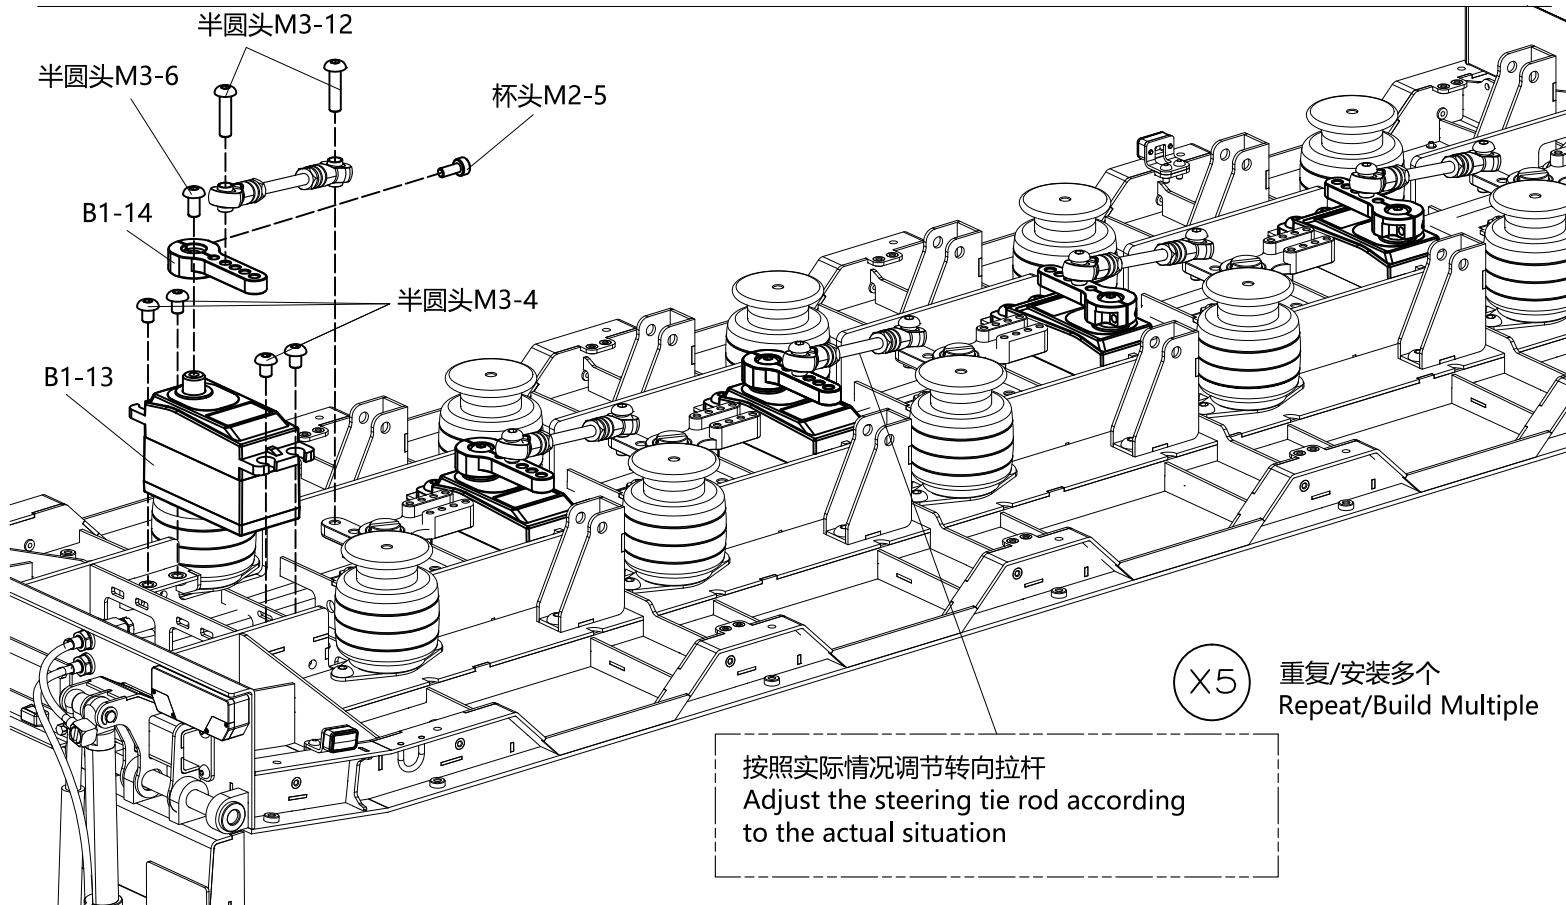

X5

重复/安装多个
Repeat/Build Multiple

按照实际情况调节转向拉杆
Adjust the steering tie rod according
to the actual situation

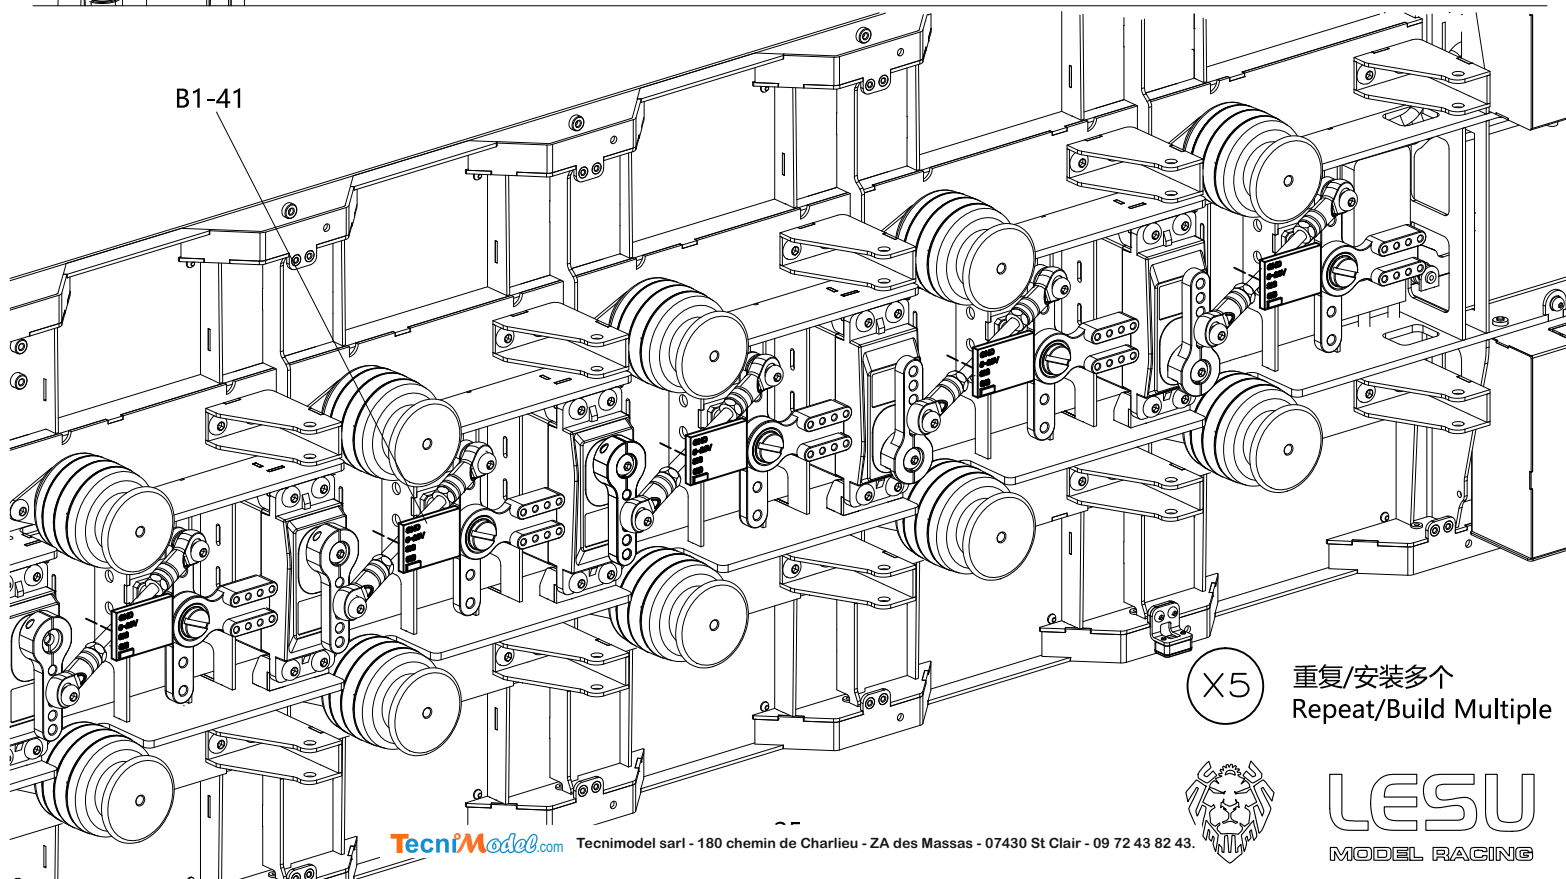

X5

重复/安装多个
Repeat/Build Multiple




LESU
MODEL RACINE

TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

补充视图 Supplementary View

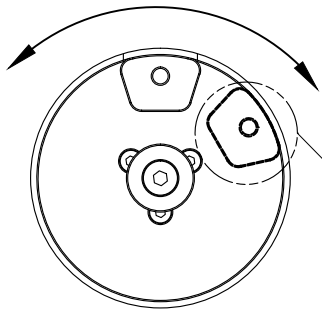


如图所示,圈住部分转动方向需要一致
As shown in the picture, the circled
parts need to rotate in the same direction.

焊线完成后,需要进行通电测试再进行后续步骤安装;
测试要求: 1. 随动转向处于中位时,转向舵机臂也处于中位;
2. 转向舵机臂可以跟着随动转向的摆动方向进行转动。
After the wiring is completed, a power-on test is required before
proceeding with the subsequent installation steps;
Test requirements: 1. When the follow-up steering is in the neutral
position, the steering servo arm should also
be in the neutral position;
2. The steering servo arm should be able to rotate
following the swing direction of the follow-up steering.

轮胎转向参考步骤51
Tire Steering
Reference Step 51

套上缠绕管
Put on the spiral wrap

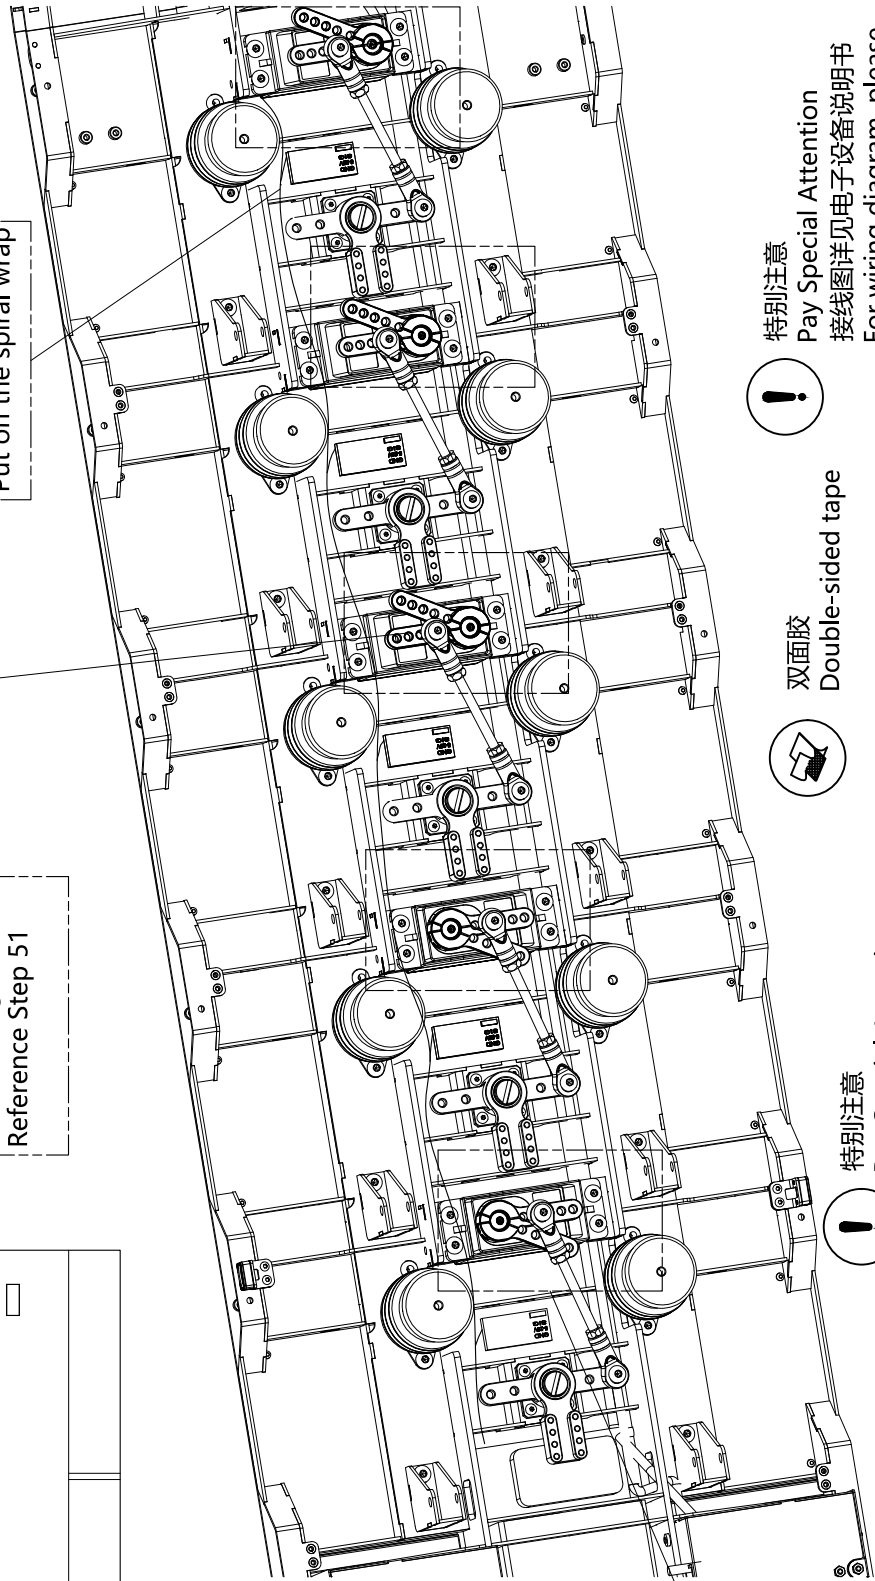

特别注意
Pay Special Attention

完成焊线后需要将零件B1-41套上热缩管作绝缘处理
After completing the welding of the wires, part B1-41
needs to be covered with a heat shrink tube for insulation.

双面胶
Double-sided tape

特别注意
Pay Special Attention

接线图详见电子设备说明书
For wiring diagram, please
refer to the electronic
equipment manual

 
TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

44



B1-15 ×10




B1-16R ×5



B1-16L ×5




半圆头M3-6 ×10
Hexagon socket
button head screw

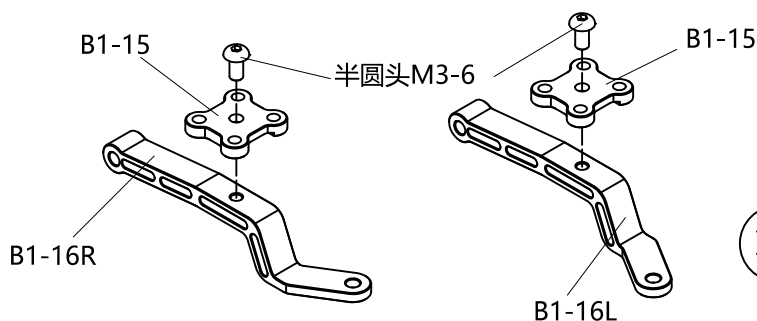


×5

重复/安装多个
Repeat/Build Multiple

 45




B1-17 ×5

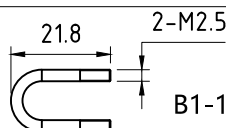

B1-18 ×20



M2.5自锁螺母 ×40
Self-locking nut

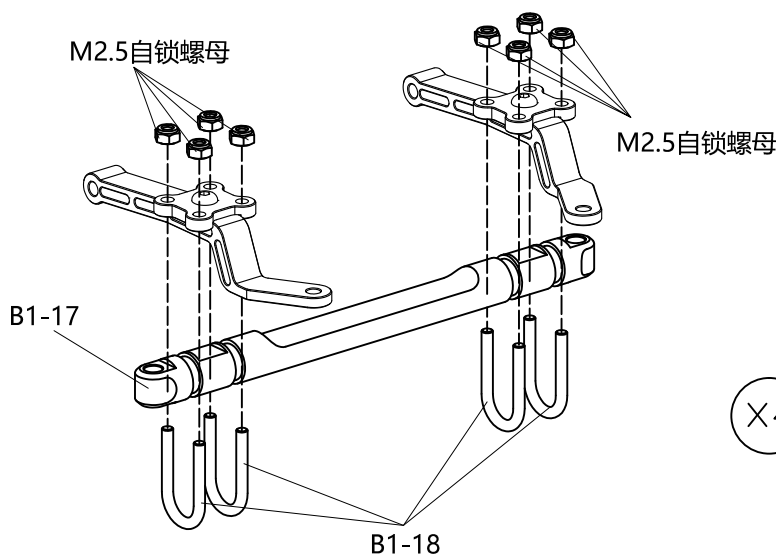


×4

重复/安装多个
Repeat/Build Multiple


46



 B1-19 ×10



B1-20 ×10

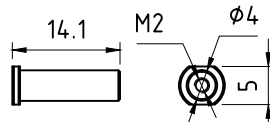


B1-21 ×10




沉头M2-6 ×30
Hexagon socket countersunk head screw



C1-24 ×10

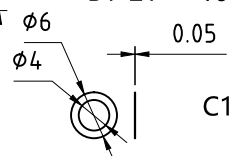

C1-25 ×10





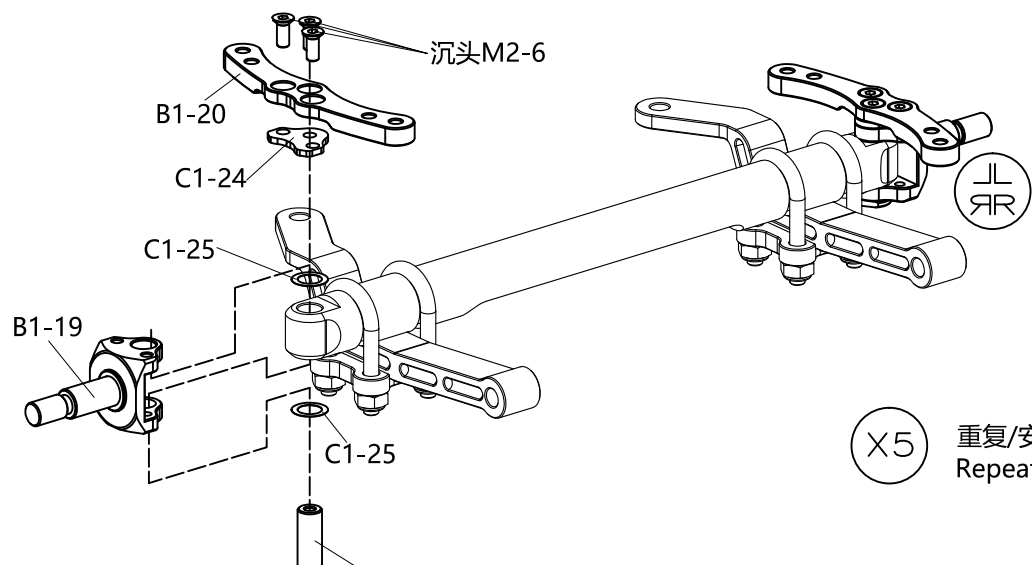


×5


重复/安装多个
Repeat/Build Multiple

以同样的方式组装另一侧零件
Assemble Other Side the Same

47

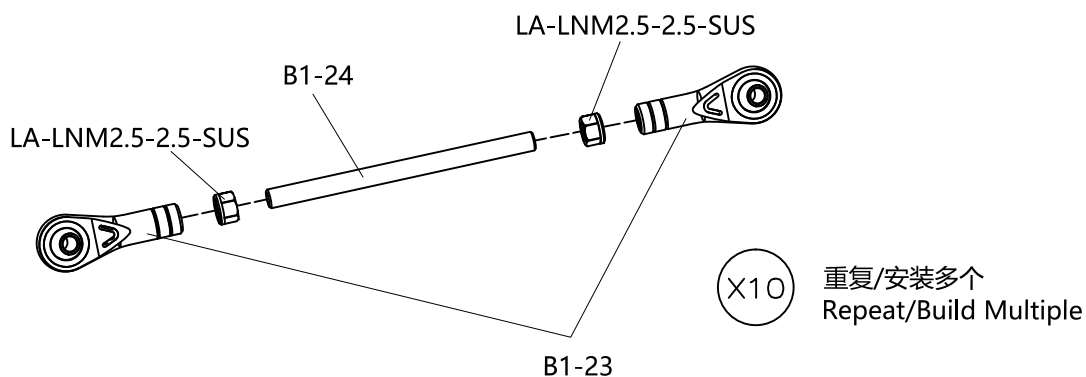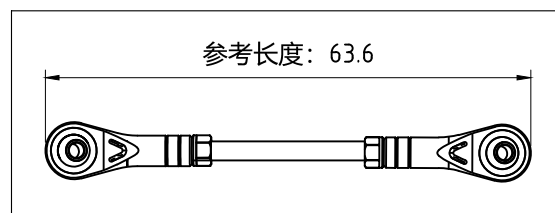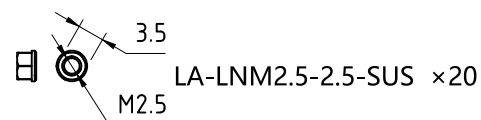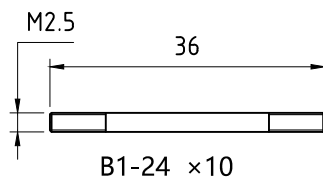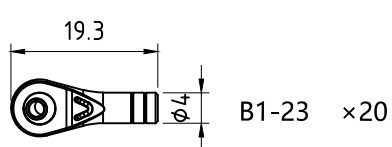


48

 

半圆头M2-12 ×10
Hexagon socket button head screw



M2自锁螺母 ×10
Self-locking nut

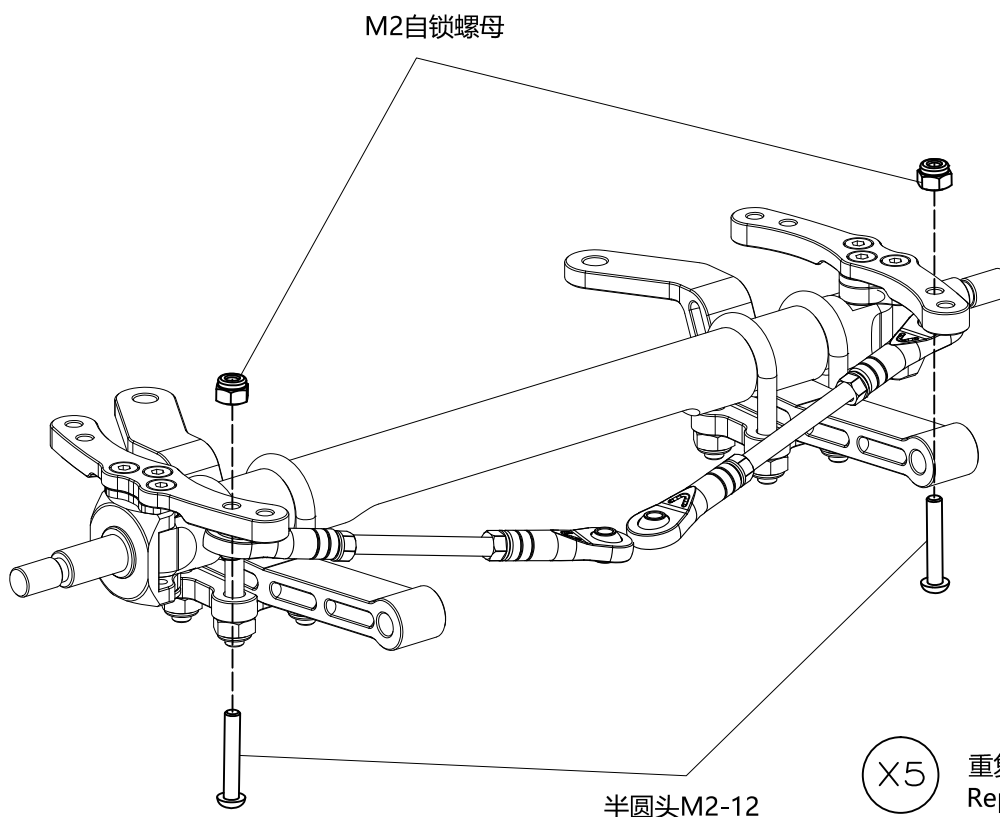


LESU
MODEL RACINE

TecniModel.com

TecniModel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.


49

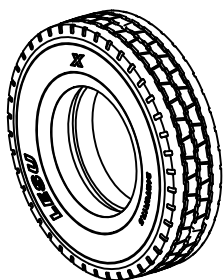

S-1279-1 ×20




B1-26 ×10

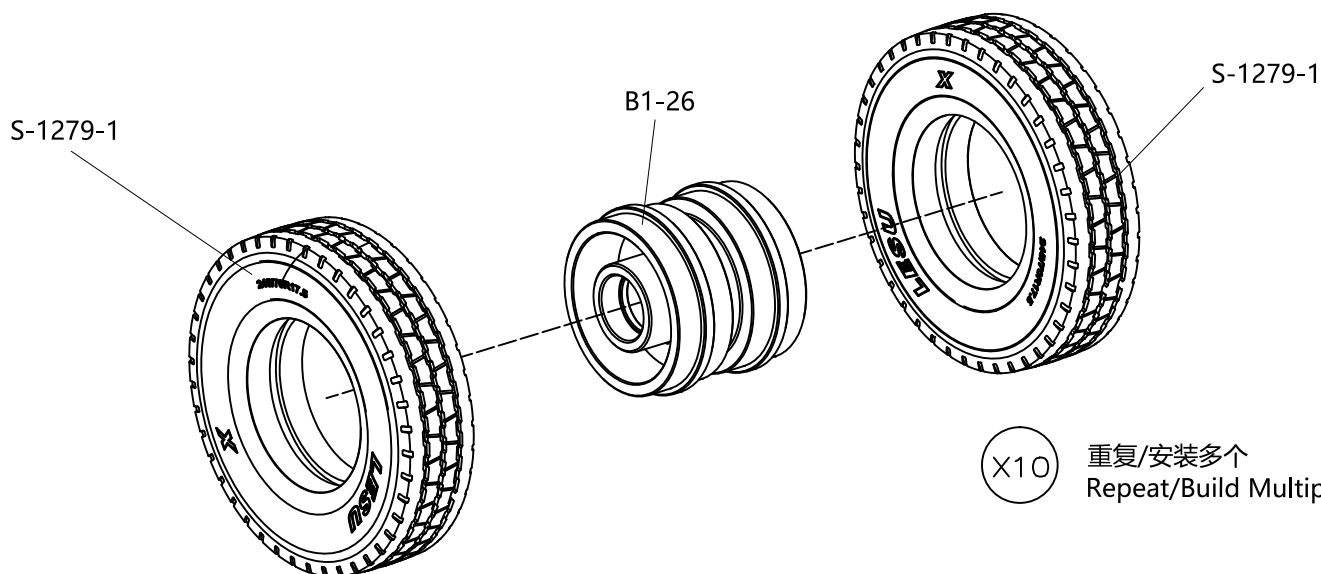


×10 重复/安装多个
Repeat/Build Multiple

50

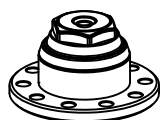

B1-25 ×10

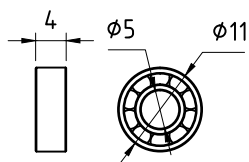

MR115ZZ ×20
深沟球轴承
外径11内径5厚度4




M4自锁螺母 ×10
Self-locking nut



杯头M1.6-6 ×100
Hex socket head cap screw




以同样的方式组装另一侧零件
Assemble Other Side the Same

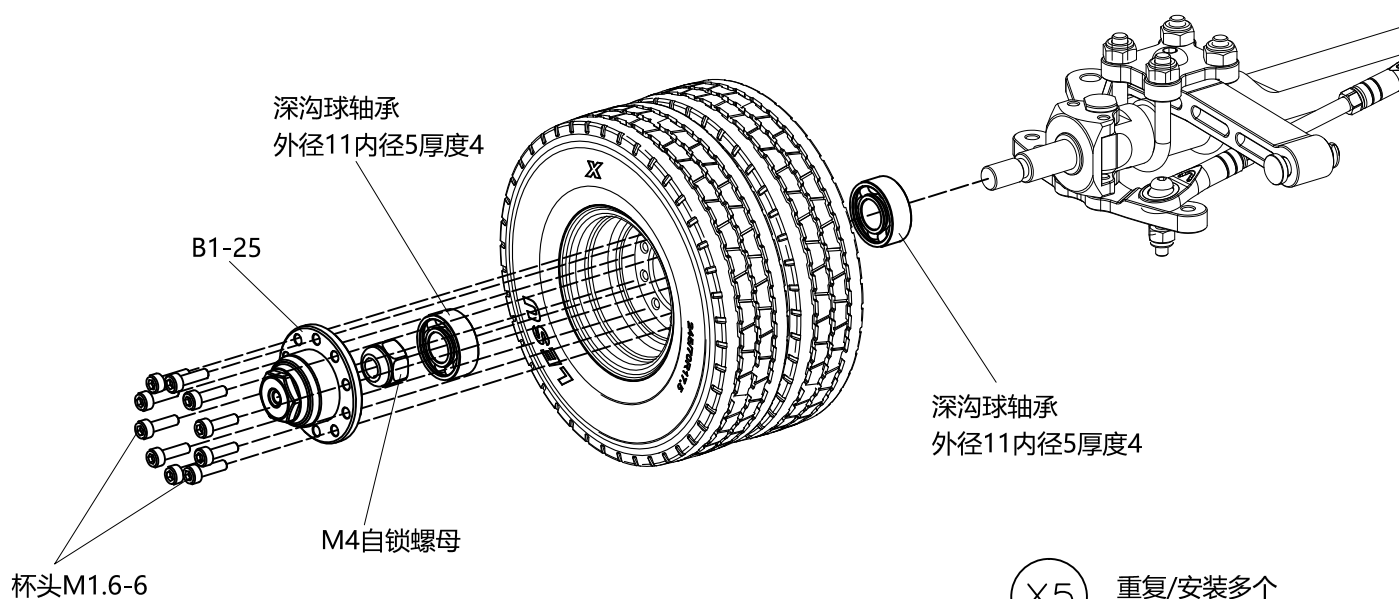

×5 重复/安装多个
Repeat/Build Multiple



 51




B1-27 x10



Ø2E卡 x10
"E" rings



 半圆头M3-6 x10
Hexagon socket button head screw



半圆头M2-12 x10
Hexagon socket button head screw

半圆头M2-12

半圆头M3-6

B1-27

Ø2E卡


B1-27

X5

重复/安装多个
Repeat/Build Multiple

注意：向另一侧转向时轮胎朝向相反
Note: When turning to the other side,
the tires face in the opposite direction.

舵机转向参考步骤43
Servo steering
reference step 43

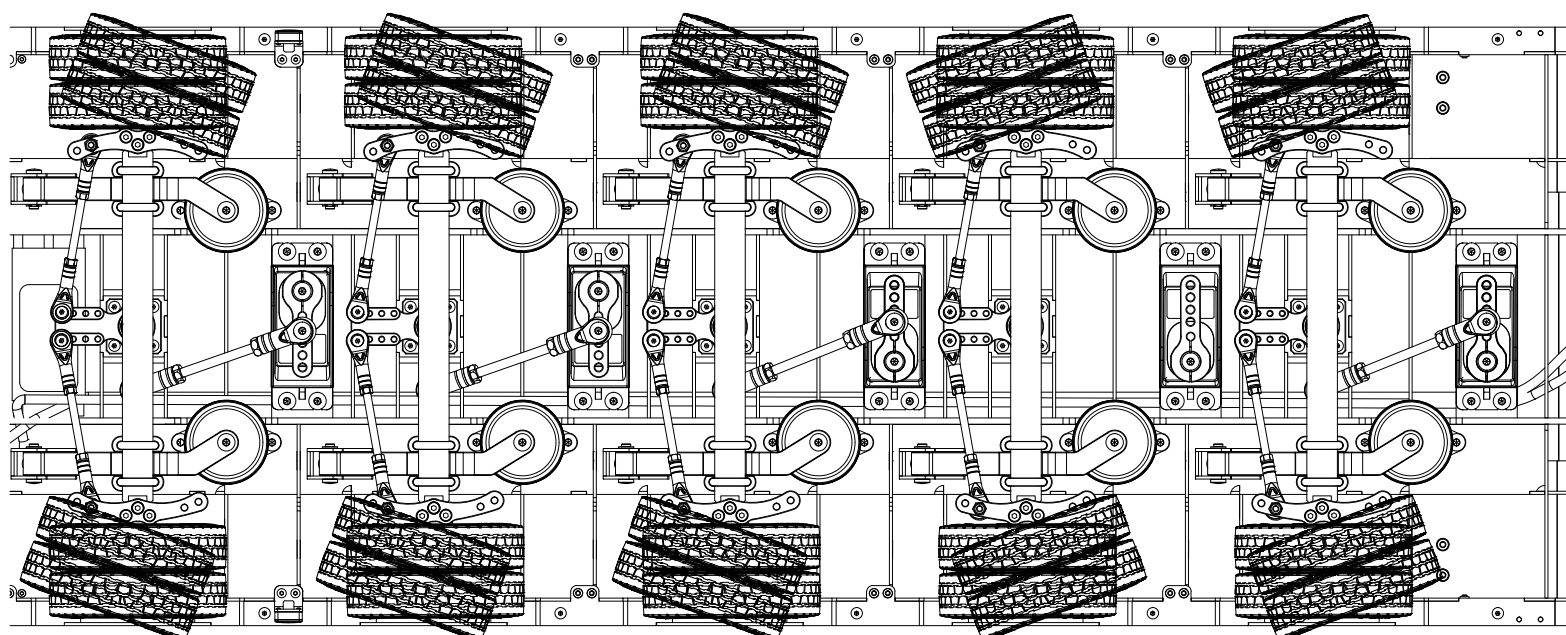


LESU

MODEL RACIN

TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

 52




B1-28L




B1-28R



半圆头M2-3 ×4
Hexagon socket
button head screw

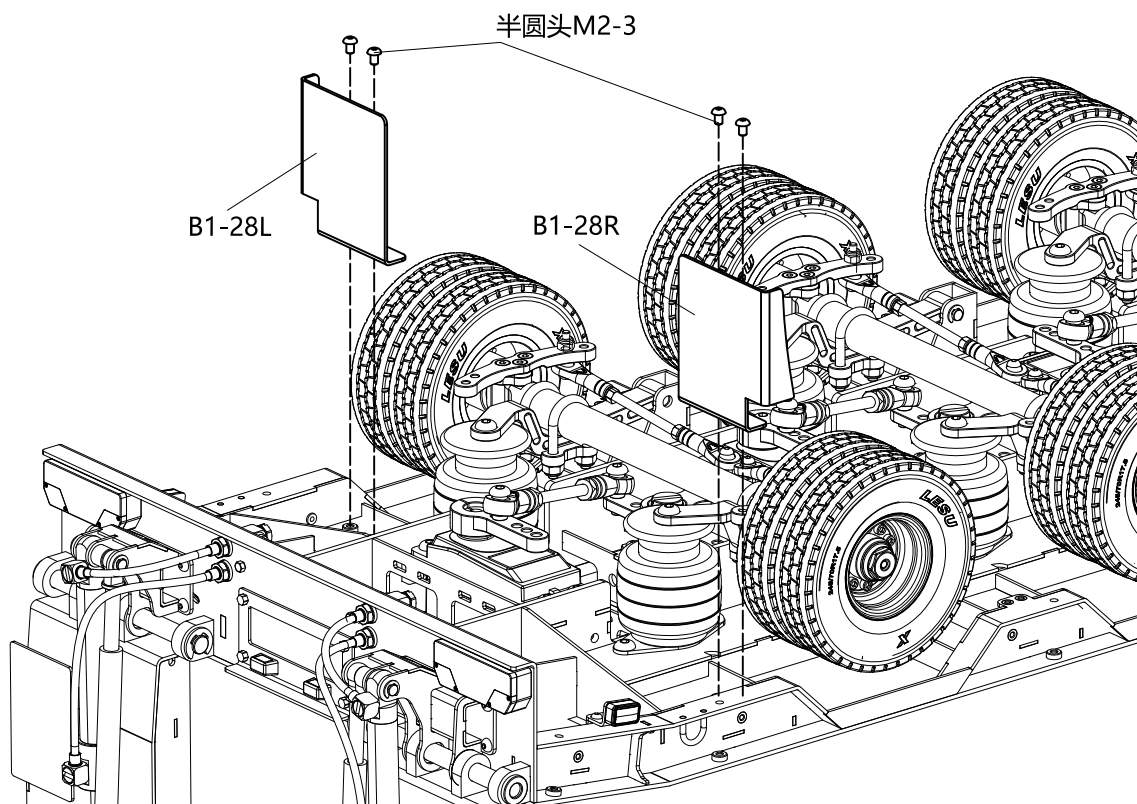

53

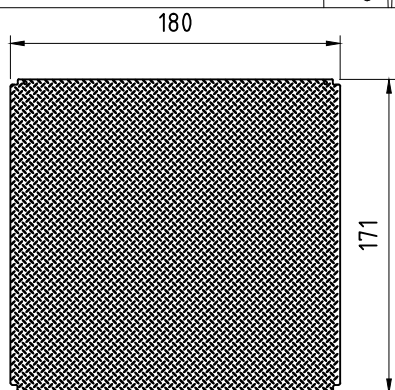

B1-30




外六角M1.6-4 ×4
Hexagon screw




M1.6六角螺母 ×4
Hexagon nut

M1.6六角螺母

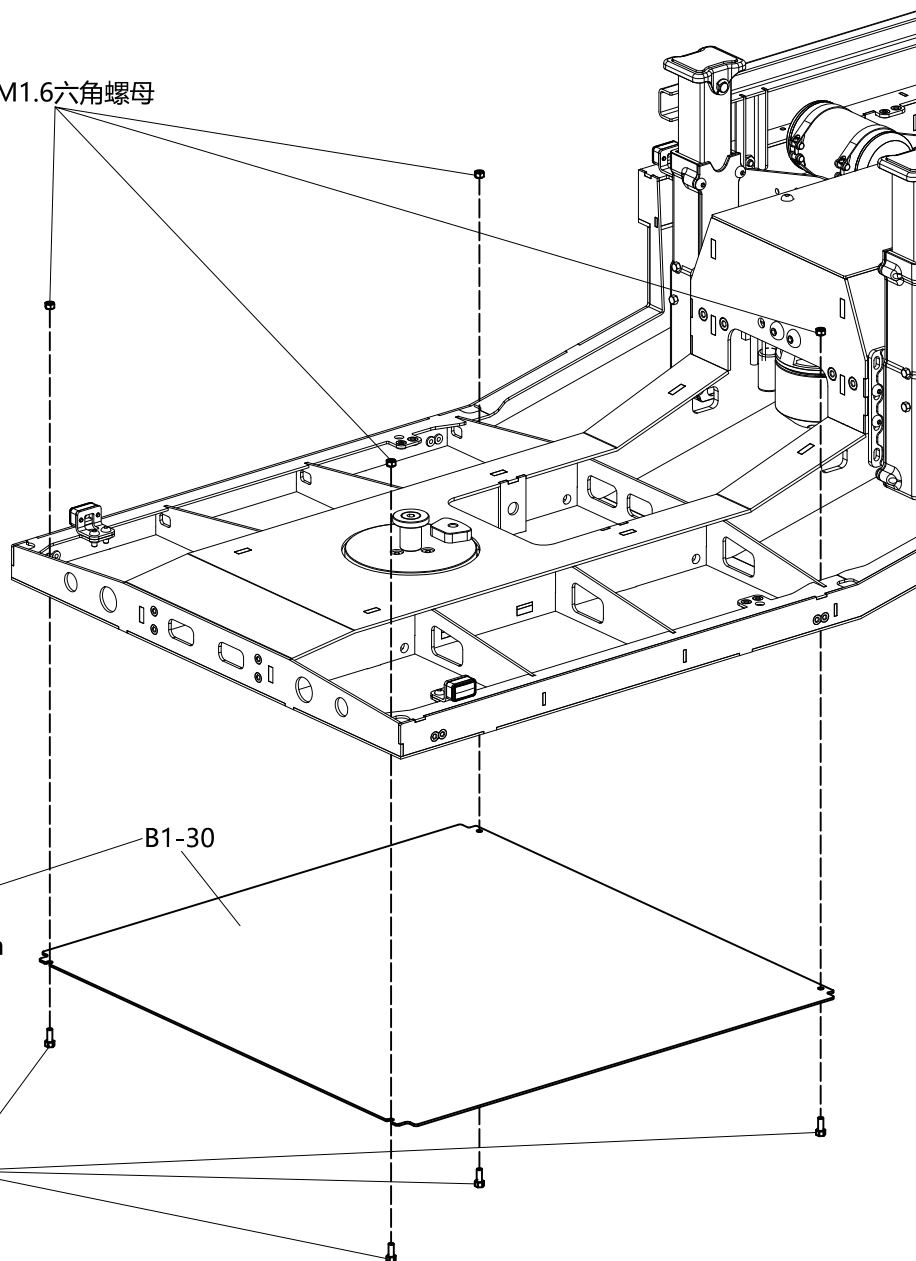

花纹面朝下
Patterns face down


外六角M1.6-4

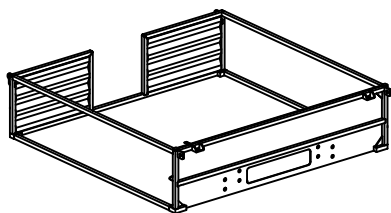

B1-29




半圆头M2-3 ×4
Hexagon socket button head screw

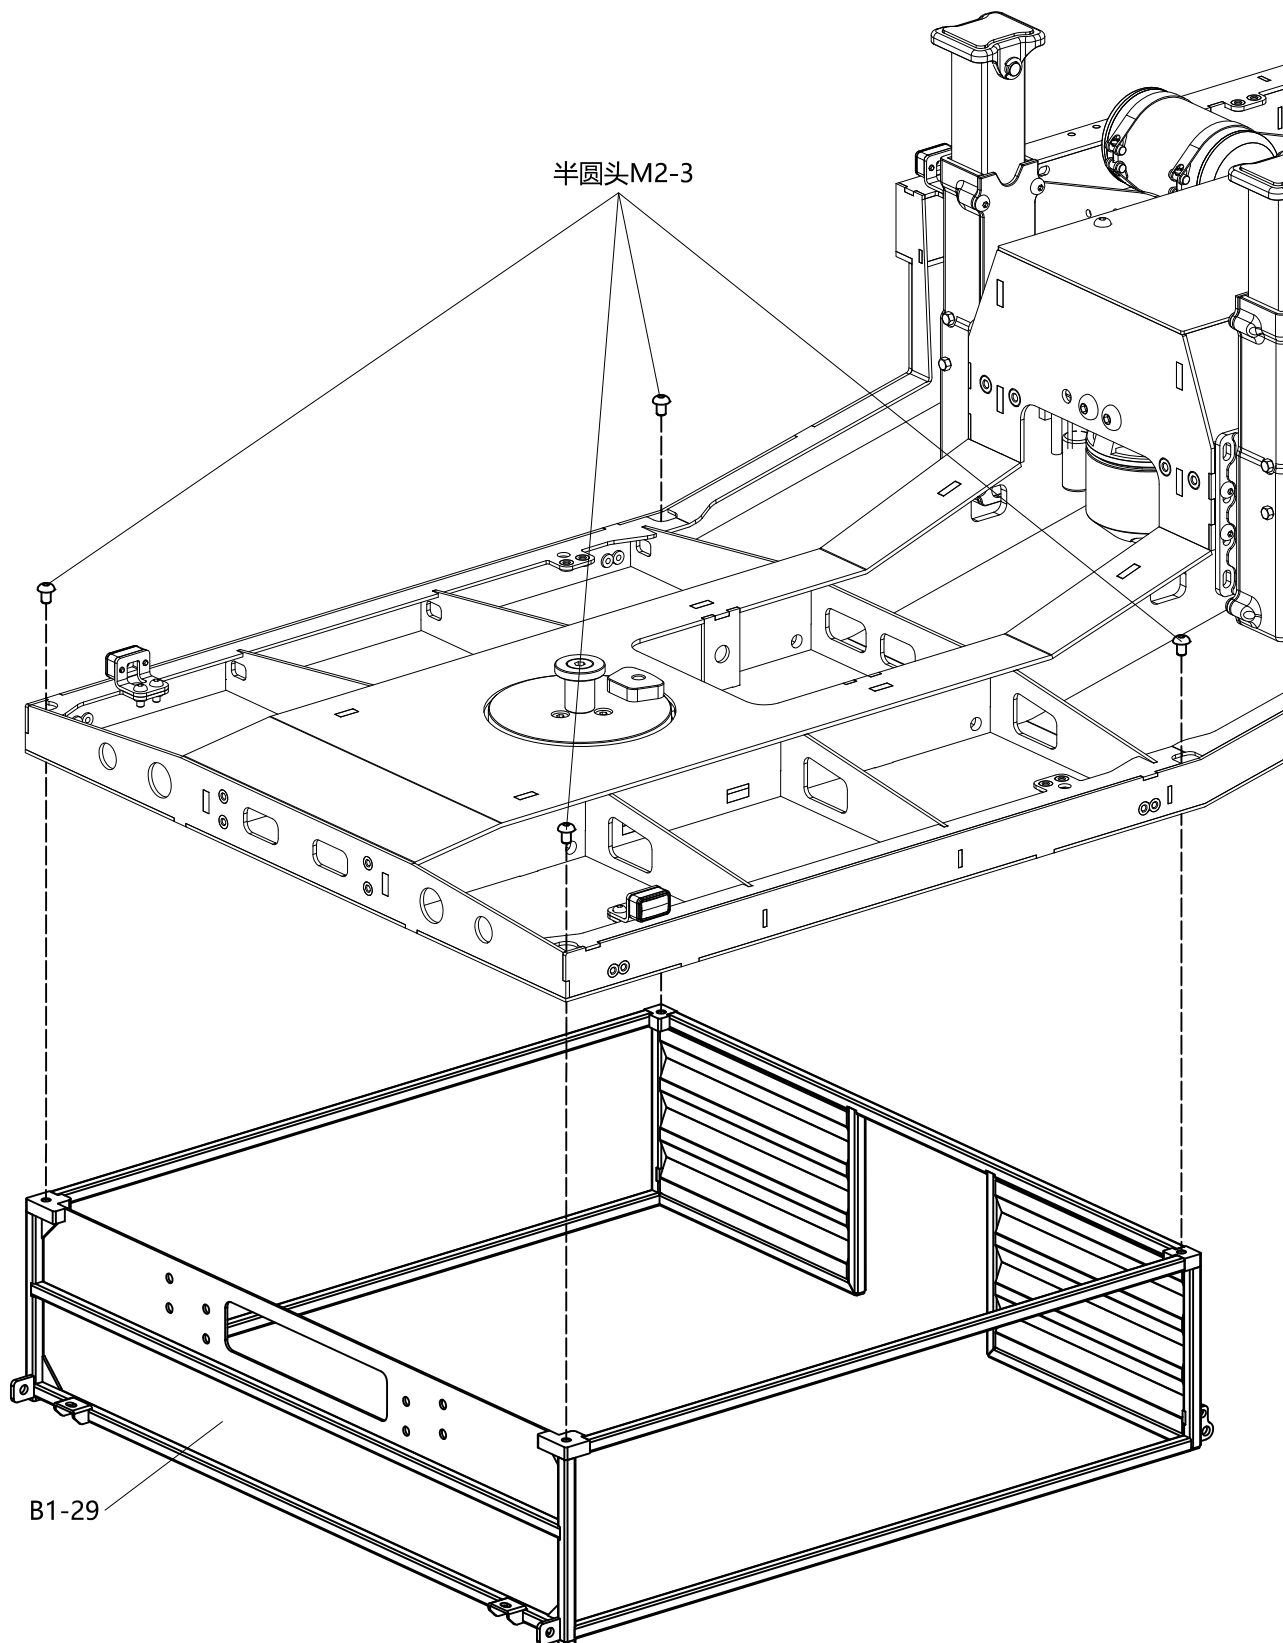

B1-29


55

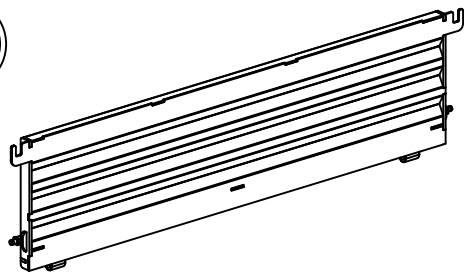

B1-31 ×2



B1-32 ×4

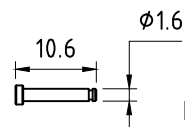

B1-33 ×4




半圆头M1.6-4 ×8
Hexagon socket button head screw



φ1.2E卡 ×4
"E" rings



以同样的方式组装另一侧零件
Assemble Other Side the Same

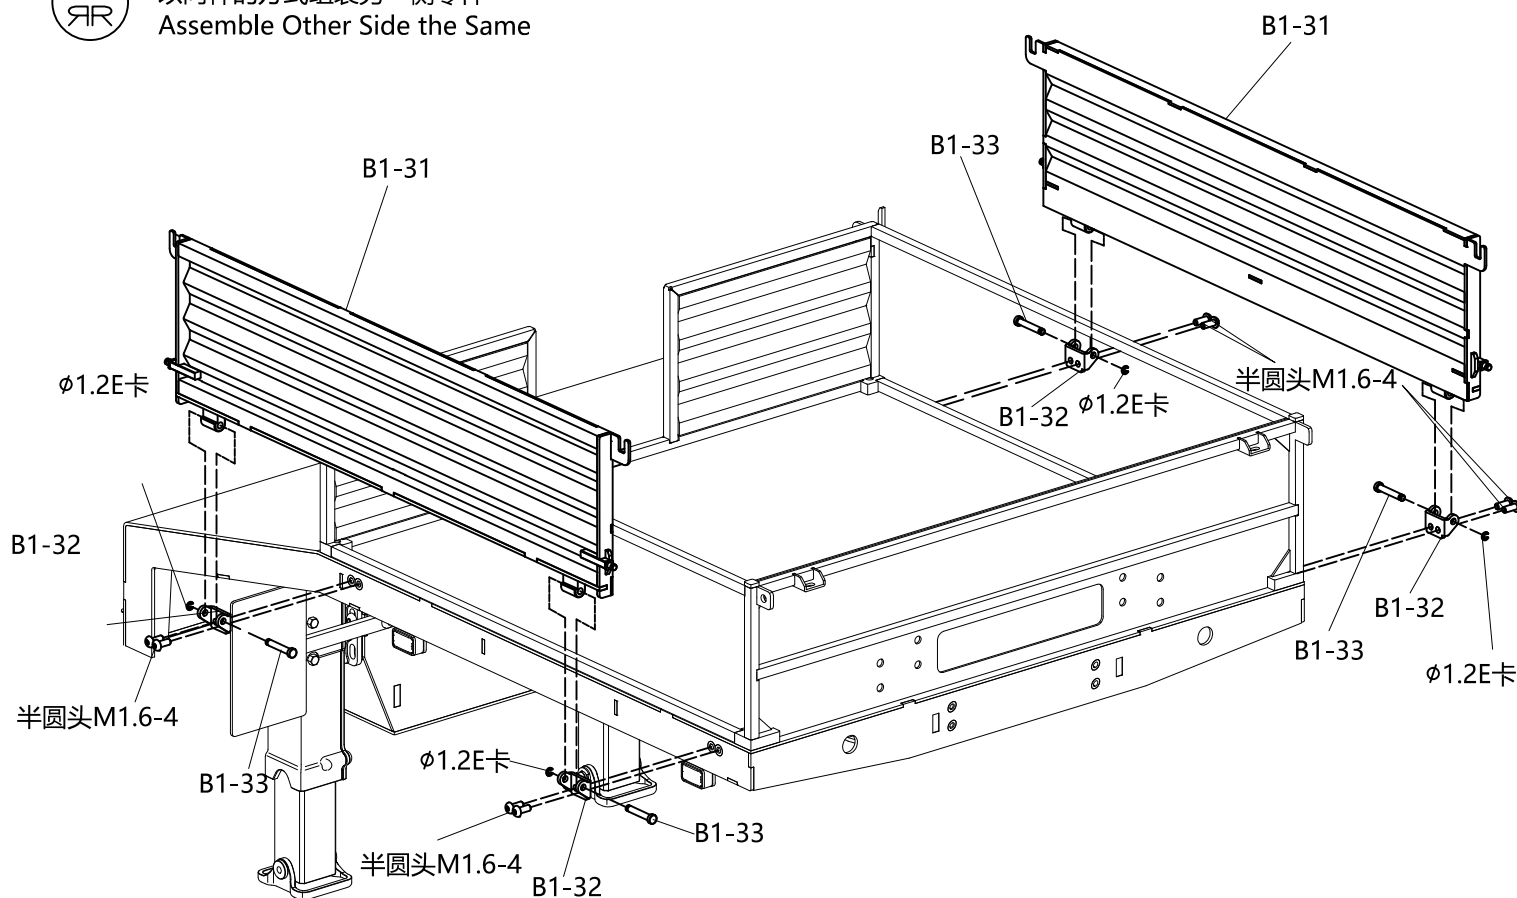


56



B1-34 ×2



 B1-35 ×2




B1-36 ×4



十字盘头M1-3 ×8
Cross pan head screw



M1六角螺母 ×8
Hexagon nut


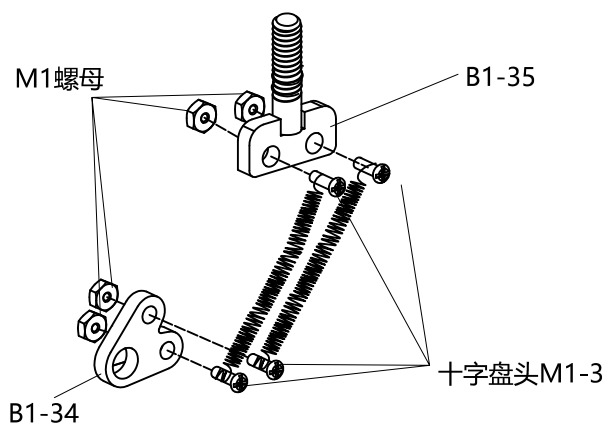


×2

重复/安装多个
Repeat/Build Multiple



57

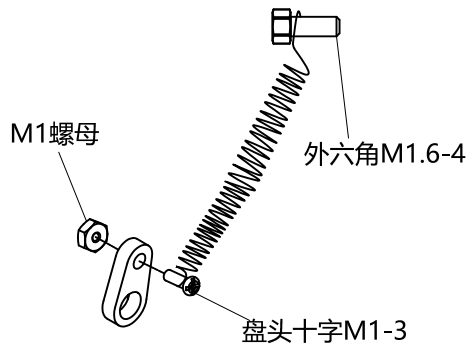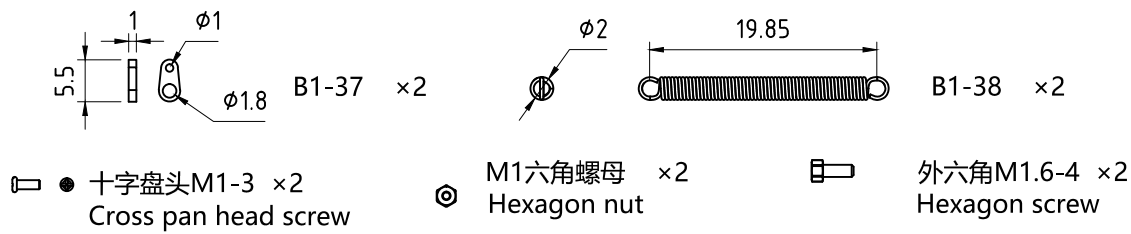


X2
 重复/安装多个
 Repeat/Build Multiple

58



LA-LNM2-2螺母 ×2

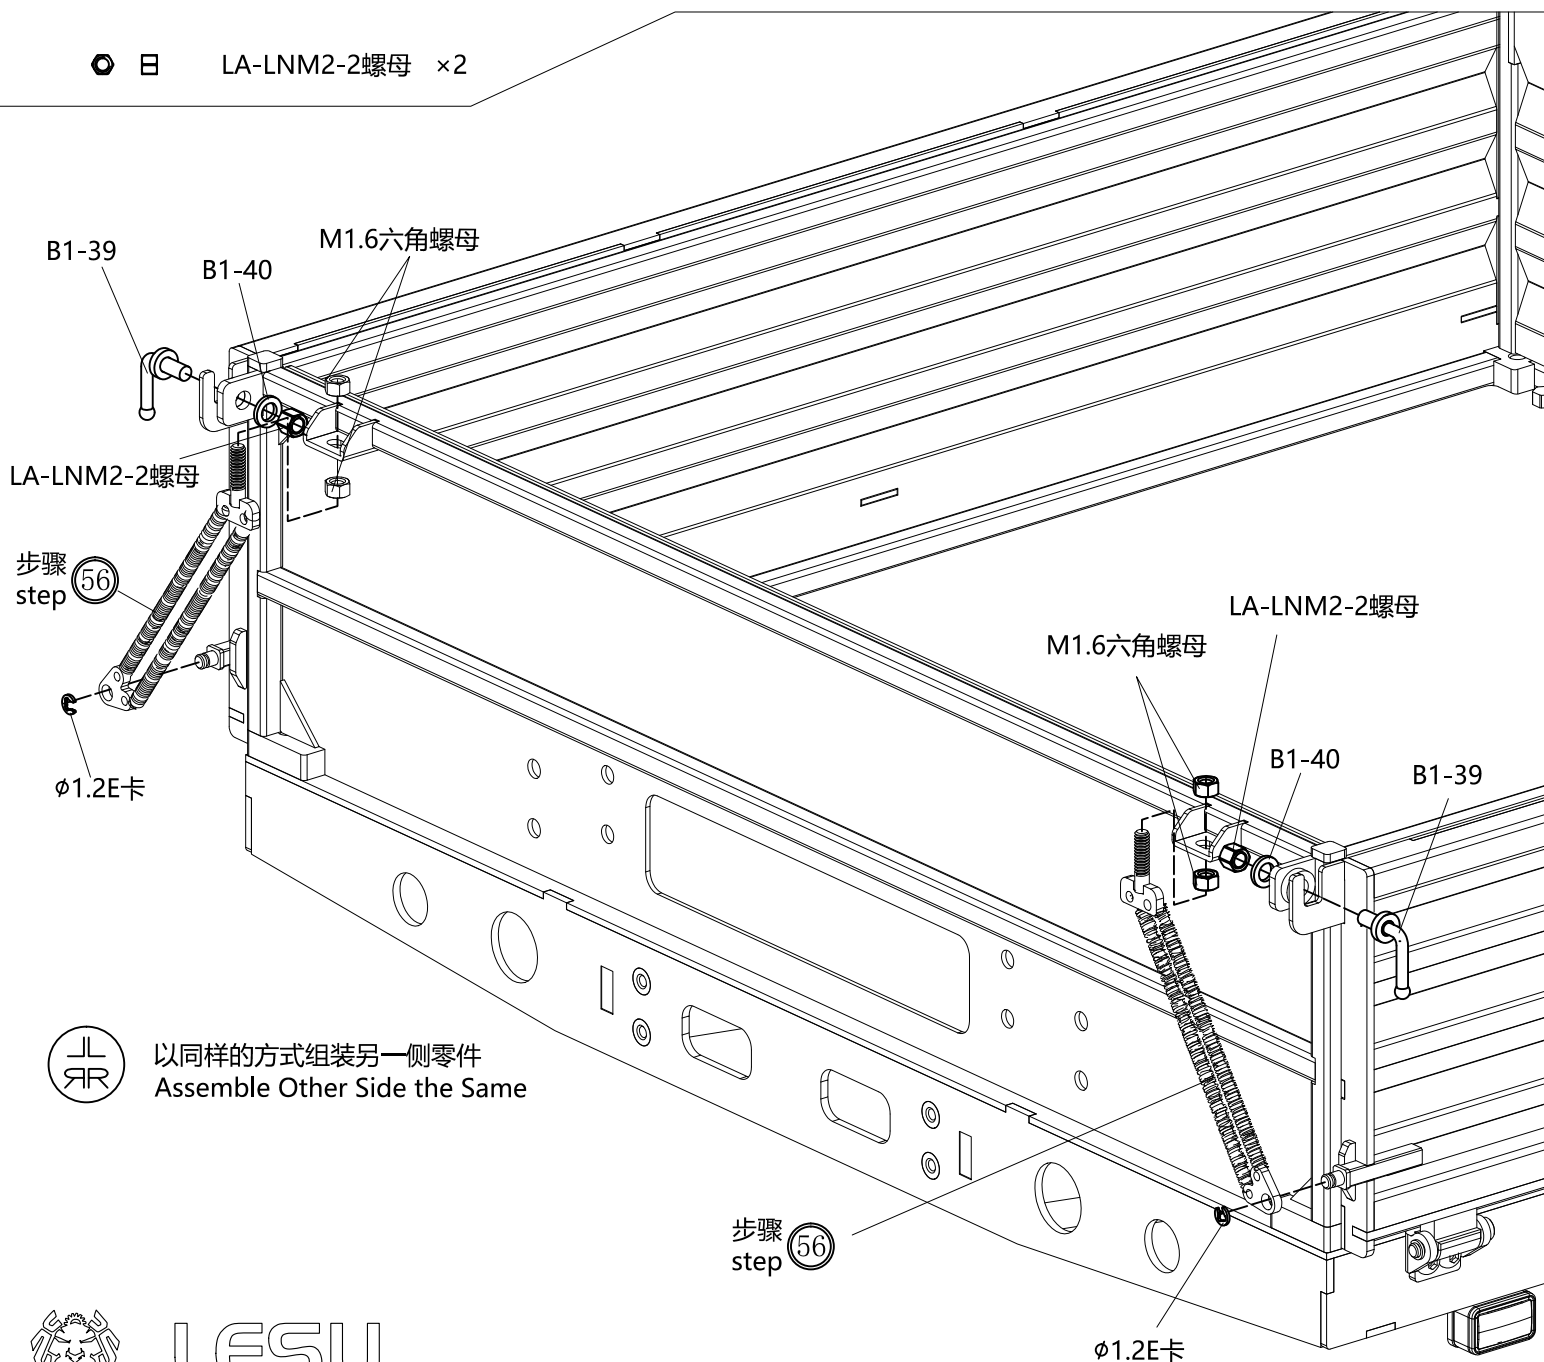

LESU
 MODEL RACING

TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

59



B1-39 ×2

0.5



Ø2.1

B1-40 ×2




M1.6六角螺母 ×4
Hexagon nut



Ø1.2E卡 ×2
"E" rings


LA-LNM2-2螺母 ×2

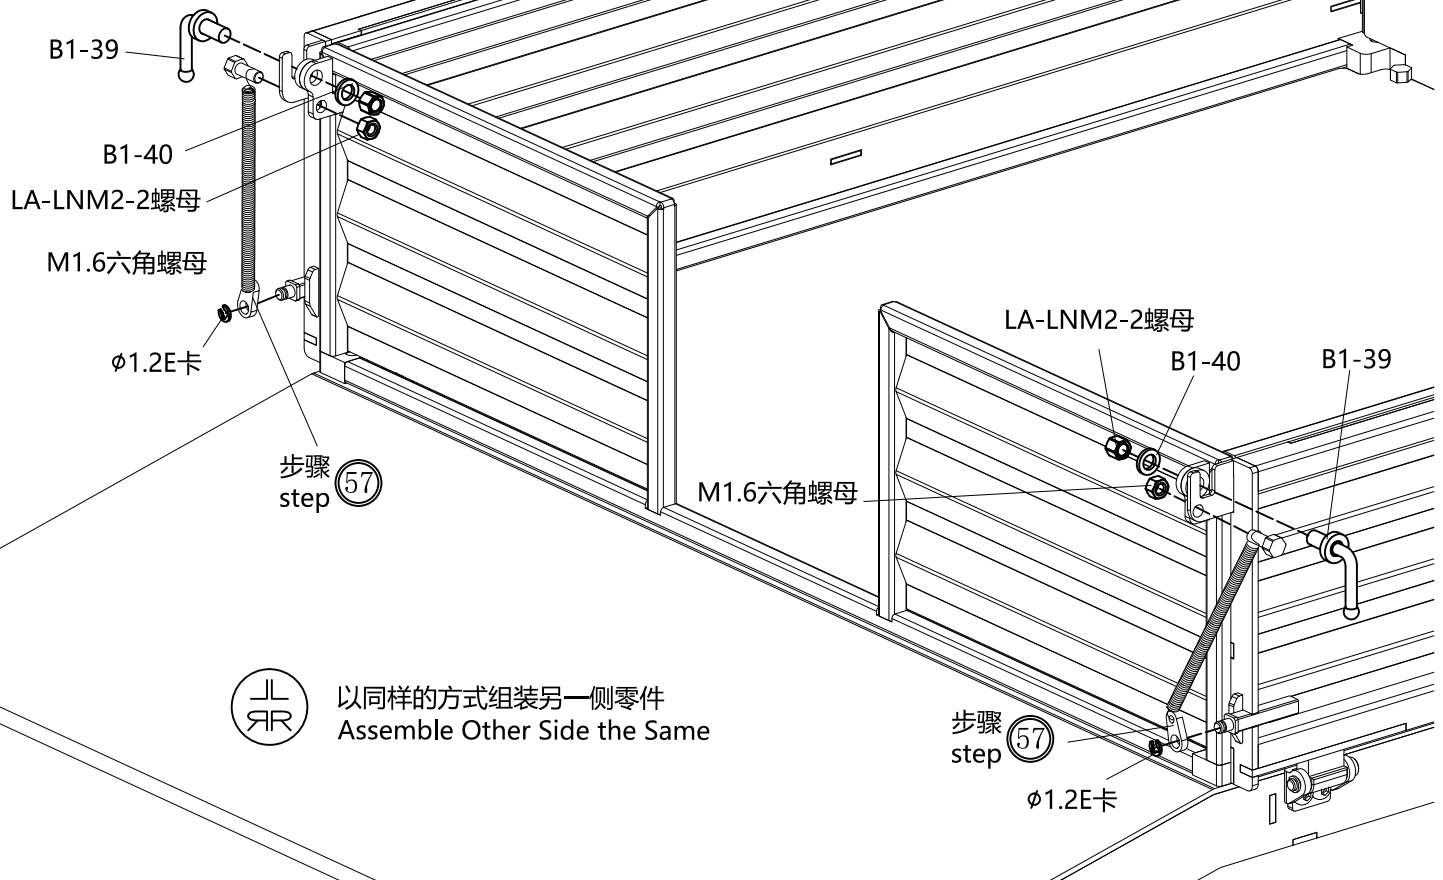


60



C1-1 ×4

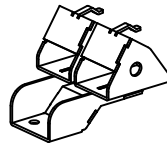

C1-2 ×2

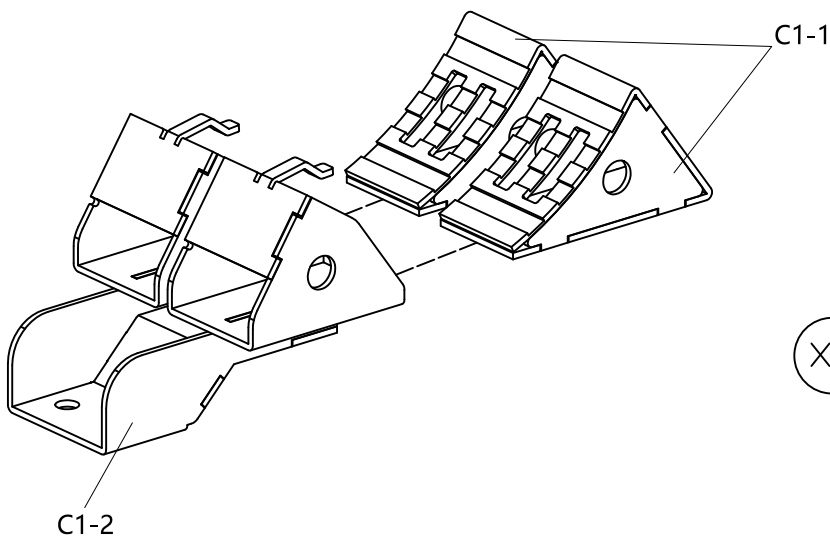

X2 重复/安装多个
Repeat/Build Multiple




LESU
MODEL RACING

61



C1-3 ×4

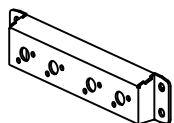


C1-4




十字盘头M1-3 ×8
Cross pan head screw



M1六角螺母 ×8
Hexagon nut

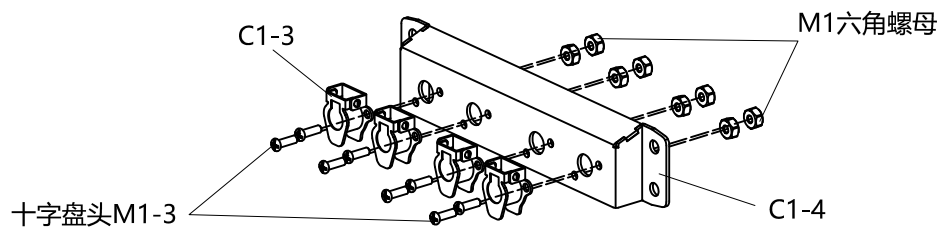

62

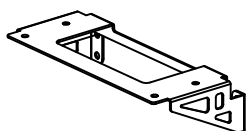

C1-5



外六角M1.6-4 ×4
Hexagon screw




外六角M2-4 ×8
Hexagon screw



C1-23

LA-LNM2-2螺母 ×8

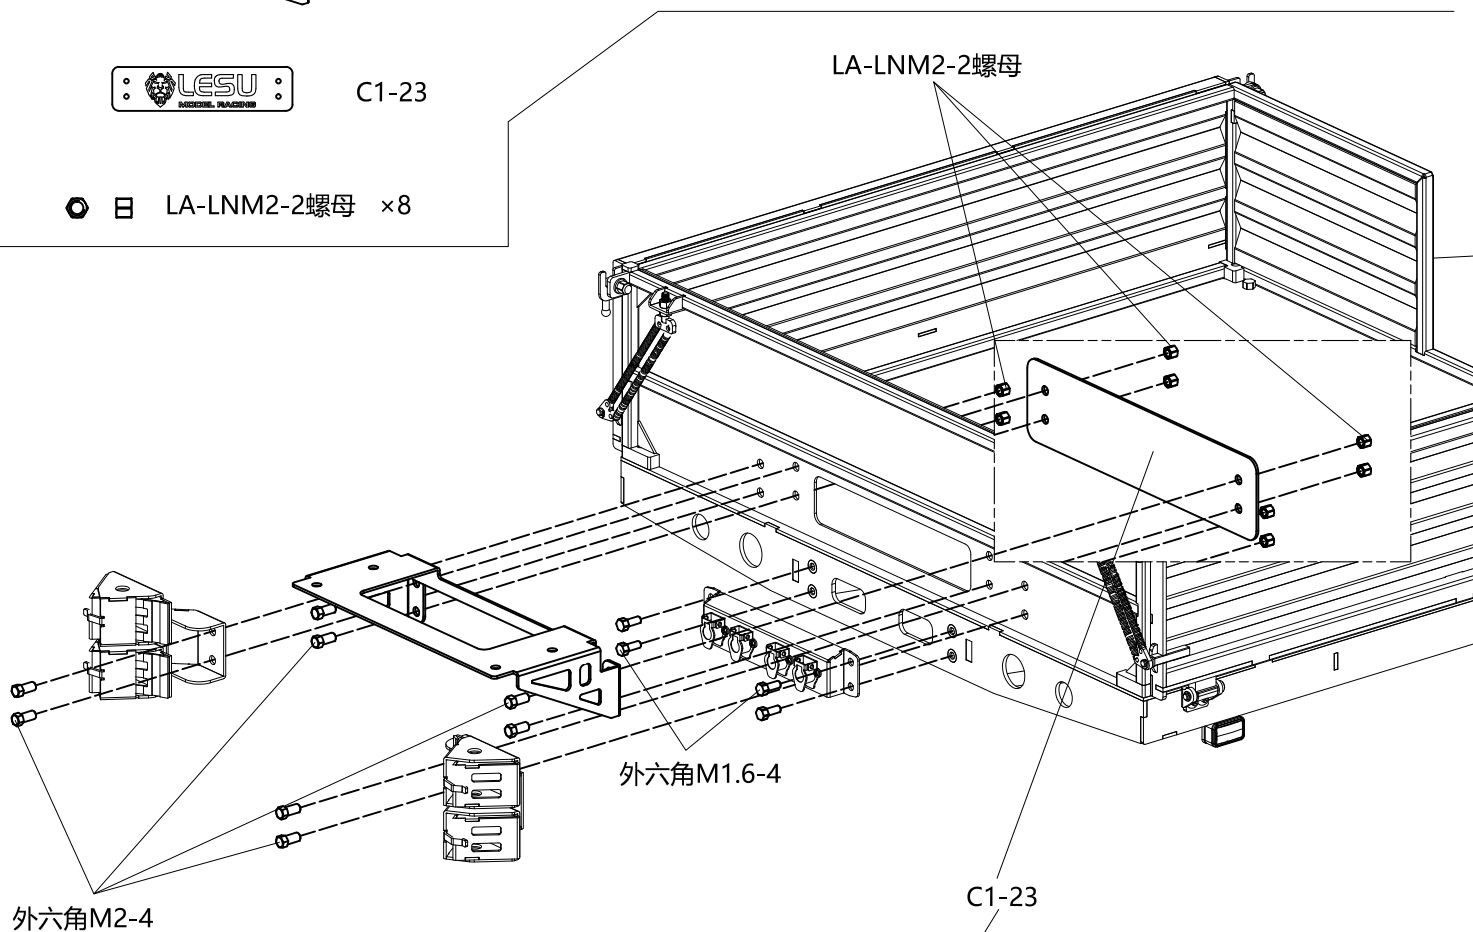


LESU
MODEL RACING

TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

63

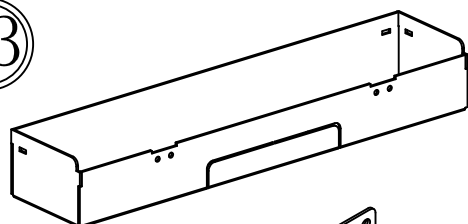

C1-6




外六角M1.2-3 ×4
Hexagon screw



M1.2螺母 ×4
Hexagon nut



 
An-0012 ×2




磁铁 ×2
magnet



十字沉头M1.6-4 ×2
Hexagon socket
countersunk head screw

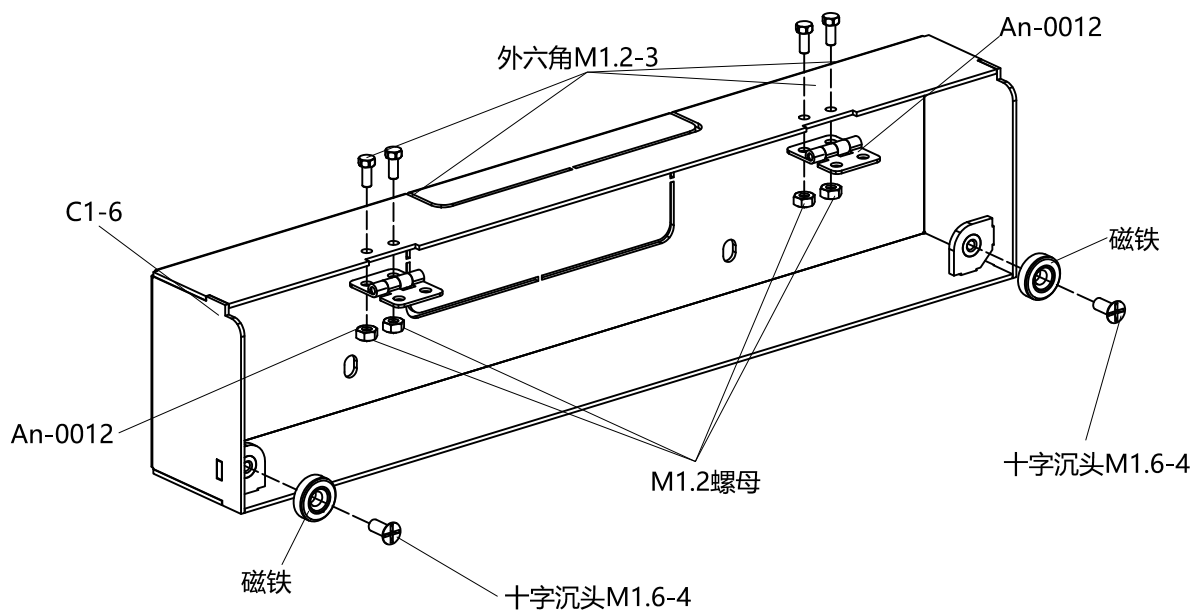

64

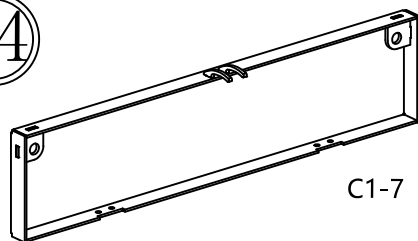


C1-7



外六角M1.2-3 ×4
Hexagon screw



 M1.2螺母 ×4
Hexagon nut



磁铁 ×2
magnet




十字沉头M1.6-4 ×2
Hexagon socket
countersunk head screw



特别注意

Pay Special Attention

对比第63步, 注意磁铁磁极方向
Compare step 63 and note the
magnet pole orientation.

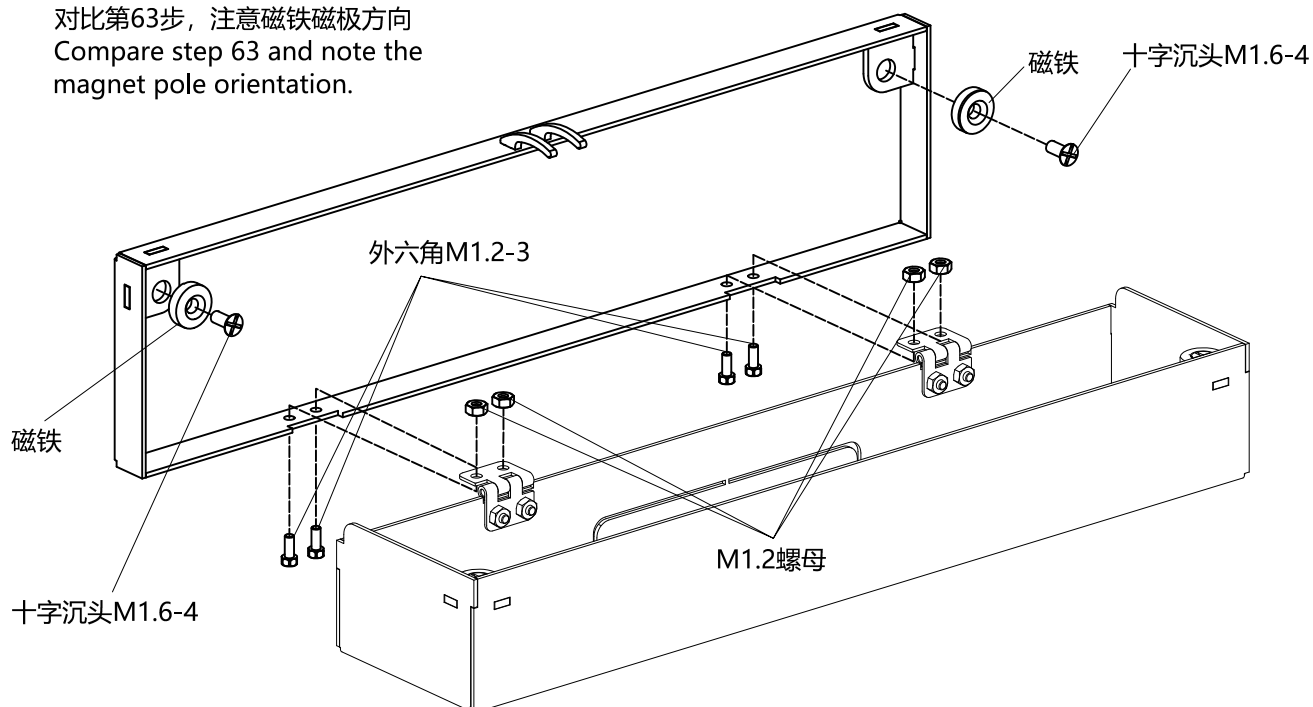


65




半圆头M2-4 ×4
Hexagon socket button head screw



LA-LNM2-2螺母 ×8

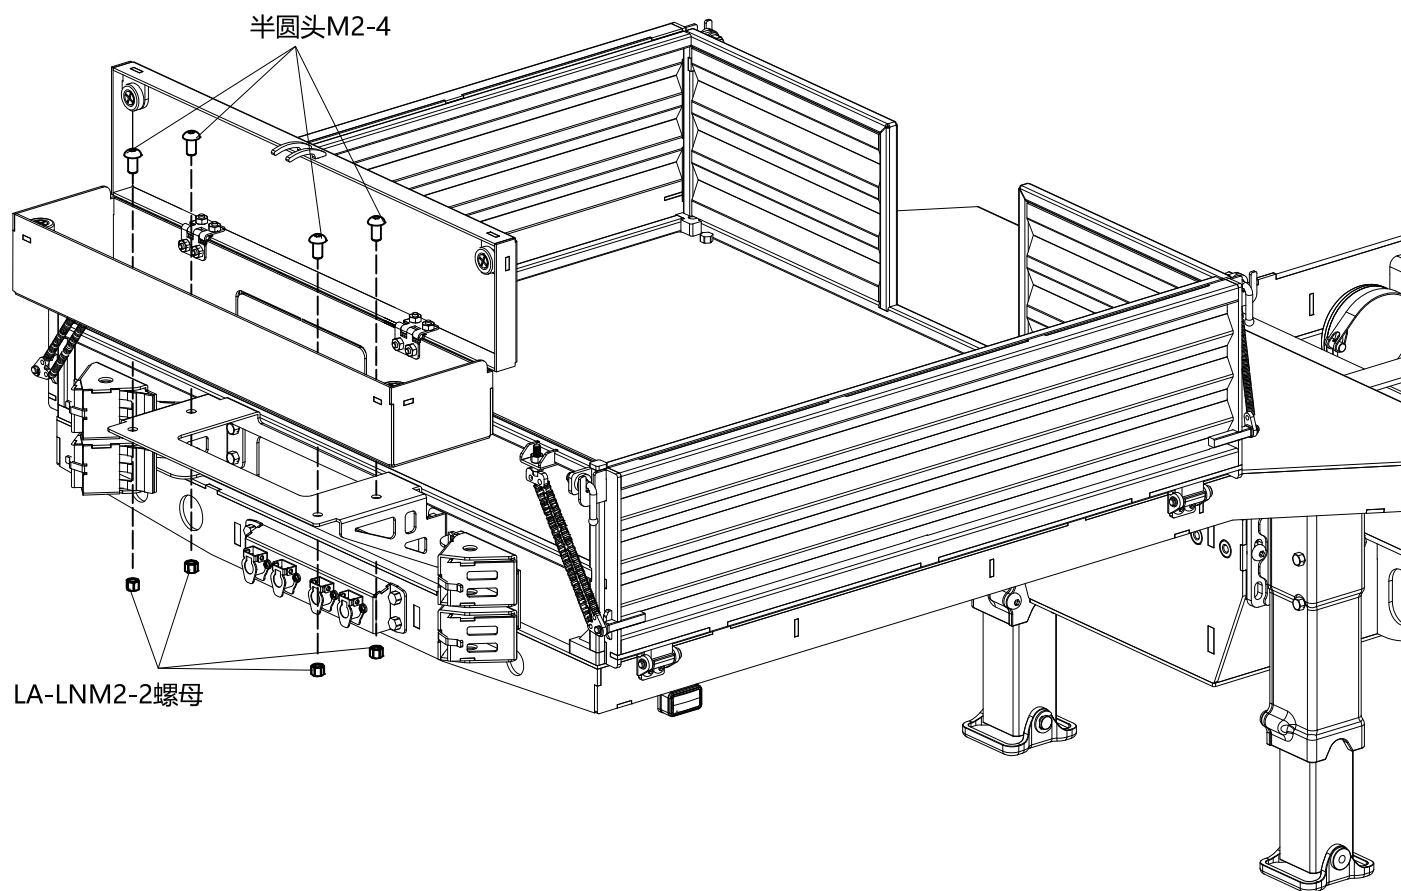

66

 


磁铁 ×24
magnet



十字沉头M1.6-4 ×24
Hexagon socket countersunk head screw

X22

重复/安装多个
Repeat/Build Multiple

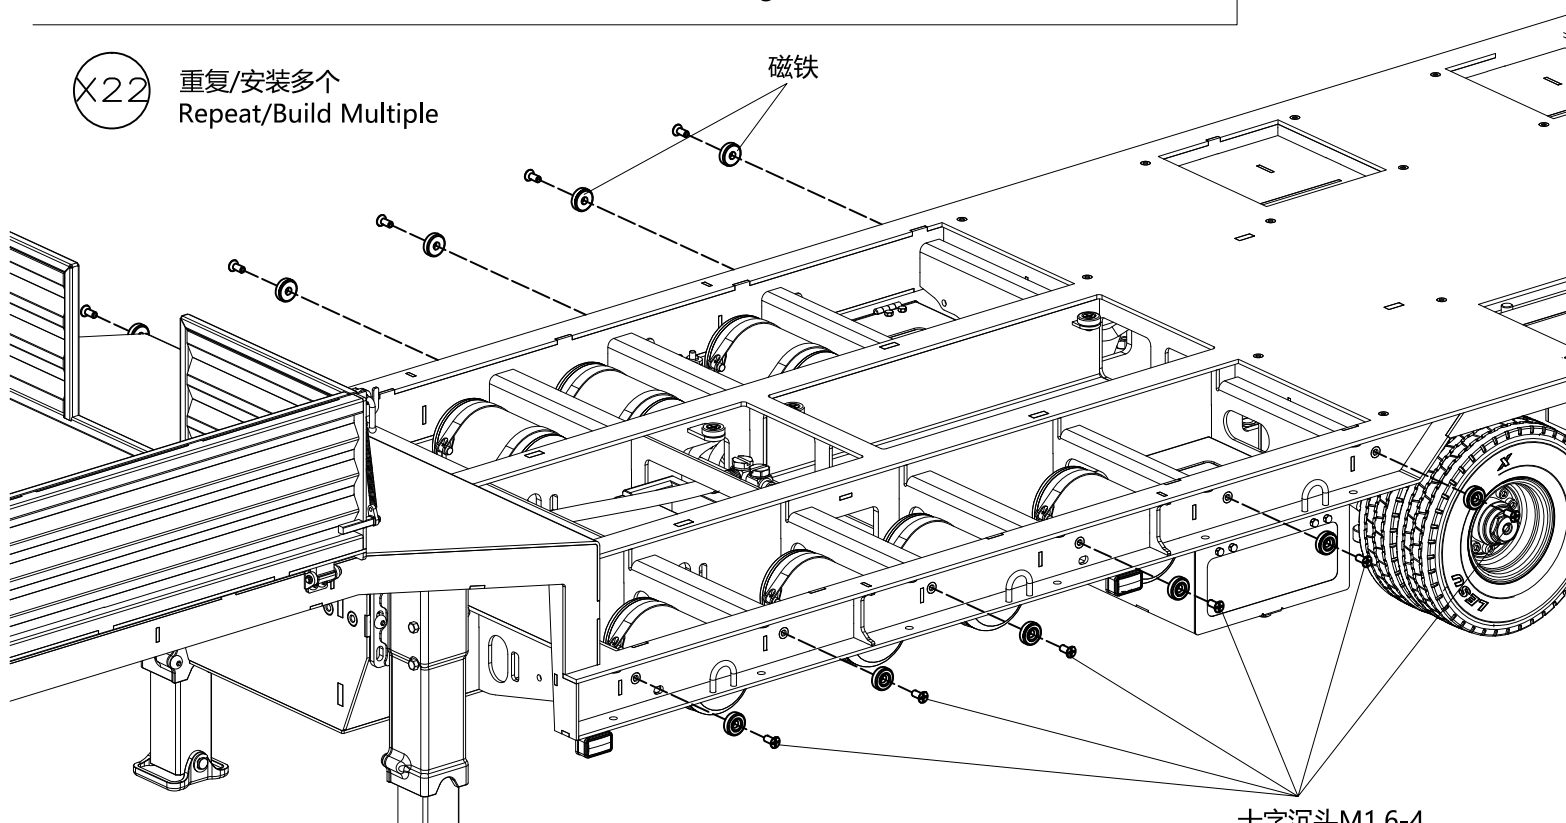

LESU


MODEL RACIN

TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.




以同样的方式组装另一侧零件
Assemble Other Side the Same

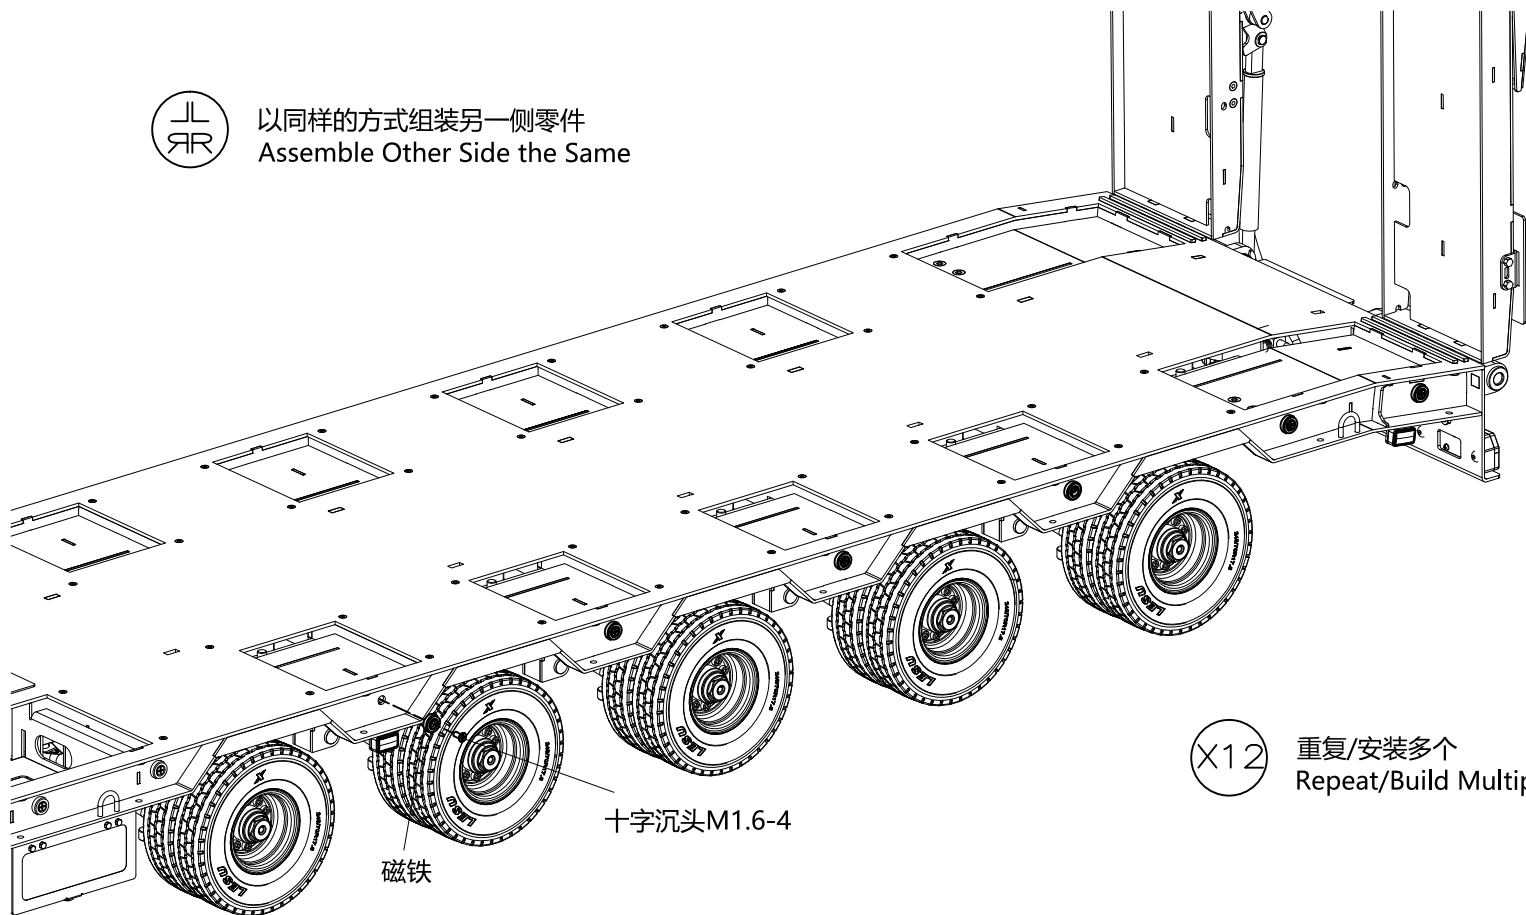


X12

重复/安装多个
Repeat/Build Multiple

 
67




C1-8 x12

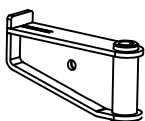

C1-9 x12

 

半圆头M2-16 x24
Hexagon socket button head screw

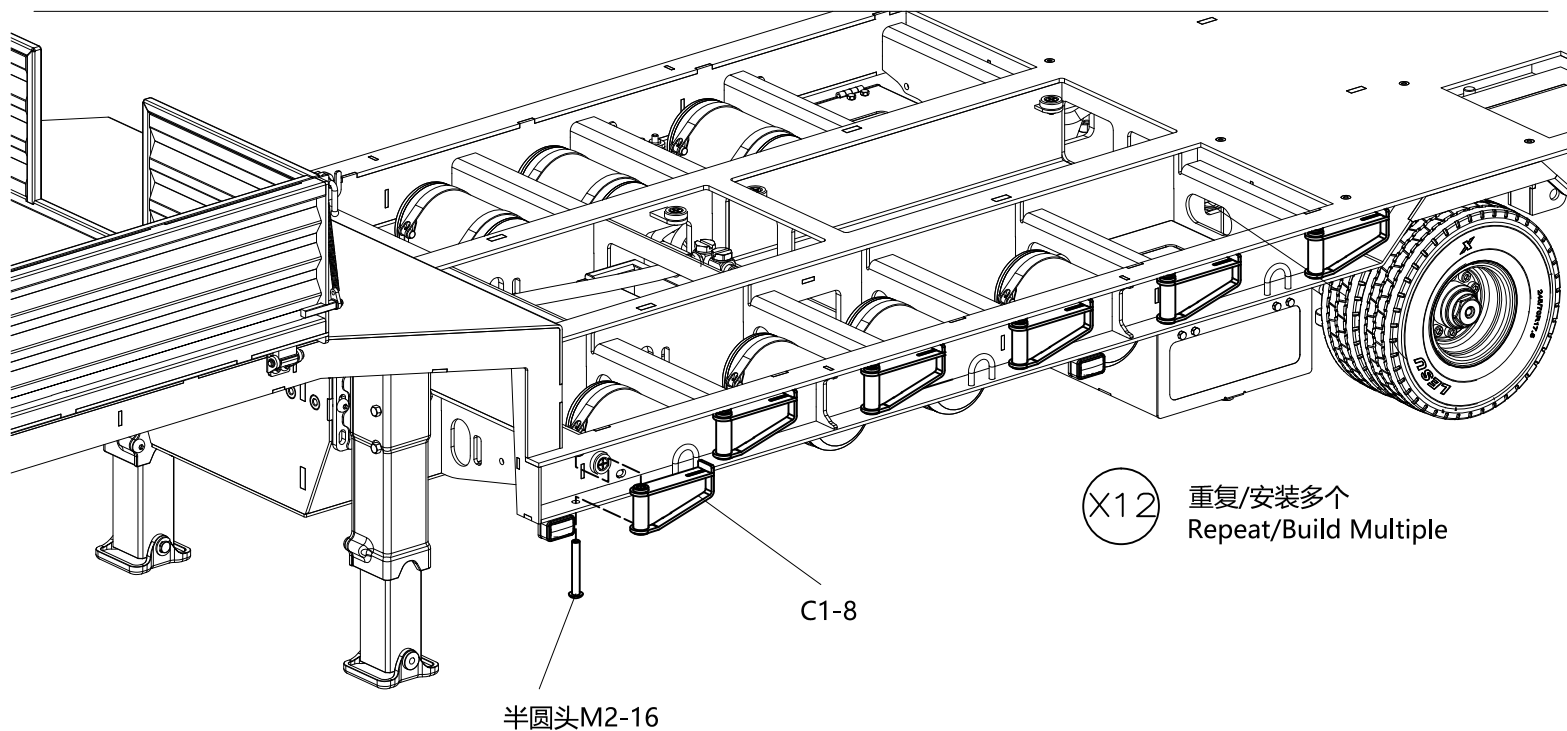


X12

重复/安装多个
Repeat/Build Multiple






以同样的方式组装另一侧零件
Assemble Other Side the Same

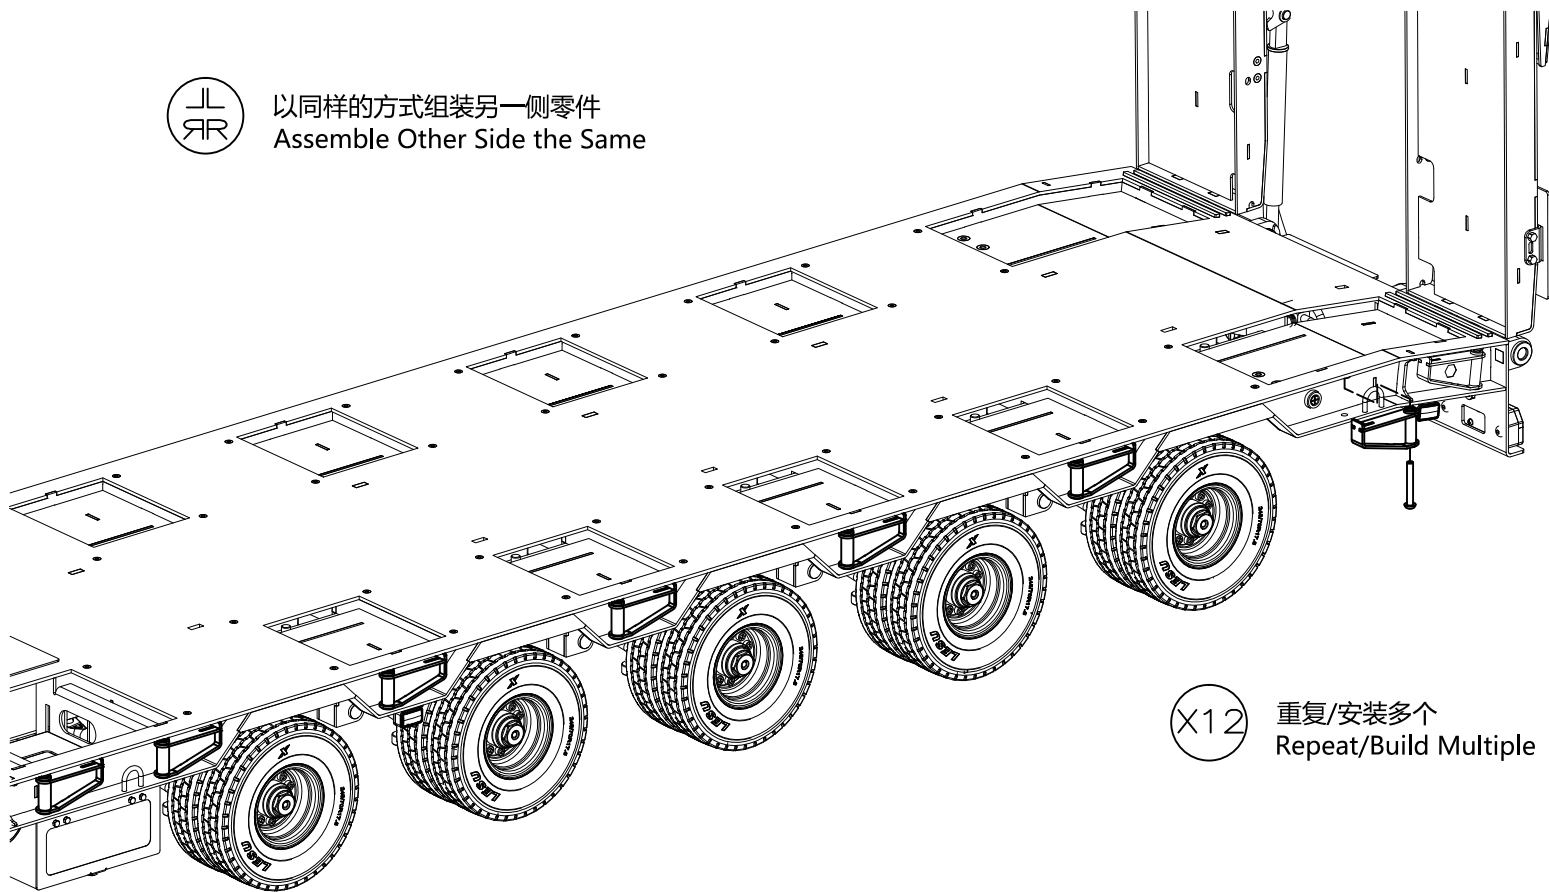

X12

重复/安装多个
Repeat/Build Multiple


68

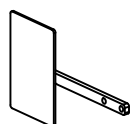

C1-10 x2



半圆头M2-4 x4
Hexagon socket button
head screw

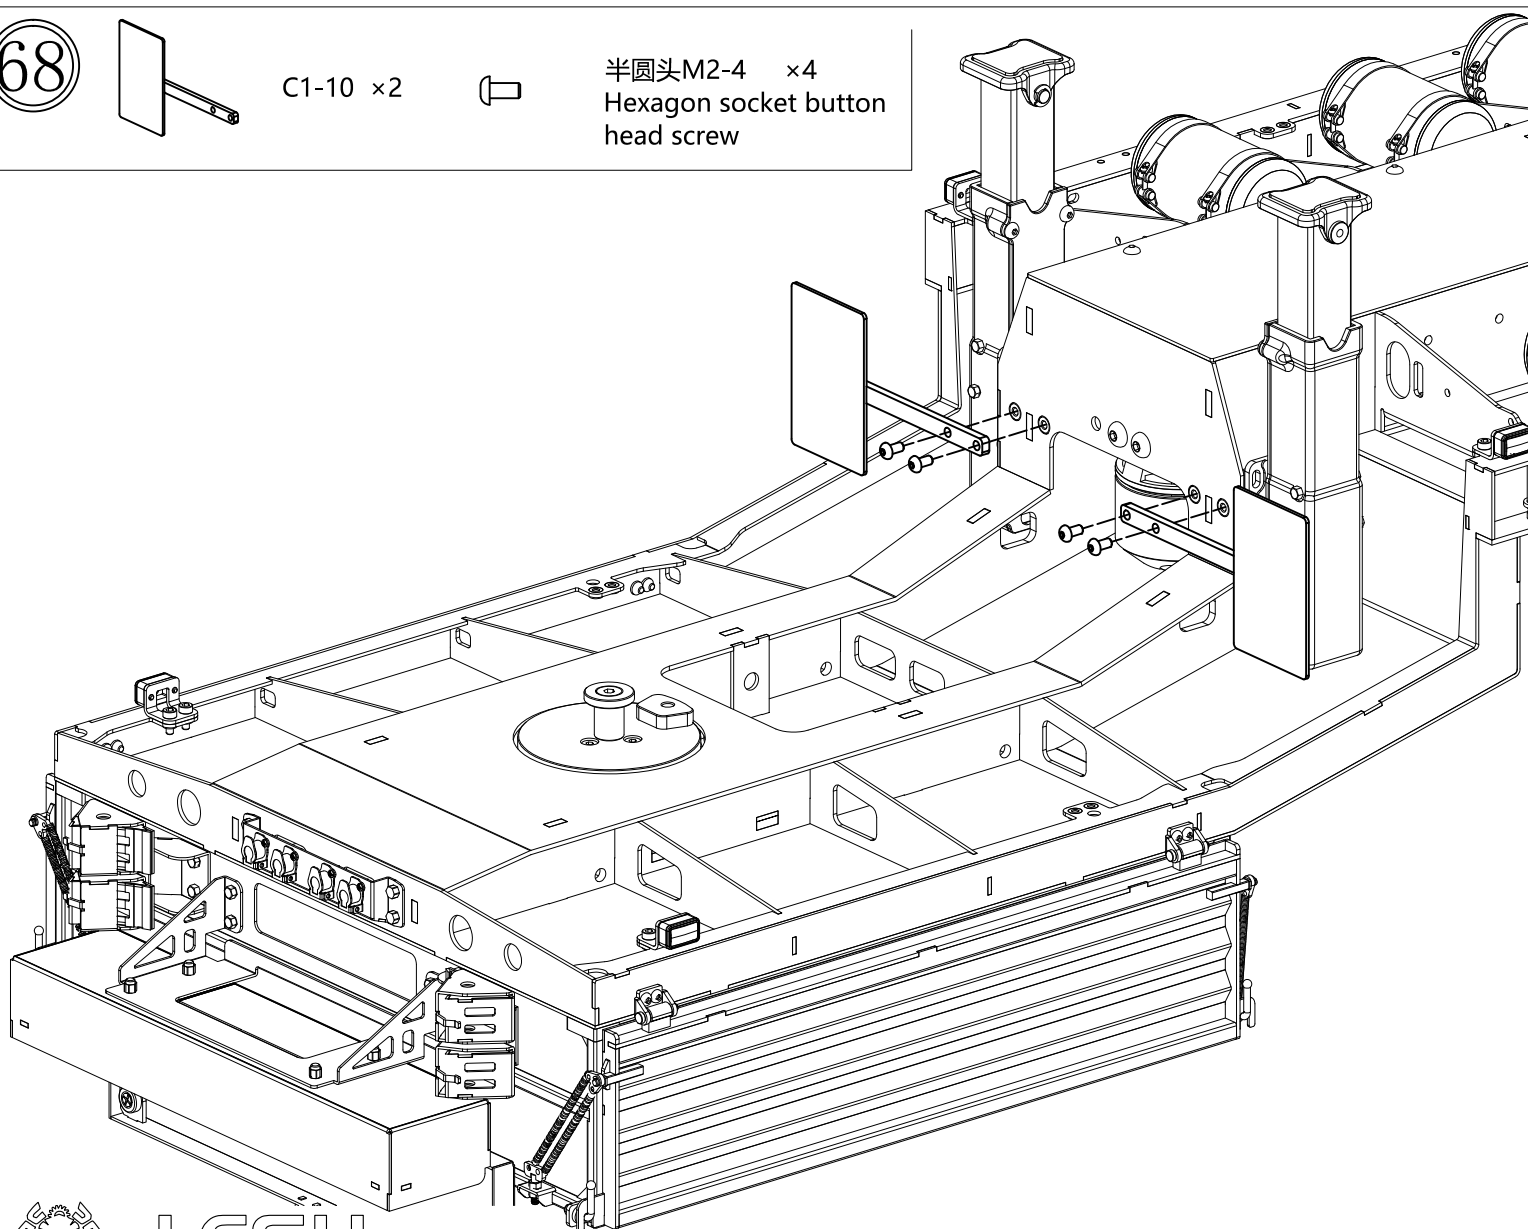


LESU
MODEL RACIN

TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.


69

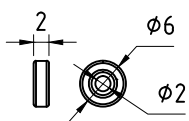


磁铁 ×8
magnet




十字沉头M1.6-4 ×8
Hexagon socket countersunk
head screw

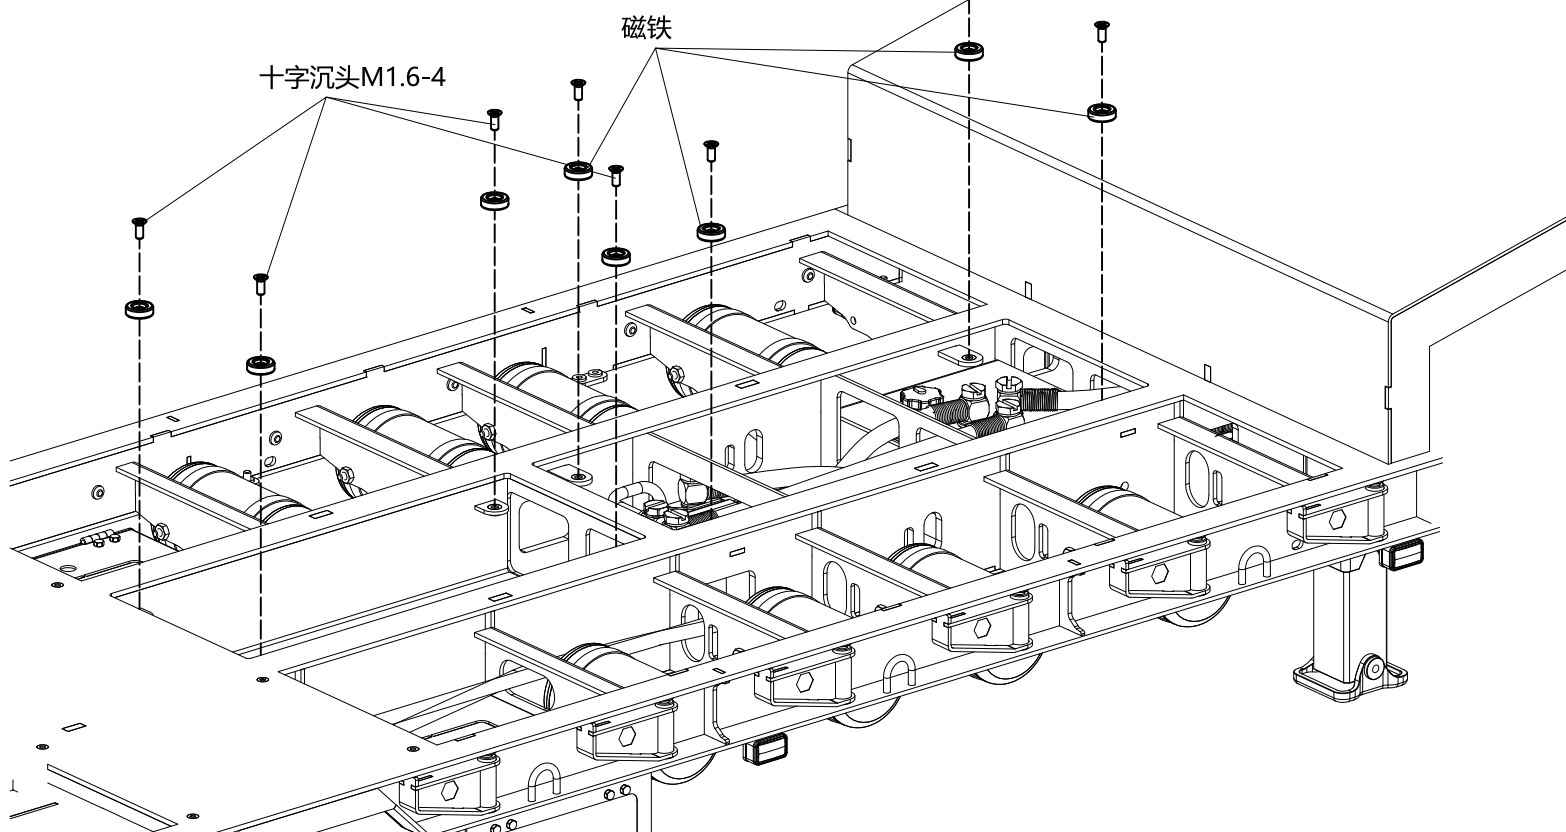

70

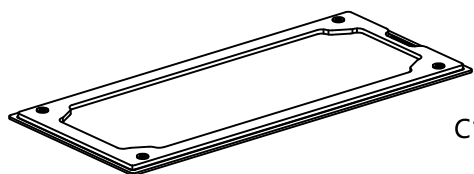

C1-11

 

磁铁 ×4
magnet




十字沉头M1.6-3 ×8
Hexagon socket countersunk
head screw





特别注意

Pay Special Attention

对比第69步, 注意磁铁磁极方向
Compare step 69 and note the
magnet pole orientation.

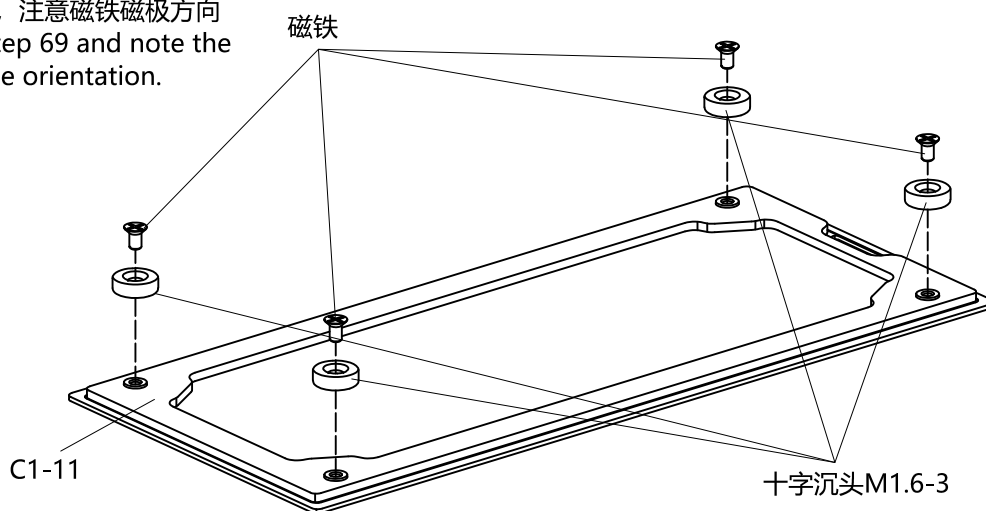

71

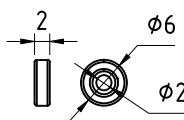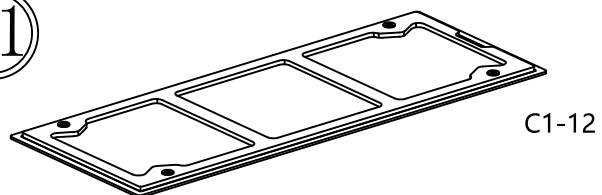

磁铁 ×4
magnet



十字沉头M1.6-3 ×8
Hexagon socket countersunk
head screw




特别注意

Pay Special Attention

对比第69步, 注意磁铁磁极方向
Compare step 69 and note the
magnet pole orientation.


十字沉头M1.6-3

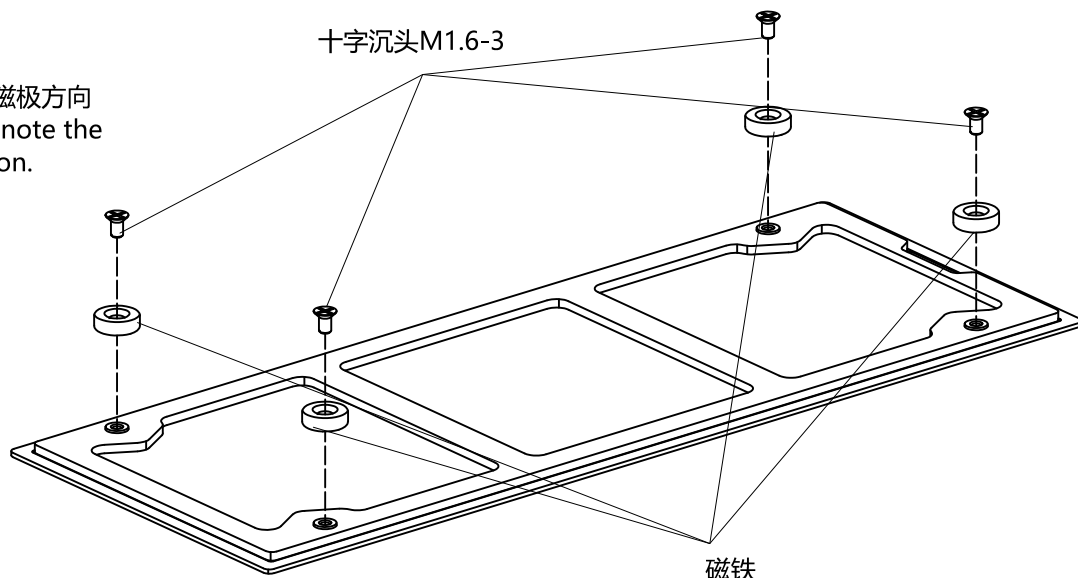

磁铁

72

步骤
step 70

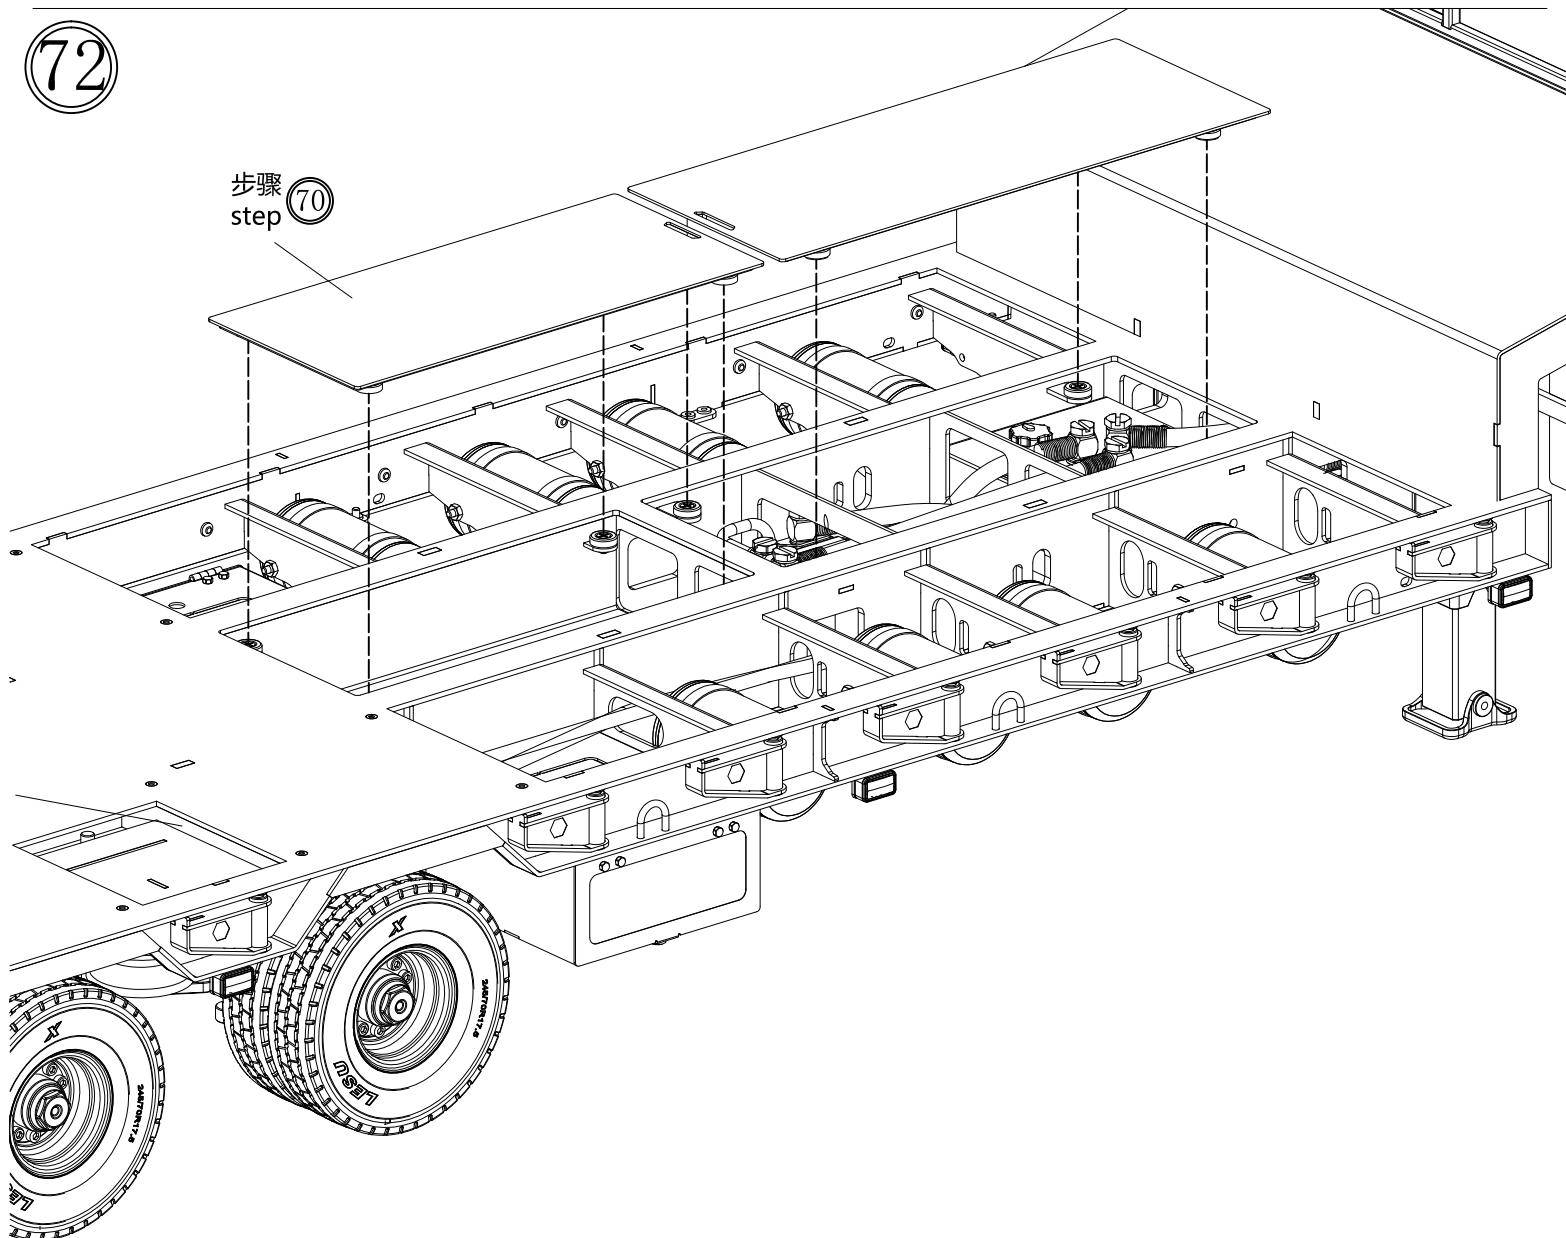


LESU

MODEL RACING


TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

73

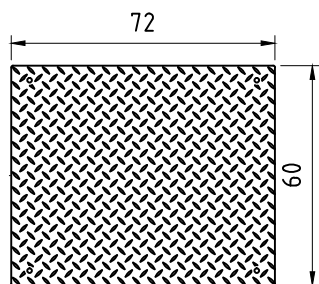


C1-13 x2

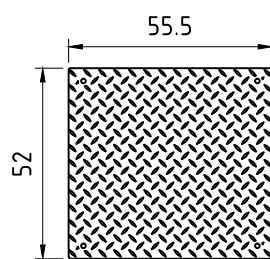


C1-14 x8

外六角M1.2-3 x32
Hexagon screw

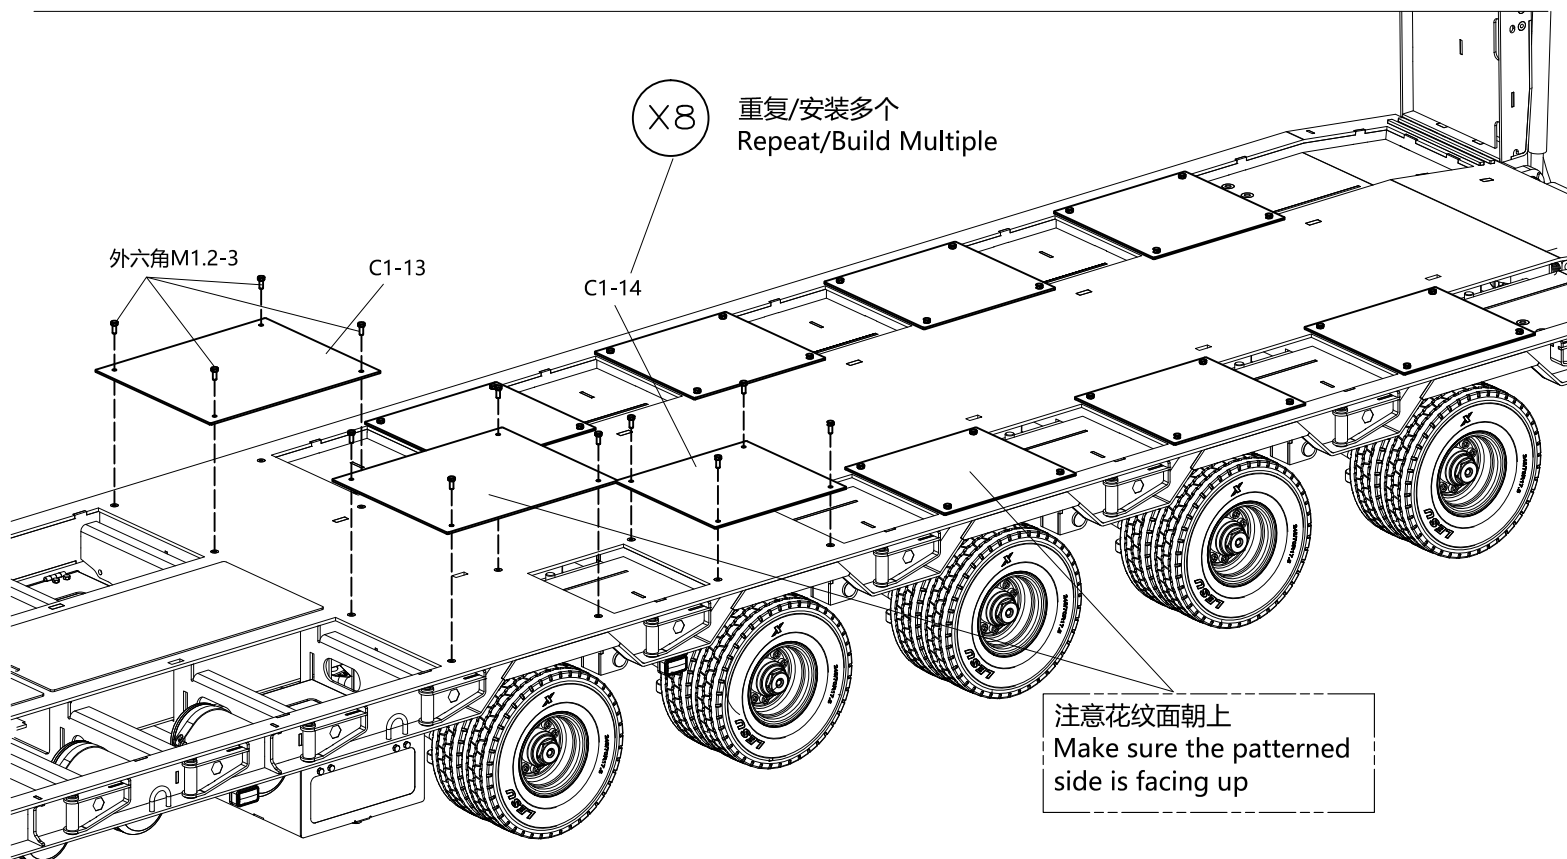

74

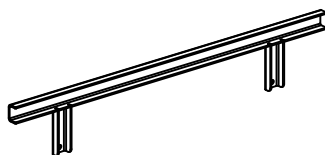


C1-15 x2










半圆头M2-5 x4
Hexagon socket
button head screw



M2六角螺母 x4
Hexagon nut

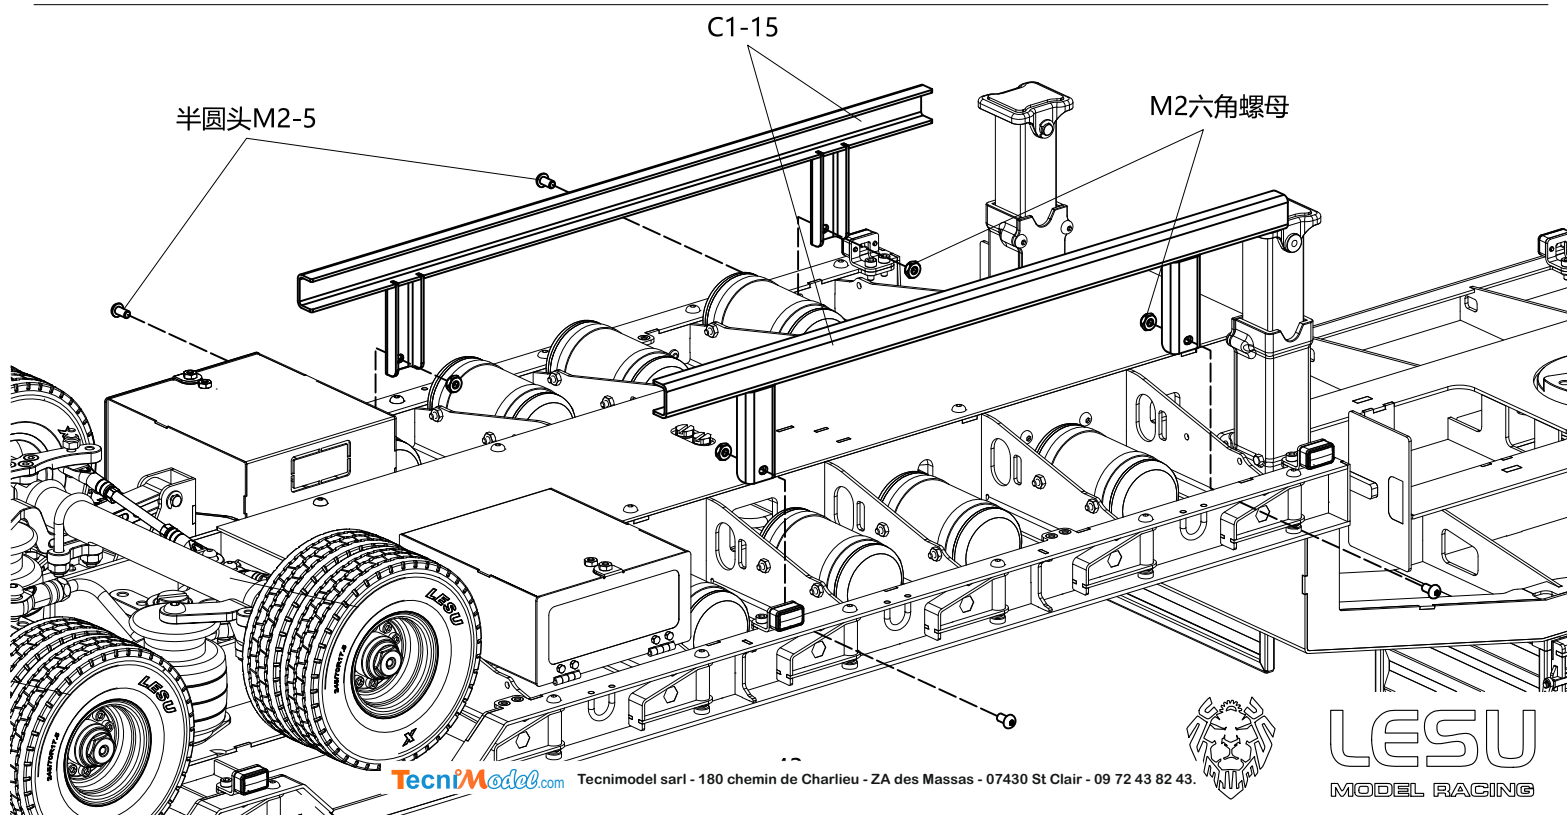

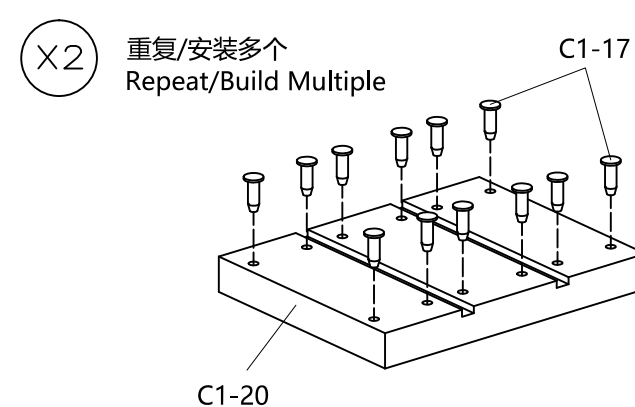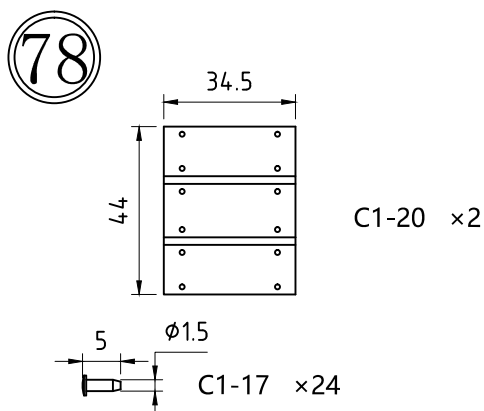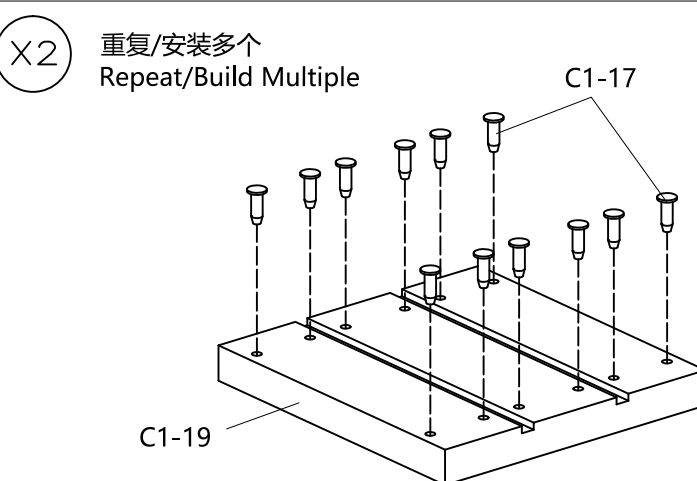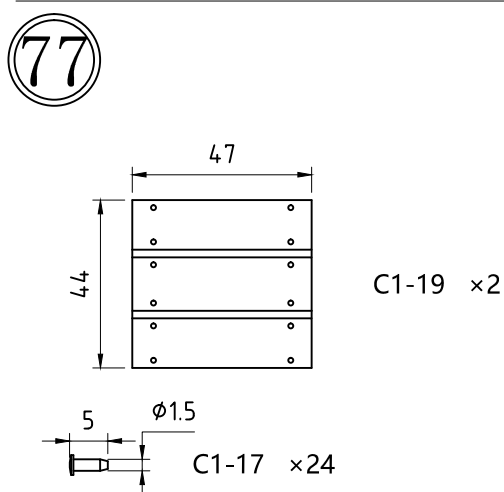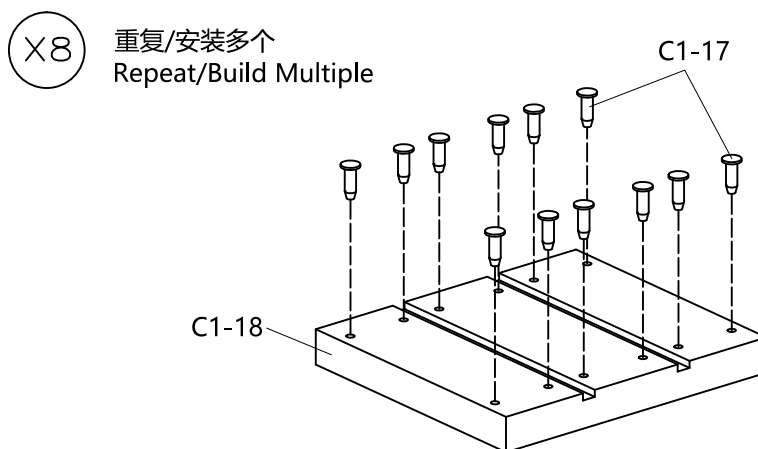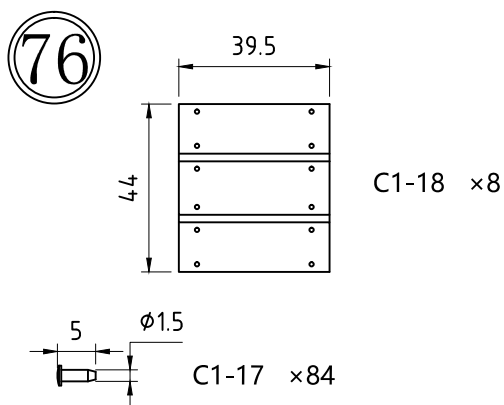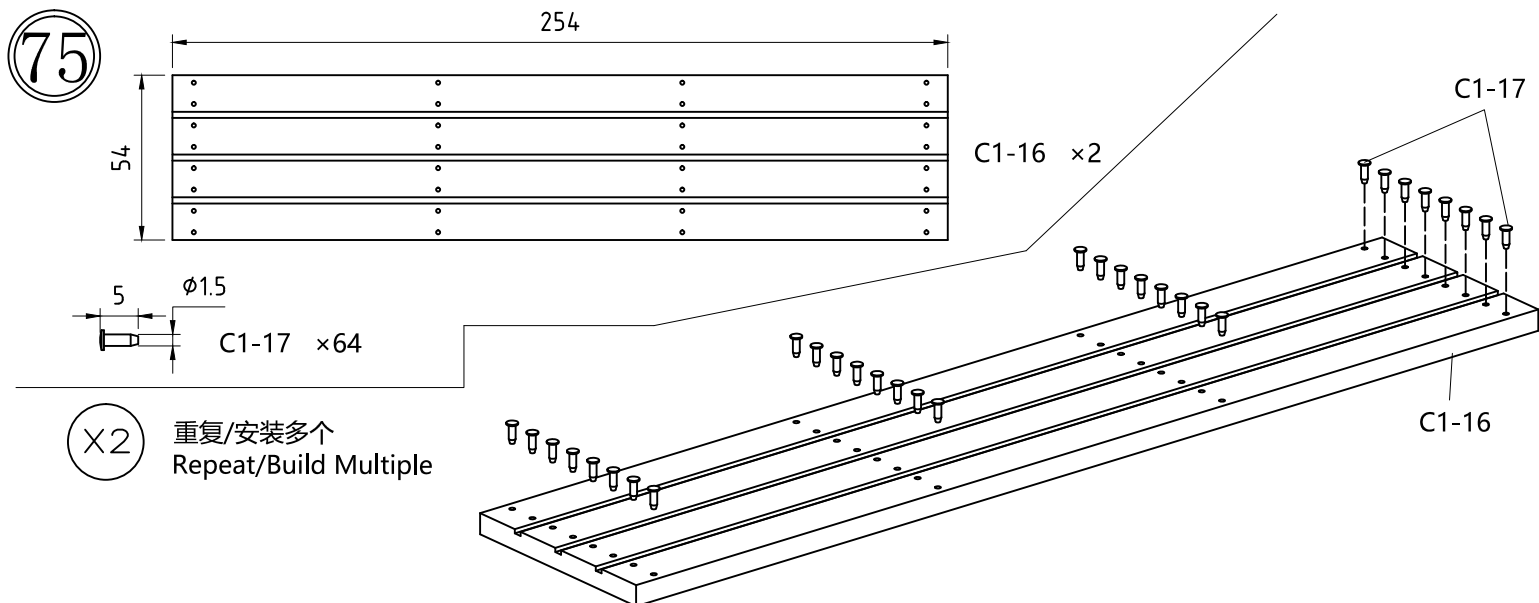

LESU
MODEL RACINE

TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

79


步骤 78
step

步骤 77
step



步骤 76
step

步骤 75
step

双面胶
Double-sided tape

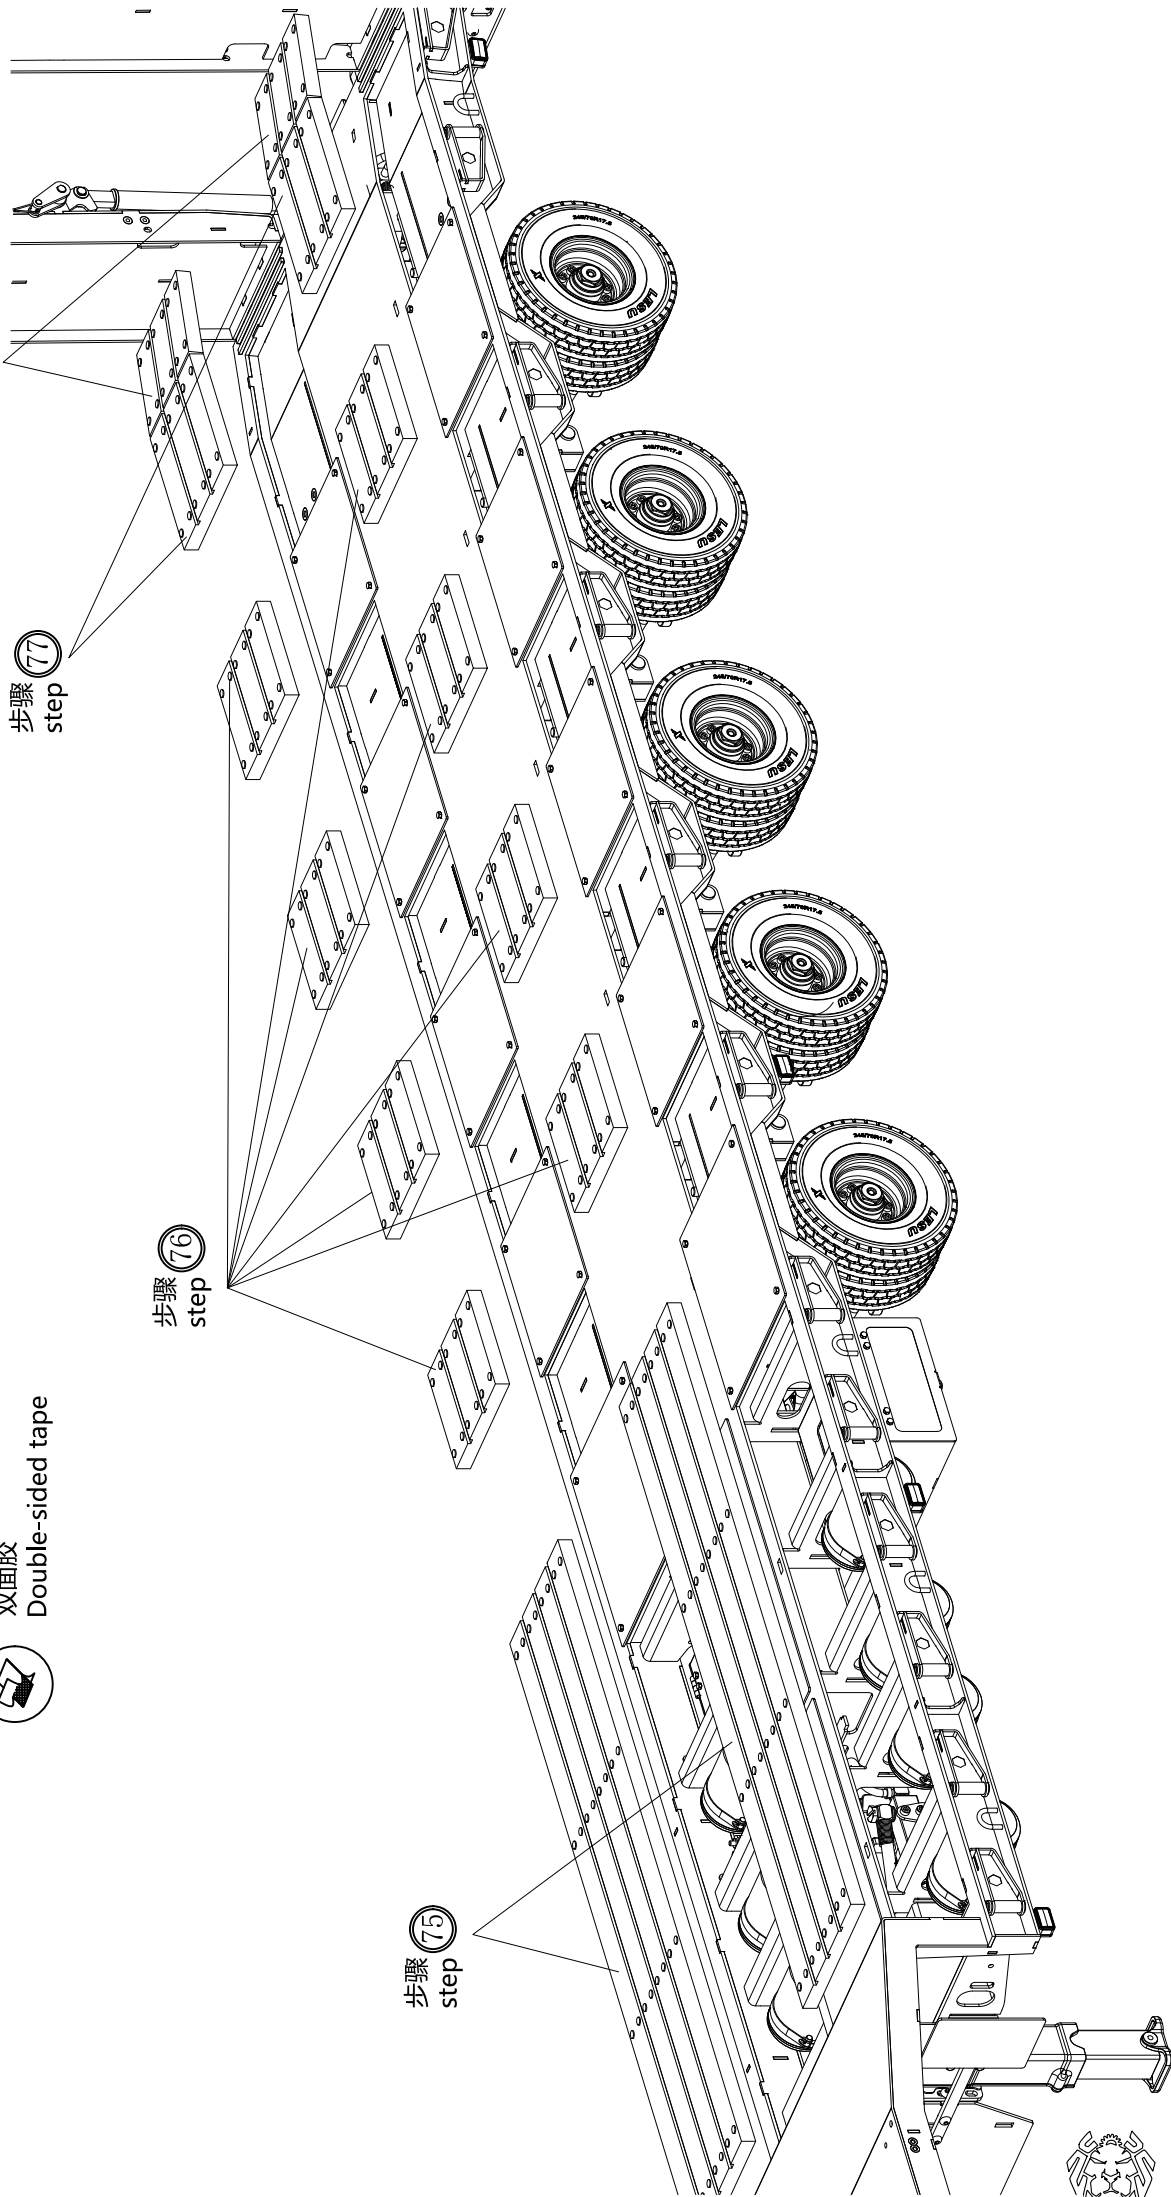


80

 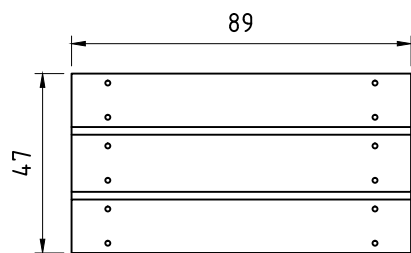


X2

重复/安装多个
Repeat/Build Multiple

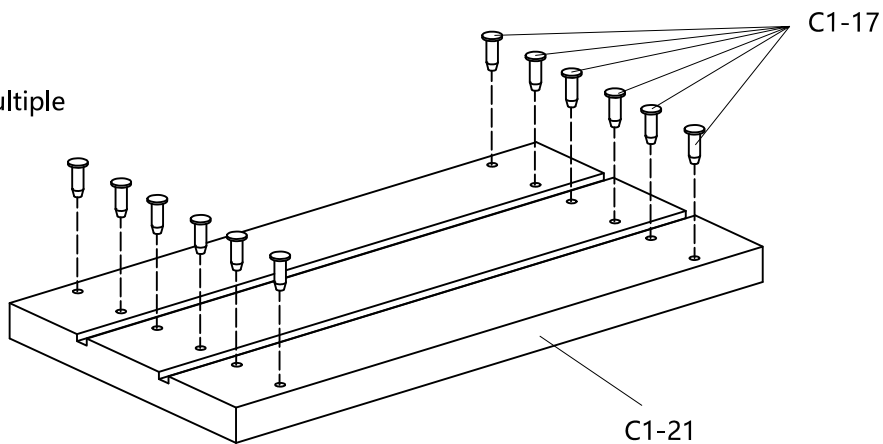

双面胶
Double-sided tape

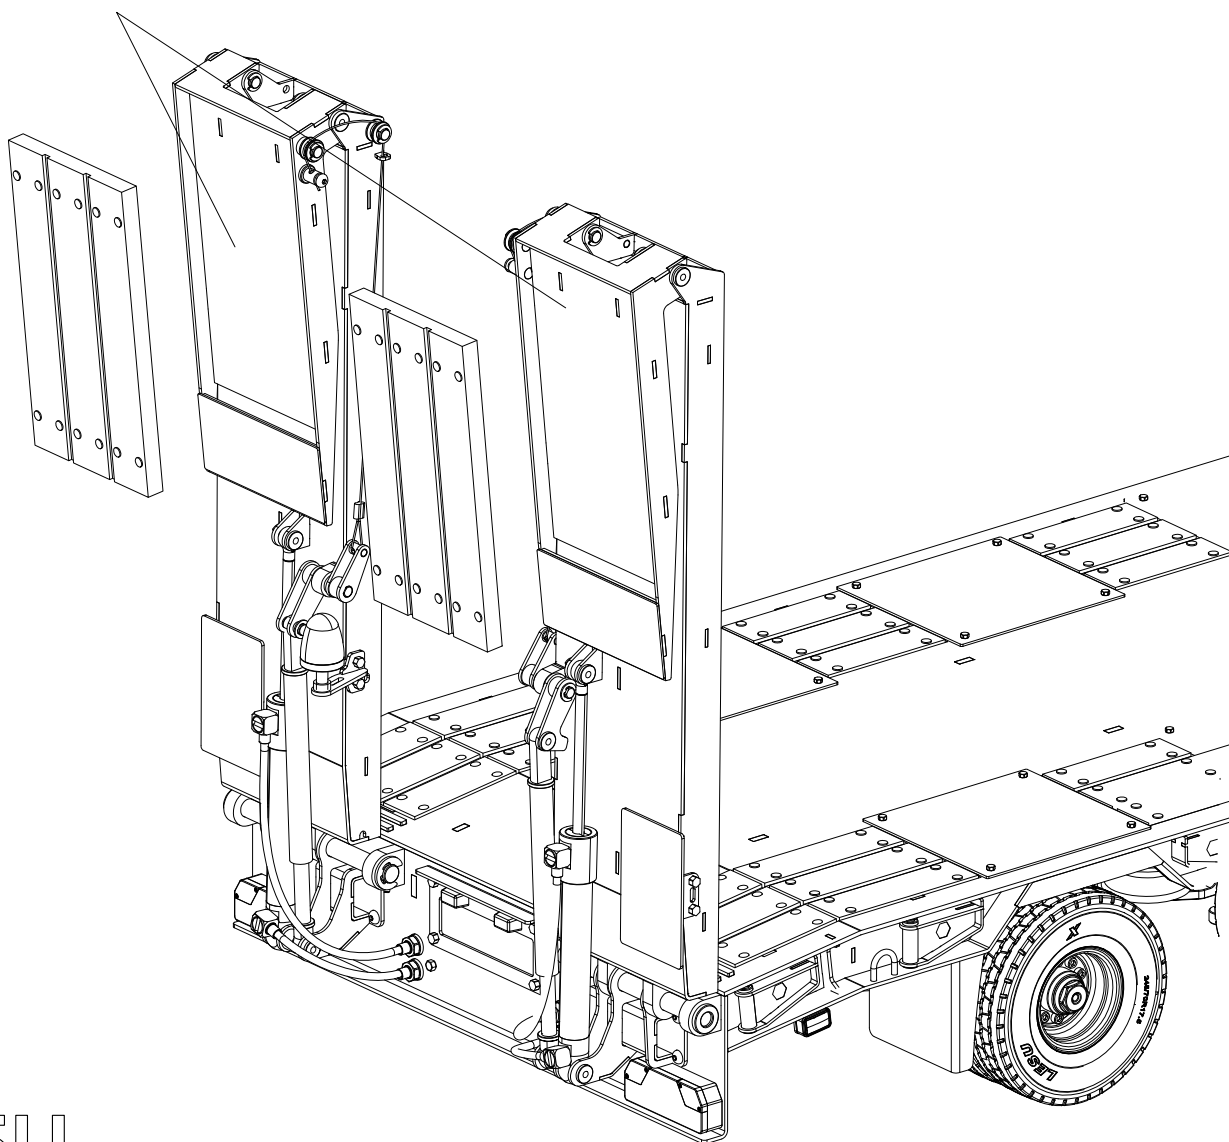


LESU
MODEL RACINE


TecniModel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.

81


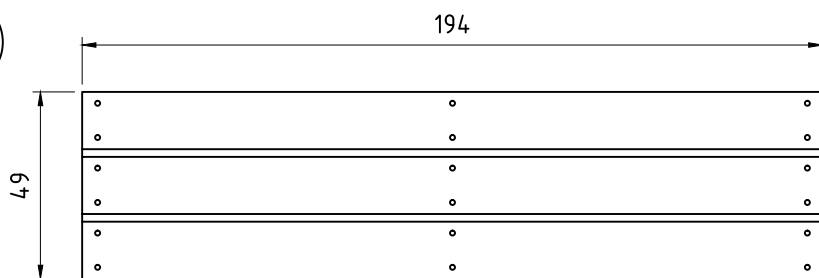


C1-22 x2

 


C1-17 x36

X2 重复/安装多个
Repeat/Build Multiple

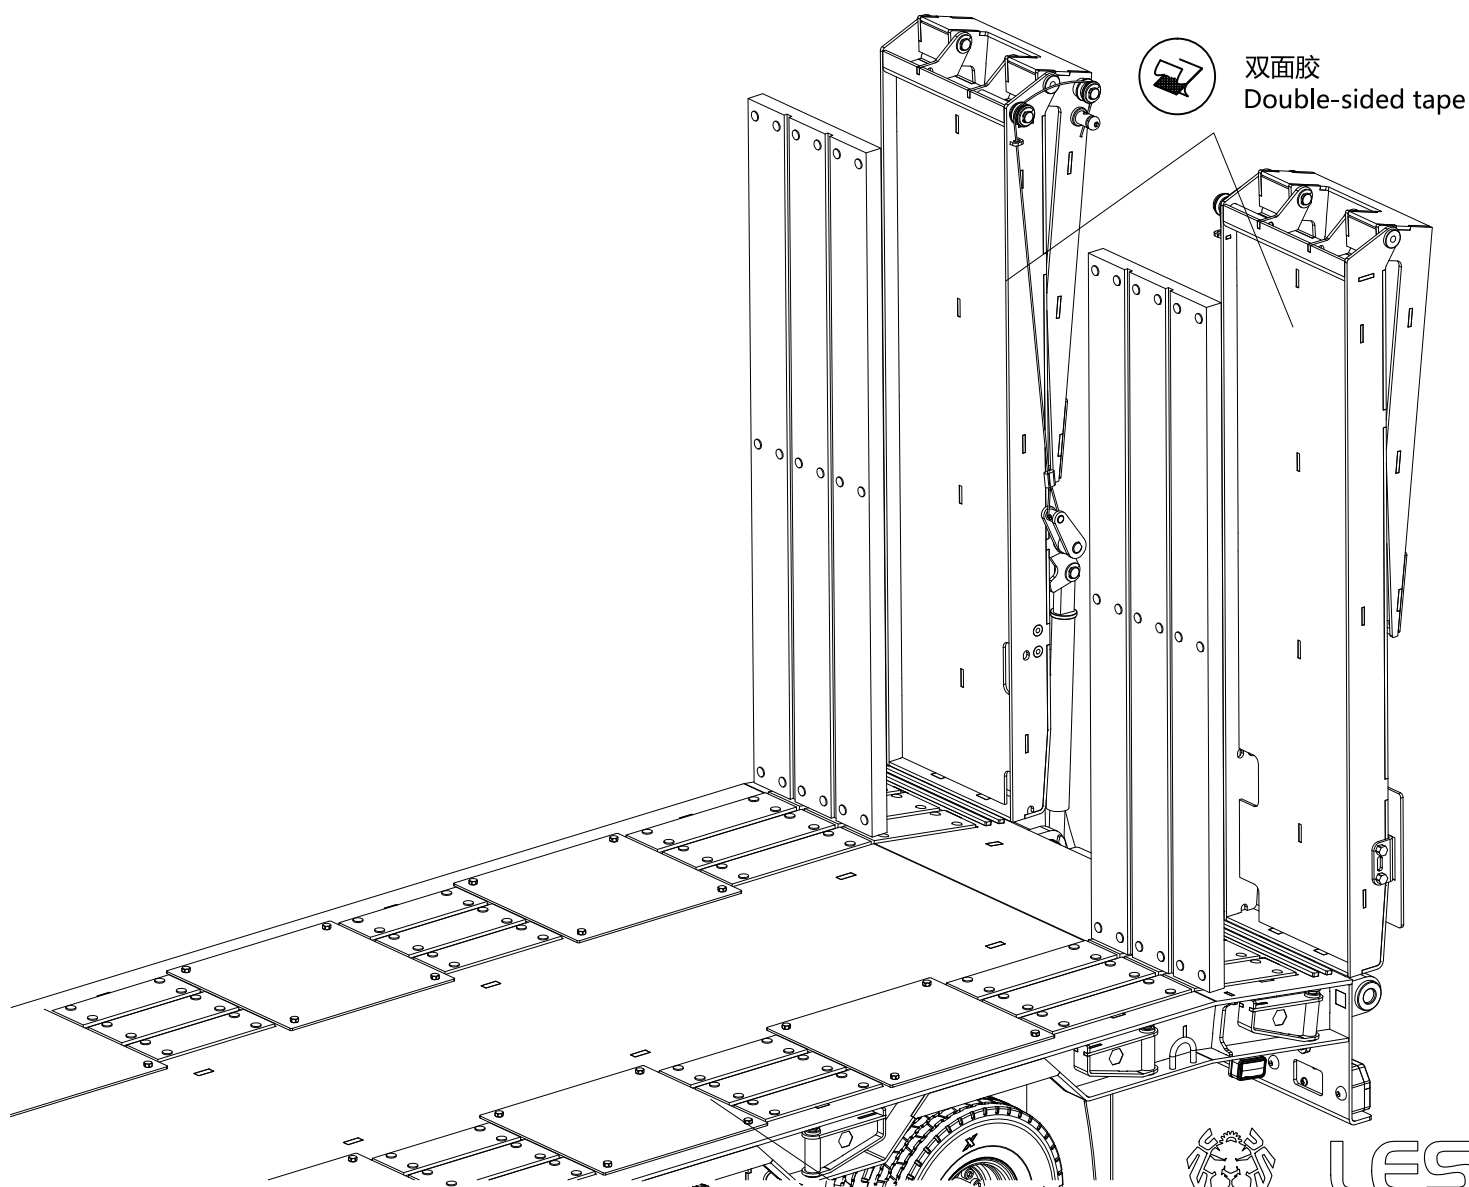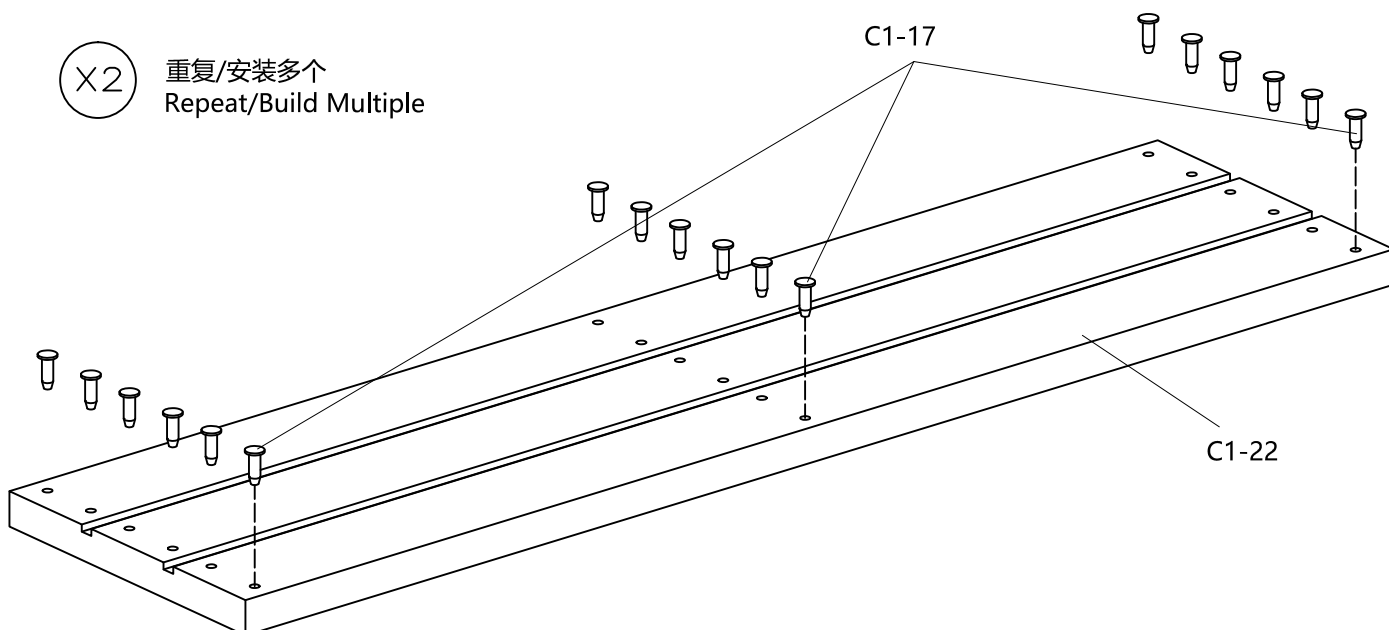

双面胶
Double-sided tape



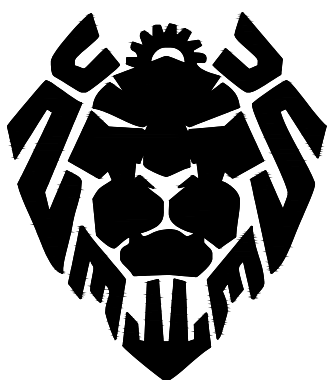

LESU

MODEL RACING

LS-A0055

2026020401

ENG0012

Designed by LESU

Website: www.rclesu.com

Tel: 15913171757

lesu168.taobao.com

Email: rclesu@163.com

Fax: 0757-86611162

Address: Nanhai District of Foshan City, Guangdong Province, Danzao Town, NanshaDevelopment Zone.

LESU Model Technology Co., Ltd.



LESU
MODEL RACING

Tecnimodel.com

Tecnimodel sari - 180 chemin de Charlieu - ZA des Massas - 07430 St Clair - 09 72 43 82 43.