
Aoue 1050

Scale Model 1/14

TecniModel.com

www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

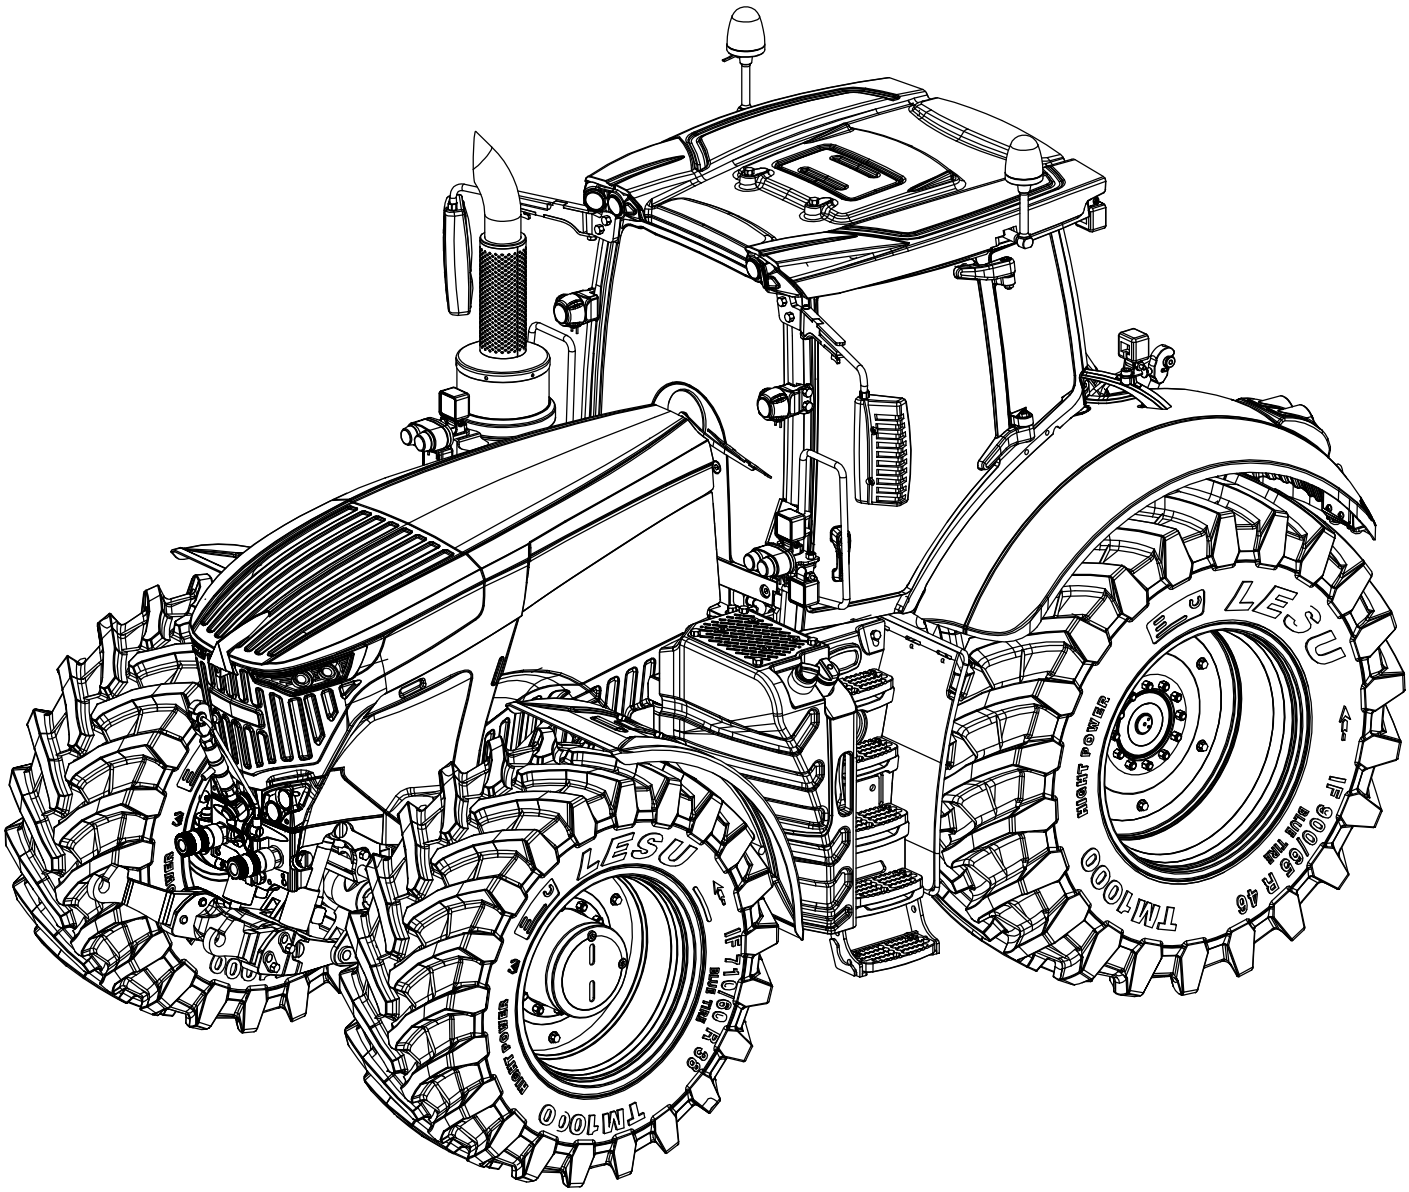

LESU
MODEL RACING

致谢

非常感谢您对雷鲨模型科技有限公司产品的信任与支持，请在使用或安装本产品之前，请先阅读本产品使用安装说明书，以便正确且安全的使用，谢谢。说明书最终解释权归雷鲨模型科技有限公司所有。如果想关注最新产品资讯请访问**www.rclesu.com**或者**lesu168.taobao.com**。或者关注微信公众号**RCLESU**

注意事项

非常重要：使用前请仔细阅读该说明书，熟悉安装流程及产品特性。错误的操作，会对产品、个人及他人财产和人身安全造成损害。这是一个复杂的**LESU**产品，不是一个玩具。所以需要具有一定的机械常识，且在安装过程中需要小心谨慎。如果不能在安全的情况下操作本产品，可能会导致产品或其他财产受到损坏。儿童在使用本产品时必须要有成年人监督。除雷鲨模型科技有限公司提供的使用说明外，不得与不兼容的组件一起使用或更改本产品本手册所包含的安全、操作和维护说明。在安装或使用前，请务必阅读并遵循手册中的所有说明和警告，以便正确操作，避免产品损坏或受到人身伤害。安装完成之后请保留此安装说明书，以供日后参考。

本产品并非玩具，不建议14岁以下儿童使用。

1、该模型由无线电信号控制，可能会受到您控制范围之外的其他因素干扰。 这种因素可能会导致失控，因此建议始终保持在安全范围之内操作，这将可以避免受到碰撞或者伤害。

2、请勿在遥控器电量低情况下操作模型。

3、严禁在车辆、人流密集等场所操作模型，请在空旷的场所下操作。

4、请仔细遵守本说明书以及您使用的其他设备（充电器，可充电电池组等）的说明和警告。

5、将产品中所包含的液体物品、小零件和电子设备放在儿童接触不到的地方，谨防吞食。

6、使用螺丝刀、美工刀或其他工具时请务必小心，防止受伤。

7、某些零件可能存在锋利的边缘，在安装及维护过程中请小心。

8、在操作模型过程中请遵循以下步骤，否则将可能导致失控等事故。

(1)首先将模型放置盒子或者架子上，使模型的车轮或者履带不接触地面。

(2)打开遥控器。

(3)打开接收器。

(4)连接电池。

关闭的顺序相反。

(1)断开电池。

(2)关闭接收器。

(3)关闭遥控器。

9、在操作过程中请勿触摸旋转中的零件，例如车轮、齿轮、轴等零件，否则可能会夹住手指、头发或者衣服，从而导致事故的发生。

10、电池、电机散热器等在使用过后温度可能会升高，请先等待冷却之后再进行拆卸。

11、在电子产品接线时需要注意绝缘，否则可能引起短路，导致产品损坏或人员受伤。

12、模型使用螺丝螺母规格较小，在安装过程中请注意用力大小，防止拧断螺丝，导致产品报废。

NOTICE

All instructions, warranties and other collateral documents are subject to change at the sole discretion of LESU Model Technology Co.,Ltd.

LESU Model Technology Co., Ltd For up-to-date product literature，vsit www.rclesu.com or lesu168.taobao.com and click on the products tab for this product.

SAFETY PRECAUTIONS AND WARNINGS

WARNING: Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury. This is a sophisticated LESU Model Technology Co., Ltd product and NOT a toy. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this Product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. Do not use with incompatible components or alter this product in any way outside of the instructions provided by LESU Model Technology Co., Ltd.

This manual contains instructions for safety, operation and maintenance. It is essential to read and follow all the instructions and warnings in the manual, prior to assembly, setup or use, in order to operate correctly and avoid damage or serious injury. Please keep all instruction information for future reference


Age Recommendation: Not for Children under 14 years. This is not a toy.

1、**This model is controlled by a radio signal subject to interference from many sources outside your control. This interference can cause momentary loss of control, so it is advisable to always keep a safe directions around your model as this margin will help avoid collisions or injury.**
2、**Never operate your model with low transmitter batteries.**
3、**Always operate your model in open spaces away from full-size vehicles, traffic and people.**
4、**Carefully follow the directions and warnings for this and any optional support equipment(chargers, rechargeable battery packs, etc.)you use.**
5、**Keep all chemicals, small parts and anything electrical out of the reach of children.**
6、**Exercise caution when using tools and sharp instruments.**
7、**Take care during maintenance as some parts may have sharp edges.**
8、**Always follow the correct R/C model turning on/shutting down procedures outlined below. or R/C model may run out of control resulting in a serious accident.**
   (1)Place R/C model on a box or a stand so that its wheels do not contact the ground.
   (2)Switch on transmitter.
   (3)Switch on receiver.
   (4)Connect running battery.
   Opposite sequence for shutting down R/C model.
   (1)Disconnect running battery.
   (2)Switch off receiver.
   (3)Switch off transmitter.
9、**never touch any rotating parts such as wheels, shafts or gears as your finger, hair, clothes, etc. may get caught leading to serious injury.**
10、**battery motor and heat sink become extremely hot after use allow parts to cool before re-moving.**
11、**take maximum care in wiring connecting and insulating cables.**
12、**The model uses small screws and nuts. Please pay attention to the amount of force during the installation process to prevent the screw from being broken and the product will be scrapped.**

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87
LESU MODEL RACING

安装前请准备下列物品(以下工具或设备需要自备)
items required(Not included in this kit)

安装工具
Tools recommended

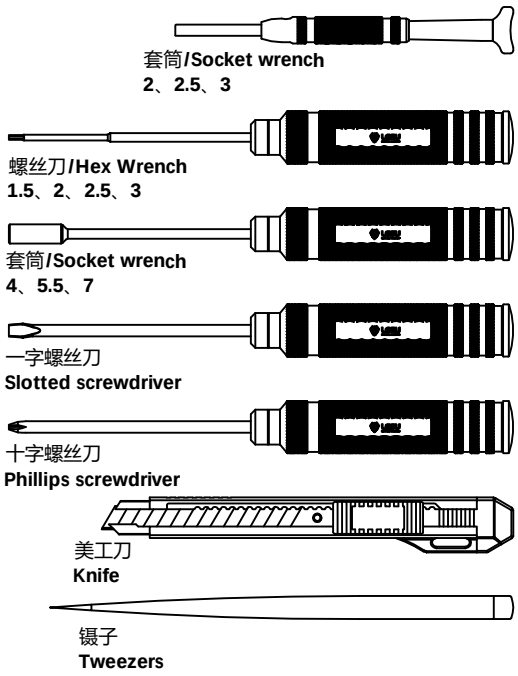

套筒/Socket wrench
2、2.5、3

螺丝刀/Hex Wrench
1.5、2、2.5、3


套筒/Socket wrench
4、5.5、7

一字螺丝刀
Slotted screwdriver


十字螺丝刀
Phillips screwdriver

美工刀
Knife


镊子
Tweezers

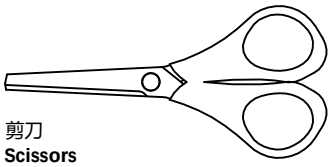

剪刀
Scissors

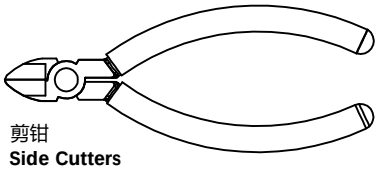

剪钳
Side Cutters

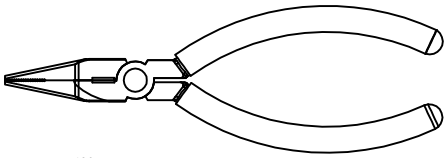


尖嘴钳
Needle-Nose Pliers



液压油
Hydraulic oil
根据产品功能确认是否需要准备液压油
Confirm whether the product needs to prepare hydraulic oil




快干胶
Instant Adhesive




螺丝胶
Screw Adhesive

电子产品(图片仅供参考)
Electronics(The image is only a reference)

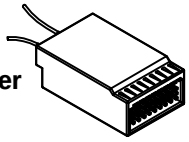


接收/Receiver

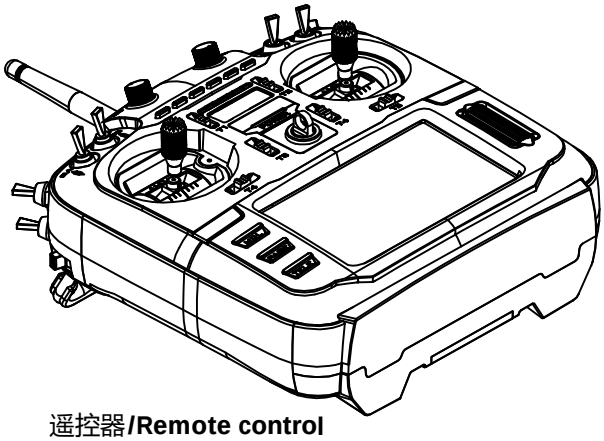

遥控器/Remote control

电池/Battery

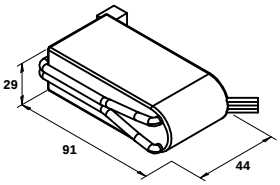

标准 3S LiPo
Standard 3S LiPo

尺寸/size
29×91×44

有关遥控器和接收器的选择，请咨询您当地的经销商。
For remote control and receiver selection, please consult your local distributor.

如何粘贴水贴

How to apply decals

如果产品中包含水贴，请参照以下步骤进行操作

The decals used for this model kit are particular, Please follow the instruction below when applying decals.

首先用美工刀裁剪出对应的形状。

Cut out the decal into the desired shape by scissors and cutter.

将裁剪好的水贴纸放入清水中**10-20**秒。

Dip the decal in water for 10 to 20 seconds.

用镊子将水贴纸从白板上滑出，贴在产品上，并调整好位置，完成后用软布将贴纸下的水渍和气泡擦除。

Put the decal on the desired place and slide it gently from its backing sheet by tweezers.

Adjust the decal position and dry excess water with a soft cloth.

在组装过程中请注意以下标志

Please pay attention to the following signs during the assembly process


加入润滑油 /润滑脂
Inject Lubricating oil / grease


加入液压油
Inject hydraulic oil


使用螺丝胶安装
Use Screw Adhesive


使用快干胶安装
Use Instant Adhesive


双面胶
Double-sided tape


喷漆
spray paint


该位置禁止喷漆
Don't spray paint


修剪
CUT/Trim


特别注意
Pay Special Attention


确保零件安装后能自由活动
Ensure Free Movement


确保零件安装后能自由旋转
Ensure Free Rotation


保持合适的方向
Ensure Proper Orientation


侧视图
Side Shown


可选装零件
Choose one


以同样的方式组装另一侧零件
Assemble Other Side the Same


重复/安装多个
Repeat/Build Multiple


不需要全部拧进
Screw Partially


不要过度拧紧
Don't Over Tighten/Snug Tight


拧紧
Tighten


推进/压入
Push on

其他注意事项，请咨询您当地的经销商。

For other precautions, please consult your local distributor.

关于雷鲨模型科技有限公司售后与服务政策

1、质量问题一年内由雷鲨模型科技有限公司全免费保修（由雷鲨模型科技有限公司承担邮费，用户需提供保修卡及购买凭证，缺一不可。）

2、人为损坏或正常使用磨损根据实际情况联系雷鲨模型科技有限公司进行售后，往返运费由买家承担。

3、二手购买或者转赠他人的模型车和配件等，雷鲨模型科技有限公司原则上给予保修，但是需要提供一手人购买凭证。

4、售后与服务政策条例最终解释权归雷鲨模型科技有限公司所有。

LESU Model Technology Co., Ltd. After sales and service

1、The quality problem is guaranteed by LESU Model Technology Co., Ltd. within one year. (LESU Model Technology Co., Ltd. bears the postage, users need to provide a warranty card and proof of purchase, indispensable.)

2、Artificial damage or normal wear and tear according to the actual situation, contact LESU Model Technology Co., Ltd. for after-sales, the round-trip freight is borne by the buyer.

3、LESU Model Technology Co., Ltd. provides warranty for second-hand purchase or transfer of other model cars and accessories. However, it is necessary to provide first-hand purchase certificates.

4、The final interpretation of after-sales and service policies and regulations belongs to LESU Model Technology Co., Ltd.

请咨询您当地的经销商以获取更多信息


Please consult your local dealer for more information


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


LESU
MODEL RACING

产品配置信息			
产品名称：Aoue-1050拖拉机		型号：RD-A0018	
装配情况	RTR/KIT	产品比例	1:14
产品材质	金属+塑胶	年龄标准	14+
驱动形式	四轮驱动	轴距/mm	235
产品重量/Kg	8.2	产品尺寸(L×W×H)	453.3×214×283.3
包装方式		外箱尺寸/cm	
车身电池/组	3S-锂电池　　尺寸：H29×L91×W44		
产品功能全述	1、精密液压系统：动作更协调、流畅、线性。 2、液压油路采用一体化设计，减少油管的使用。 3、配备自动回中液压转向阀，转向精准，操作更顺畅。 4、前后液压提升钩，操控更灵活、方便。 5、整机90%金属零件占比，全金属外壳机身。 6、舵机增加全新设计的保护装置功能。 7、全车38个LED灯光，2个警示灯，配备灯声组，模拟仿真声音。 8、前桥采用全新设计的双叉臂式独立悬挂系统，前后桥均配备轮边行星减速以及差速锁，可应对多种不同环境的场景。 9、配备取力器，以及预留5路液压(前置1路后置4路)、12路电路(后置拔插式)快拆通道，可升级多种属具，且预留2(前置)+1(后置)路，油路压力端接口，具有丰富的扩展性能。 10、可安装LESU多种拖挂、拖板，可加装双轮毂、轮胎，前后可安装各种属具，将打造拖拉机属具生态。 11、电调一体式无刷电机动力驱动，带行星减速，采用FOC驱动方式，具有效率高，发热小，低速扭力大、运转顺畅，运行时近乎静音的特点。 12、配备专属标号。		
	技术参数		
机身总长度/mm	436	轴距/mm	235
前轮距/mm	160.8	后轮距/mm	146
前轮胎	55/54R3	后轮胎	65/62R3.3
后轮轴到车身尾部长度/mm	105	轮胎外侧宽度/mm	214
驾驶室离地高度/mm	283.3	最小离地间隙/mm	36
液压工作站最大压力/mpa	3	换向阀通道数	7+1
最高速度	14.6m/min	液压泵数量	1
变速箱	2档	液压缸数量	5
悬挂	双叉臂式独立前悬挂	灯光	38个LED
电路扩展接头	拔插式	取力器	标配
前桥差速锁	标配	警示灯升降角度调节	手动
后桥差速锁	标配	尾勾上下调节	手动

LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

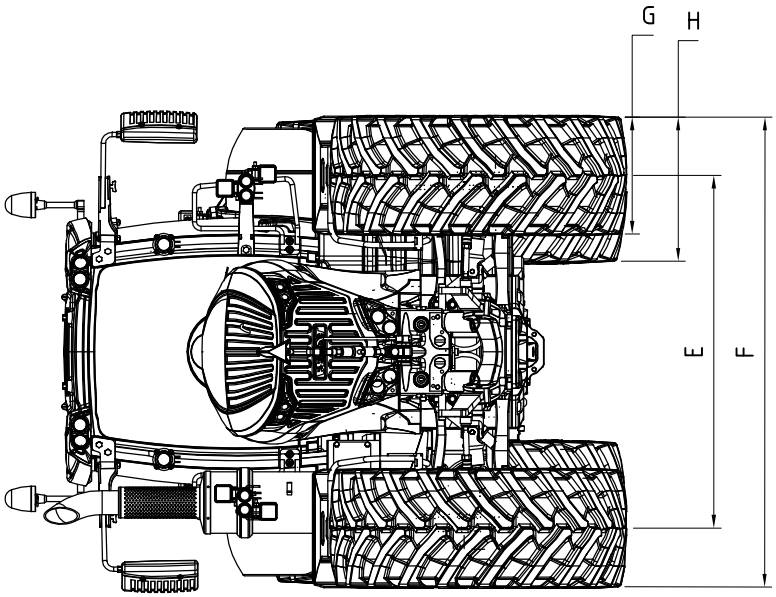

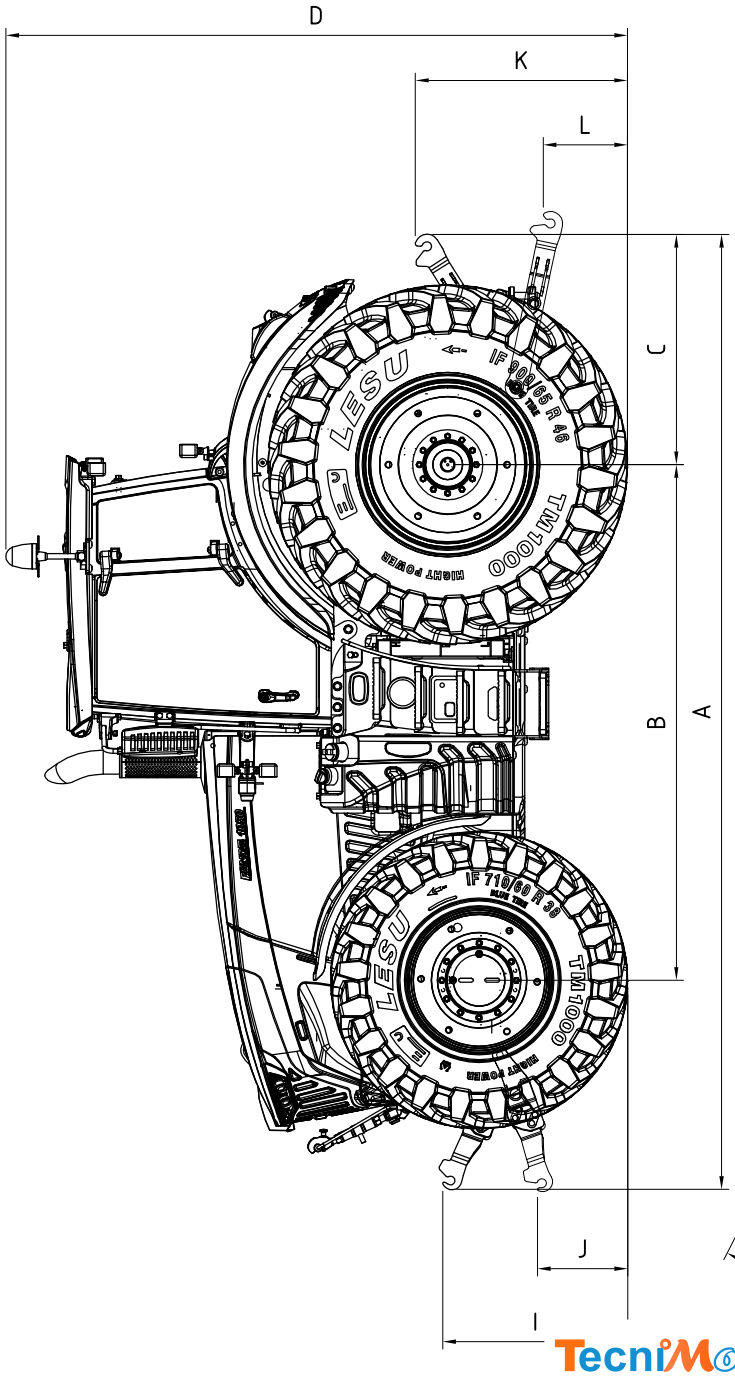

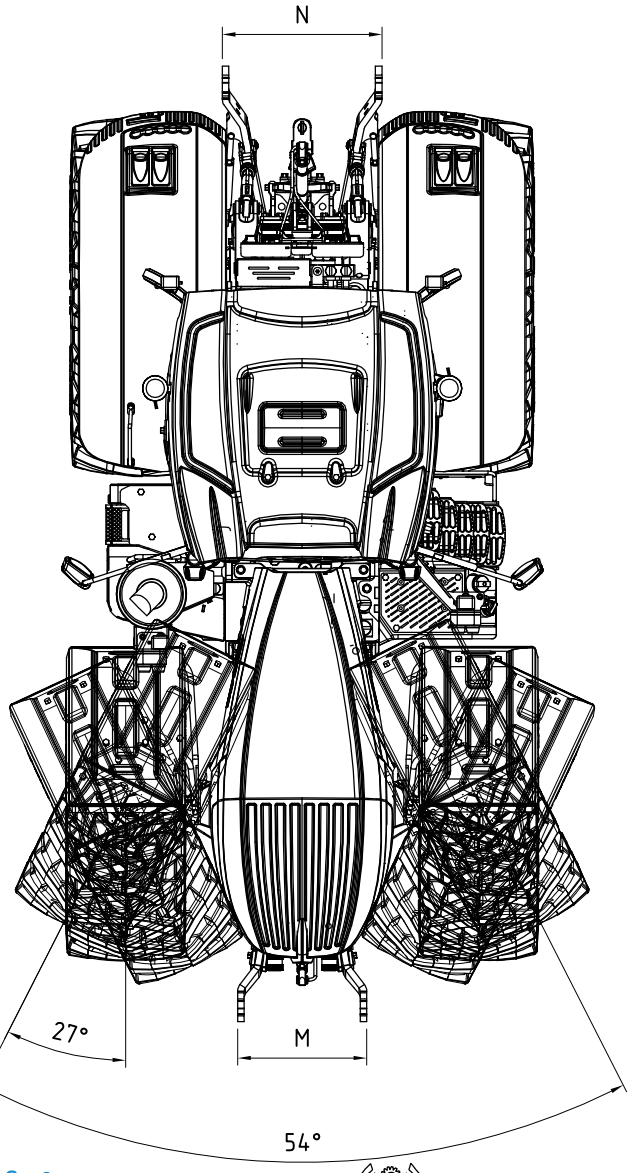

单位：mm


A.拖拉机总长度	453.3	H.后轮胎宽度	65.7
B.轴距	235	I.前提升勾最大离地高度	84.3
C.后轮到车身尾部长度	105	J.前提升勾最小离地高度	41
D.驾驶室离地高度	283.3	K.后提升勾最大离地高度	96.7
E.轨距	160.7	L.后提升勾最小离地高度	38.3
F.轮胎外侧宽度	214	M.前提升勾宽度	59
G.前轮胎宽度	53.3	N.后提升勾宽度	72.7

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87
LESU
MODEL RACING

液压系统图
Hydraulic system diagram

9、10、11、12、17、18、19、20、23、24、25、26油路为附加油路后续可与RD-A0018属件进行链接


9, 10, 11, 12, 17, 18, 19, 20, 23, 24, 25, and 26 Oil circuits are additional oil circuits that can be linked to RD-A0018 components in the future

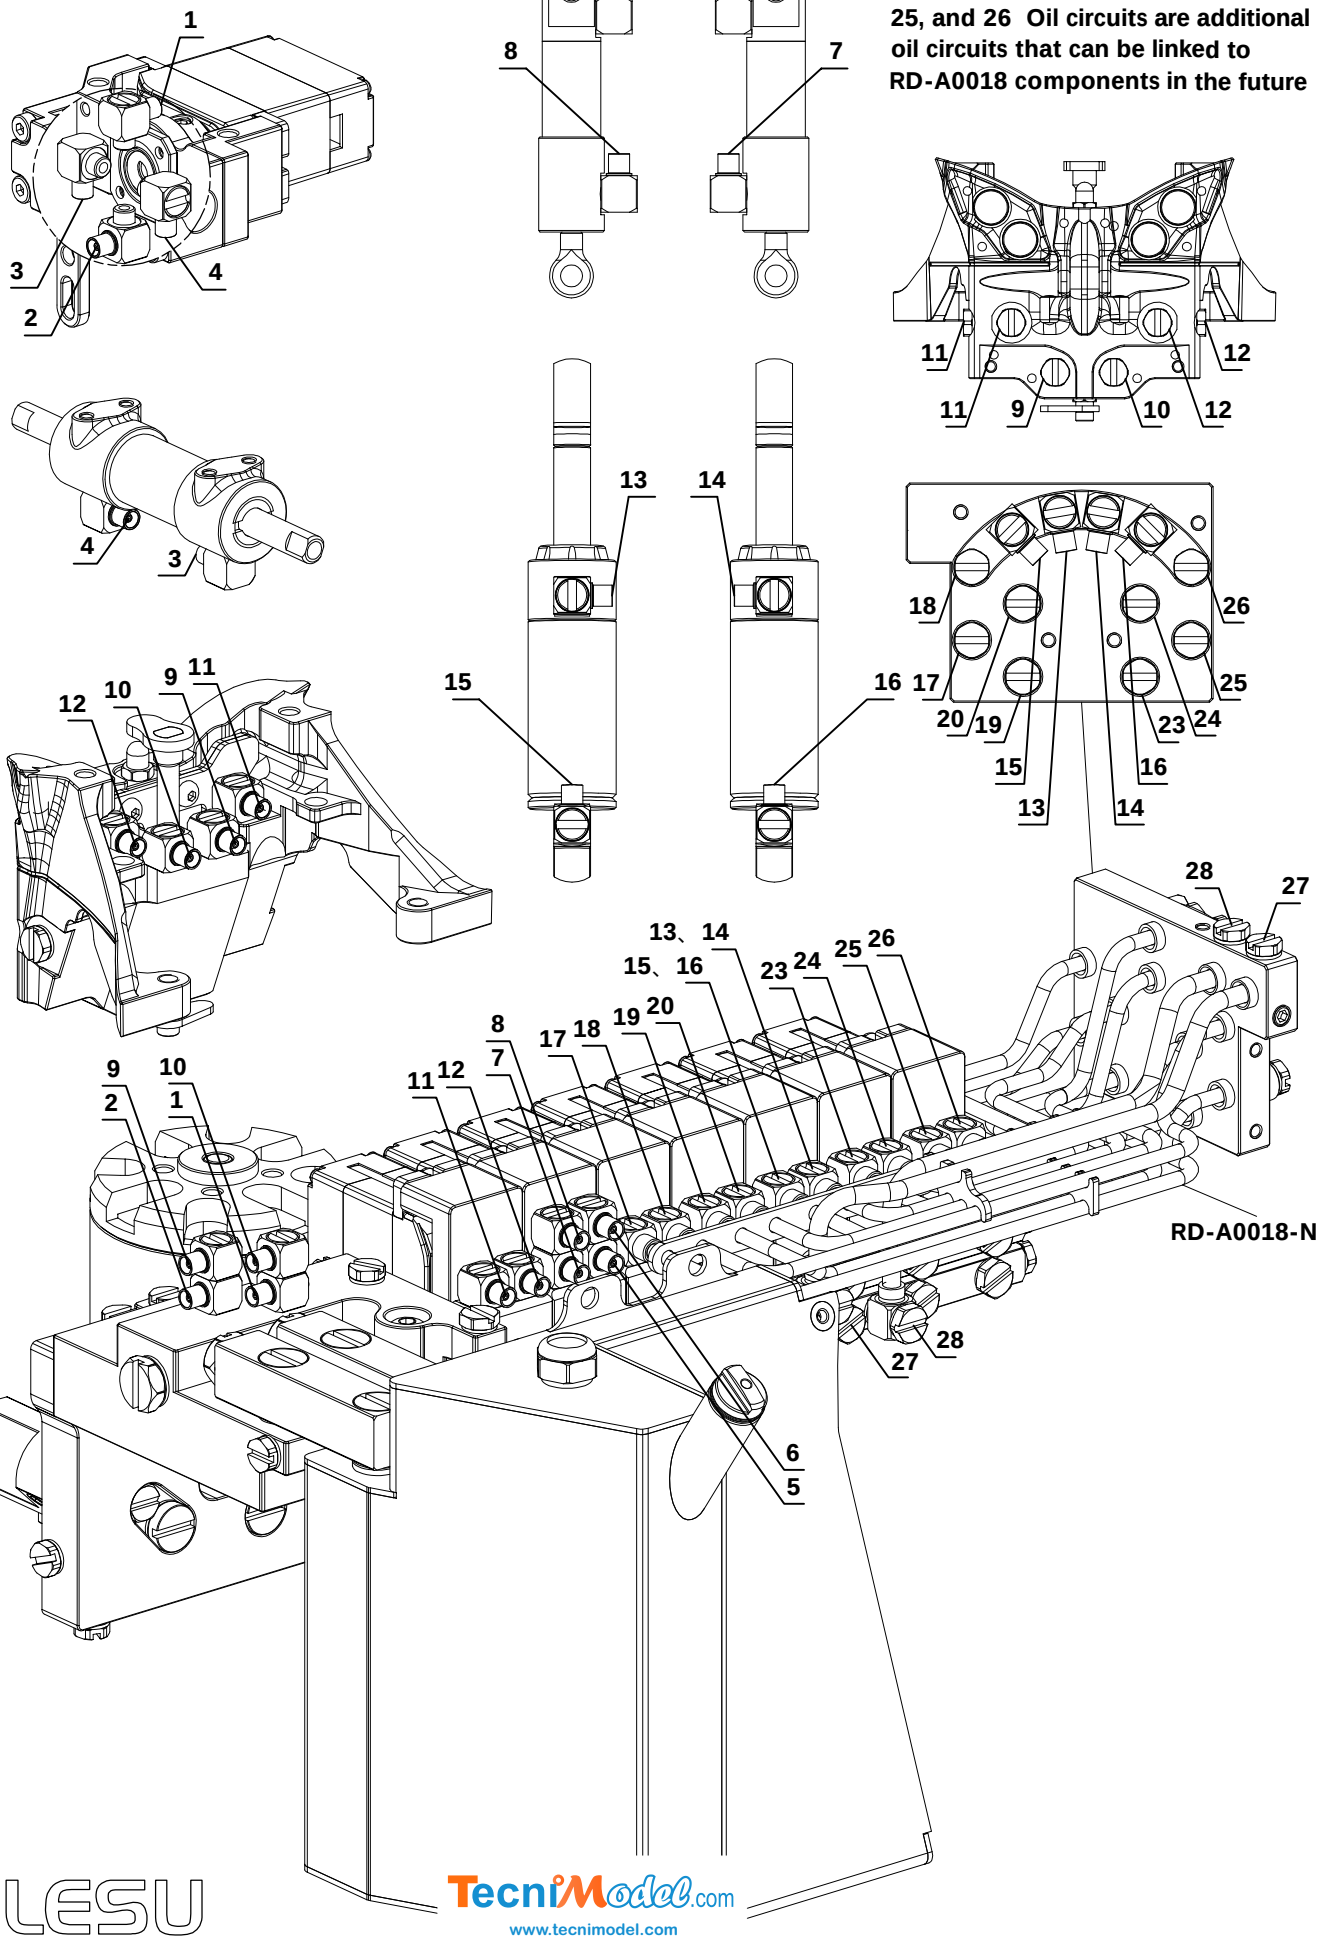

LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


液压接管示意图/Hydraulic system diagram：

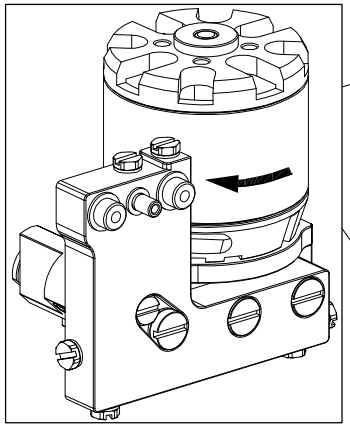

电机转动方向
Motor rotation direction

零件组装过程中请将油管按照RD-A0018-N(液压工作站)的油嘴与液压缸对应的油嘴数字相连接。


When assembling parts, please connect the oil pipe according to the nozzle number of RD-A0018-N (hydraulic workstation) and the corresponding nozzle number of hydraulic cylinder.

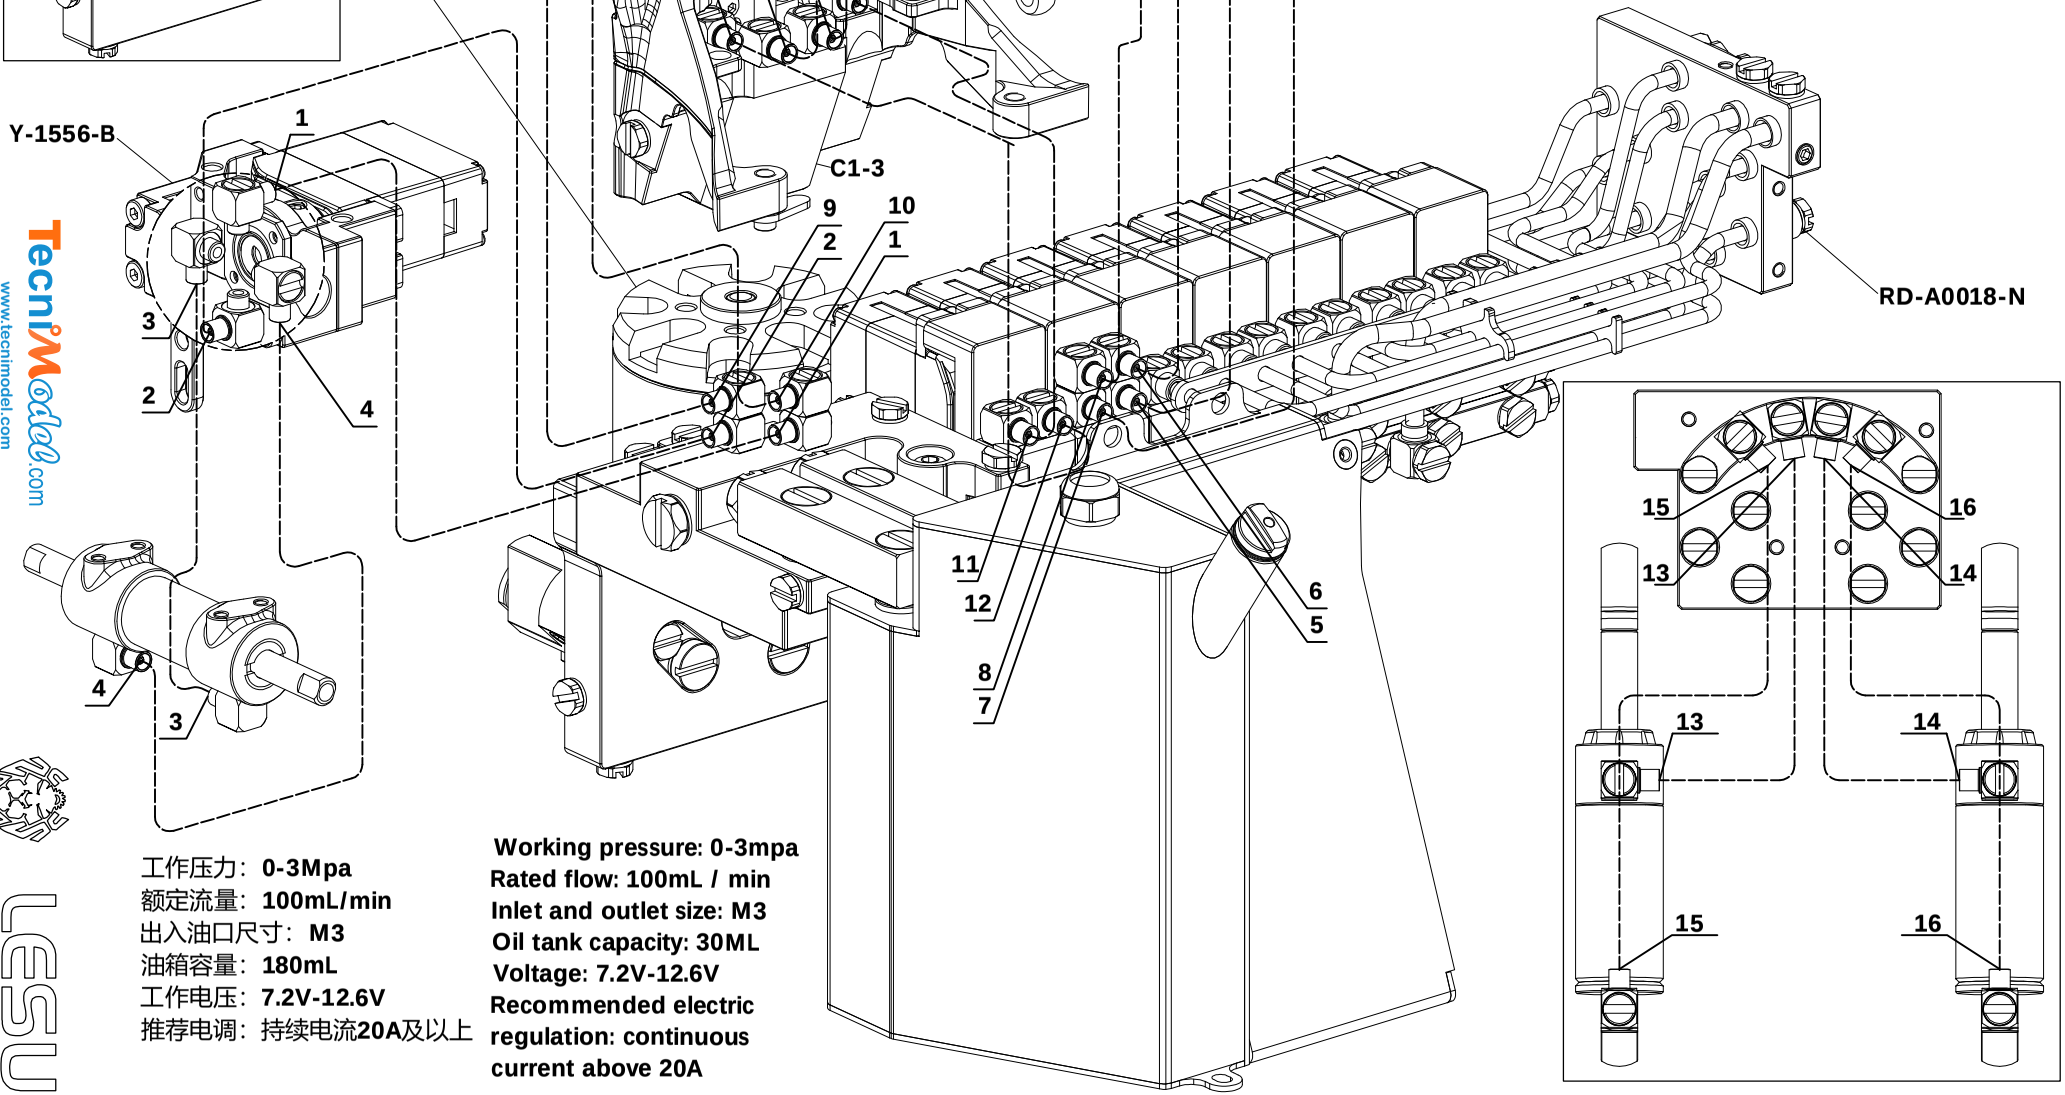

工作压力：**0-3Mpa**
额定流量：**100mL/min**
出入油口尺寸：**M3**
油箱容量：**180mL**
工作电压：**7.2V-12.6V**
推荐电调：**持续电流20A及以上**


Working pressure: 0-3mpa
Rated flow: 100mL / min
Inlet and outlet size: M3
Oil tank capacity: 30ML
Voltage: 7.2V-12.6V
Recommended electric regulation: continuous current above 20A

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87
LESU
MODEL RACING

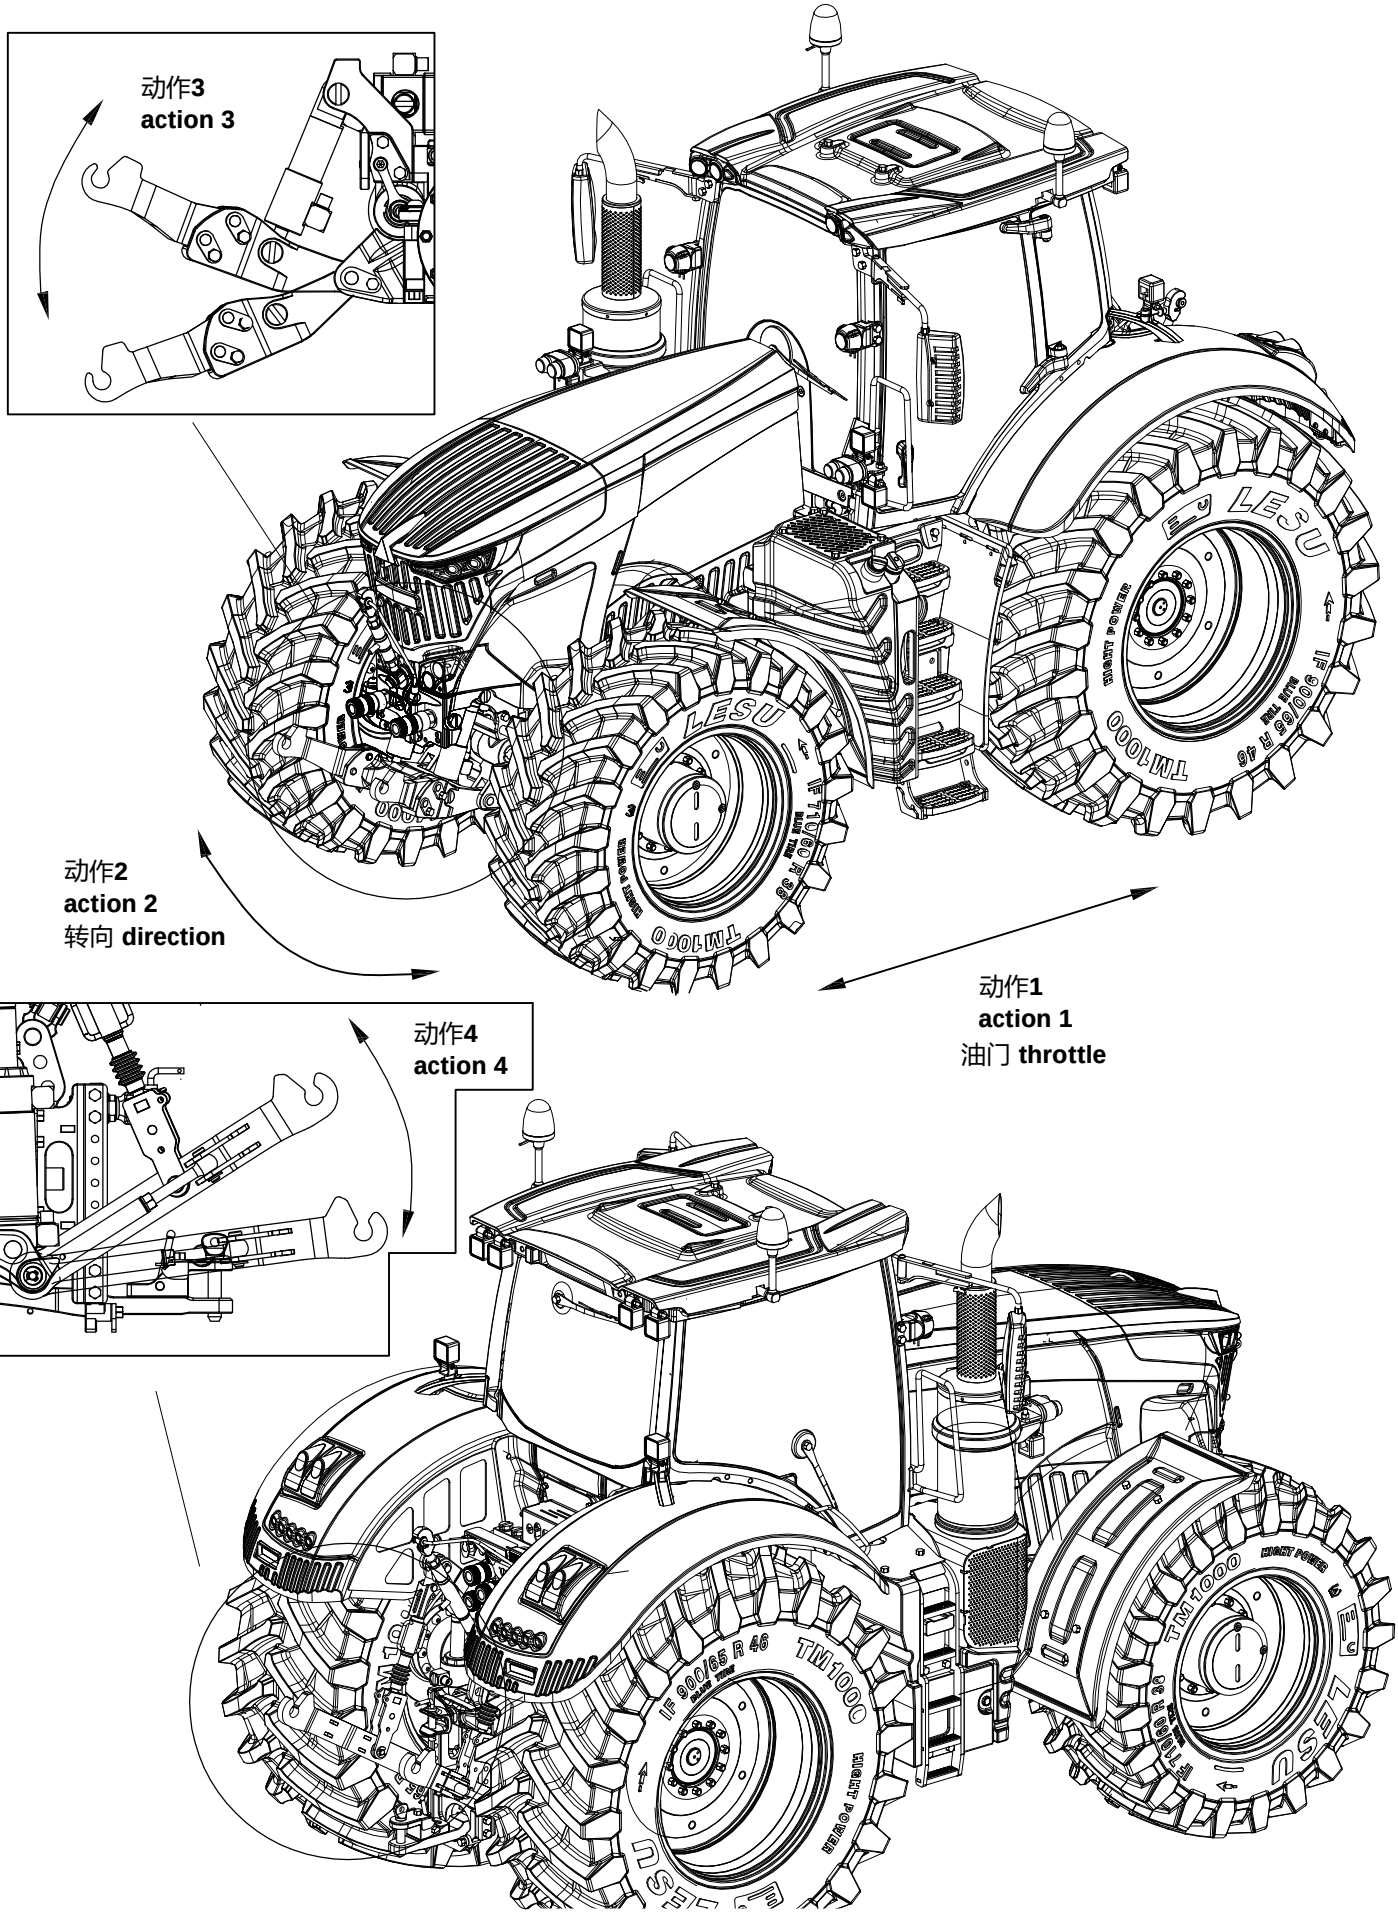


LESU
MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

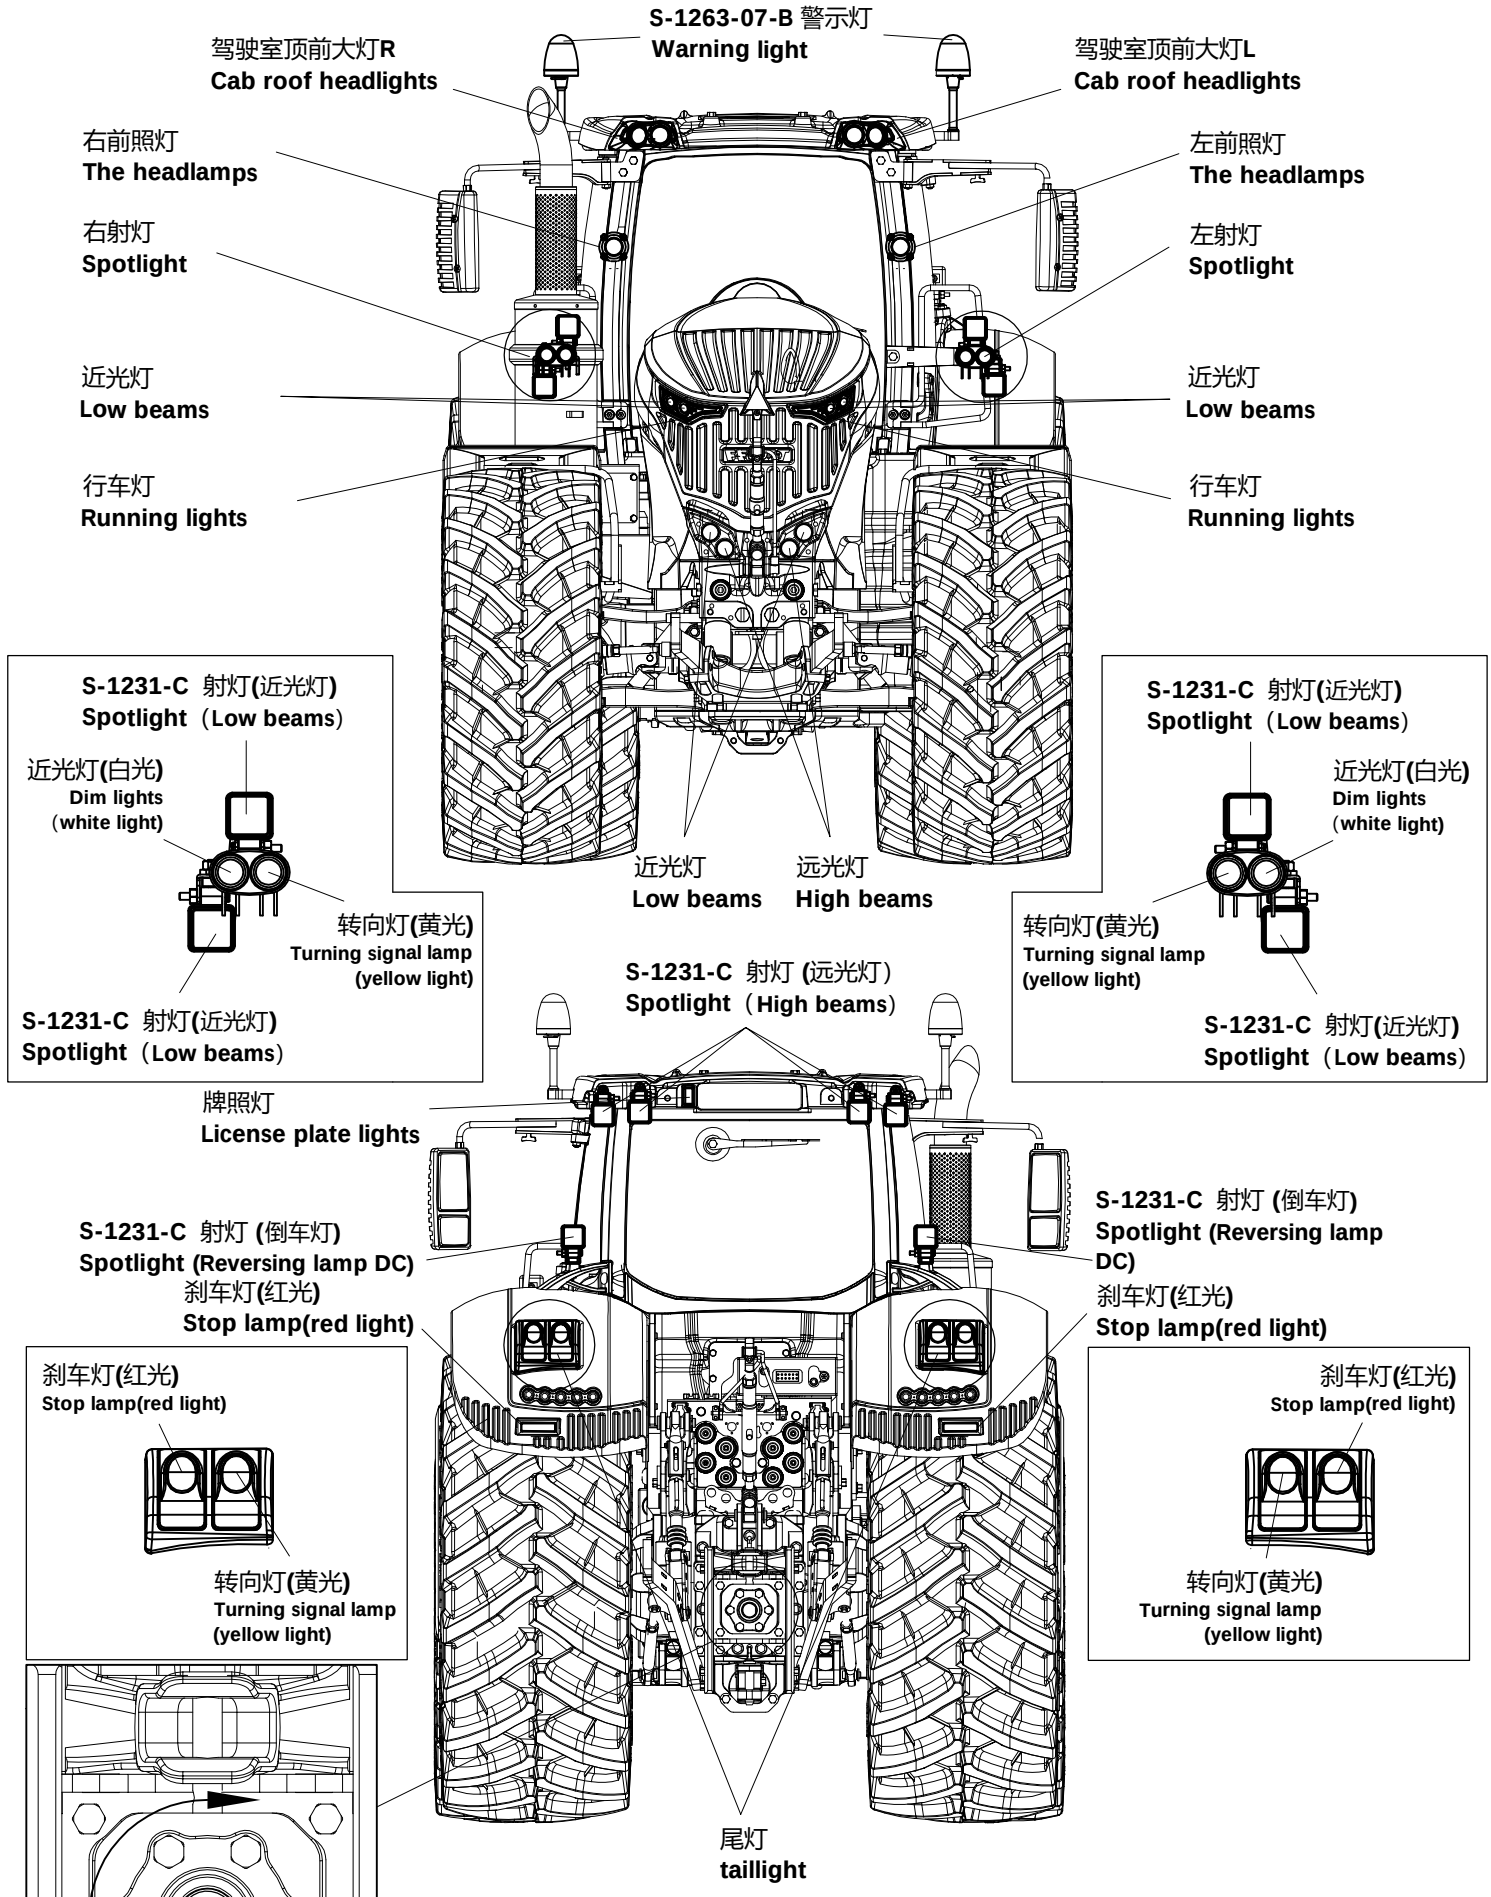


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING

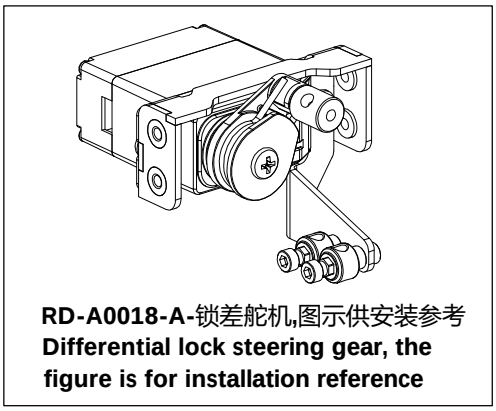


RD-A0018-A-锁差舵机,图示供安装参考
Differential lock steering gear, the figure is for installation reference

位置**1** 差速锁断开
Position 1 Differential lock OFF

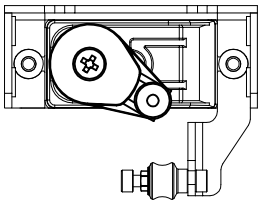

位置**2** 差速锁锁止
Position 2 Differential lock ON

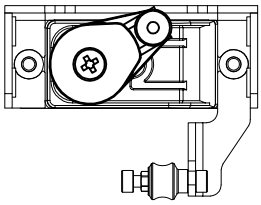

动作1：油门
(CH1)(throttle)

动作2：转向
(CH2)(direction)

动作9：锁差
(CH9)(Poor locks)
二挡开关：**1/0**
Switch: 1/0

前进
Advance

右
Right

倒车
Reversing

左
Left

动作5：换挡
(CH5)(Shift gears)
三挡开关：**1/0/2**
Switch: 1/0/2


升**(Up)**

动作4：后提升
(CH4)(Post-lift)

降**(Down)**

动作6:警示灯
(CH6)(Warning light)
二挡开关：**1/0**
Switch: 1/0

动作7：灯组
(CH7)(Light)
二挡开关：**1/0**
Switch: 1/0

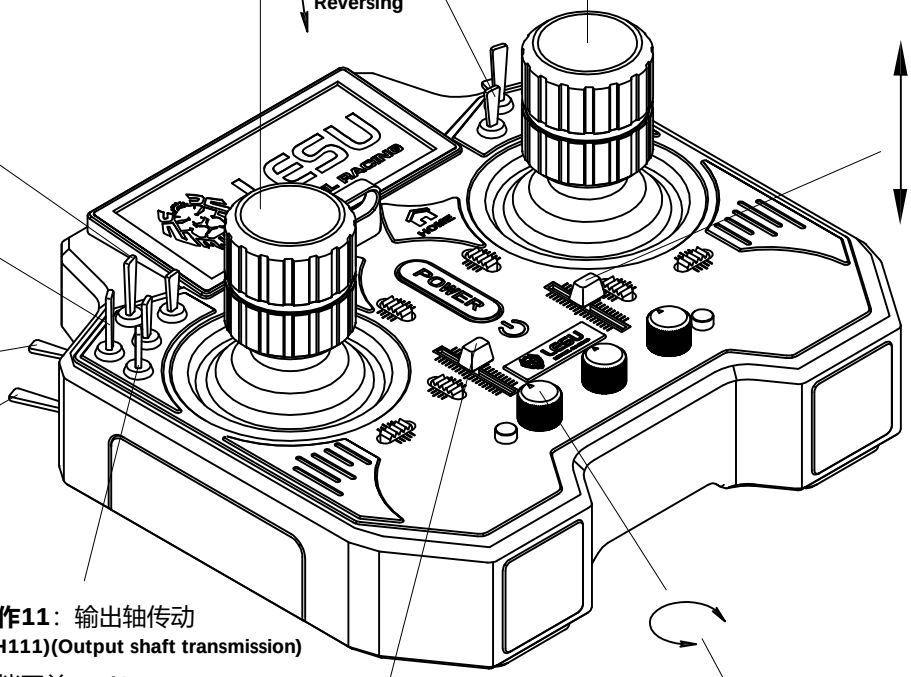

动作8:声组开启/关闭
(CH8)(Sound group on/off)
三挡开关：**1/0/2**
Switch: 1/0/2

动作11：输出轴传动
(CH111)(Output shaft transmission)
两挡开关：**1/0**
Switch: 1/0

升**(Up)**


动作10：液压泵
(CH10)(Pump)

动作3：前提升
(CH3)(Pre-lift)

遥控器/**Remote control**
遥控器不包含在发货配件内
(Not included in this kit)

LESU
MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

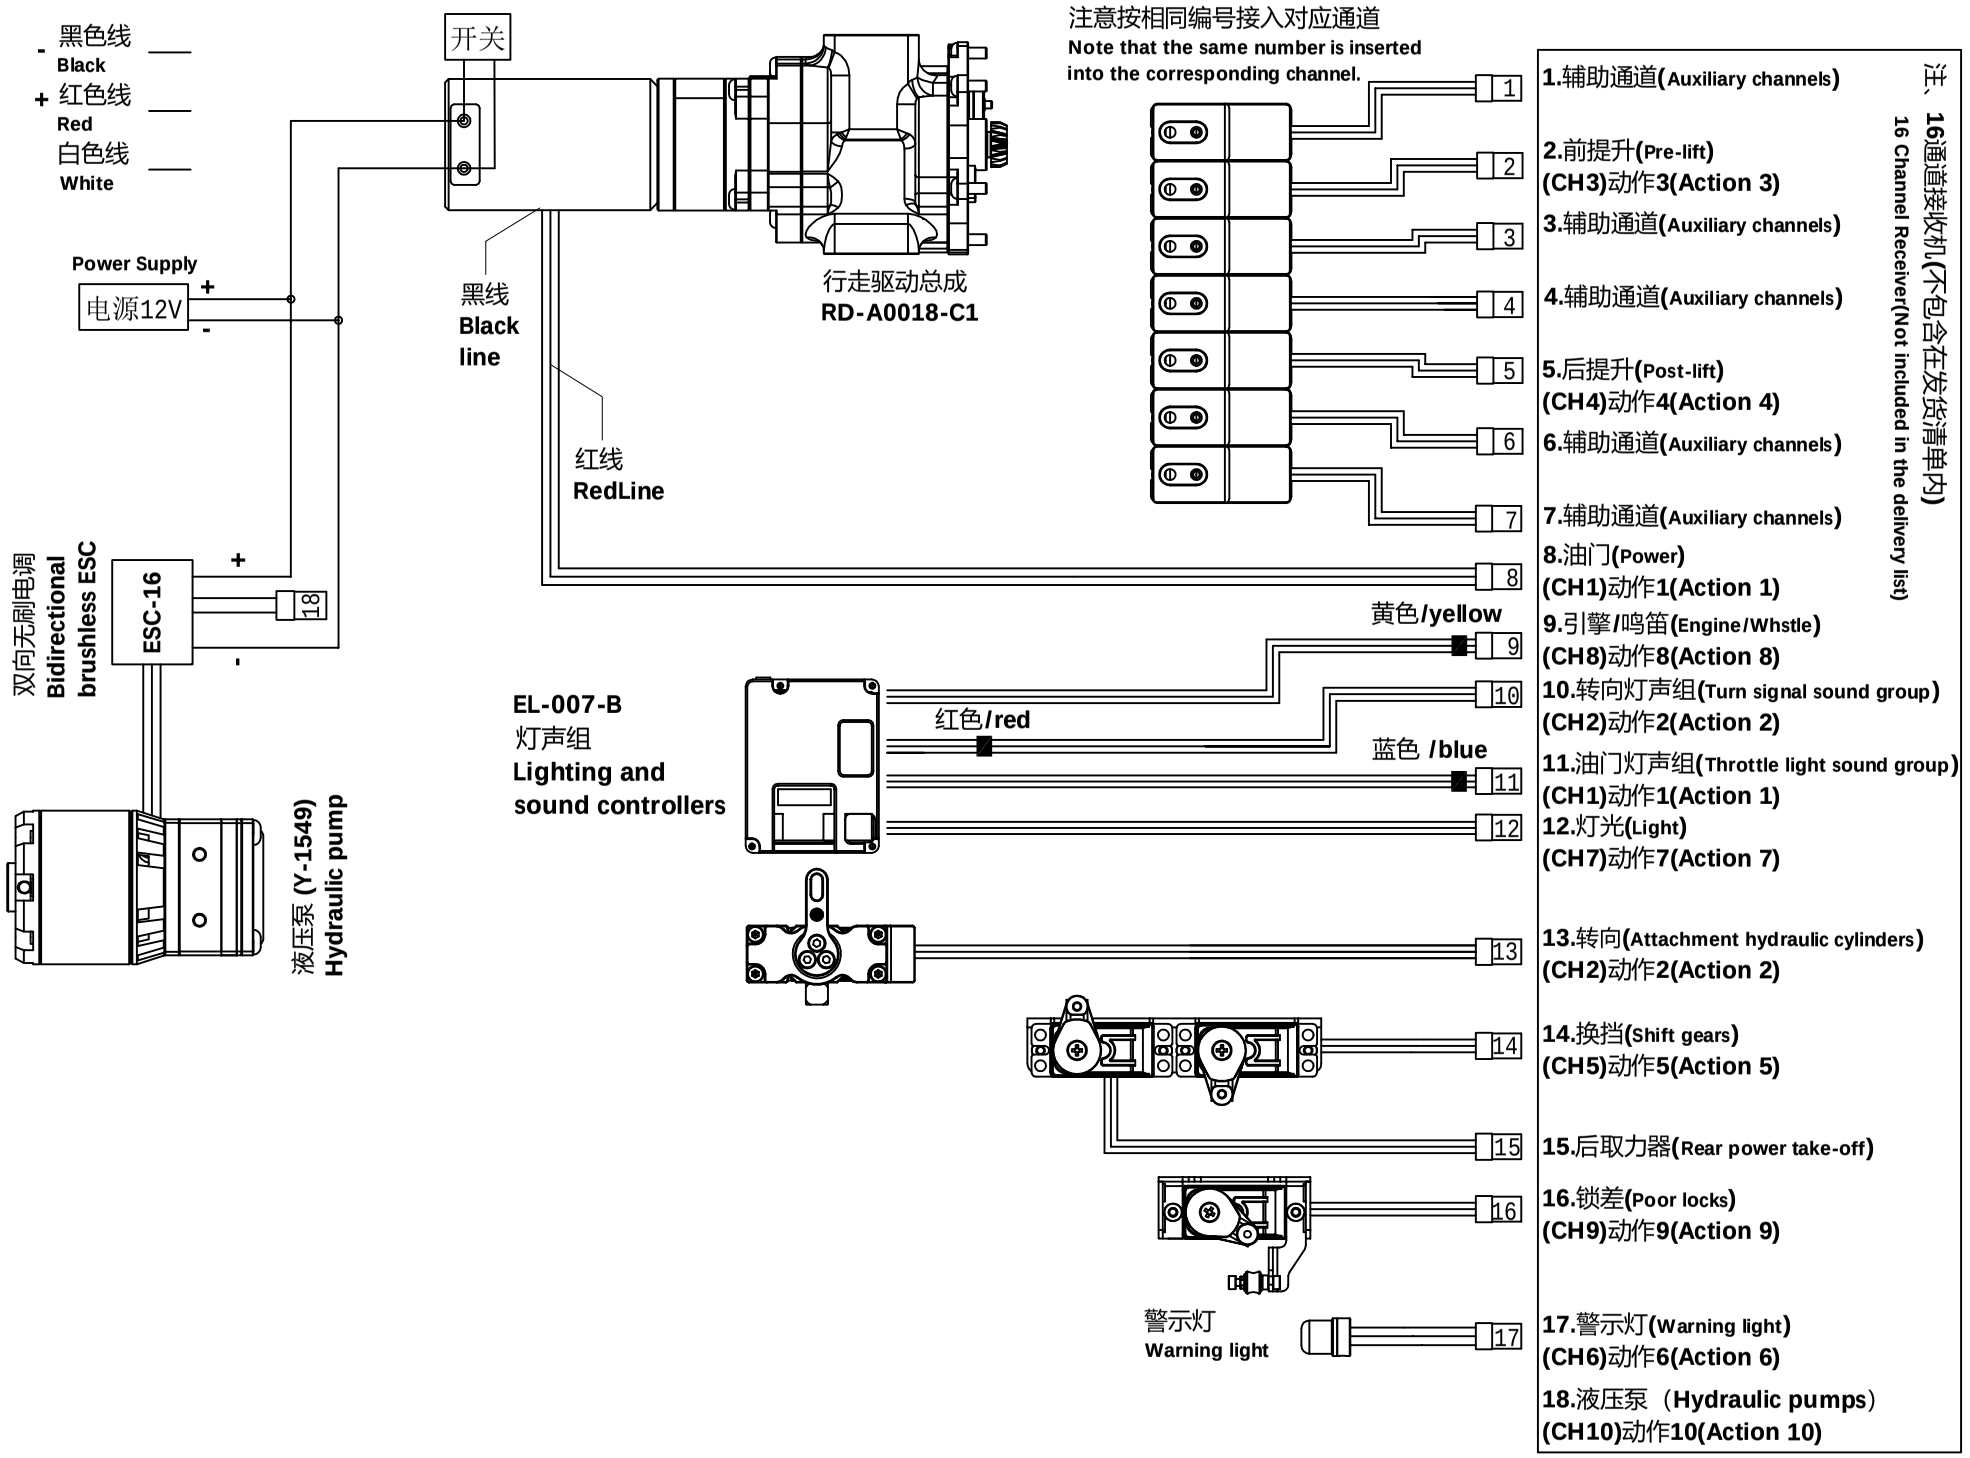


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING

电子接线图
Electronic wiring diagram

EL-007-B

灯声组/**Lighting and sound controllers**

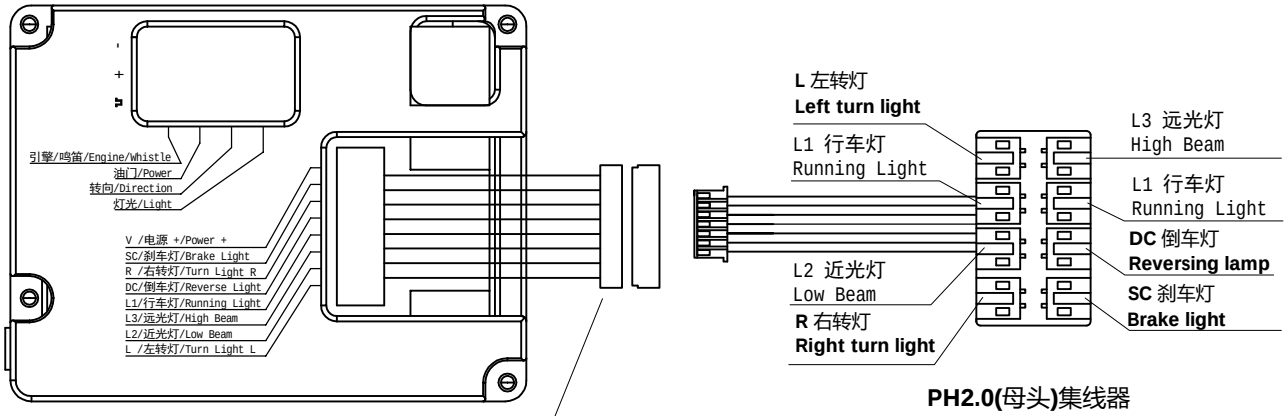

名称(name)	功能 (function)
V	电源 +/Power +
SC	刹车灯/Brake Light
R	右转灯/Turn Light R
DC	倒车灯/Reverse Light
L1	行车灯/Running Light
L3	远光灯/High Beam
L2	近光灯/Low Beam
L	左转灯/Turn Light L

PH2.0(母头)集线器
长度300mm
PH2.0 (Female) hub network
Length 300 mm

注意事项:

matters needing attention:

1.同一接口只能并联相同工作电压的灯珠。

1. The lamp beads with the same working voltage can only be paralleled in the same interface.


2.同一接口灯珠颜色不一样或会导致其中某一灯珠不亮。

2. The color of lamp beads at the same interface is not the same or one of them will not light up.


3.接口电压会随着并联的灯珠颜色或数量变化，并联灯珠数量增多，接口电压下降，单个灯珠亮度变暗。当电压降至低于灯珠工作电压，同一接口中所有灯珠将无法点亮。

3. The interface voltage will change with the color or number of parallel beads, the number of parallel beads will increase, the interface voltage will decrease, and the brightness of single lamp bead will be dimmed. When the voltage drops below the operating voltage of the lamp bead, all lamp beads in the same interface will not be able to light up.


LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

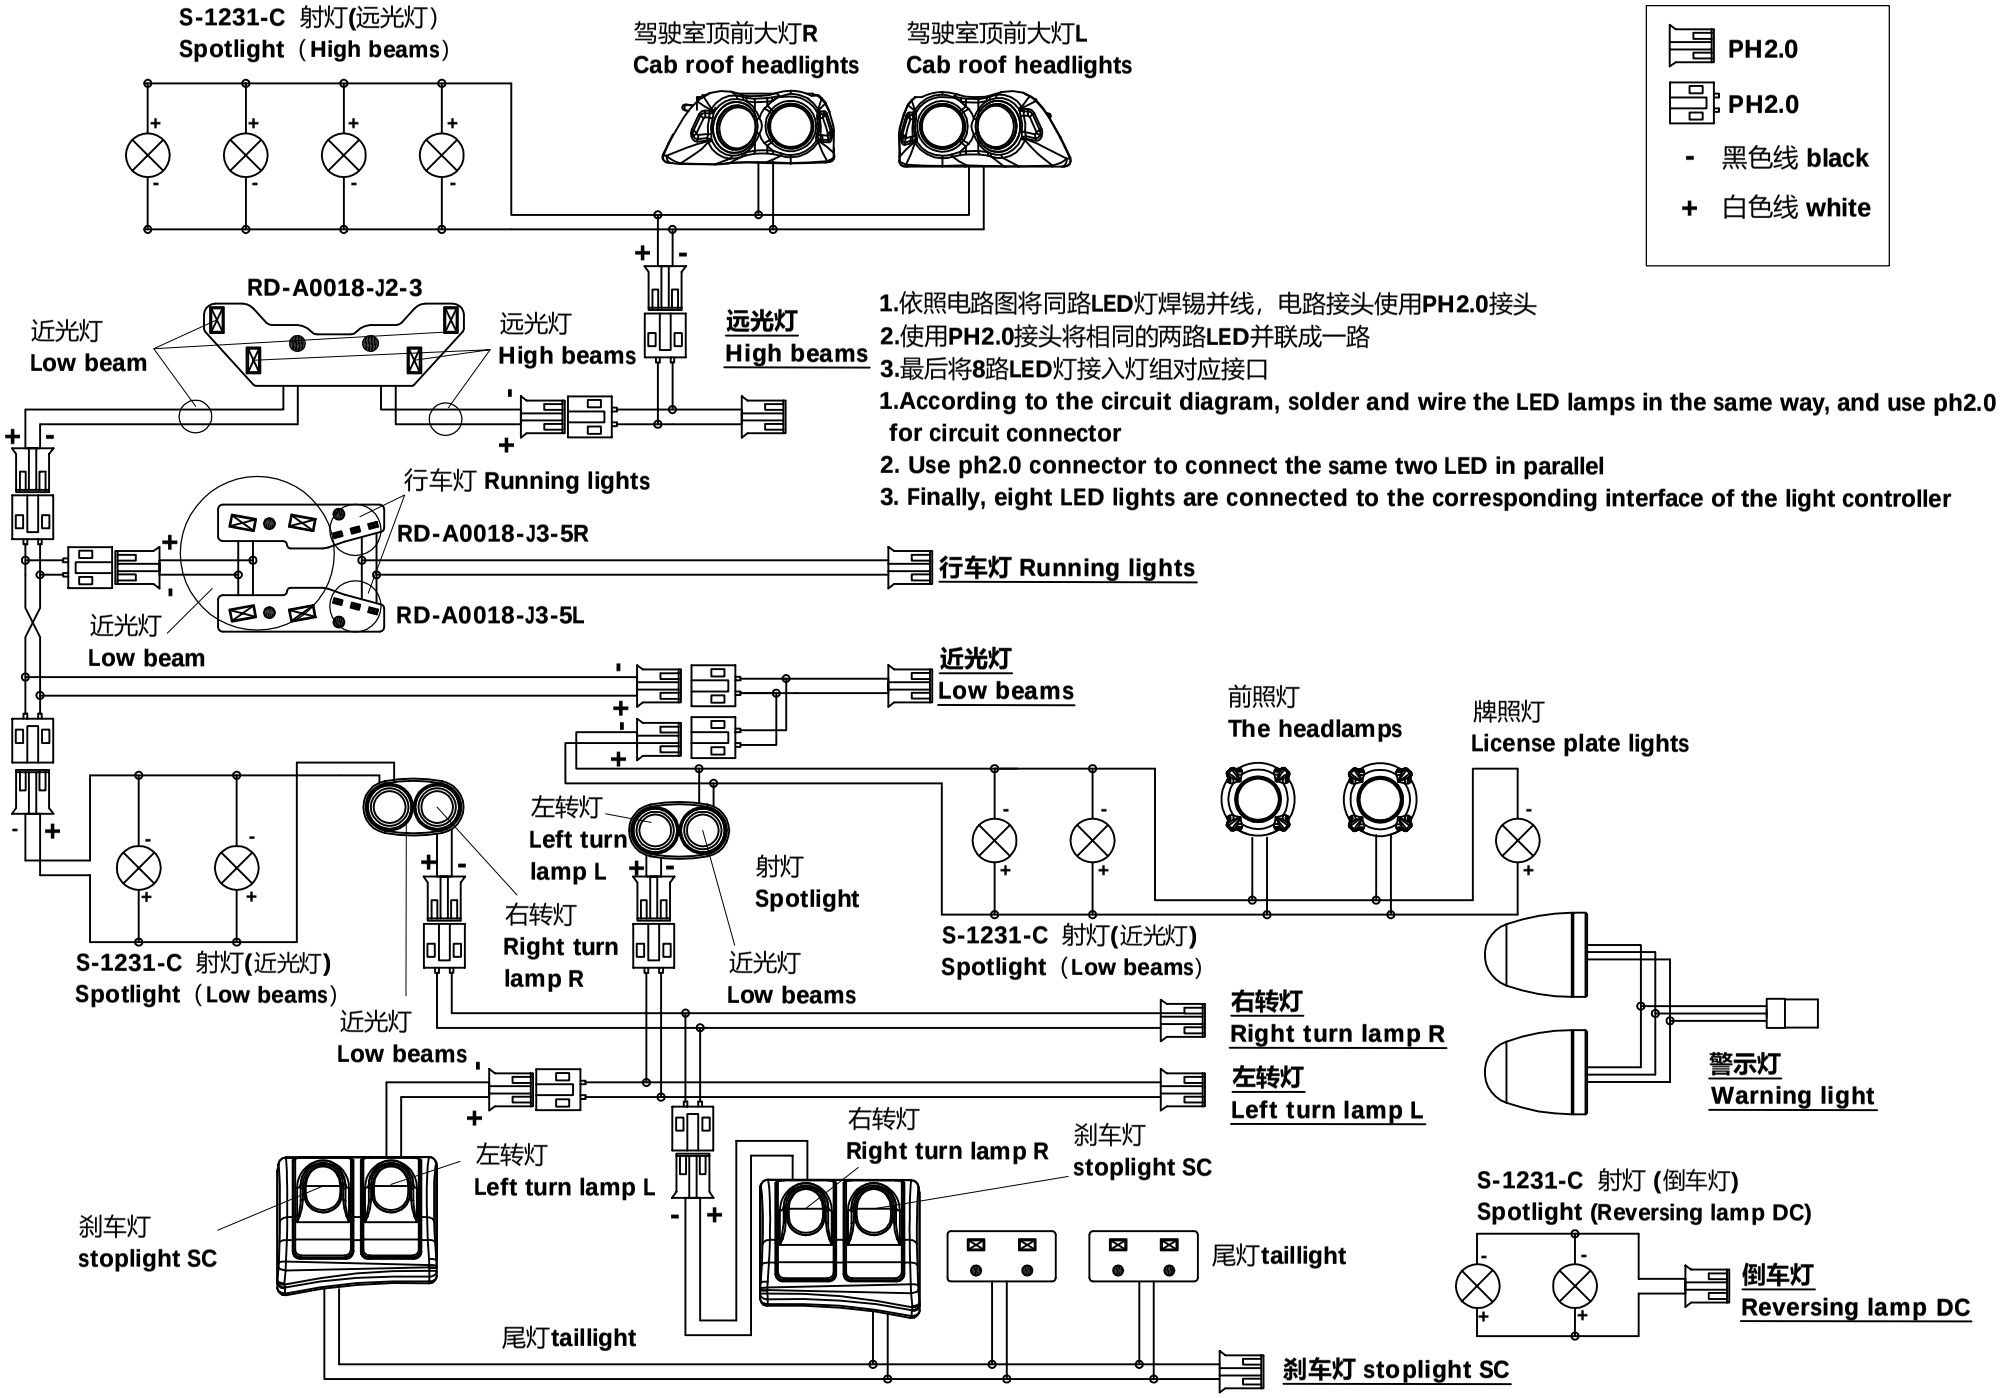


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87
LESU
MODEL RACING

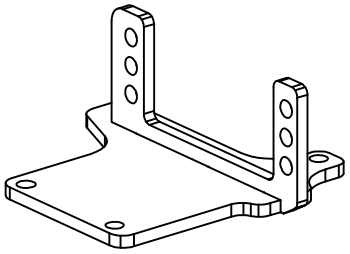

A1-1 □

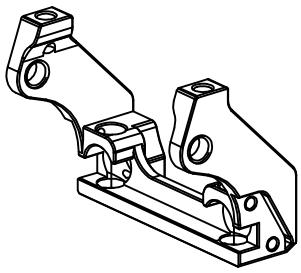

A1-3 □

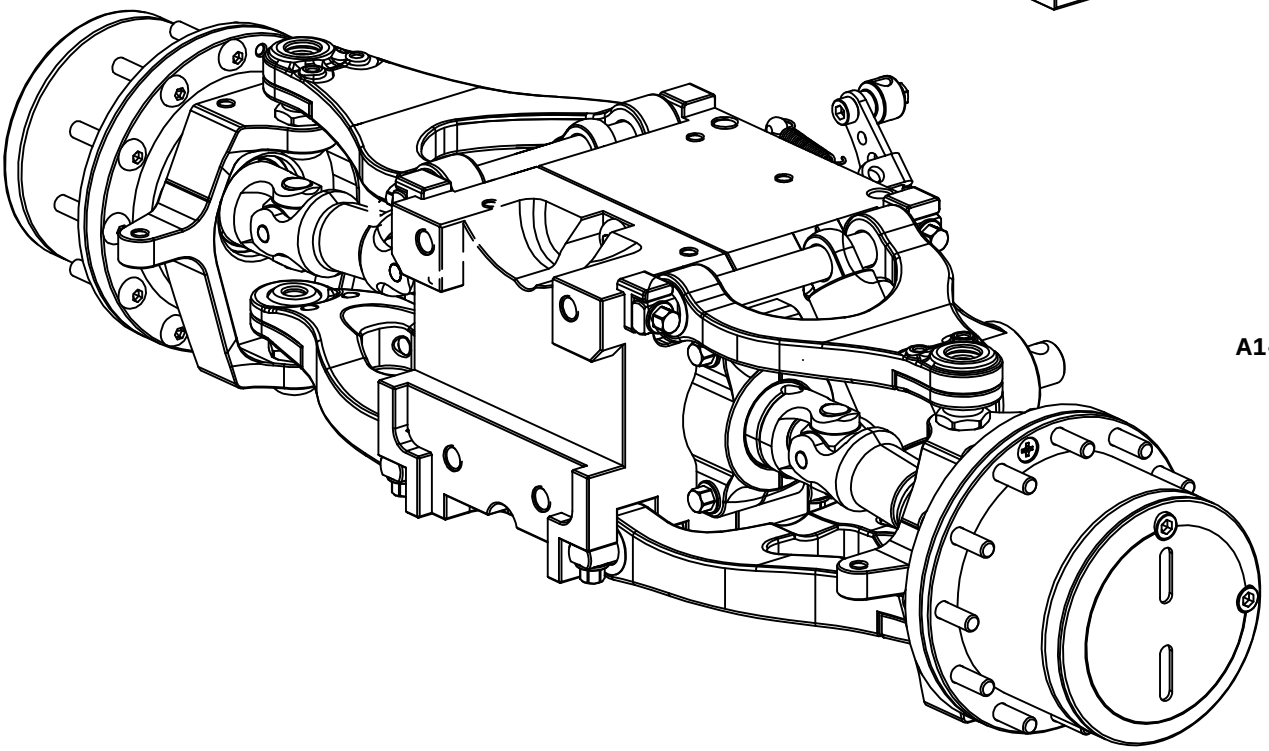


A1-2 □




A1-5 ×2□



A1-6 ×2□




A1-8 □

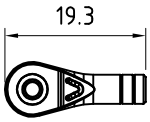


A1-9 ×2□
(An-0001-A-2.5)




A1-10 ×2□




A1-11 ×2□

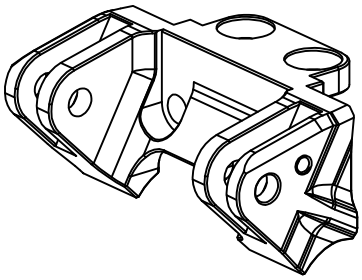


A1-12 □

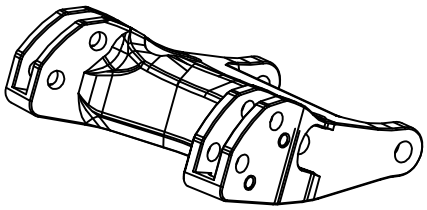


A1-13 □

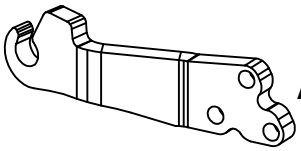

A1-18L □

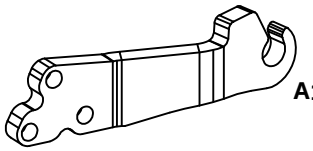


A1-18R □

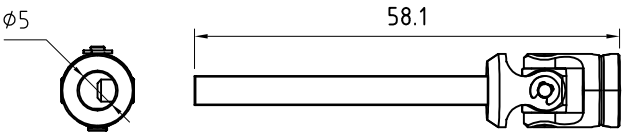


A1-20 □
(内孔ϕ5)

LESU
MODEL RACING


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

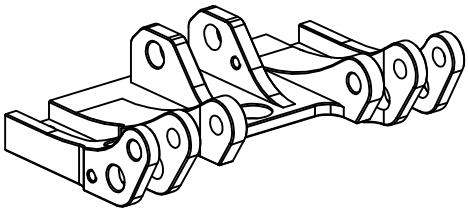


A1-25 ☐

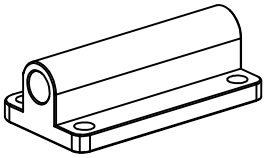


A1-27 ☐

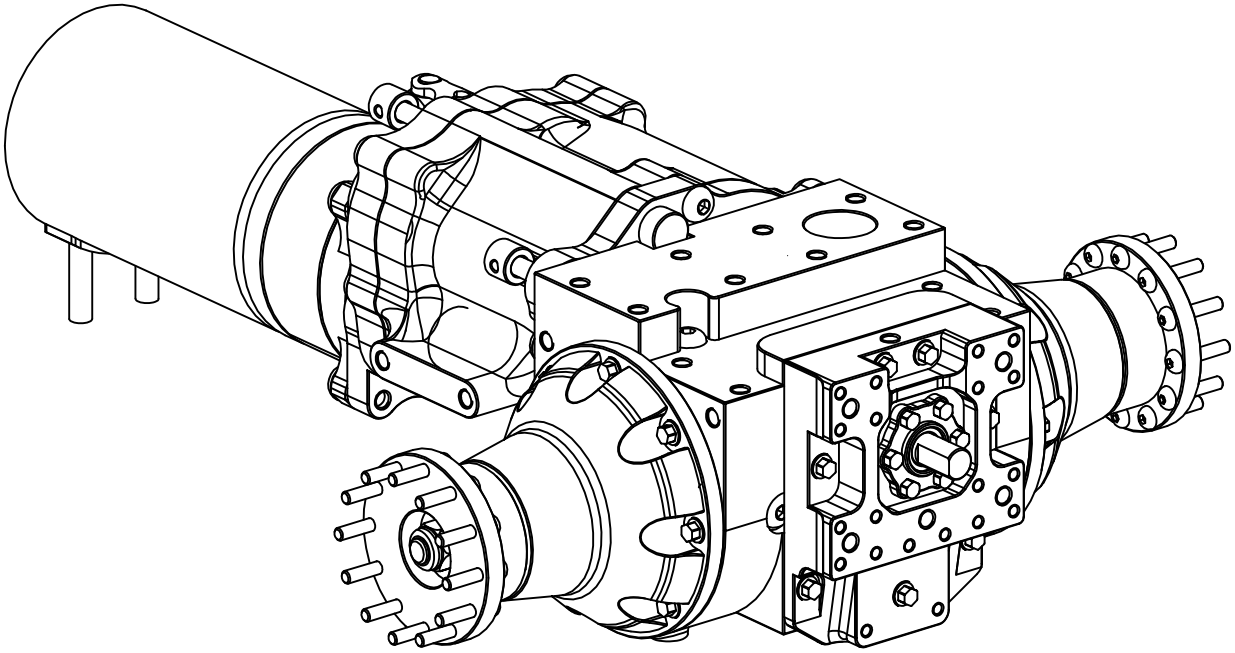


A1-26 ☐

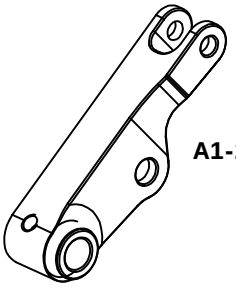


A1-28R ☐

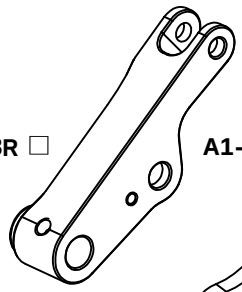


A1-28L ☐

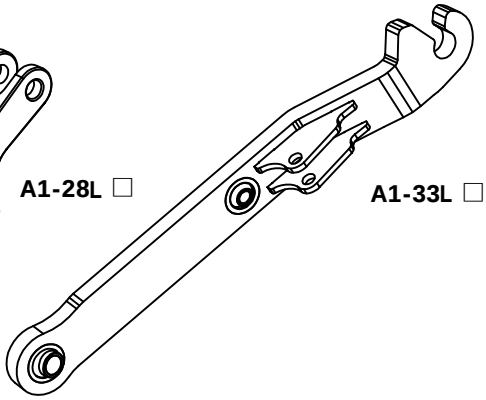


A1-33L ☐

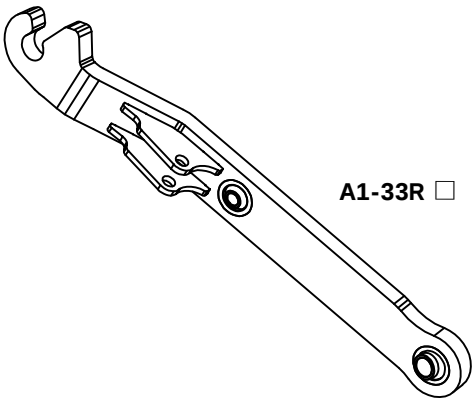


A1-33R ☐

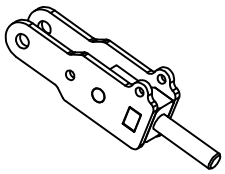


A1-34 ×2☐

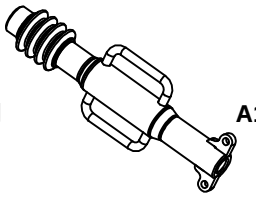


A1-35 ×2☐




A1-36 ×2☐

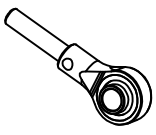


A1-37 ×2☐



A1-40 ×2☐




A1-41 ×2☐

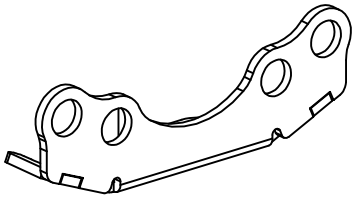


A1-43 ☐

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


LESU
MODEL RACING

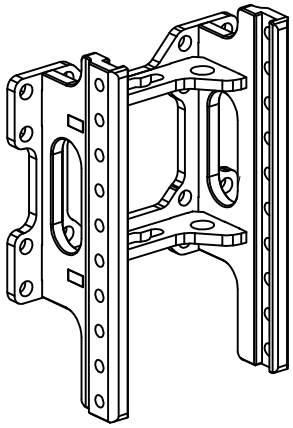


A1-44 ☐




A1-45 ☐




A1-46 ×2☐

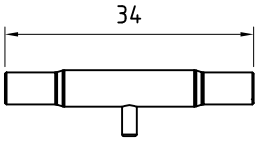


A1-47 ☐




A1-48 ×2☐




A1-49 ×2☐



A1-50 ×2☐



A1-53 ☐




A1-54 ☐



A1-56 ☐



A1-57 ☐



A1-58 ☐



A1-59 ☐




A1-61 ☐




A1-62 ☐




A1-63 ☐




A1-64 ☐

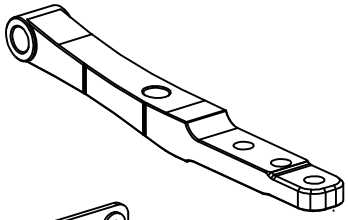


A1-65 ☐

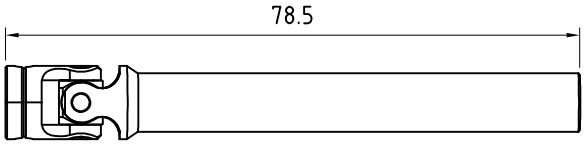


A1-67 ☐

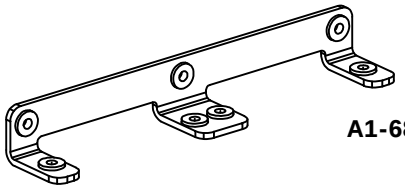


A1-68 ☐

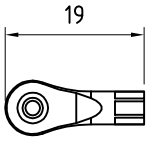


A1-69 ×4☐

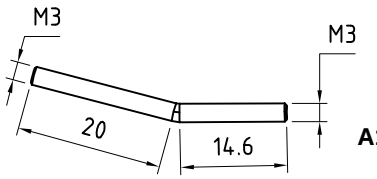

A1-70 ☐

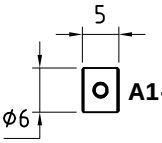


A1-71 ×2☐

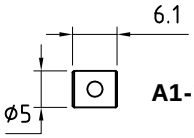


A1-72 ☐




A1-73 ×2☐

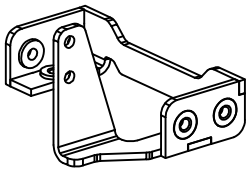

A1-74 ☐

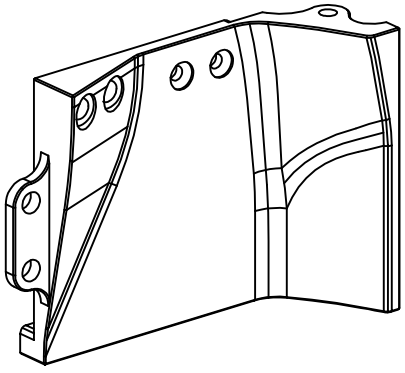


A1-75L ☐

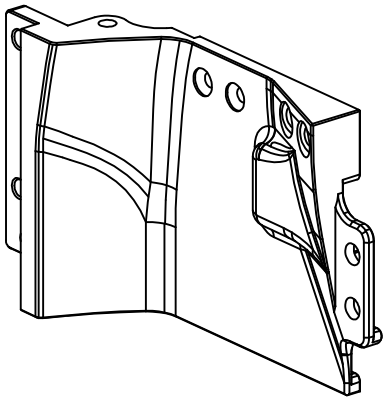


A1-75R ☐

LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

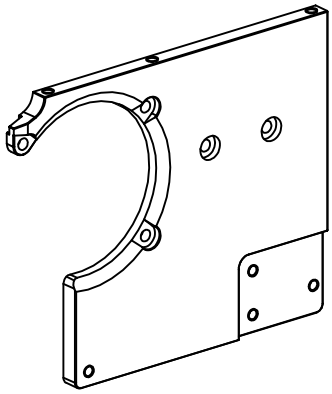


B1-8 ☐

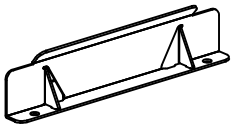


B1-1 ☐




B1-2 ☐

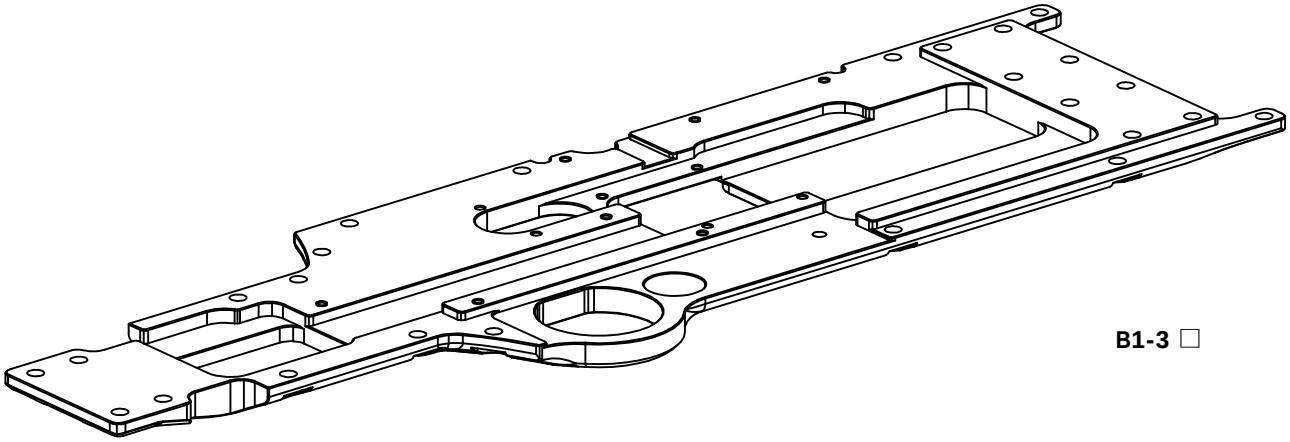


B1-3 ☐

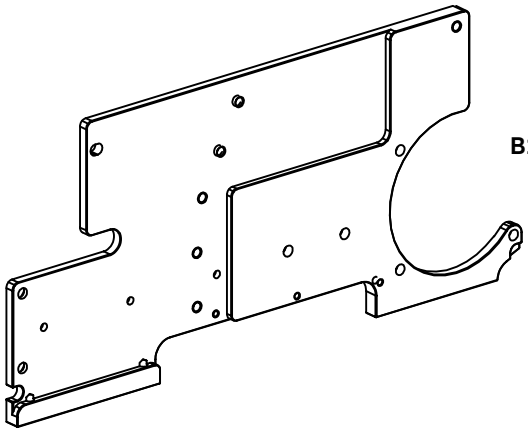


B1-4 ☐

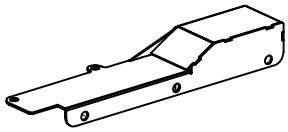


B1-5 ☐

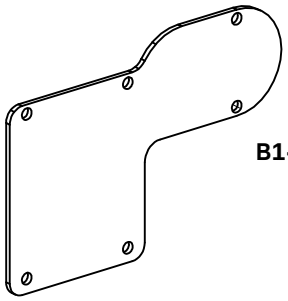


B1-6 ☐

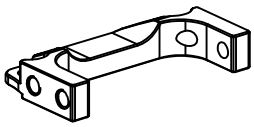


B1-7 ☐

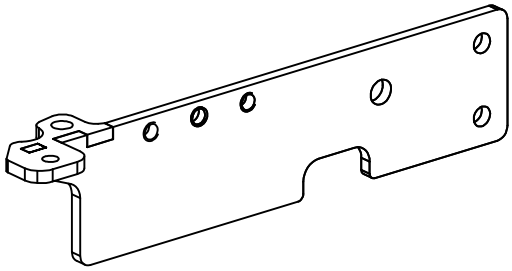

B1-9 ☐

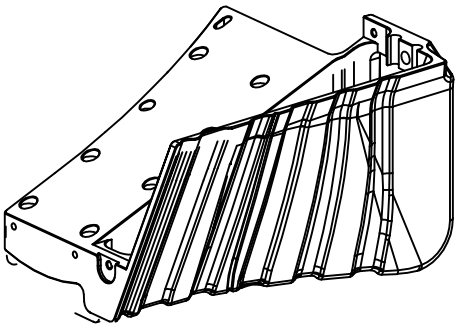


B1-10 □

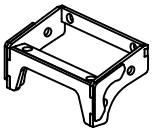

B1-11 □



B1-12 ×5□

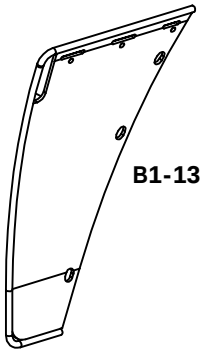


B1-13 □




B1-14 □
(蓝色)
(blue)




B1-15 □

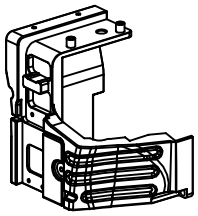


B1-16 □

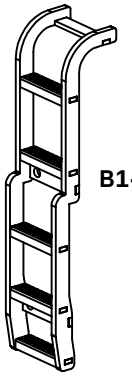

B1-17 □

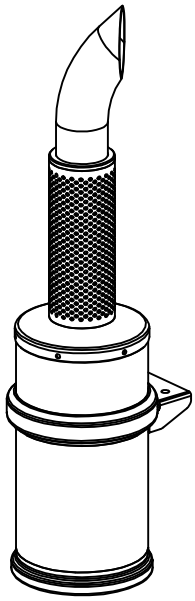


B1-21 □




B1-18 □




B1-19 □

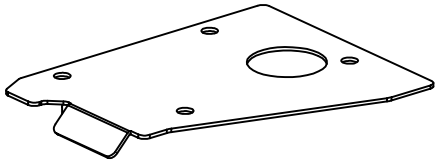

B1-20 □

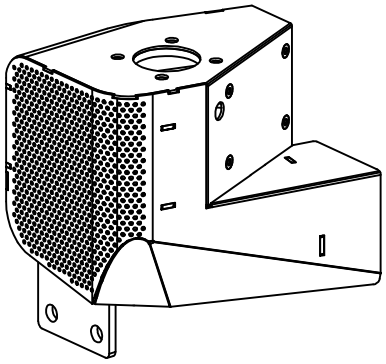

B1-22 □




B1-23 □



B1-24 □



B1-25 ×2□




B1-26 ×2□




B1-27 ×2□
(无色透明)
(transparent)




B1-28 ×2□
(黄色透明)
(yellow transparent)

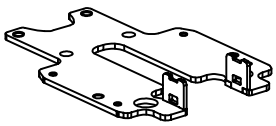

C1-1 □



C1-2 □

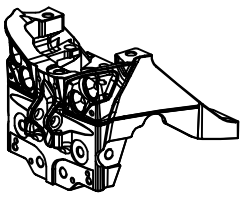


C1-3 □
(已预安装紧钉螺丝
M3-3x4，螺纹胶固定)



C1-4 ×10□




C1-5 □




C1-6 □

LESU
MODEL RACING


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

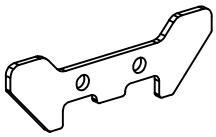


C1-7 ☐

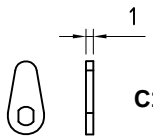


C1-9 ☐

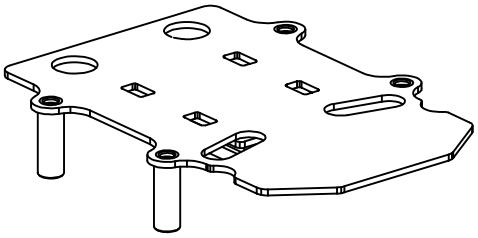


C1-10 ☐

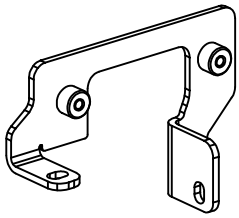


C1-11 ☐

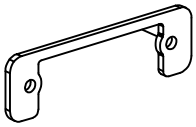


C1-12 ☐

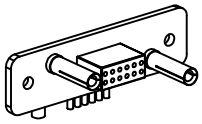


C1-13 ☐

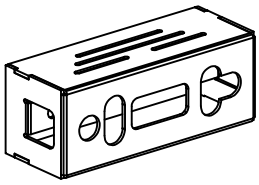


C1-14 ☐

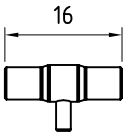


C1-15 ☐

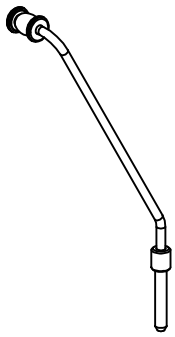


C1-18 ☐

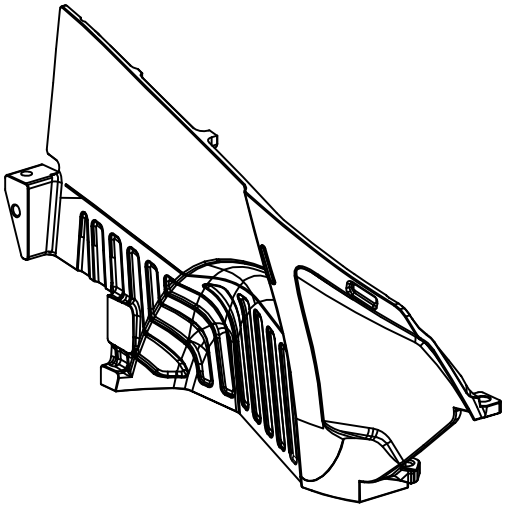


D1-1 ☐

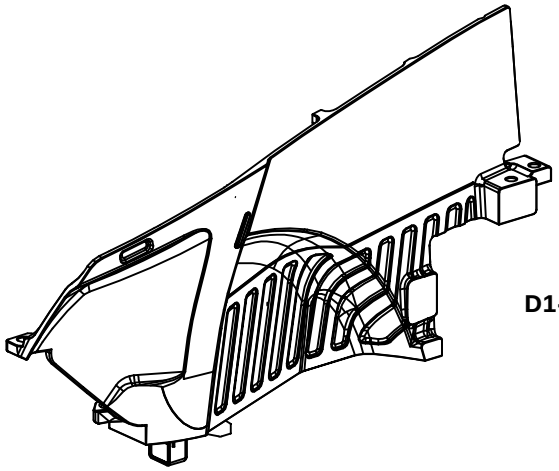


D1-2 ☐

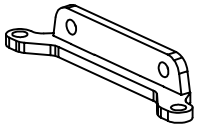


D1-3 ☐

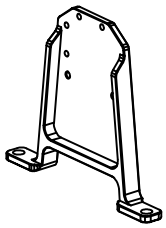


D1-4 ☐

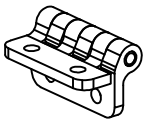


D1-5 ☐

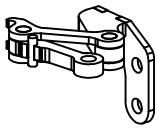


D1-6 ☐



D1-7 ☐

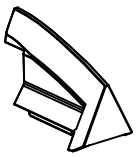

D1-8 ☐




D1-9 ☐

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING



D1-11L ☐

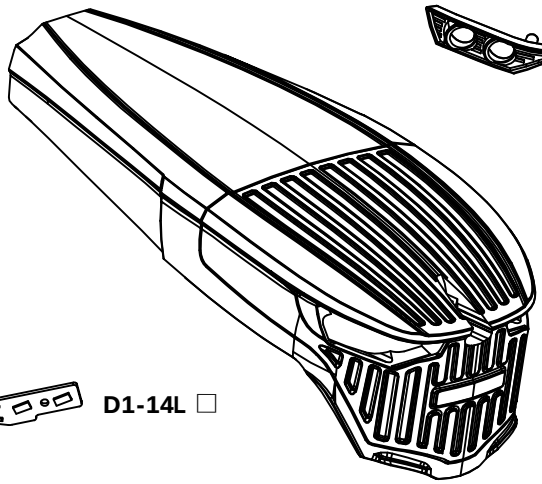

D1-11R ☐




D1-12R ☐
(无色透明)
(transparent)




D1-12L ☐
(无色透明)
(transparent)

D1-10 ☐



D1-13R ☐




D1-13L ☐


D1-14L ☐



D1-14R ☐



D1-15 ×24☐

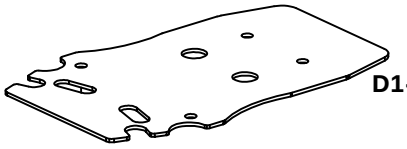

D1-16 ☐




E1-1 ☐




E1-2 ☐



E1-3 ☐

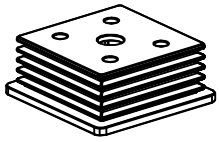


E1-4 ☐



E1-5 ☐



E1-6 ☐

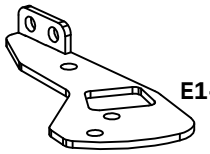

E1-7 ☐




E1-8 ☐




E1-9 ☐




E1-10 ☐

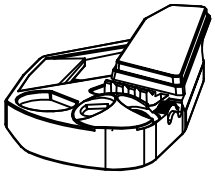


E1-11 ☐

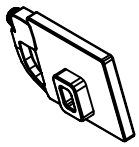


E1-12 ☐

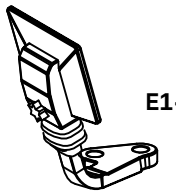


E1-13 ☐

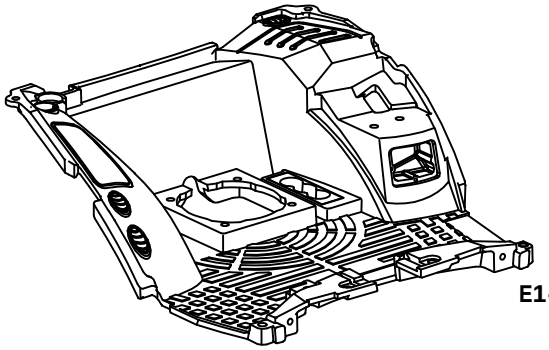

E1-14 ☐

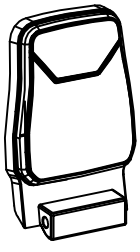


E1-15 ☐

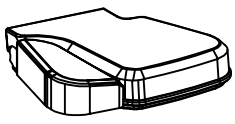


E1-16 ☐

LESU
MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87




E1-17 ☐

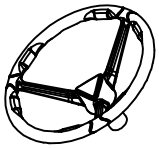

E1-18 ☐



E1-19 ☐

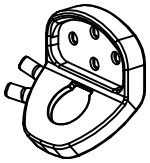


E1-20 ☐



E1-21 ☐




E1-23 ☐



E1-24 ×2☐




E1-25 ☐

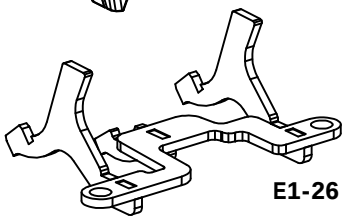

E1-26 ☐




E1-27 ☐



E1-28 ☐
(折弯)
(Bending)



E1-29 ☐

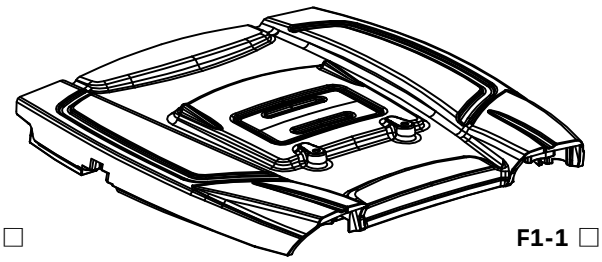


F1-1 ☐




F1-2L ☐




F1-2R ☐




F1-3L ☐



F1-3R ☐

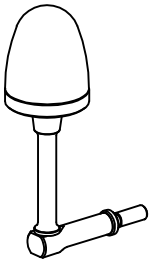

F1-4 ×2☐



F1-5 ×2☐




F1-8 ☐




F1-9 ☐




F1-10 ☐

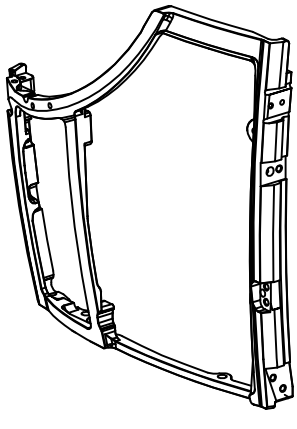


F1-11 ☐

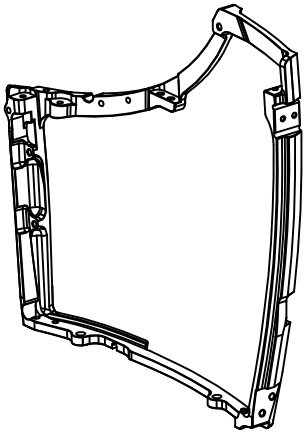


F1-12 ☐




F1-13 ☐




F1-14 ☐

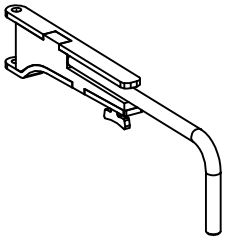

F1-15L ☐

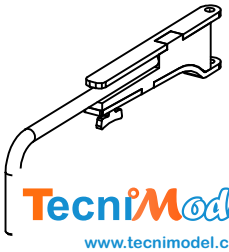

F1-15R ☐




F1-16 ×2☐

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING



F1-17L ☐



F1-17R ☐



F1-18L ☐



F1-18R ☐



F1-19R ☐



F1-19L ☐




F1-20 ×2☐




F1-21 ×2☐




F1-22 ☐

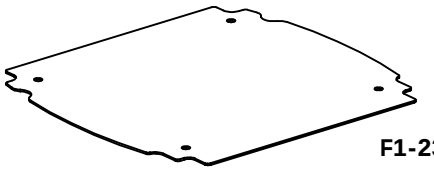


F1-23 ☐

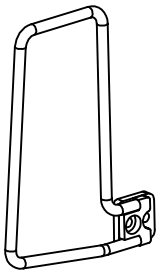


F1-24 ☐

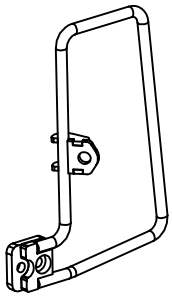


F1-25 ☐




F1-26L ☐



F1-26R ☐

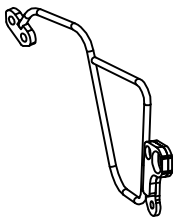


F1-27 ☐

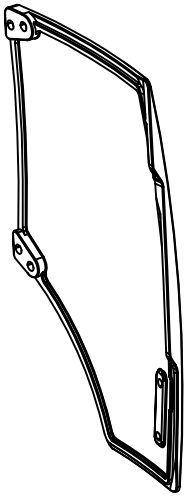

F1-28 ☐




F1-29 ☐




F1-30 ☐




F1-31 ☐

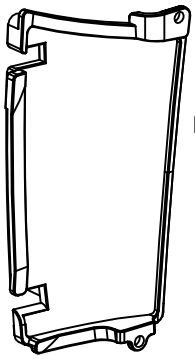


F1-32 ☐



F1-33 ☐



F1-34 ☐

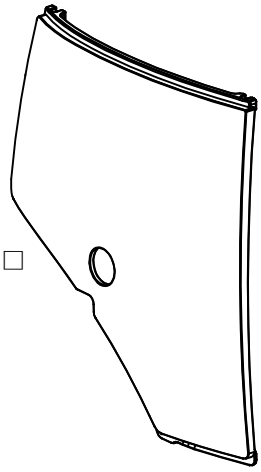

F1-35 ☐




F1-36 ☐



F1-37 ☐




F1-38 ×2☐

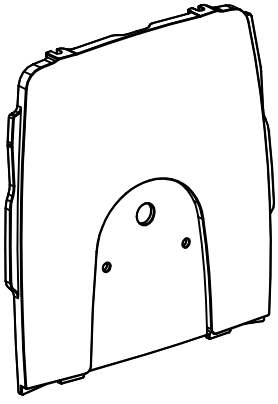

F1-39 ☐

LESU
MODEL RACING


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

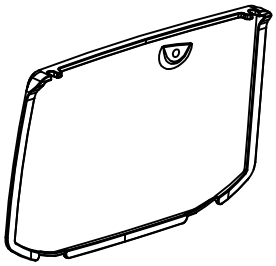


F1-40 ☐




F1-41 ☐

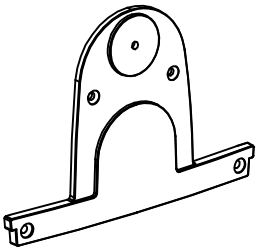

F1-42 ☐

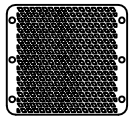


F1-43 ☐

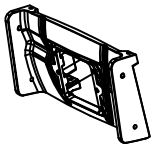


F1-44 ☐




F1-45 ☐

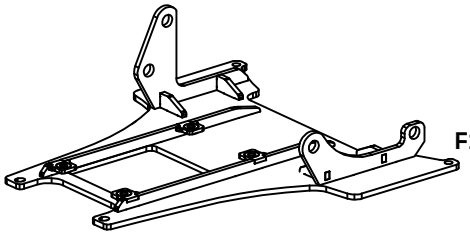

F1-46 ☐

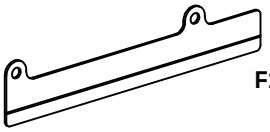


F1-47L ☐

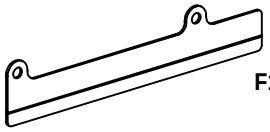


F1-47R ☐



G1-1 ×4☐
(无色透明)
(transparent)

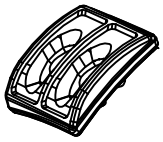


G1-2L ☐

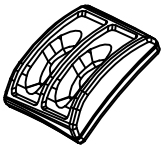


G1-2R ☐



G1-3 ×2☐

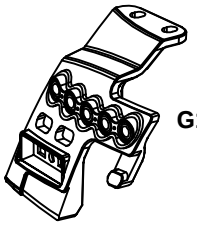

G1-4L ☐

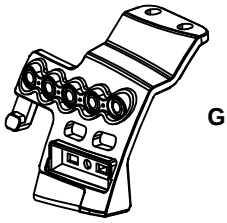


G1-4R ☐




G1-5 ×2☐
(红色透明)
(red transparent)




G1-6 ×2☐

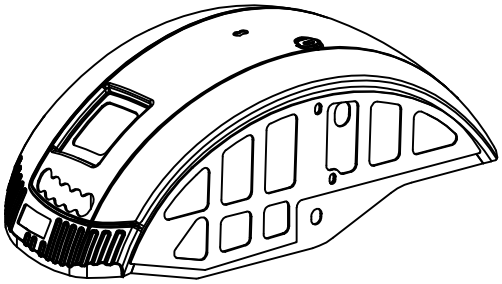


G1-7L ☐

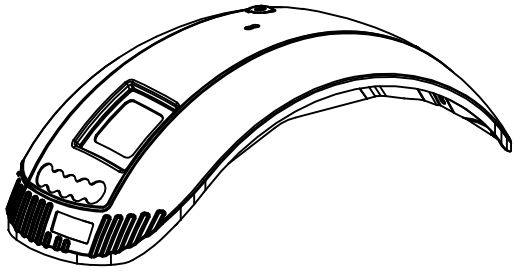

G1-7R ☐



G1-8L ☐




G1-8R ☐




G1-9 ☐

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


LESU
MODEL RACING

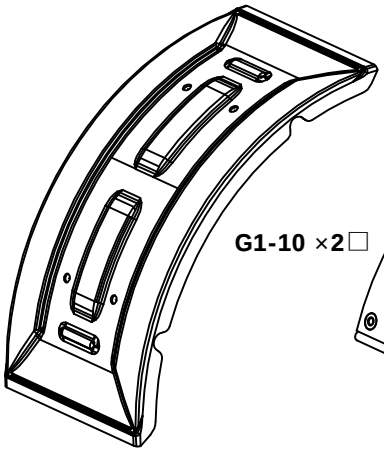

G1-10 ×2□

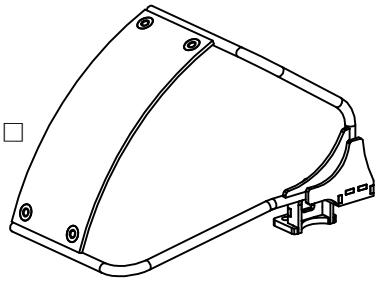

G1-11L □

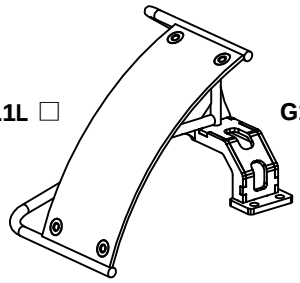


G1-11R □




G1-12 ×2□



G1-13 ×2□

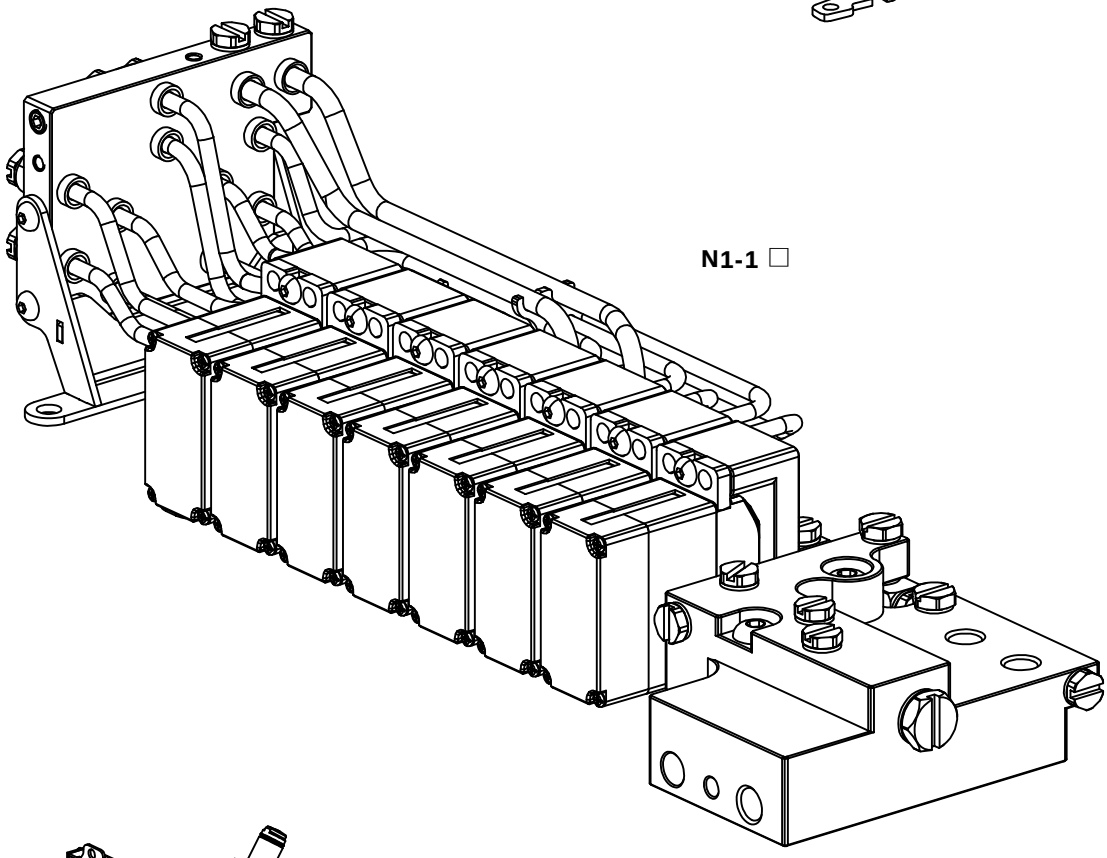


N1-1 □

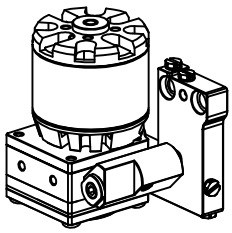


N1-2 □


3.5香蕉插公头，
线长100mm
3.5 Banana plug male head,
wire length 100mm

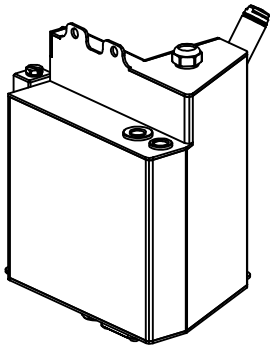


N1-5 □



N1-6 ×2□




N1-7 □

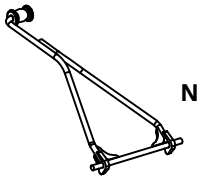

N1-8 □



N1-9 ×2□

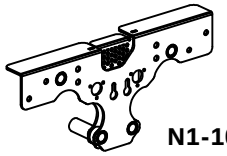

N1-10 □



N1-11 ×2□



N1-12 ×10□

LESU
MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

十字盘头M1-3 ×4
Cross pan head screw

十字盘头M1-4 ×3
Cross pan head screw

十字盘头M1.2-4 ×8
Cross pan head screw

十字盘头M1.2-6 ×8
Cross pan head screw cap screw

十字盘头M1.2-10 ×2
Cross pan head screw

十字盘头M2.3-6(EL-009-1附带的零件)×3
Cross pan head screw

外六角M1.2-3 ×8
Hexagon screw

外六角M1.2-4 ×8
Hexagon screw

外六角M1.6-6 ×8
Hexagon screw

外六角M2-3 ×39
Hexagon screw

外六角M2-4 ×16
Hexagon screw

外六角M2-6 ×27
Hexagon screw

外六角M2-8 ×2
Hexagon screw

外六角M2-10 ×2
Hexagon screw

法兰外六角M2-4 ×4
Hexagon screw

法兰外六角M3-4 ×26
Locking flange nut

法兰外六角M3-6 ×12
Locking flange nut

法兰外六角M3-8 ×4
Locking flange nut

法兰外六角M3-10 ×3
Locking flange nut

杯头M1.6-3 ×13
Hexagon socket head cap screw

杯头M1.6-4 ×9
Hexagon socket head cap screw

杯头M1.6-6 ×5
Hexagon socket head cap screw

杯头M1.6-8 ×3
Hexagon socket head cap screw

半圆头M2-3 ×24
Hexagon socket button head screw

半圆头M2-4 ×99
Hexagon socket button head screw

半圆头M2-5 ×15
Hexagon socket button head screw

半圆头M2-6 ×29
Hexagon socket button head screw

半圆头M2-7 ×2
Hexagon socket button head screw

半圆头M2-8 ×10
Hexagon socket button head screw

半圆头M2-10 ×2
Hexagon socket button head screw

半圆头M2-15 ×4
Hexagon socket button head screw

半圆头M2.5-6 ×1
Hexagon socket button head screw

半圆头M3-4 ×16
Hexagon socket button head screw

半圆头M3-6 ×34
Hexagon socket button head screw

半圆头M3-8 ×32
Hexagon socket button head screw

十字沉头M1.6-6 ×3
Cross recessed countersunk head screw

内六角沉头M2-5 ×14
Hexagon socket countersunk head screw


内六角沉头M2-6 ×12
Hexagon socket countersunk head screw

内六角沉头M2-8 ×2
Hexagon socket countersunk head screw

内六角沉头M3-6 ×5
Hexagon socket countersunk head screw

紧定螺钉M3-4 ×4
Hexagon socket set screw

紧定螺钉M3-6 ×4
Hexagon socket set screw



LAT-WM2-LB12-SUS ×4

M1六角螺母 ×4
Hexagon nut

M1.2六角螺母 ×10
Hexagon nut

M1.6六角螺母 ×7
Hexagon nut

M3六角螺母 ×4
Hexagon nut

M2自锁螺母 ×6
Locking nut

M3自锁螺母 ×1
Locking nut

LA-LNM2-2-SUS ×27

LA-LNM2.5-2.5 ×4

LA-LNM3-3 ×5

开口挡圈φ1.2 ×4
"E"ringsφ1.2


开口挡圈φ1.5 ×4
"E"ringsφ1.5

开口挡圈φ2 ×6
"E"ringsφ2


M3堵头 ×6
M3 plug

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


LESU
MODEL RACING




A1-4 □

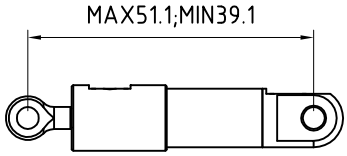


A1-15 ×2□

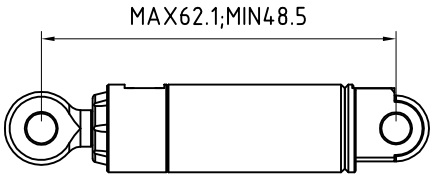


A1-31L □

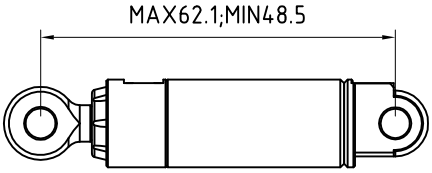


A1-31R □

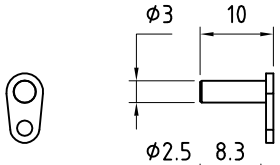


A1-14 ×2□

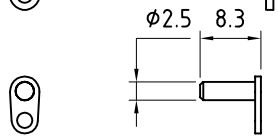

A1-19 ×4□

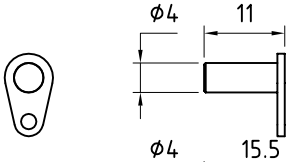


A1-30 ×4□

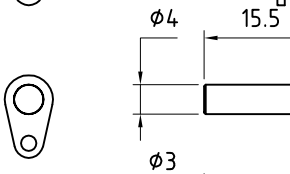


A1-66 □




C1-8 □




A1-7 □

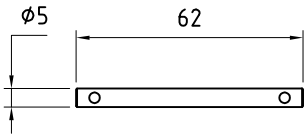


A1-29 □

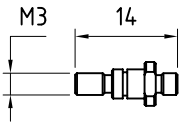


A1-55 □

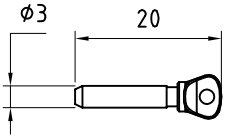


A1-60 □

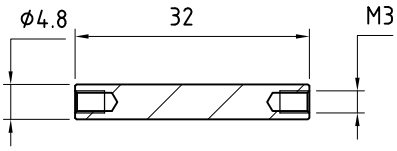


C1-16 ×4□




A1-21 □




A1-16 ×2□

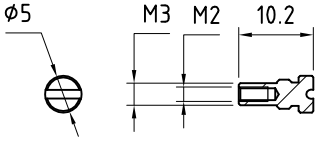


A1-17 ×2□

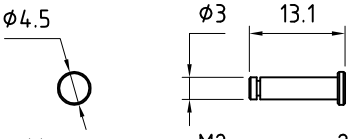


A1-24 ×2□




A1-32 ×2□

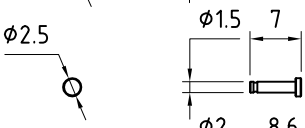


A1-38 ×2□

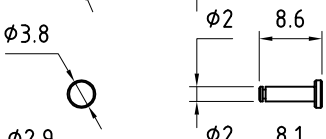


A1-39 ×2□

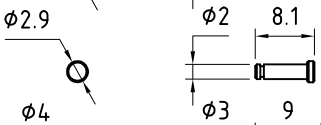

A1-42 ×2□

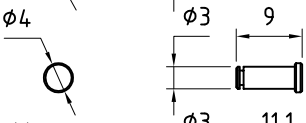


A1-51 ×2□

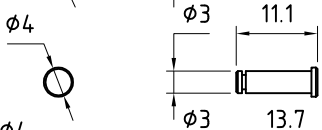

A1-52 □




C1-17 □

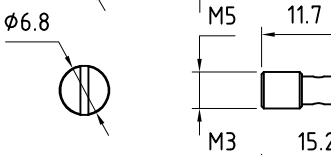

N1-3 ×6□




N1-4 ×1□




A1-22 ×2□

LESU
MODEL RACING


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87




圆柱销φ1.5×10 ×2☐
Cylindrical pin φ1.5×10

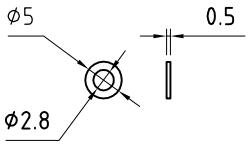


石墨垫片 ×2☐
Graphite gasket
外径5内径2.8厚度0.5
Outer diameter 5
inner diameter 2.8
thickness 0.5

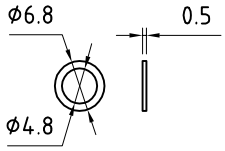


石墨垫片 ×12☐
Graphite gasket
外径6.8内径4.8厚度0.5
Outer diameter 6.8
inner diameter 4.8
thickness 0.5

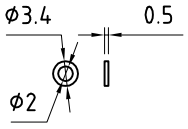


石墨垫片 ×4☐
Graphite gasket
外径3.4内径2厚度0.5
Outer diameter 4
inner diameter 2
thickness 0.5




外径4×线径0.5O圈 ×1☐
Outer diameter 4×
wire diameter 0.5
fluorine glue O -ring



磁铁 ×1☐
Magnet



磁铁 ×1☐
Magnet

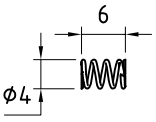


压缩弹簧 ☐
compression spring
线径0.45×外径4×长度6
Wire diameter 0.4 x Outer diameter 3 x Length 10



Y-1544-B ×20☐

零件Y-1544-B为KIT版本，说明书另附
Part Y-1544-B is a kit version, see the attachment for the instructions



Y-1525-D ×4☐

零件Y-1525-D为KIT版本，说明书另附
Part Y-1525-D is a kit version, see the attachment for the instructions



An-0017-D1 ×26☐



油管/oil hose ☐
直径2内径1长度 3500mm
Diameter 2 inner diameter 1 length 3500mm

锁差线 参考长度560mm ☐
wire
Reference Length 550mm

锁差线弹簧管 参考长度460mm ☐
Spring tube of wire rope
Reference Length 460mm

热缩管 **Heat shrinkable tube** ☐
内径0.8×长度 4900mm
internal diameter0.8
length 4900mm

热缩管 **Heat shrinkable tube** ☐
内径1×长度 1700mm
internal diameter1
length 1700mm

热缩管 **Heat shrinkable tube** ☐
内径2×长度 150mm
internal diameter2
length 150mm

热缩管 **Heat shrinkable tube** ☐
内径7×长度 40mm
internal diameter7
length 40mm

3P杜邦公插头3P DuPont plug ☐
线长100mm
wire length 100mm



LED贴片灯(白光) ×5☐
LED surface mount lamp
线长400mm
wire length 400mm



LED贴片灯(黄光) ×2☐
LED surface mount lamp
线长400mm
wire length 400mm



3mm灯珠(白光) ×4☐
3mm LED beads (white)
线长400mm
wire length 400mm




3mm灯珠(红光) ×2☐
3mm LED beads (red)
线长400mm
wire length 400mm



3mm灯珠(黄光) ×2☐
3mm LED beads (yellow)
线长400mm
wire length 400mm

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING




An-0018 ×3□

零件An-0018为KIT版本，说明书另附
Part An-0018 is a kit version, see the attachment for the instructions




S-1231-C ×10□


零件S-1231-C为KIT版本，说明书另附
Part S-1231-C is a kit version, see the attachment for the instructions

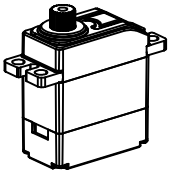

EL-009-1 ×3□

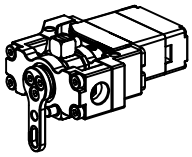

Y-1556-B □

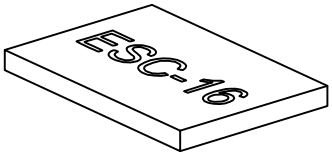


ESC-16□
油泵电调
3.5香蕉插母头，线长100mm
Oil pump electric control
3.5 Banana plug, with a thread length of 100mm

ZK-K077-1 ×1□
ZK-K077-2 ×1□
ZK-K078 ×1□
金属贴×1□
Metal stickers

PH2.0(公头) ×12□
线长200mm


PH2.0(公头)一分二 ×4□
线长200mm

PH2.0(公头)一分三 ×1□
线长200mm

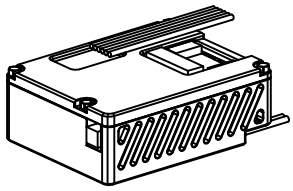


EL-007-B □


零件EL-007-B为KIT版本，说明书另附
Part EL-007-B is a kit version, see the attachment for the instructions

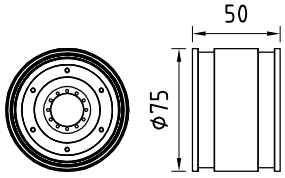


RD-2029-1 ×2□

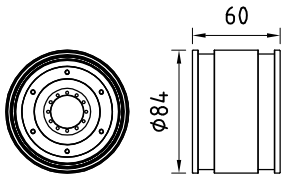

RD-2030-1 ×2□

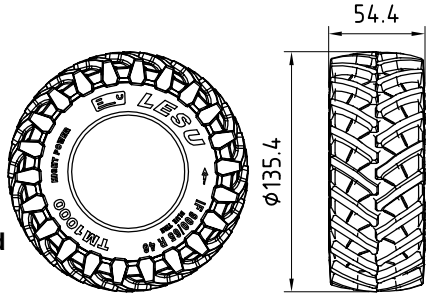

RD-2031-1 ×2□

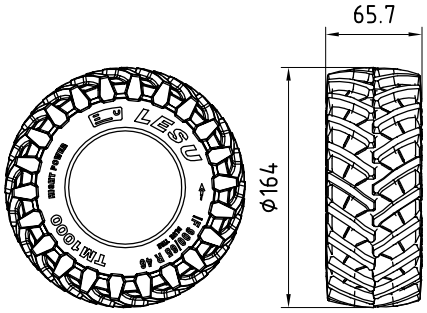


RD-2032-1 ×2□


LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

1

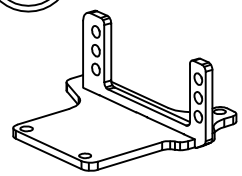

A1-1

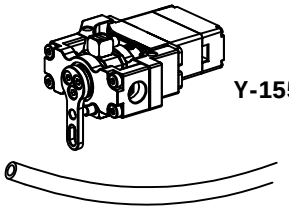


Y-1556-B

油管/oil hose
直径2内径1长度
470mm
Diameter 2 inner
diameter
1 length 470mm

L1=120mm
L2=150mm
L3=50mm
L4=50mm

半圆头M2-8 ×4
Hexagon socket button
head screw


Y-1556-B附带的零件

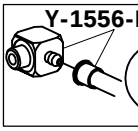


X4

重复/安装多个
Repeat/Build
Multiple


特别注意
Pay Special Attention
进行此步骤前先将油管接上
Connect the oil pipe before
performing this step

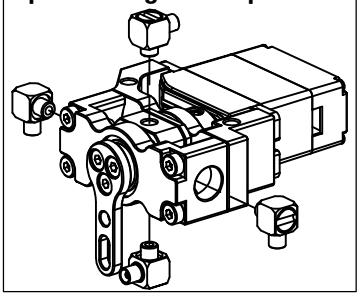


特别注意
Pay Special Attention
进行此步骤前先将舵机臂拆下
Before proceeding with this
step, remove the servo arm

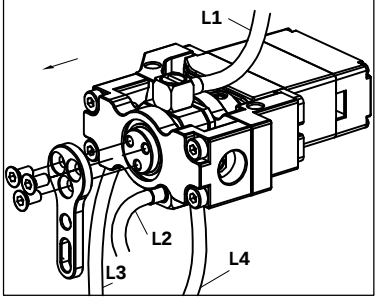


特别注意
Pay Special Attention
进行此步骤前先将螺丝拆下
Remove the screw before
performing this step

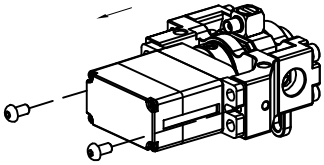

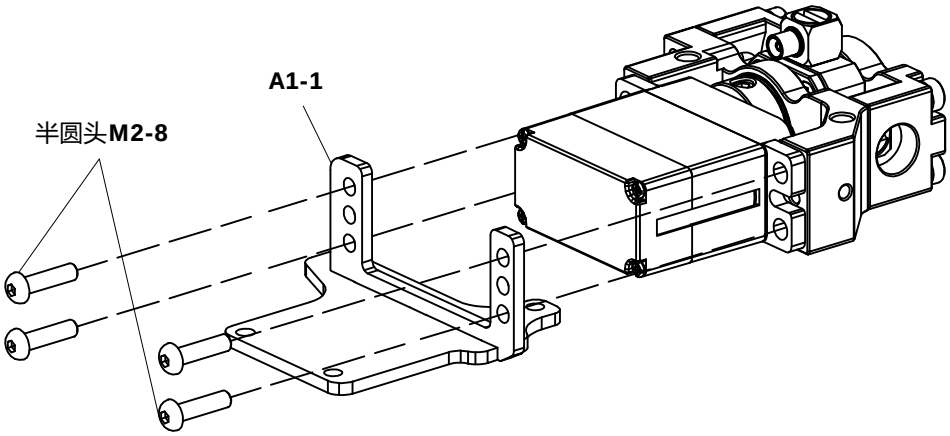


2

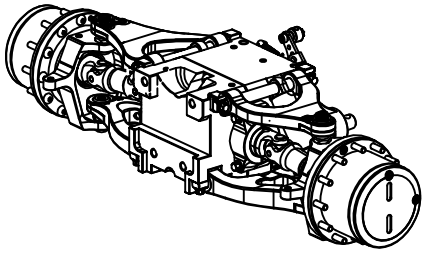

A1-2


半圆头M2-4 ×4
Hexagon socket button
head screw

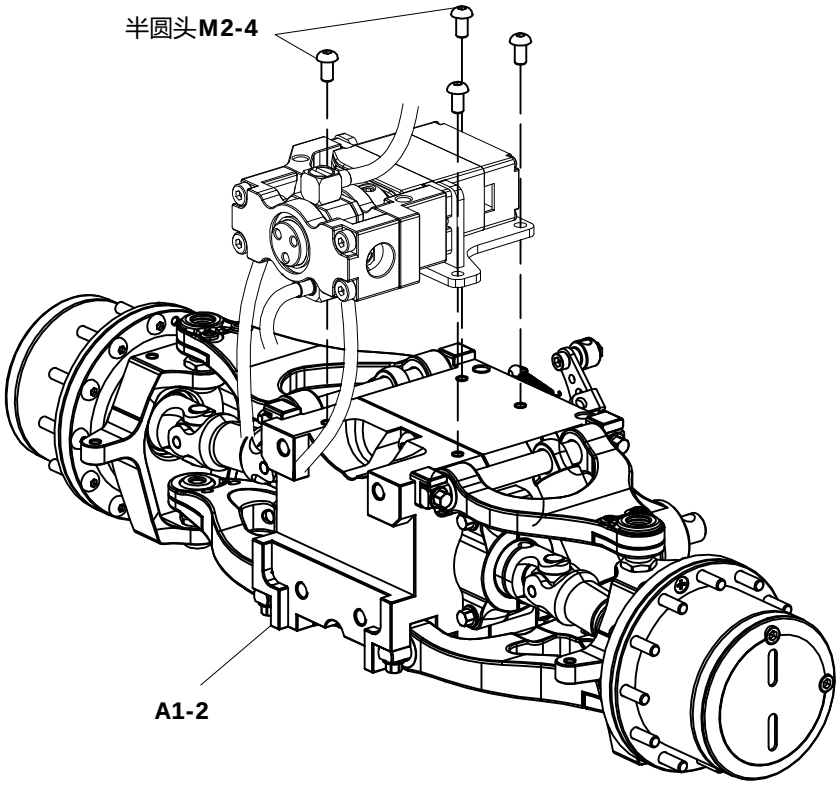


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING

3

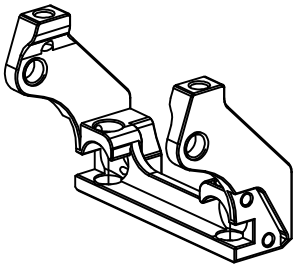

A1-3



A1-4

内六角沉头**M2-5** ×2
Hexagon socket countersunk head screw


半圆头**M3-6** ×2
Hexagon socket button head screw

An-0017-D1 ×2


零件**Y-1544-B**为**KIT**版本，说明书另附
Part Y-1544-B is a kit version, see the attachment for the instructions


Y-1544-B ×2

特别注意
Pay Special Attention
安装此步前，优先完成这个步骤
Before installing this step, prioritize completing it

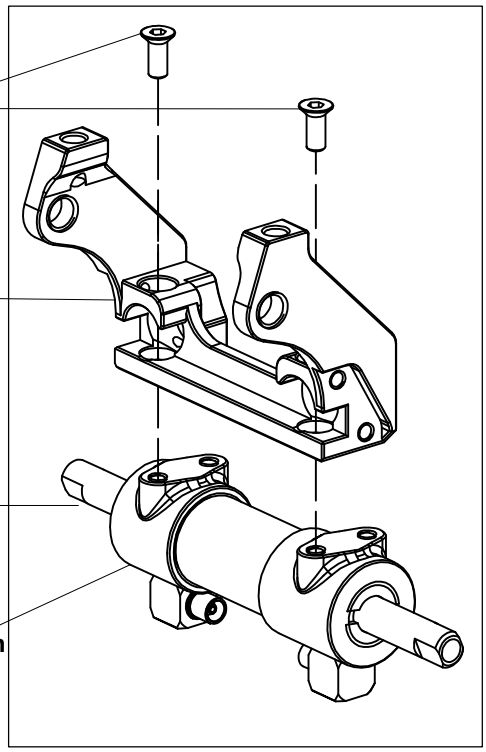

特别注意
Pay Special Attention
注意安装位置
Pay attention to the installation position

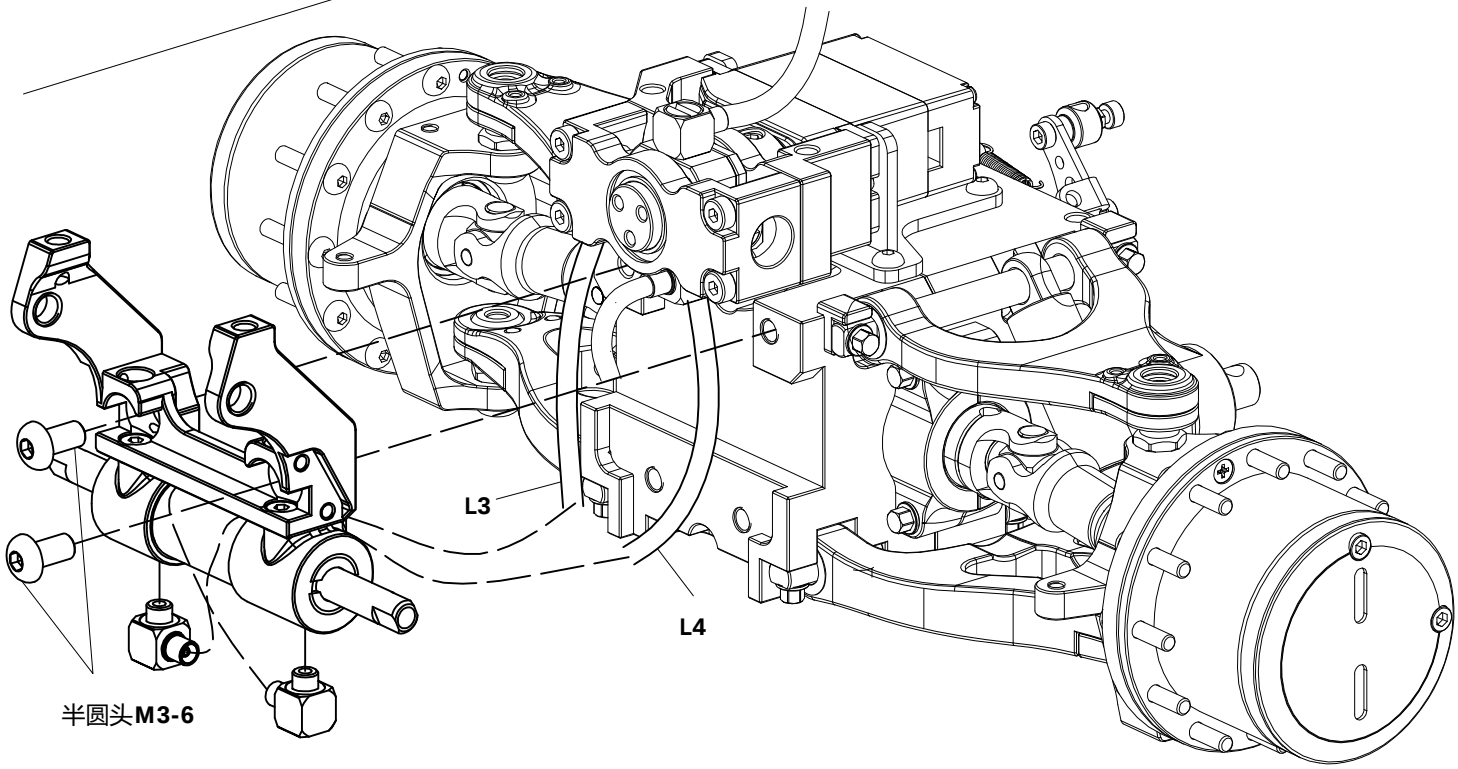

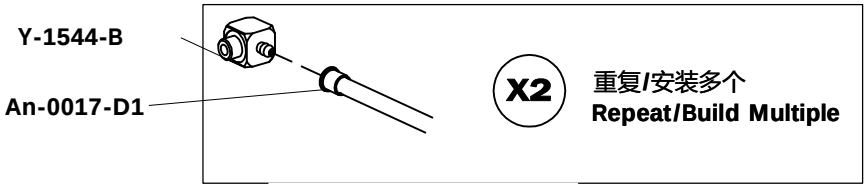

重复/安装多个
Repeat/Build Multiple

LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

4



A1-5 ×2




A1-6 ×2



杯头**M1.6-3** ×2
Hexagon socket head cap screw



外六角**M2-4** ×4
Hexagon screw

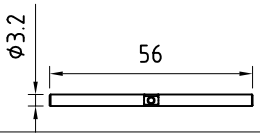



A1-7



A1-8

保持合适的方向
Ensure Proper Orientation

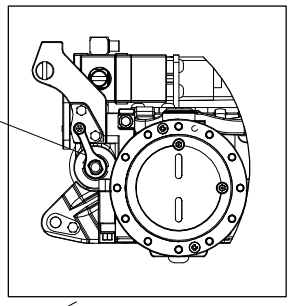


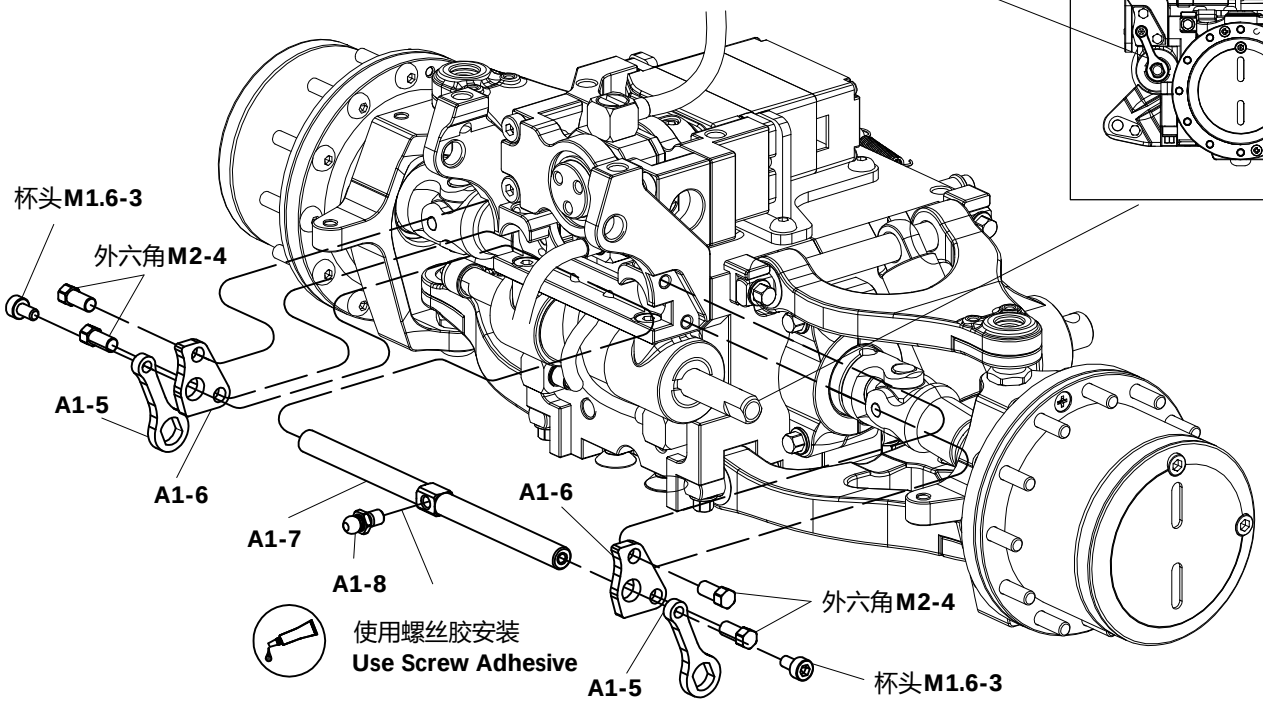

使用螺丝胶安装
Use Screw Adhesive

5

特别注意
Pay Special Attention
这两个零件为**Y-1556-B**
附带的零件
These two parts are
included with Y-1556-B

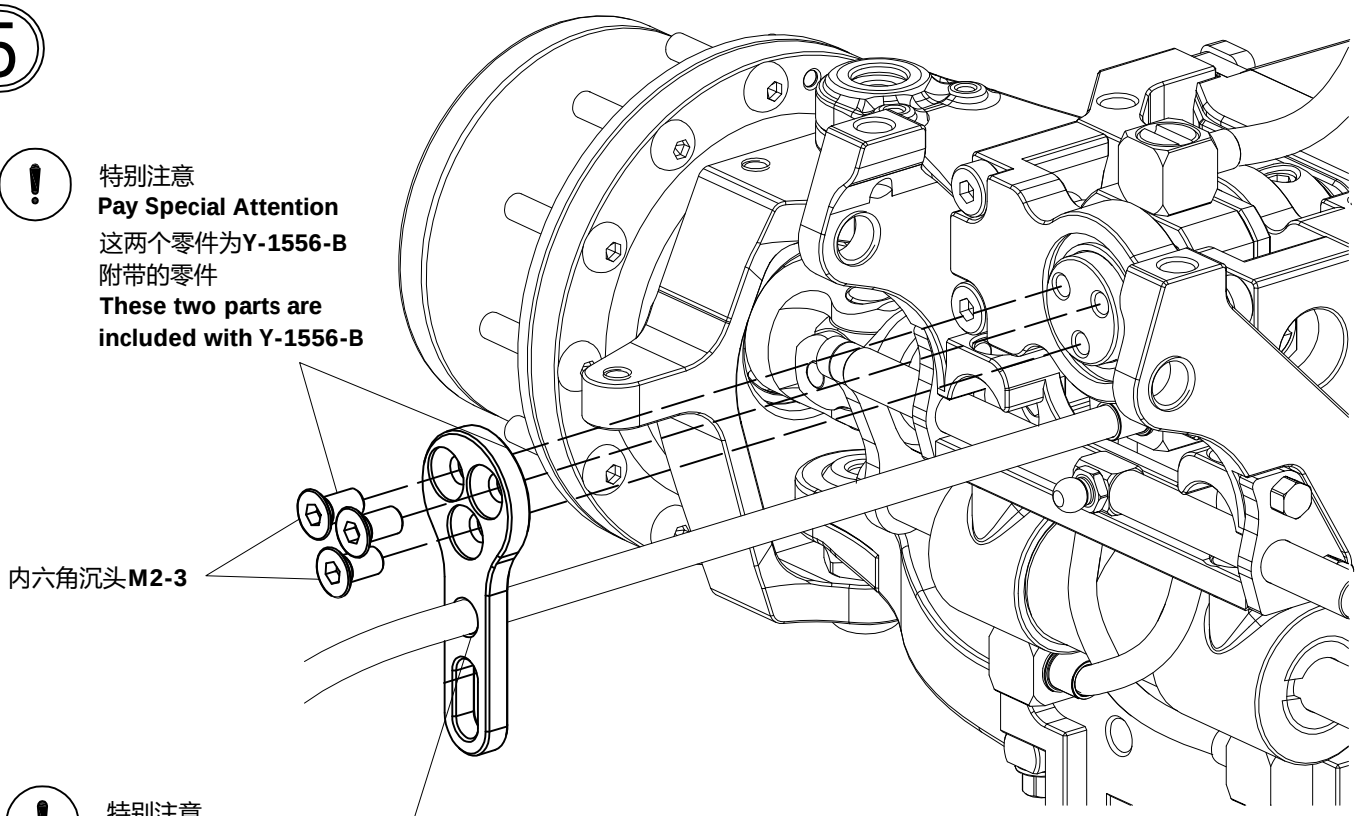


特别注意
Pay Special Attention
油管从此穿过
The oil pipe passes through here

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING


6

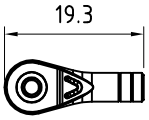

A1-9×2



A1-10×2



A1-11×2




LA-LNM2.5-2.5 ×2



半圆头M2-8 ×2
Hexagon socket button head screw

安装完成后调节到此长度，此长度仅供参考，请以实际为准
After installation, adjust to this length, which is for reference only. Please refer to the actual length

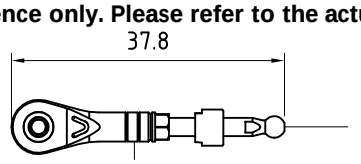


调节长度
Adjust length

确认长度后扭紧螺母锁紧
After confirming the length, tighten the nut and lock it


安装此步前，
优先完成这个步骤
Before installing this step, prioritize completing it

X2 重复/安装多个
Repeat/Build Multiple



X2 重复/安装多个
Repeat/Build Multiple

半圆头M2-8

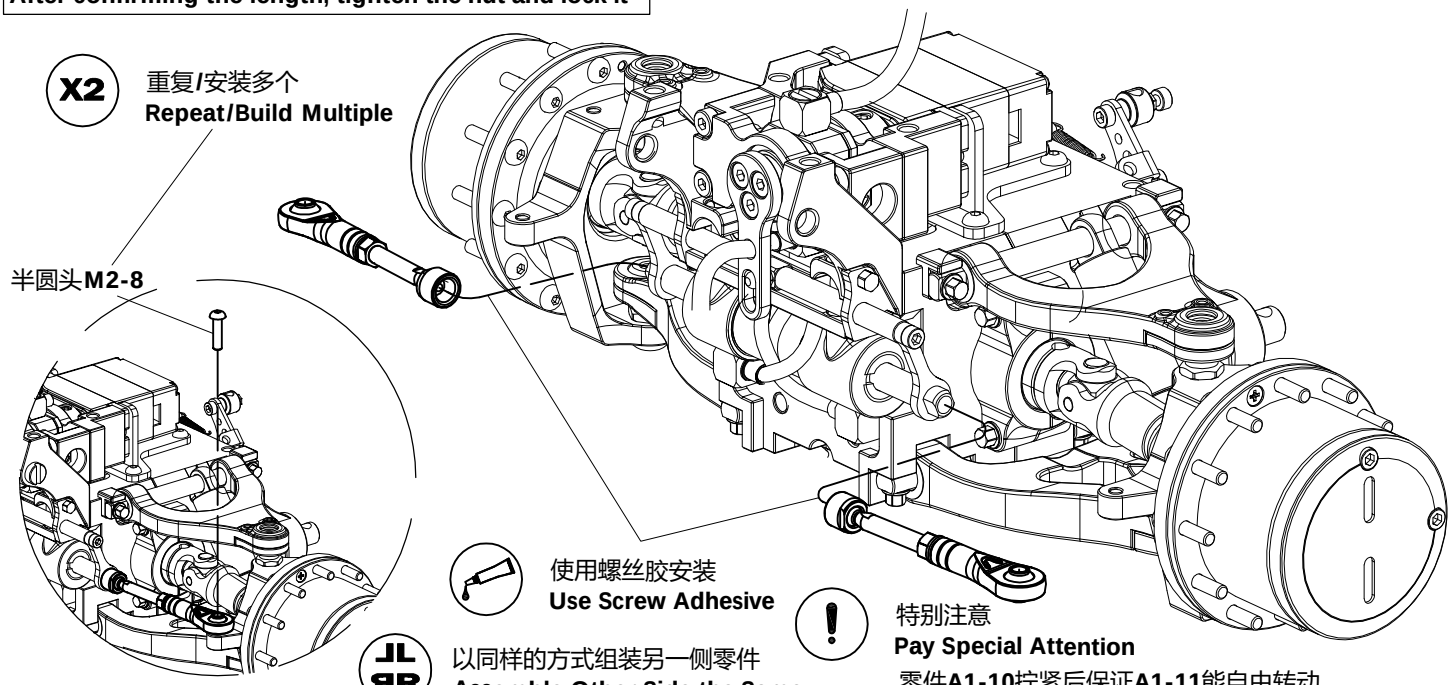


使用螺丝胶安装
Use Screw Adhesive

JL RR 以同样的方式组装另一侧零件
Assemble Other Side the Same

特别注意
Pay Special Attention
零件A1-10拧紧后保证A1-11能自由转动
After tightening part A1-10, ensure that A1-11 can rotate freely

7

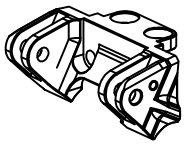

A1-12



法兰外六角M3-8 ×2
Locking flange nut




内六角沉头M3-6 ×2
Hexagon socket countersunk head screw


LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

8




A1-13

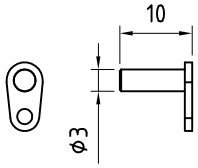


A1-14 ×2

外六角M2-3 ×2
Hexagon screw

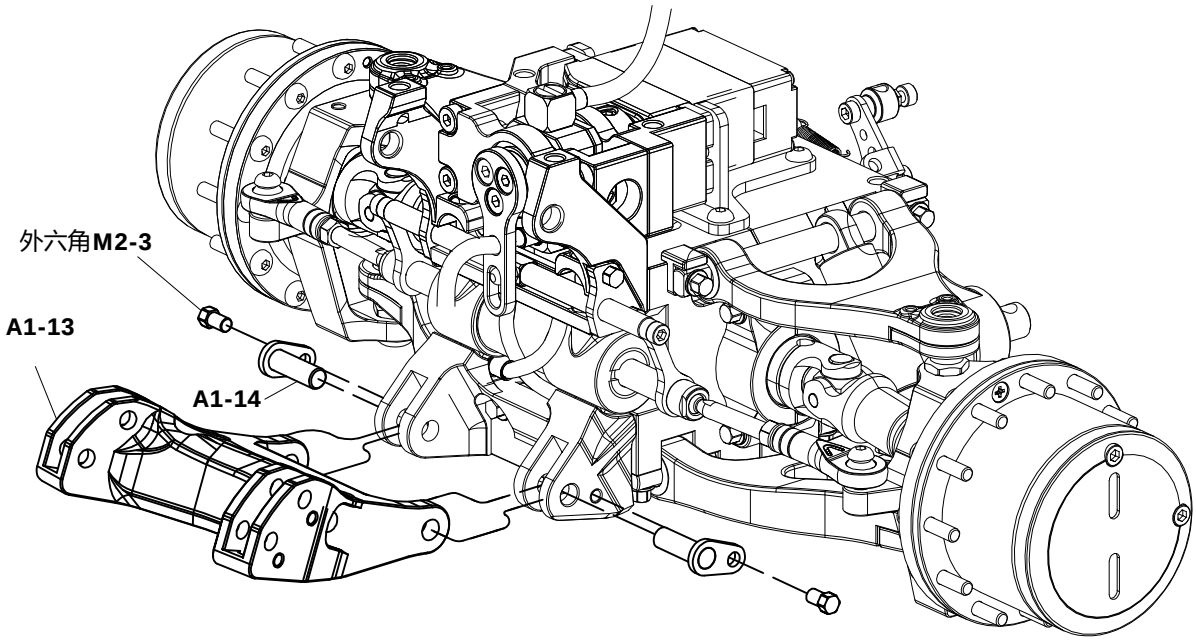

9

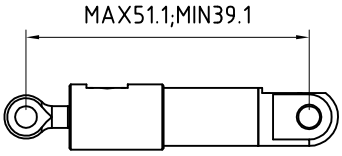


A1-15 ×2




油管/oil hose
直径2内径1长度 8901mm
Diameter 2 inner diameter
1 length 890mm


L5=200mm
L6=205mm
L7=240mm
L8=245mm

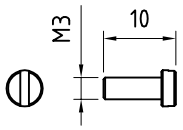

A1-16 ×2

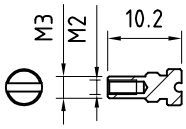

A1-17 ×2

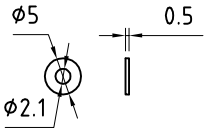


A1-22 ×2


半圆头M2-3 ×2
Hexagon socket button head screw

An-0017-D1 ×4

零件Y-1544-B为KIT版本，说明书另附
Part Y-1544-B is a kit version, see the attachment for the instructions

Y-1544-B ×4

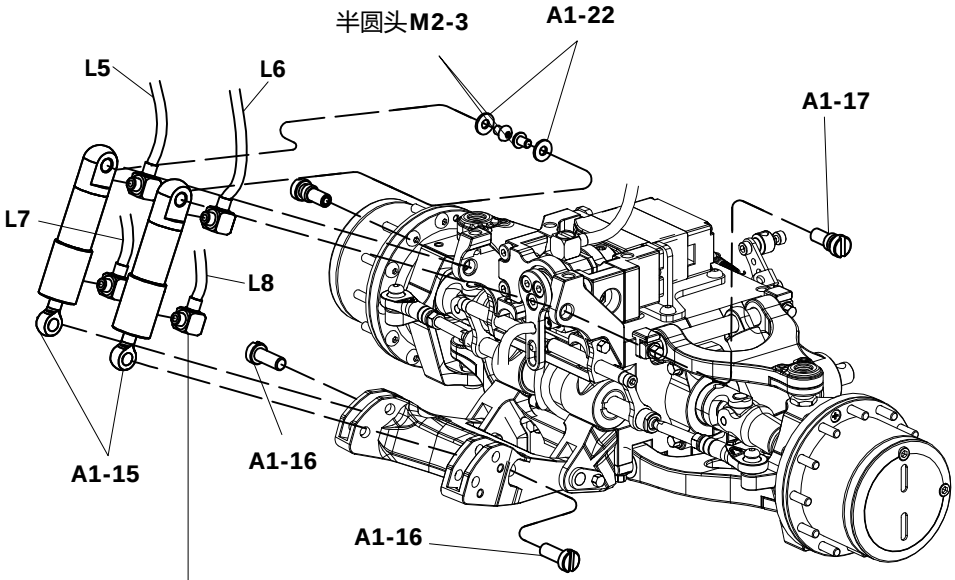

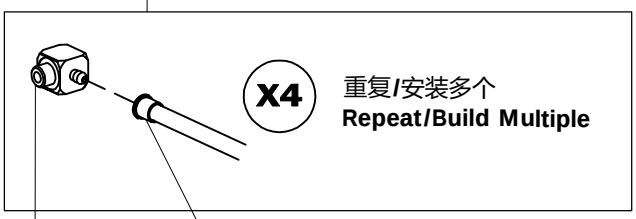


Y-1544-B

An-0017-D1


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING


10

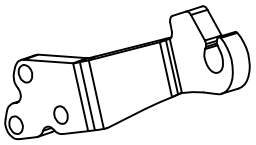

A1-18L

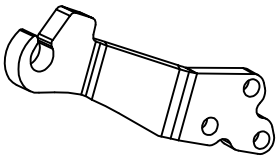


A1-18R

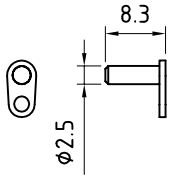


A1-19 ×4

外六角M2-3 ×4
Hexagon screw


补充视图
Supplementary View

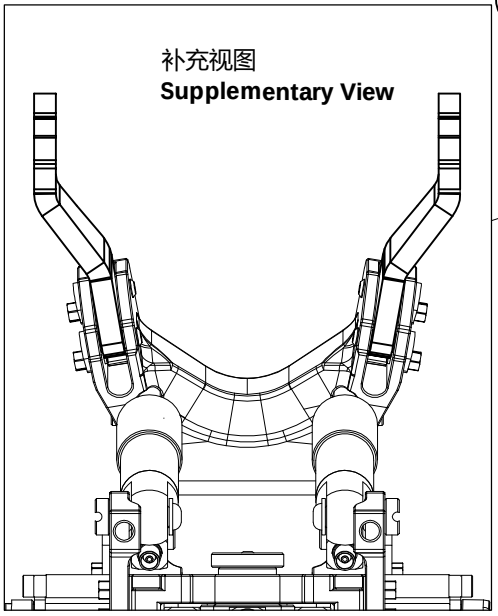

特别注意
Pay Special Attention
注意区分两个零件的安装位置
Pay attention to distinguishing the installation positions of the two parts

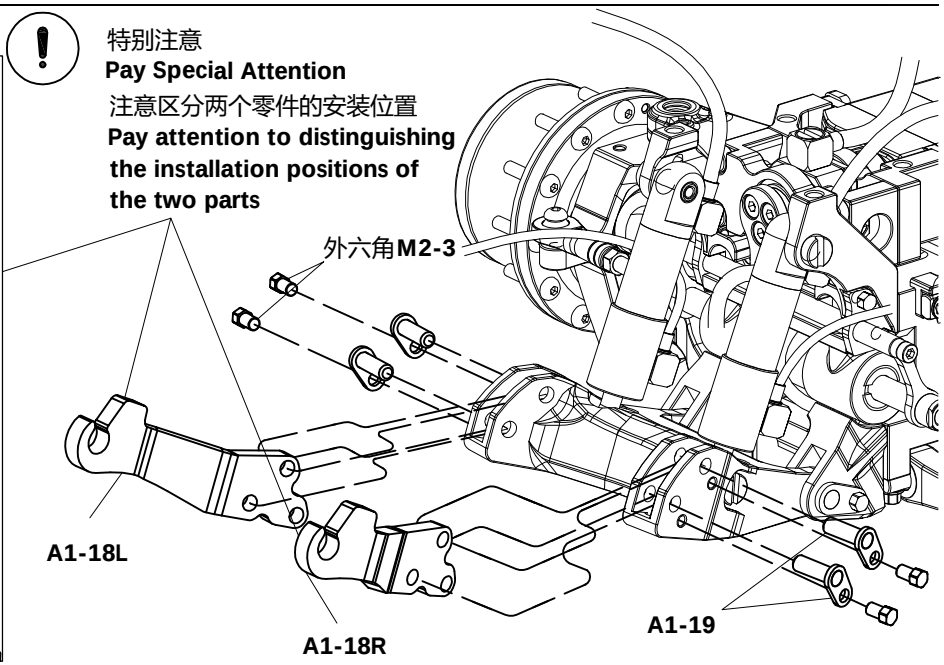

11

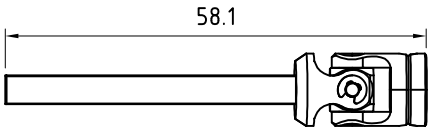

A1-20

紧定螺钉M3-4 ×1
Hexagon socket set screw

LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


12

锁差线 参考长度**100mm**
wire
Reference Length 100mm


锁差线弹簧管 参考长度**65mm**
Spring tube of wire rope
Reference Length 65mm

杯头**M1.6-3** ×**1**
Hexagon socket head cap screw


半圆头**M2-3** ×**1**
Hexagon socket button head screw

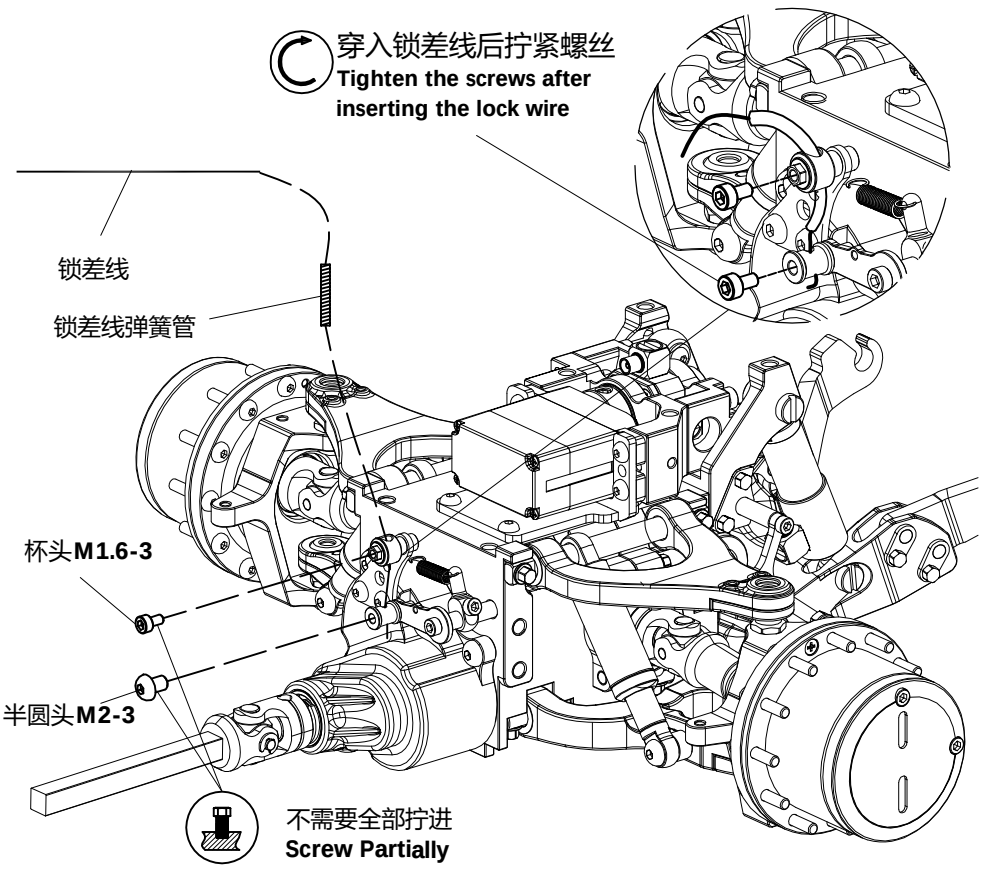

13

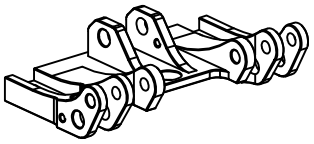

A1-25

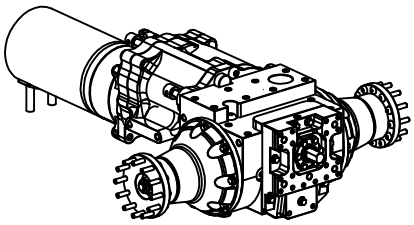


A1-26

半圆头**M3-6** ×**2**
Hexagon socket button head screw

半圆头**M3-8** ×**3**
Hexagon socket button head screw


内六角沉头**M3-6** ×**1**
Hexagon socket countersunk head screw

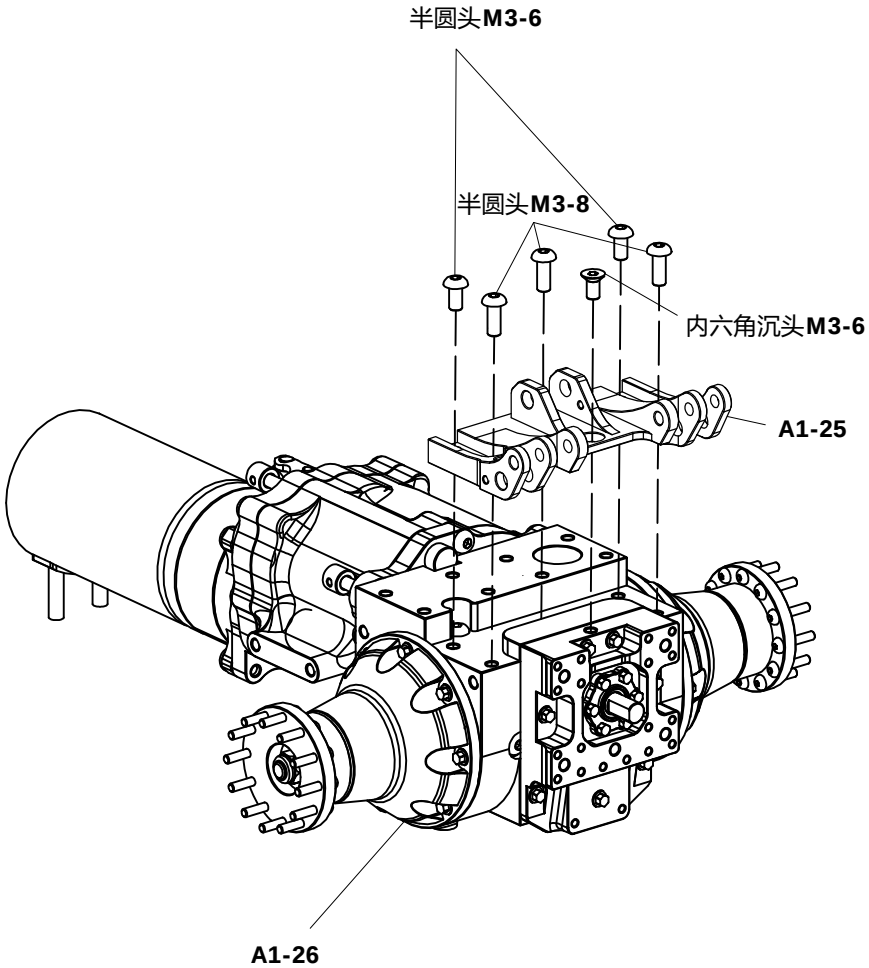

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING


14




A1-27




半圆头**M3-8** ×4
Hexagon socket button head screw

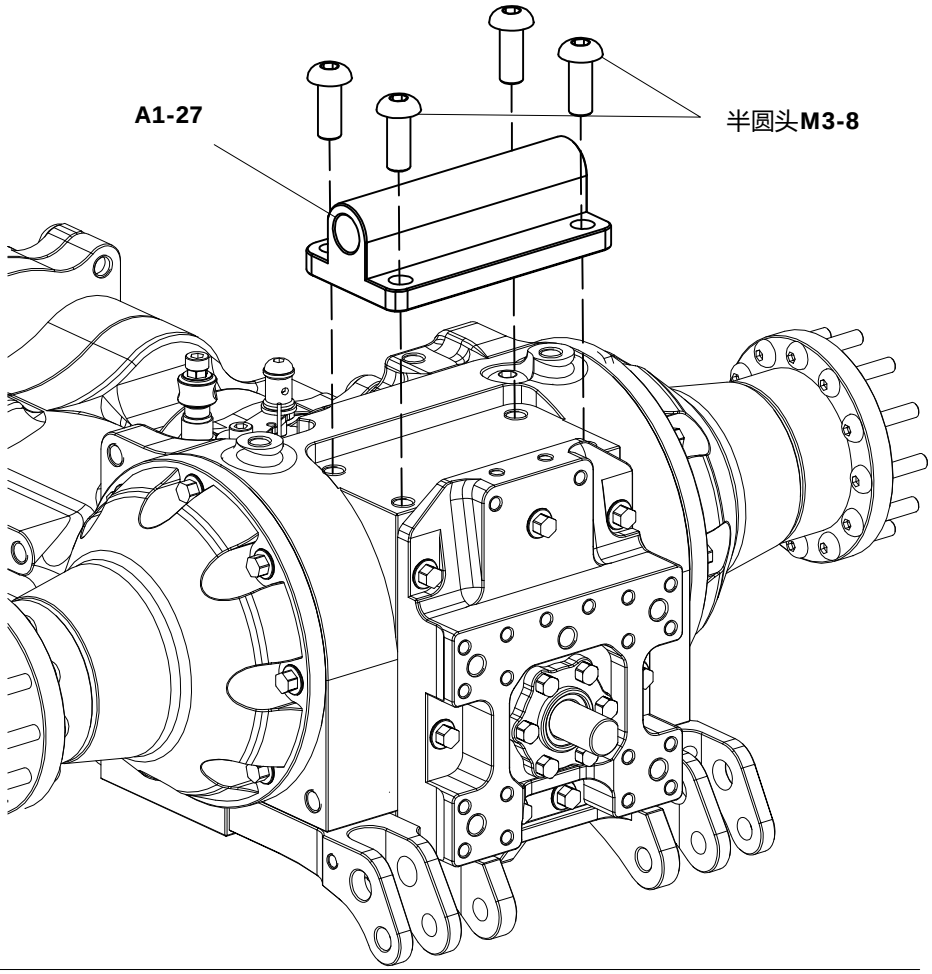


15

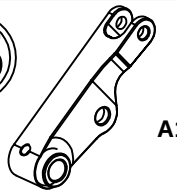

A1-28R

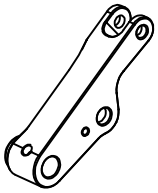


A1-28L

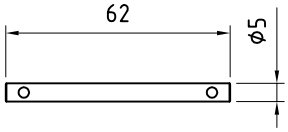


A1-29

紧定螺钉**M3-4** ×2
Hexagon socket set screw

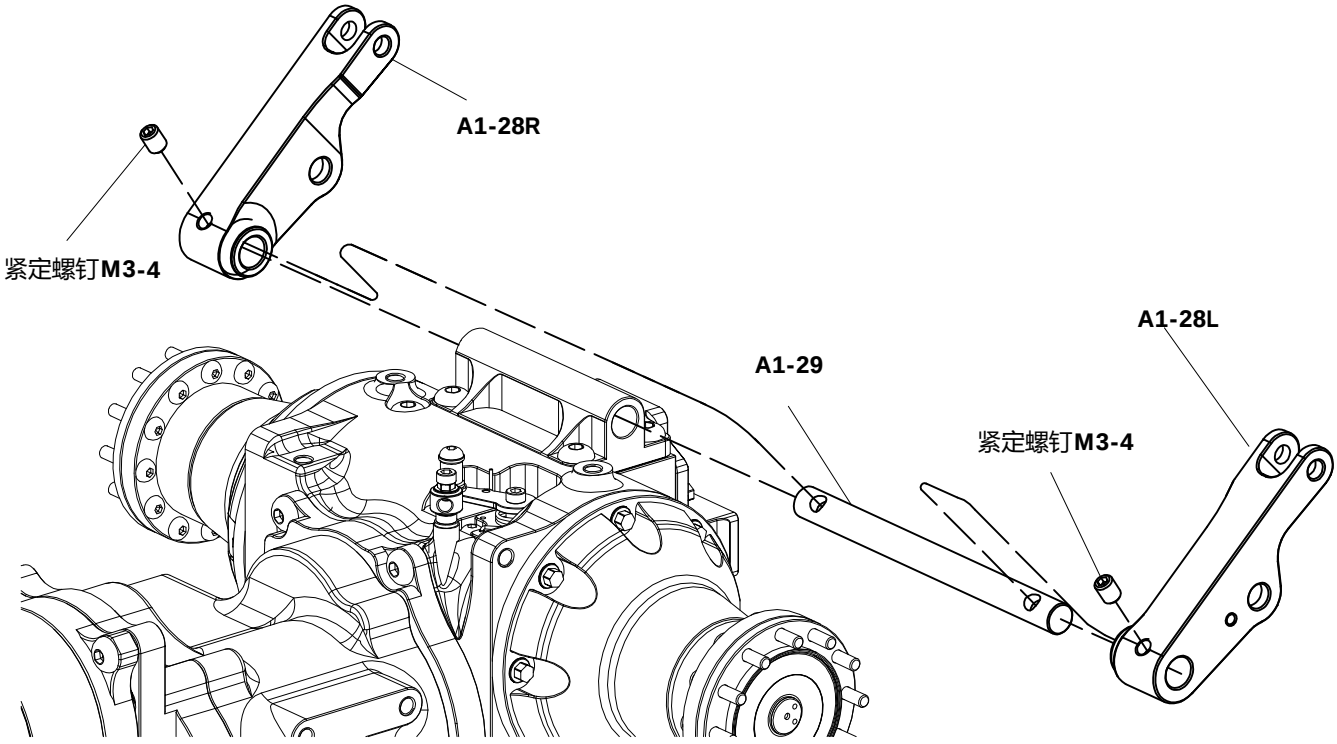


LESU
MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


16

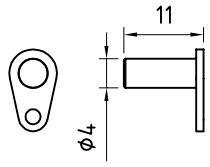

A1-30 ×2

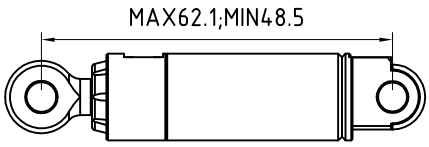

A1-31L

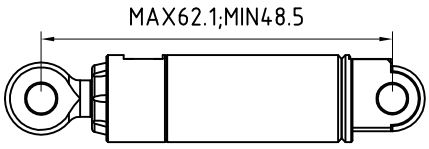

A1-31R



油管/oil hose
直径2内径1长度 290mm
Diameter 2 inner diameter
1 length 290mm


L13=60mm
L14=60mm
L15=85mm
L16=85mm

外六角M2-3 ×2
Hexagon screw

An-0017-D1 ×4

零件Y-1544-B为KIT版本，说明书另附
Part Y-1544-B is a kit version, see the attachment for the instructions


Y-1544-B ×4

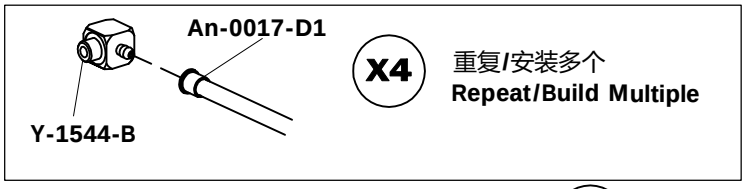


重复/安装多个
Repeat/Build Multiple

特别注意
Pay Special Attention

注意油嘴安装方向
Pay attention to the installation direction of the oil nozzle

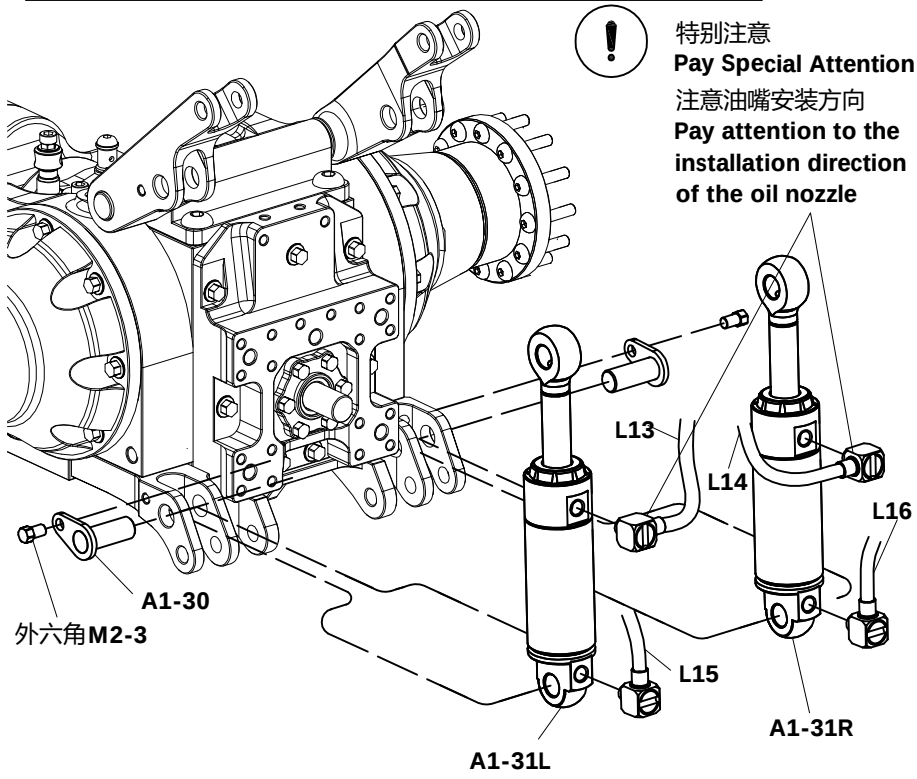

17

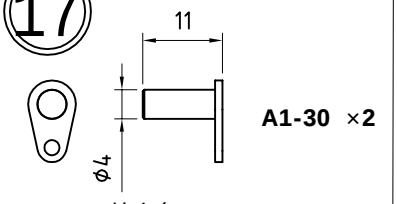


A1-30 ×2


外六角M2-3 ×2
Hexagon screw

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING


18

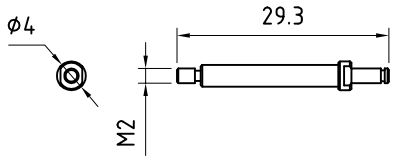

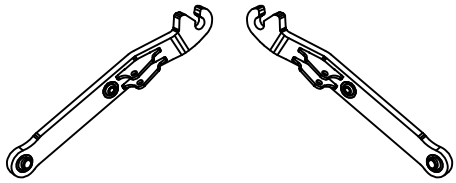


M2自锁螺母 Locking nut ×2


A1-32 ×2　　A1-33L　　A1-33R

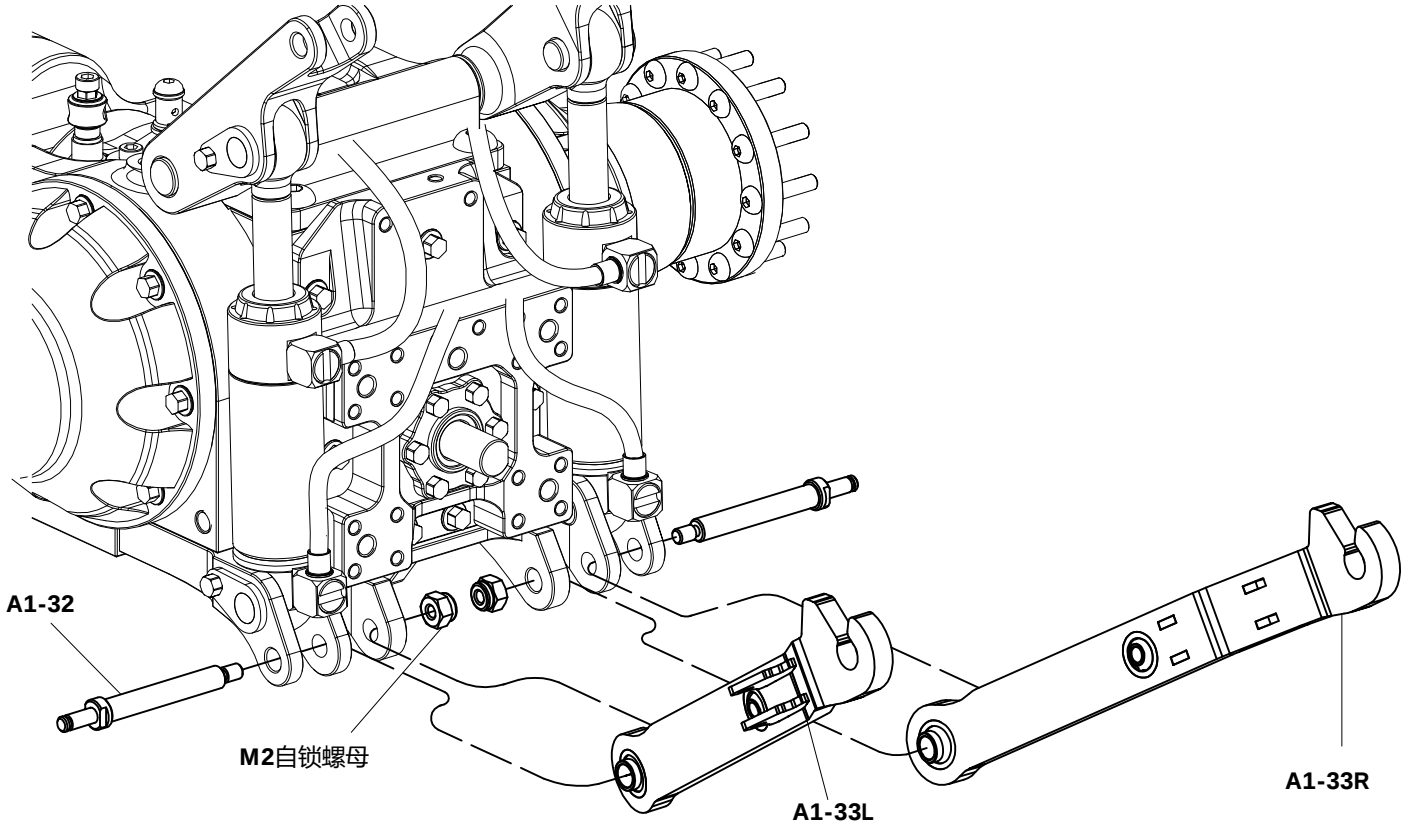


19

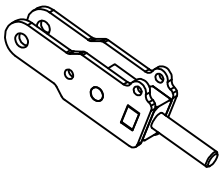


A1-34 ×2

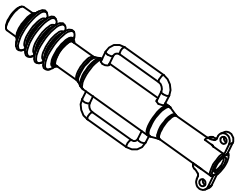


A1-35 ×2



A1-36 ×2

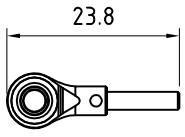

A1-37 ×2

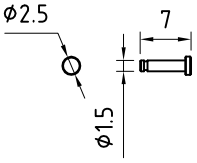



A1-38 ×2



开口挡圈φ1.2 ×2
"E"ringsφ1.2


特别注意
Pay Special Attention
A1-36按照图示折弯后再进行安装
Bend A1-36 according to the diagram before installation

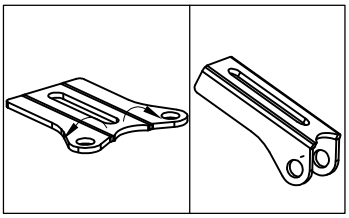

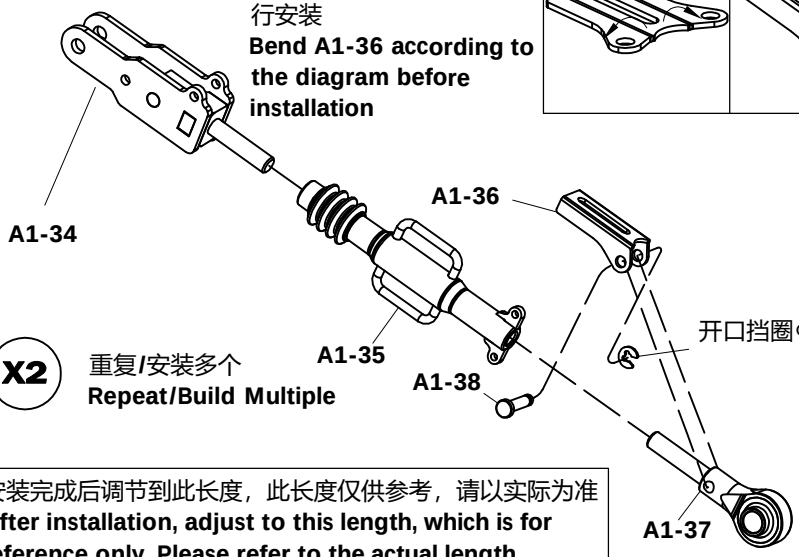

X2 重复/安装多个
Repeat/Build Multiple


安装完成后调节到此长度，此长度仅供参考，请以实际为准
After installation, adjust to this length, which is for reference only. Please refer to the actual length

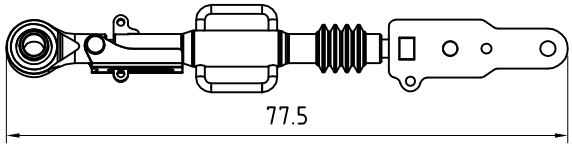

LESU MODEL RACING


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

20

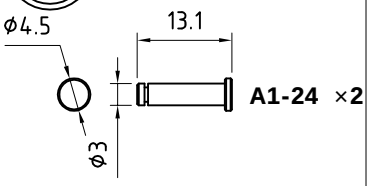


A1-24 ×2

开口挡圈φ2 ×2
"E"ringsφ2

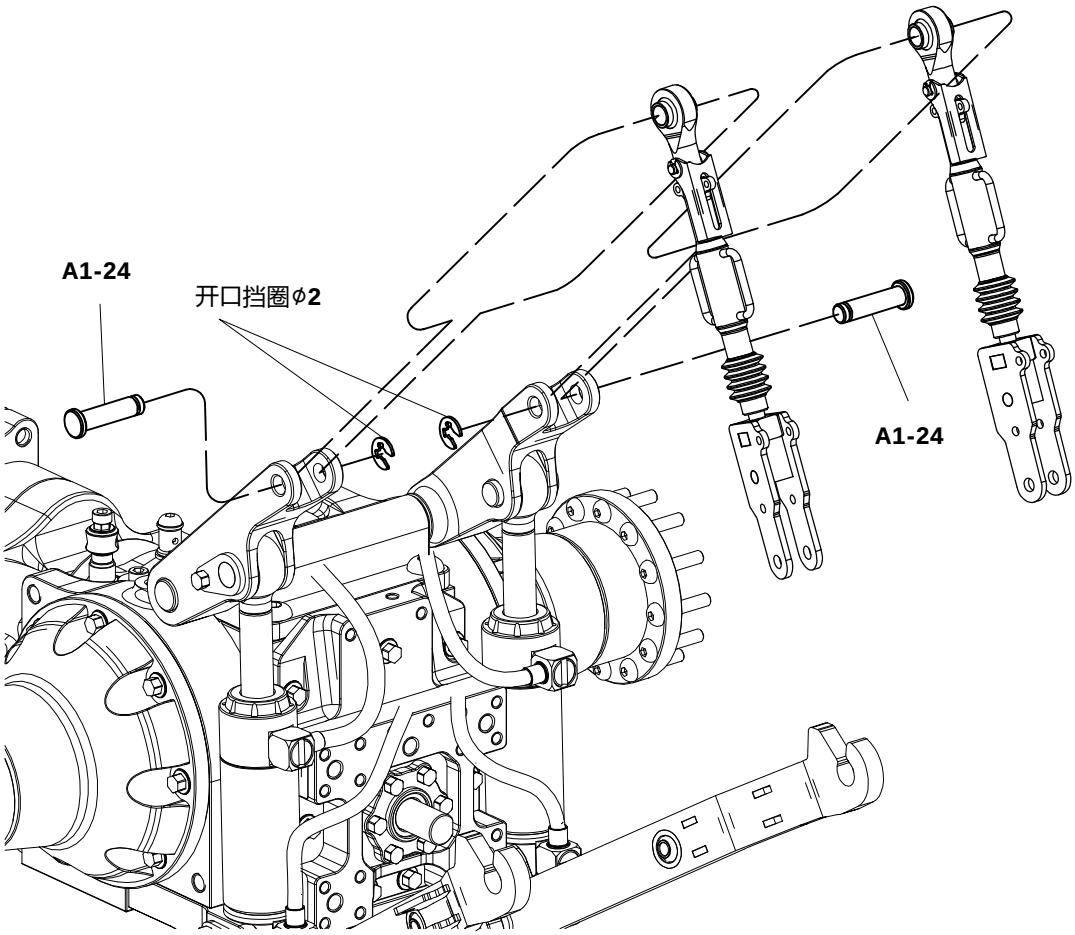


21

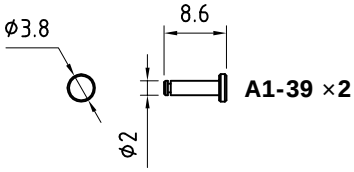


A1-39 ×2

开口挡圈φ1.2 ×2
"E"ringsφ1.2

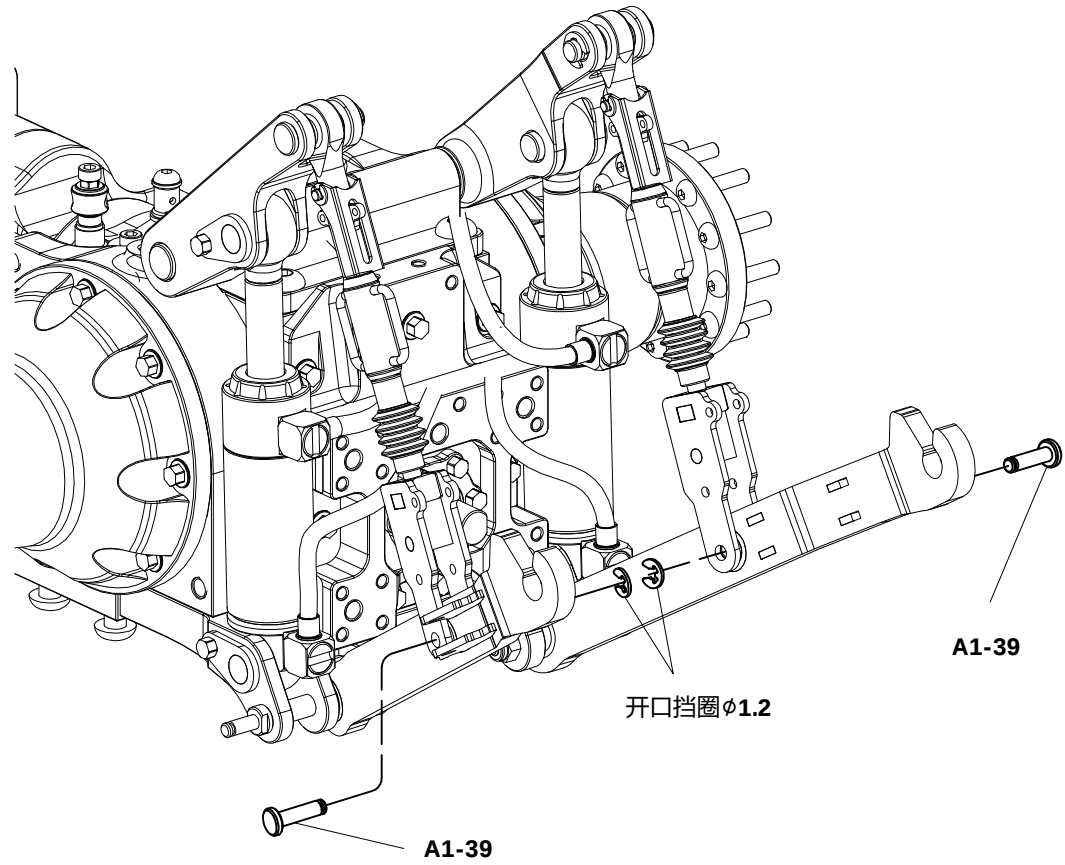

22

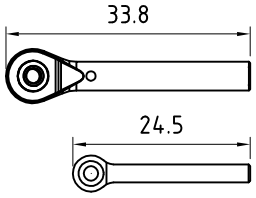

A1-40 ×2

A1-41 ×2




LA-LNM2.5-2.5 ×2



开口挡圈ϕ1.5 ×2
"E"ringsϕ1.5


安装此步前，
优先完成这个步骤
Before installing this step, prioritize completing it

X2 重复/安装多个
Repeat/Build Multiple




A1-40 LA-LNM2.5-2.5 A1-41


安装完成后调节到此长度，此长度仅供参考，请以实际为准
After installation, adjust to this length, which is for reference only. Please refer to the actual length

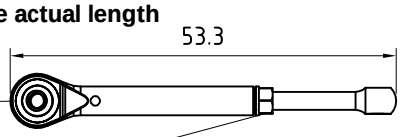

调节长度
Adjust length

确认长度后扭紧螺母锁紧
After confirming the length, tighten the nut and lock it

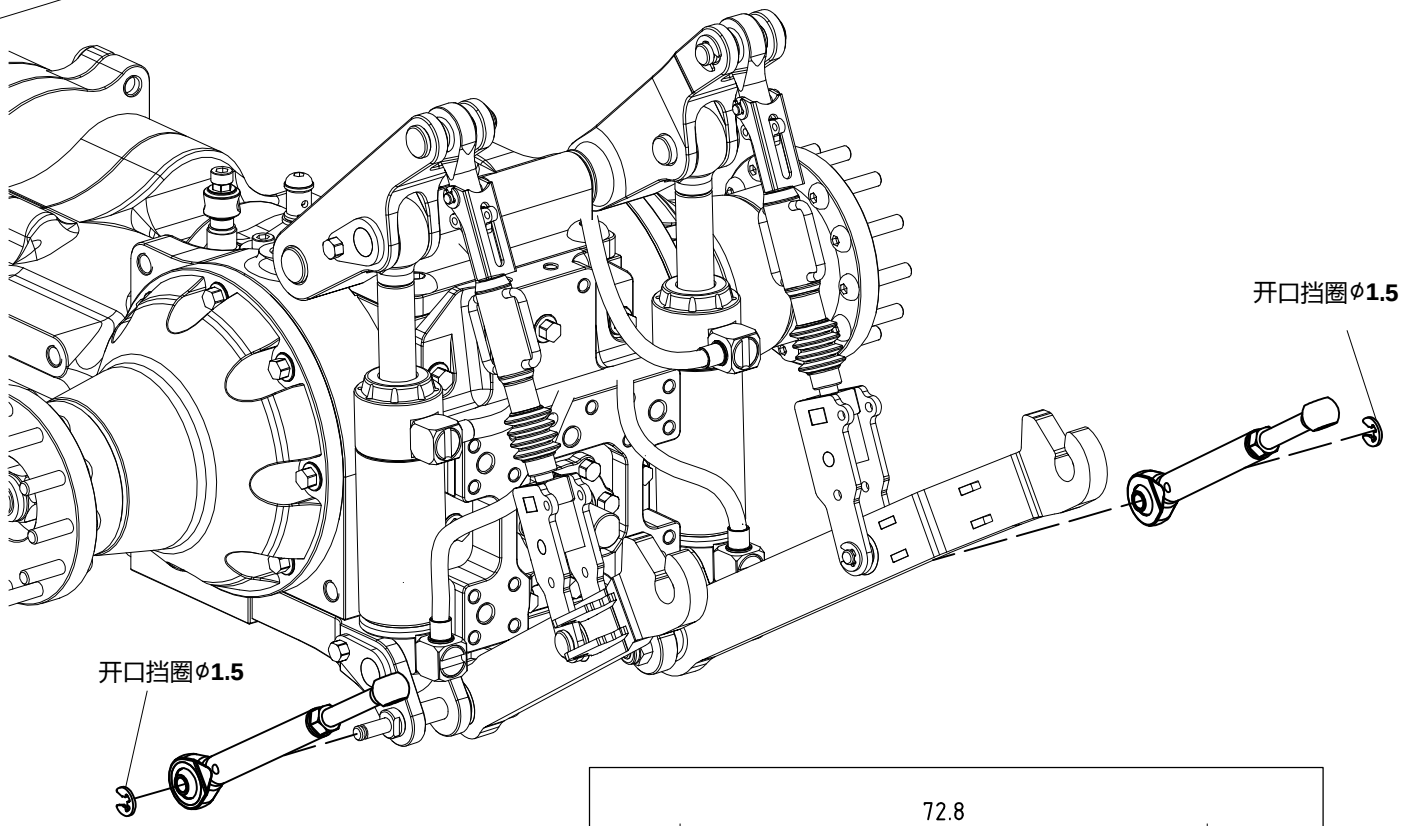

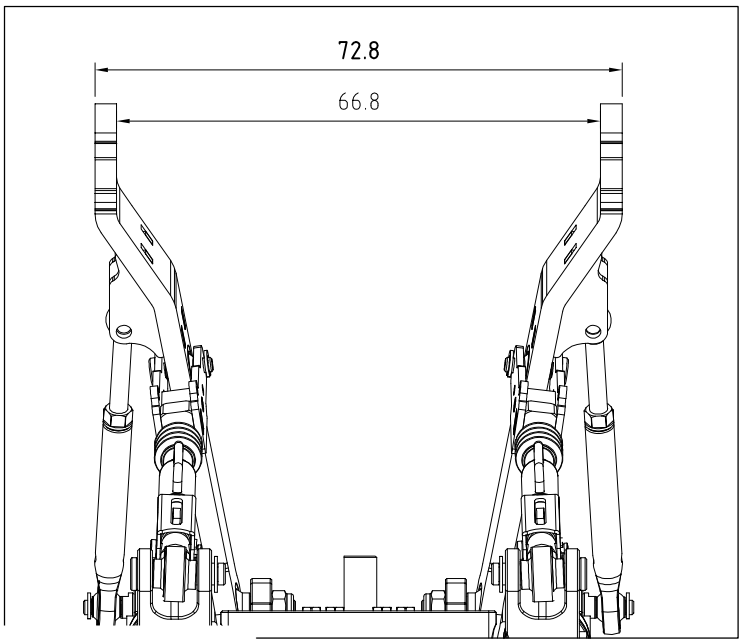


特别注意
Pay Special Attention
安装完成后调节到此长度，
此长度仅供参考，请以实际为准
After installation, adjust to this length, which is for reference only. Please refer to the actual length

LESU MODEL RACING


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

23

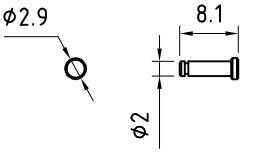


A1-42 ×2

开口挡圈φ1.5 ×2
"E"ringsφ1.5

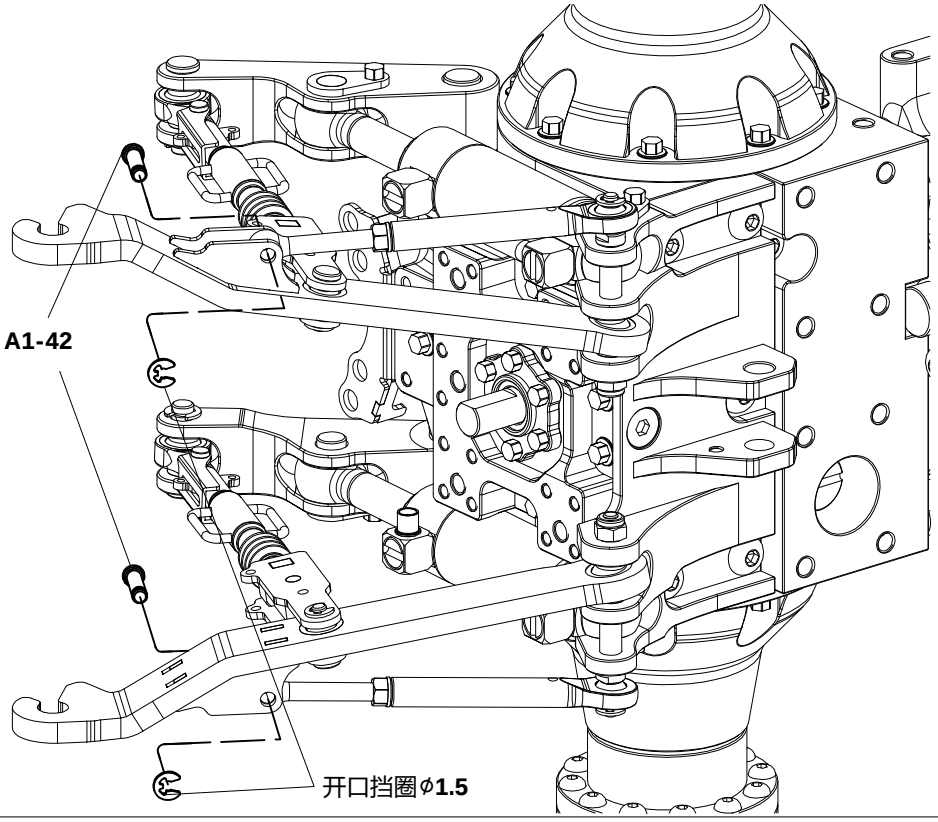



24

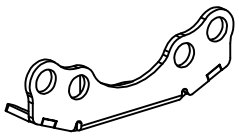

A1-43

外六角M2-4 ×2
Hexagon screw

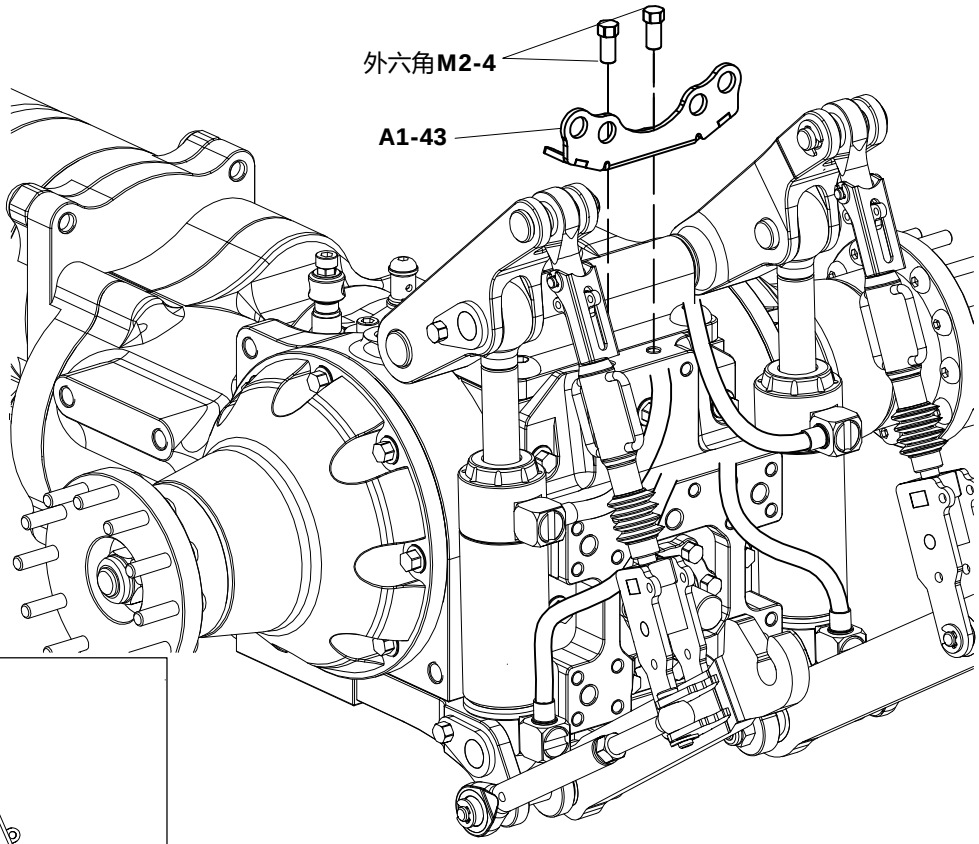

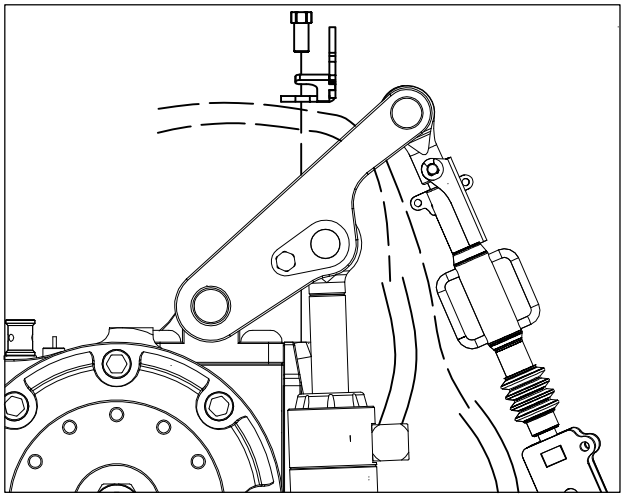


特别注意
Pay Special Attention

油管从这里穿过
The oil pipe passes through here

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


LESU MODEL RACING

25

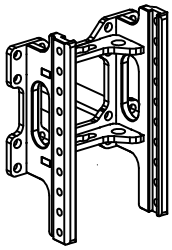


A1-44

外六角M2-6 ×16
Hexagon screw

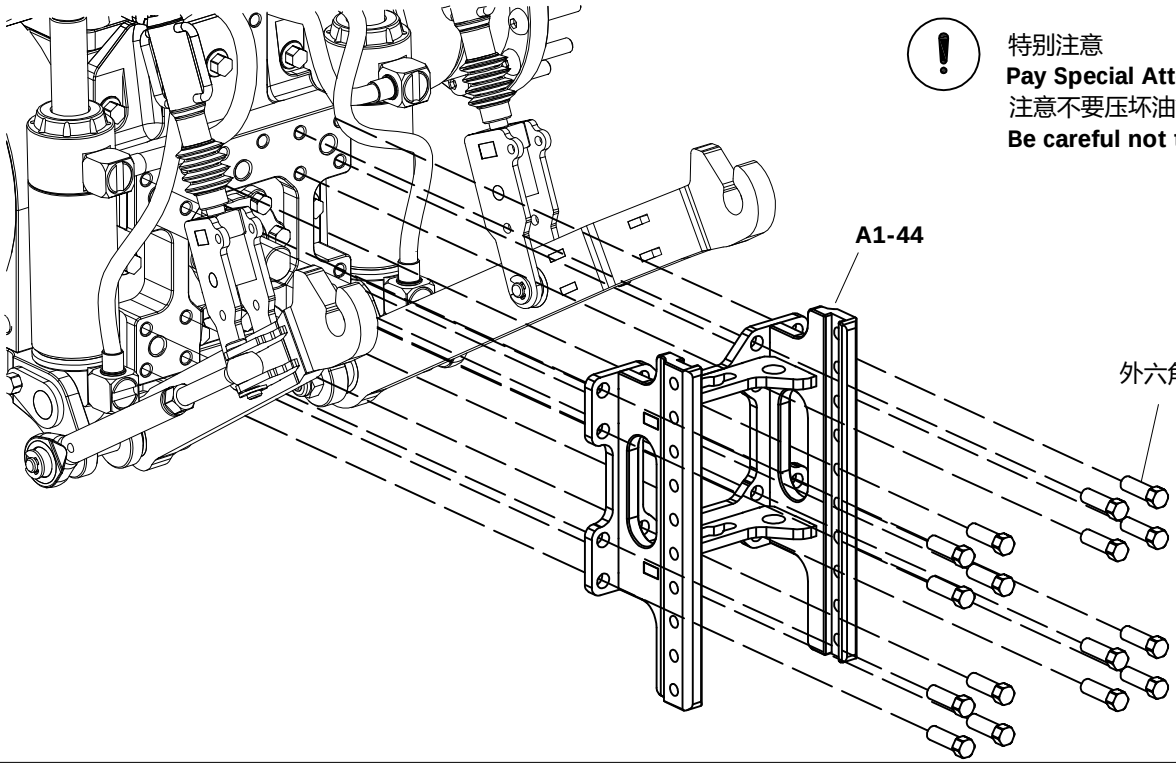


特别注意
Pay Special Attention
注意不要压坏油管
Be careful not to crush the oil pipe

26

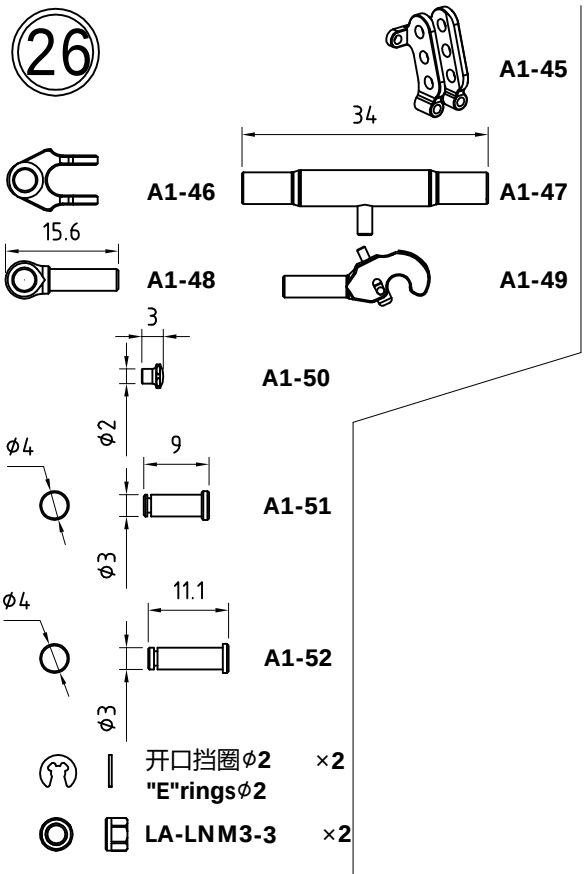

开口挡圈ϕ2 ×2
"E"rings ϕ2

LA-LNM3-3 ×2




调节长度
Adjust length

调节长度
Adjust length

确认长度后扭紧螺母锁紧
After confirming the length, tighten the nut and lock it

安装完成后调节到此长度，此长度仅供参考，请以实际为准
After installation, adjust to this length, which is for reference only. Please refer to the actual length

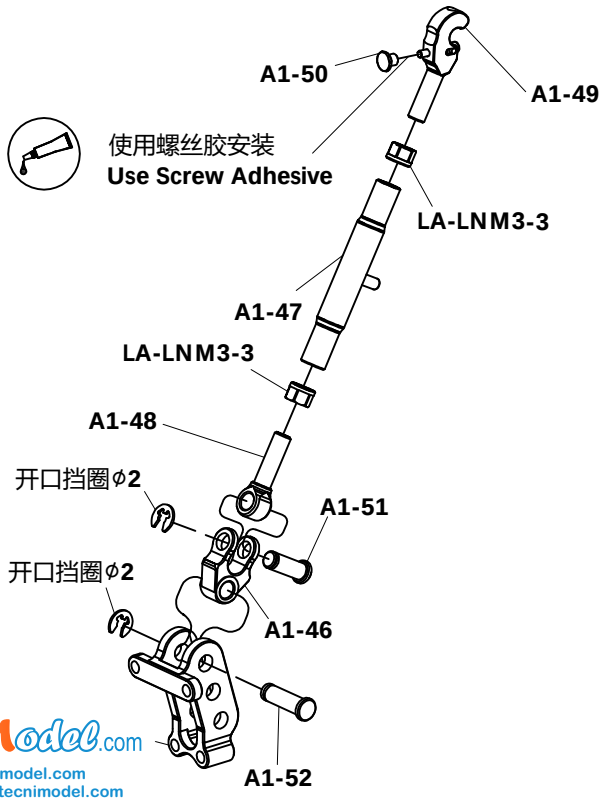


LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

27


外六角**M2-6** ×2
Hexagon screw


外六角**M2-10** ×2
Hexagon screw

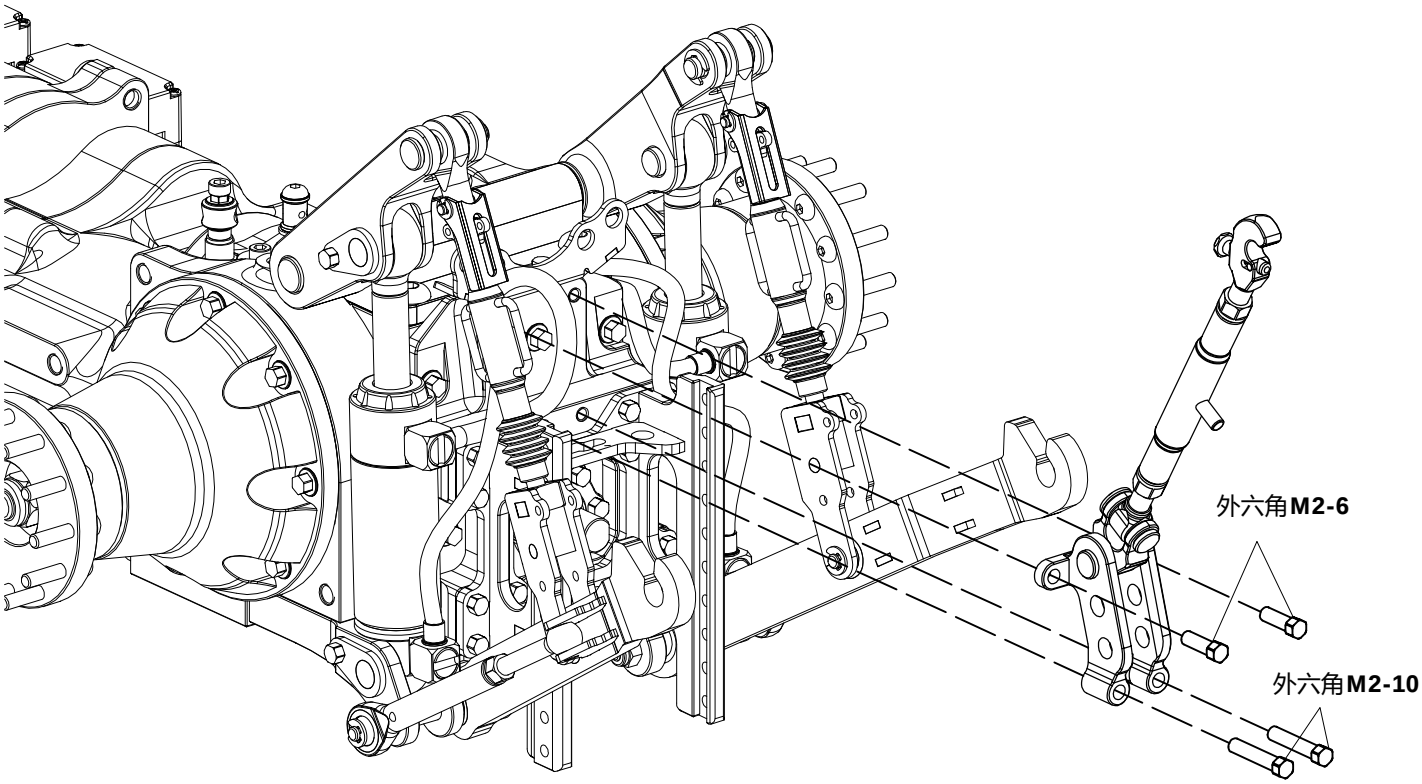

28


A1-53


A1-54

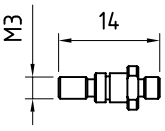


A1-55


A1-56


A1-57


外六角**M1.6-6** ×4
Hexagon screw


M3自锁螺母 ×1
Locking nut

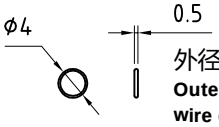

外径**4**×线径**0.5O**圈 ×1
Outer diameter 4×
wire diameter 0.5
fluorine glue O -ring

安装此步前，
优先完成这个步骤
Before installing this step, prioritize completing it

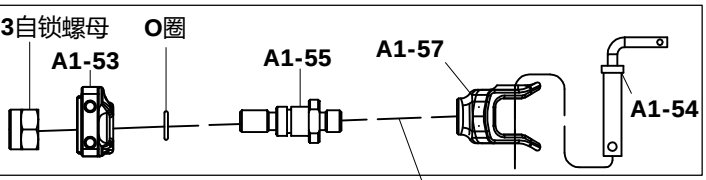


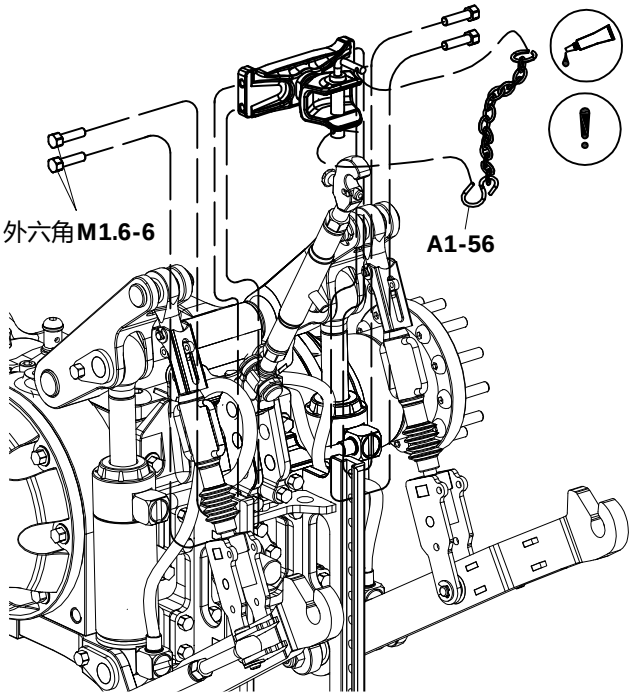

使用螺丝胶安装
Use Screw Adhesive

特别注意
Pay Special Attention


注意螺丝安装孔位
Pay attention to the screw installation hole position

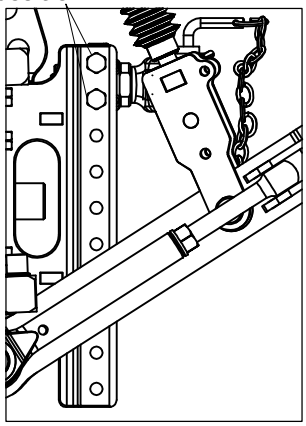

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING

29



A1-58




A1-59




外六角M1.6-6 ×4
Hexagon screw



外六角M2-3 ×2
Hexagon screw

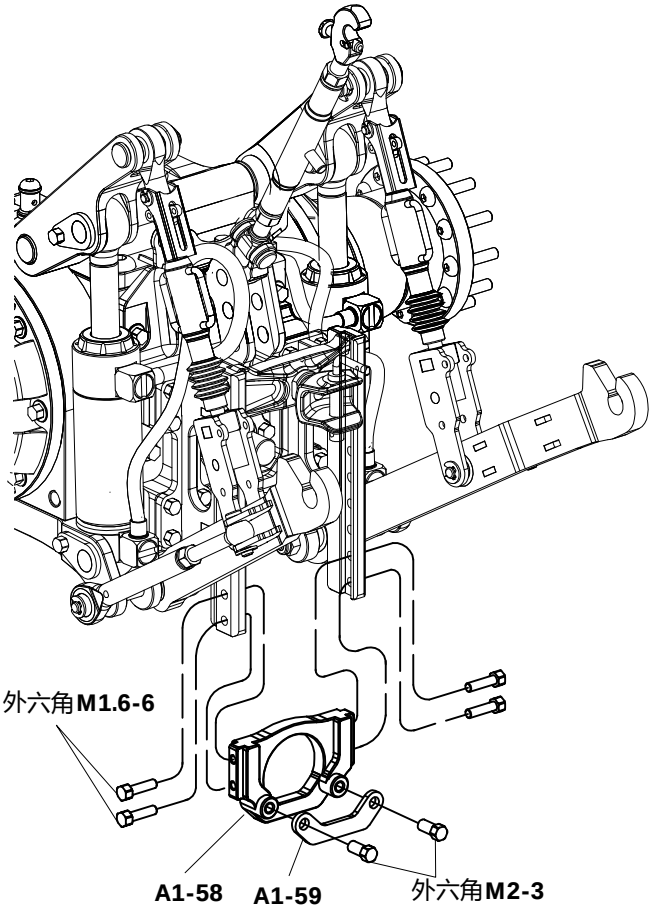

30

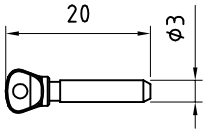

A1-60




A1-61




A1-62



A1-63



A1-64

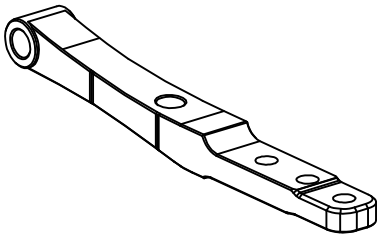

A1-65




外六角M2-4 ×1
Hexagon screw



内六角沉头M3-6 ×2
Hexagon socket countersunk head screw




外六角M2-8 ×1
Hexagon screw

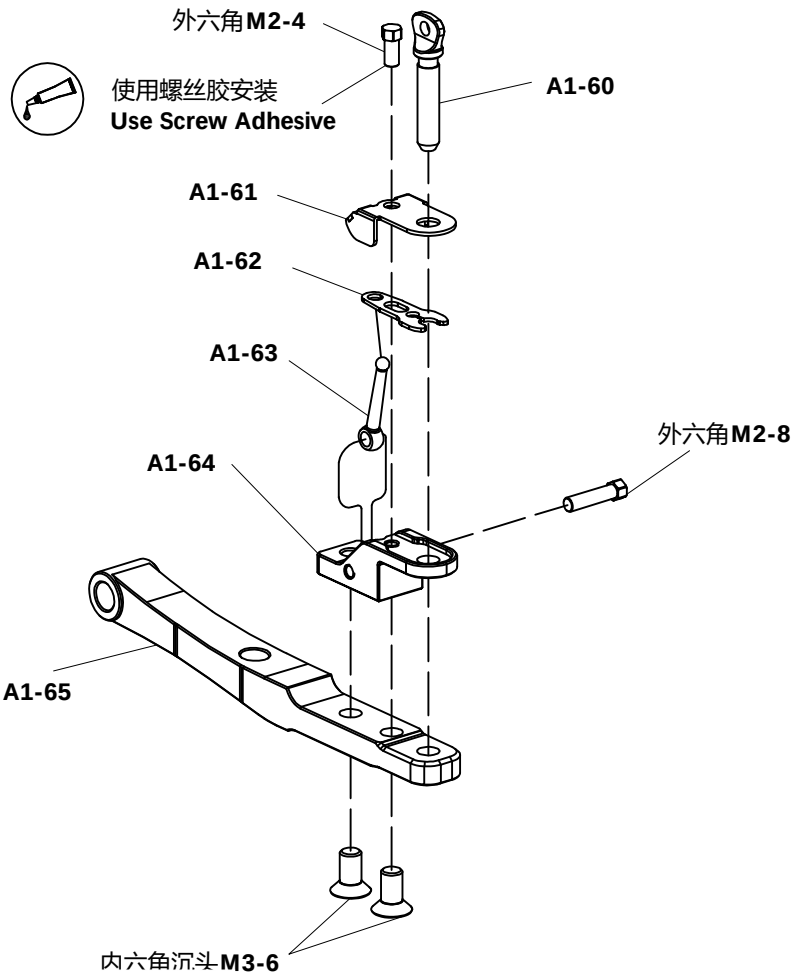

LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


31

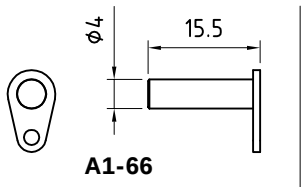

A1-66


外六角M2-3 ×1
Hexagon screw

32

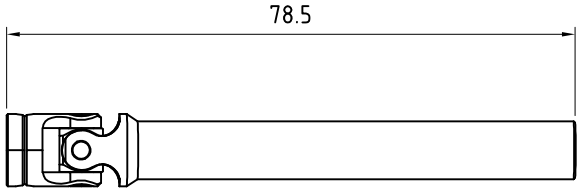

A1-67

紧定螺钉M3-4 ×1
Hexagon socket
set screw

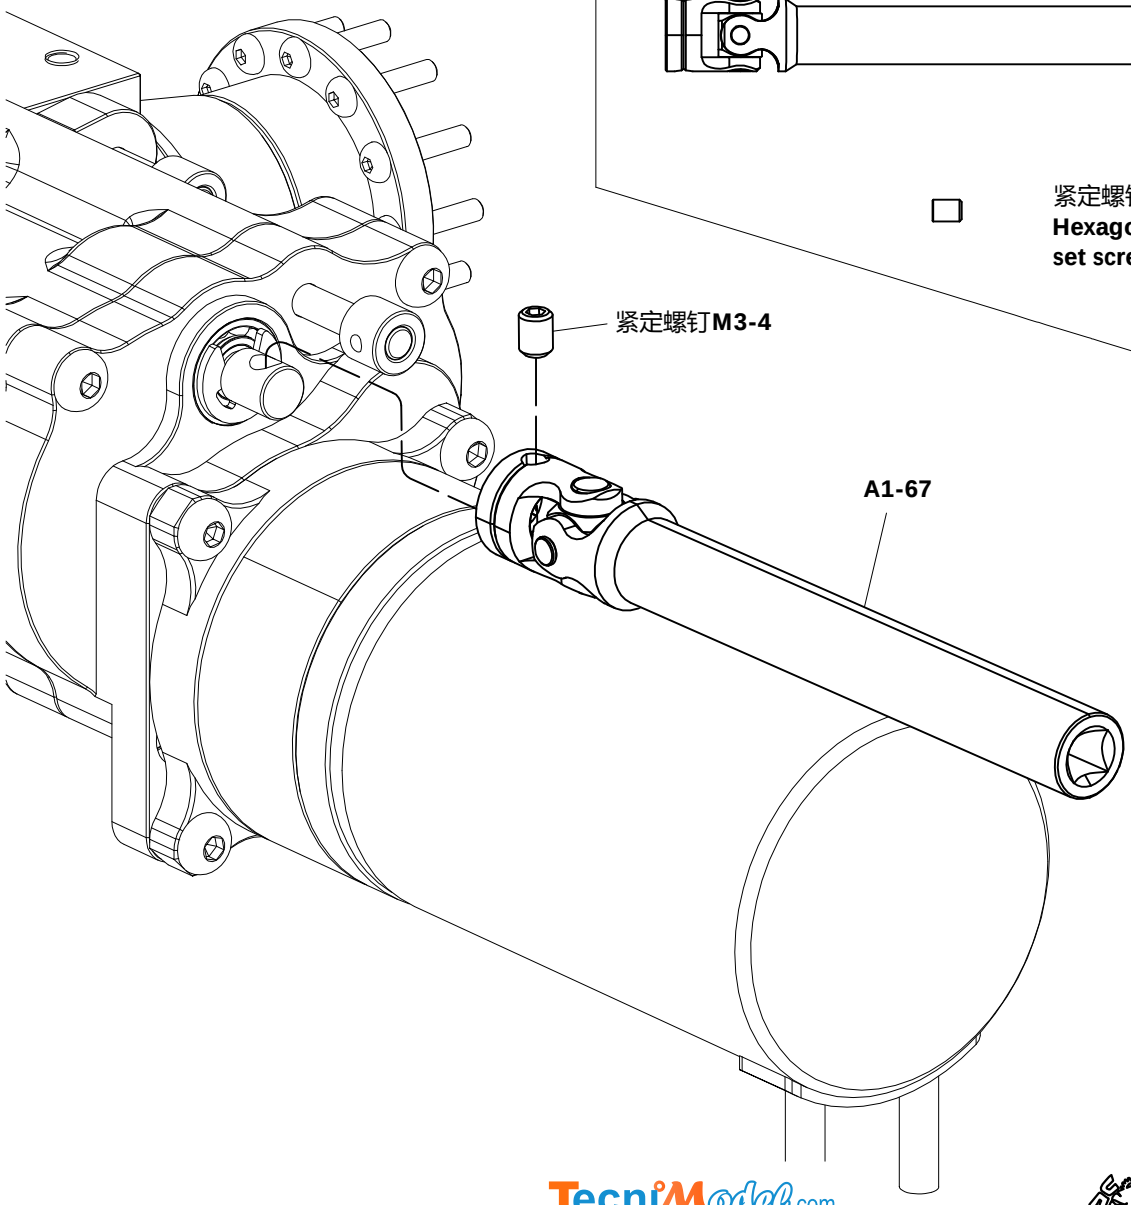

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING


33

锁差线 参考长度270mm
wire
Reference Length 270mm


锁差线弹簧管 参考长度240mm
Spring tube of wire rope
Reference Length 240mm

杯头M1.6-3 ×1
Hexagon socket head cap screw


半圆头M2-3 ×1
Hexagon socket button head screw

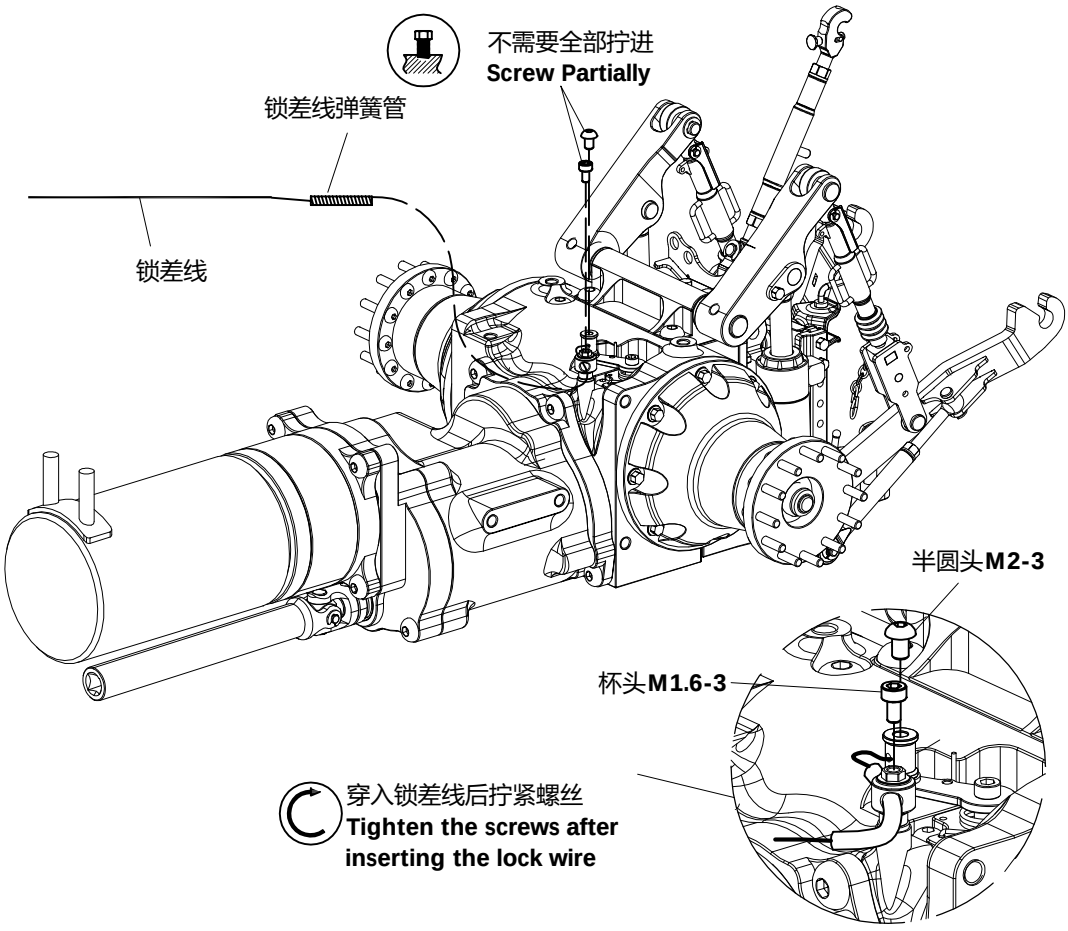

34

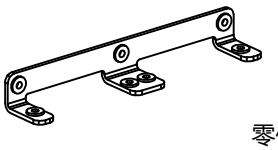


A1-68



An-0018 ×2


零件An-0018为KIT版本，说明书另附
Part An-0018 is a kit version, see the attachment for the instructions

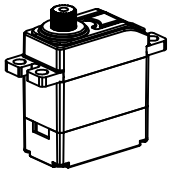

EL-009-1 ×2


半圆头M2-4 ×4
Hexagon socket button head screw

十字盘头M2.3-6(EL-009-1附带的零件) ×2
Cross pan head screw

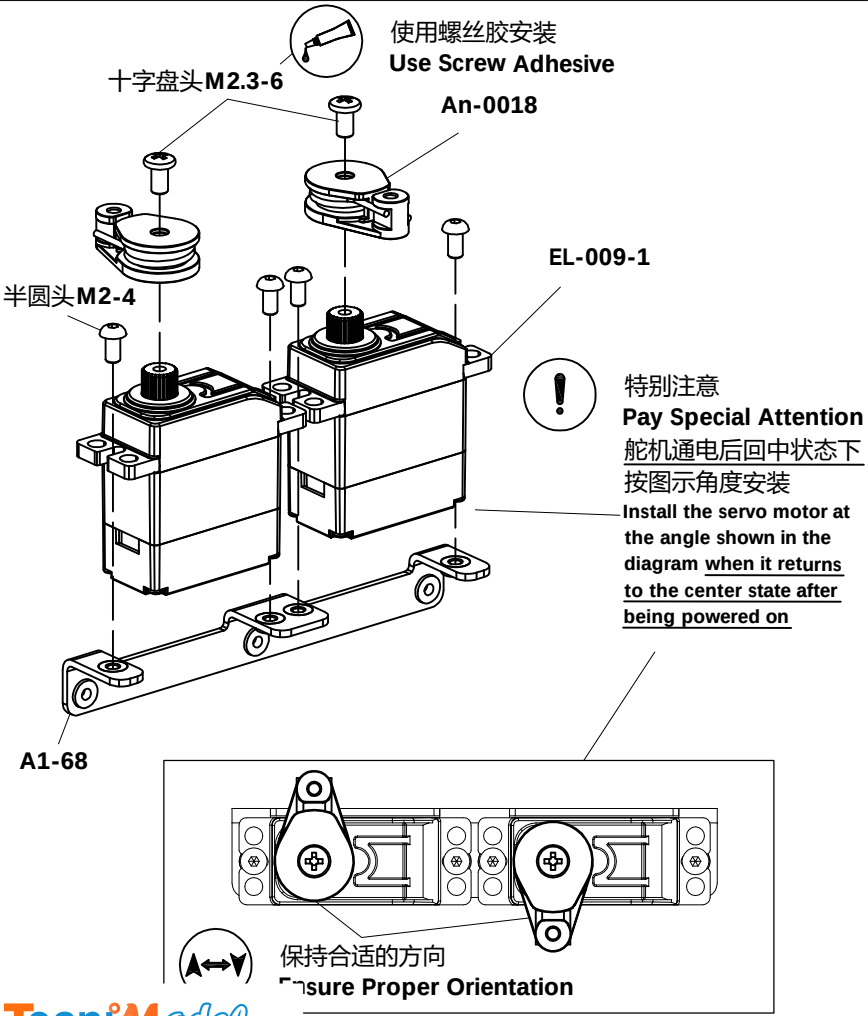


LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


35

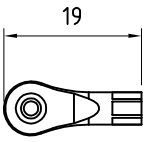


A1-69 ×4

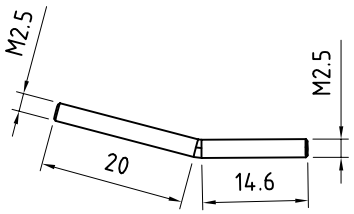


A1-70

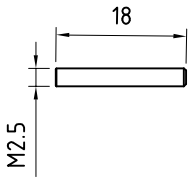


A1-21

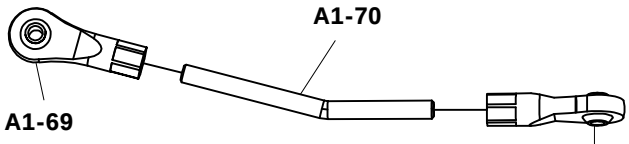

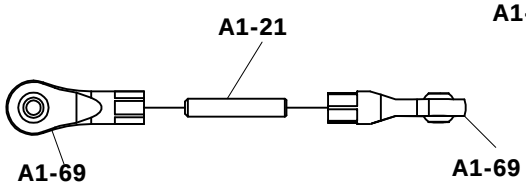

安装完成后调节到此长度，
此长度仅供参考，请以实际为准
After installation, adjust to this length, which is for reference only. Please refer to the actual length

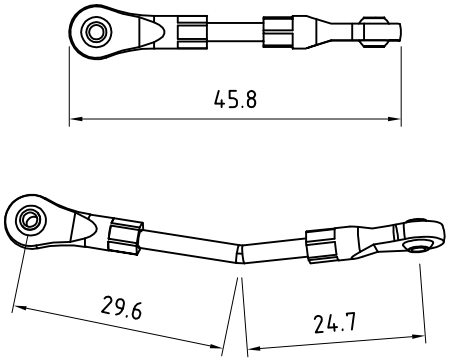


36




半圆头**M2-8** ×2
Hexagon socket button head screw

半圆头**M2-8**

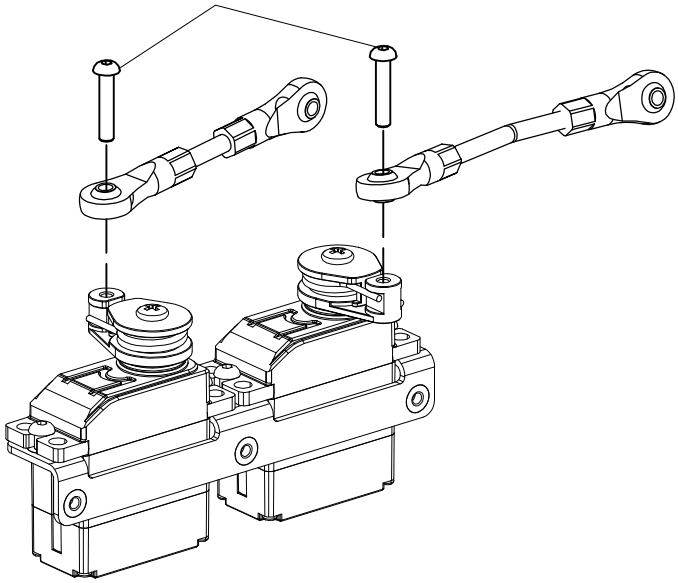



不需要全部拧进
Screw Partially

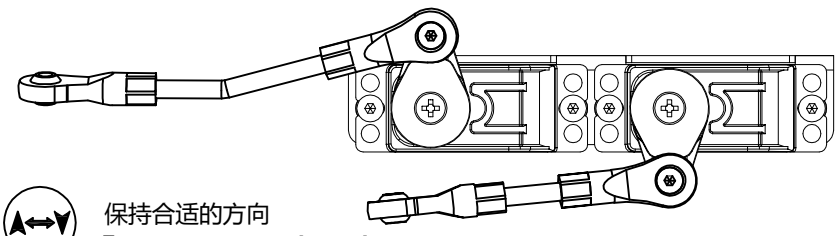


保持合适的方向
Ensure Proper Orientation

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


LESU
MODEL RACING

37

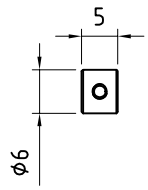


A1-71 ×2

半圆头M2-7 ×2
Hexagon socket button head screw

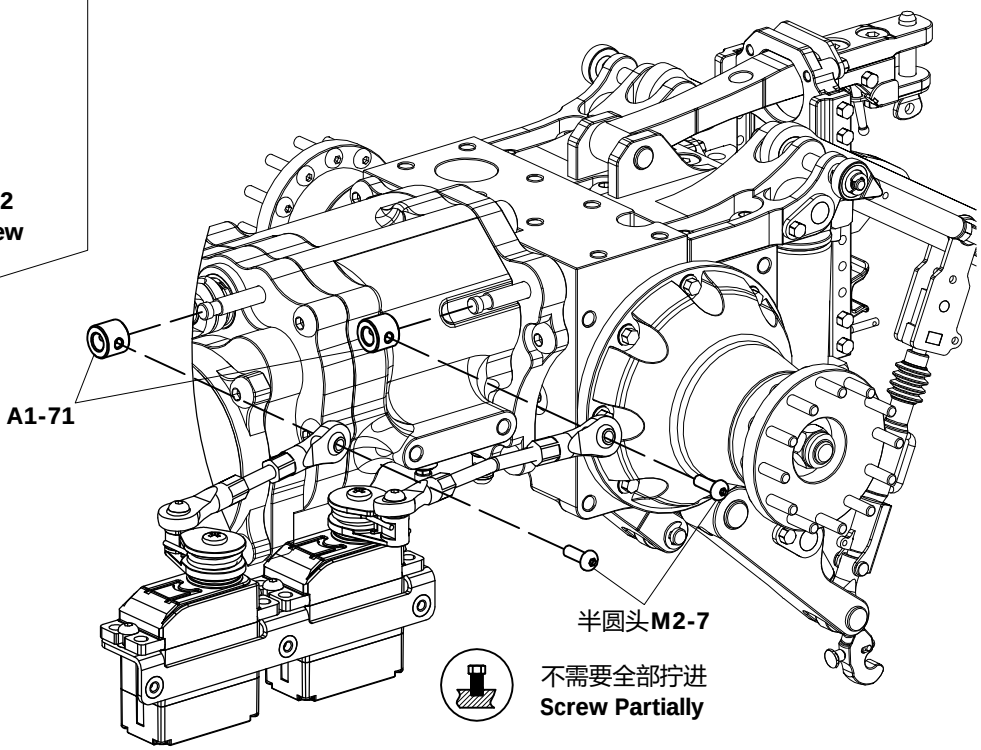


不需要全部拧进
Screw Partially

38




B1-1 B1-2

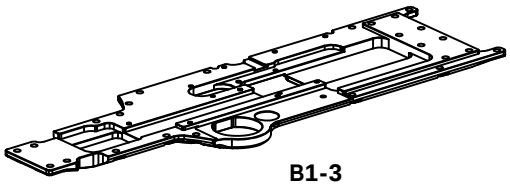

B1-3


半圆头M2-4 ×4
Hexagon socket button head screw

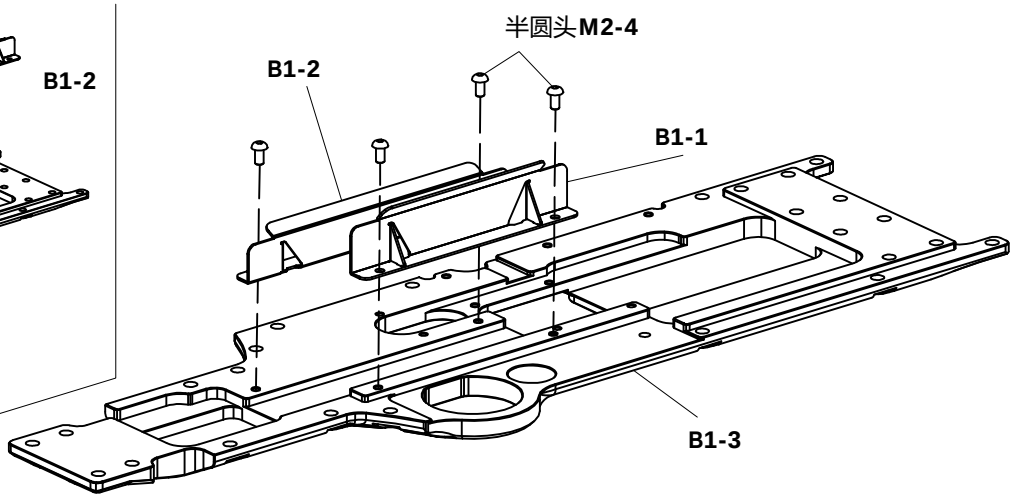

39

半圆头M3-8 ×8
Hexagon socket button head screw

半圆头M3-6 ×4
Hexagon socket button head screw

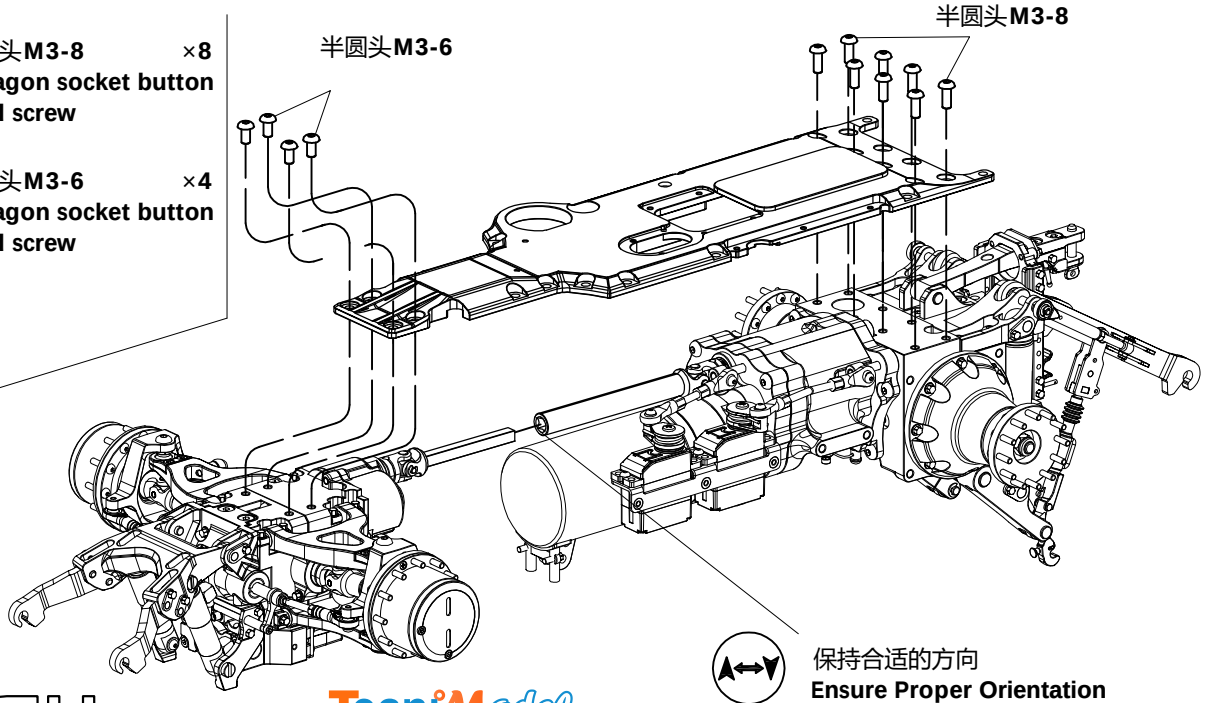


保持合适的方向
Ensure Proper Orientation


LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

40

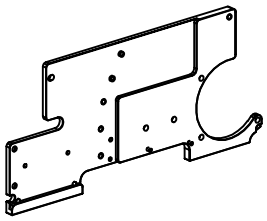

B1-4

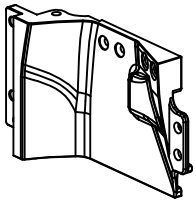


A1-75R

半圆头M2-4 ×3
Hexagon socket button head screw

半圆头M3-6 ×4
Hexagon socket button head screw

半圆头M3-8 ×8
Hexagon socket button head screw

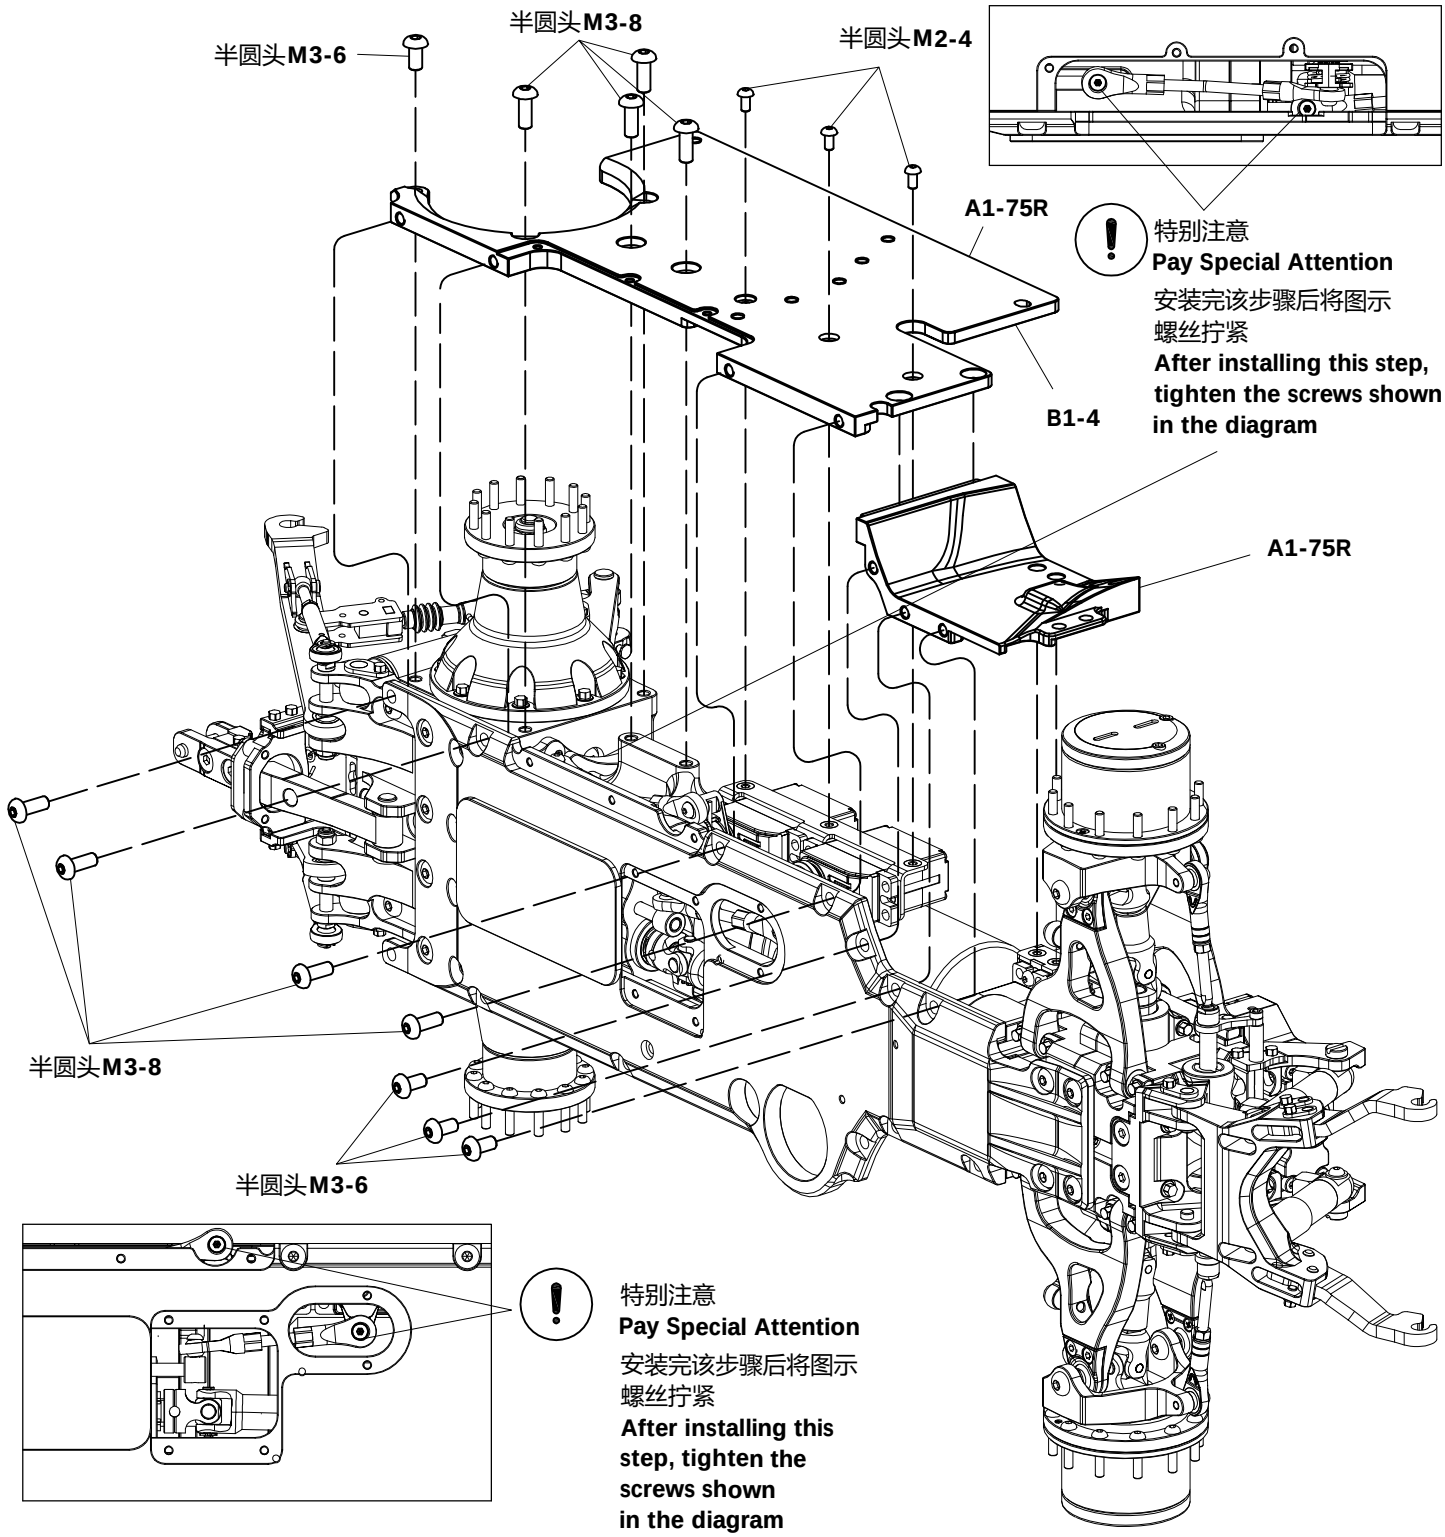


特别注意
Pay Special Attention
安装完该步骤后将图示螺丝拧紧
After installing this step, tighten the screws shown in the diagram


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING

41

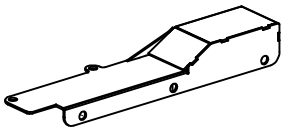


B1-5

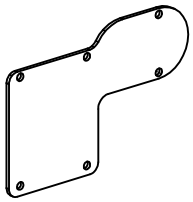


B1-6




半圆头M2-4 ×12
Hexagon socket button head screw

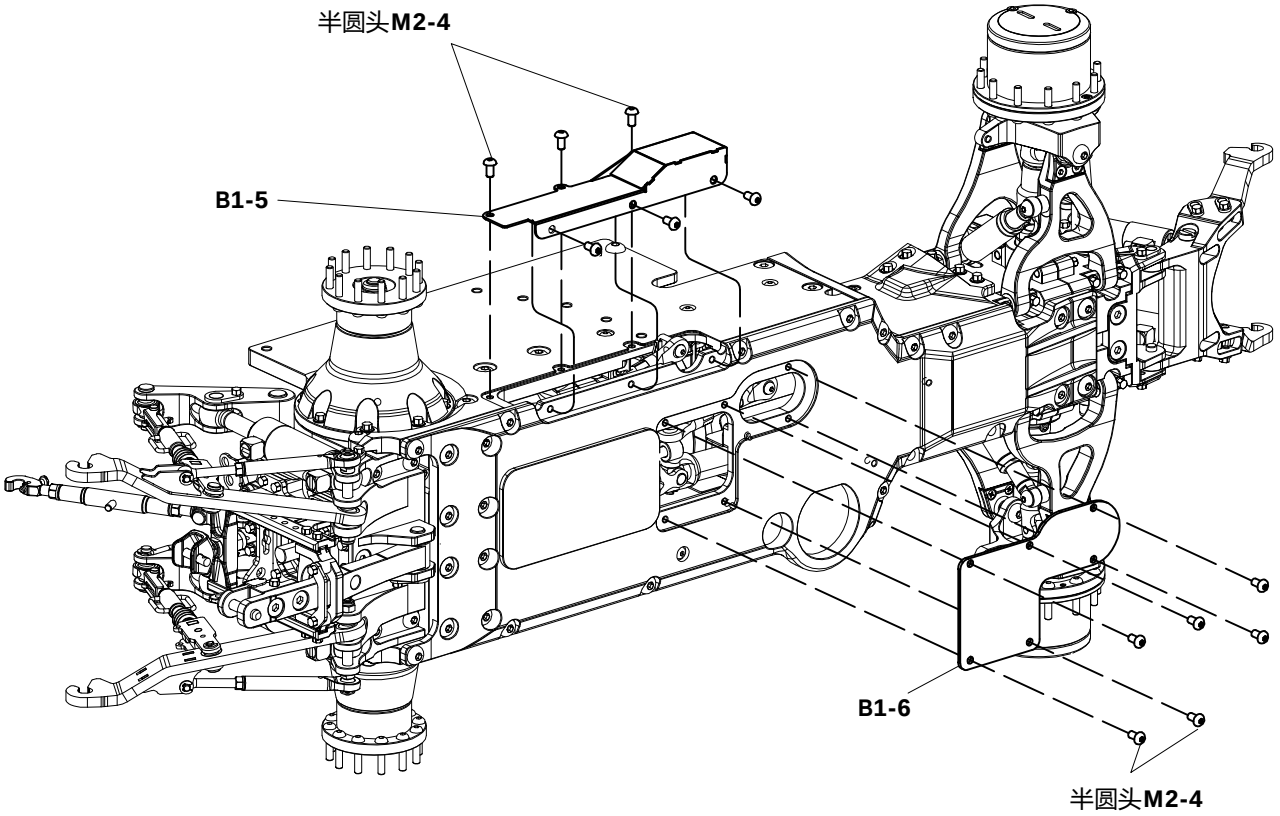


42

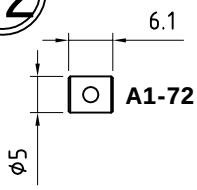




An-0018

零件An-0018为KIT版本，说明书另附
Part An-0018 is a kit version, see the attachment for the instructions

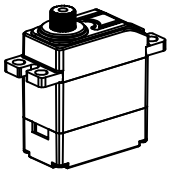

EL-009-1

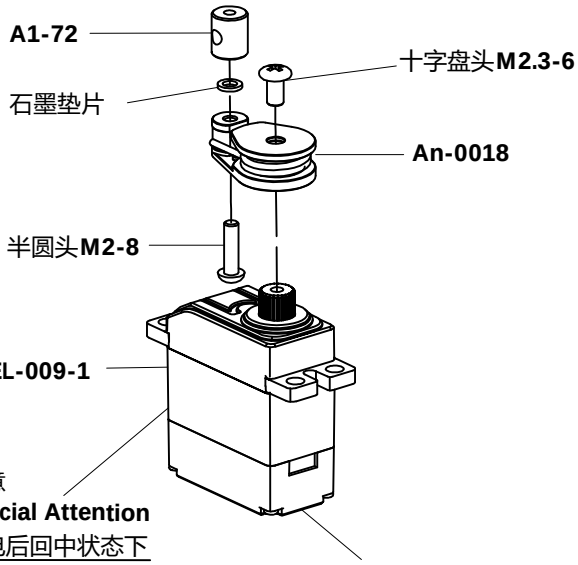




十字盘头M2.3-6(EL-009-1附带的零件) ×1
Cross pan head screw




半圆头M2-8 ×1
Hexagon socket button head screw

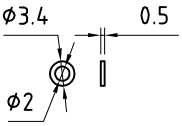

石墨垫片 ×1
Graphite gasket
外径3.4内径2厚度0.5
Outer diameter 4 inner diameter 2 thickness 0.5



特别注意
Pay Special Attention
舵机通电后回中状态下按图示角度安装
Install the servo motor at the angle shown in the diagram when it returns to the center state after being powered on

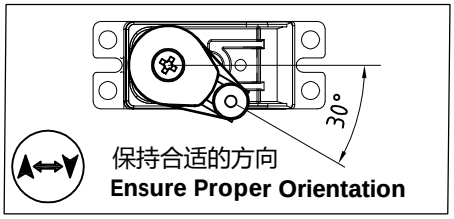


LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

43


A1-73×2

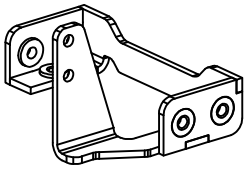

A1-74


杯头**M1.6-3** ×2
Hexagon socket head cap screw

半圆头**M2-4** ×2
Hexagon socket button head screw

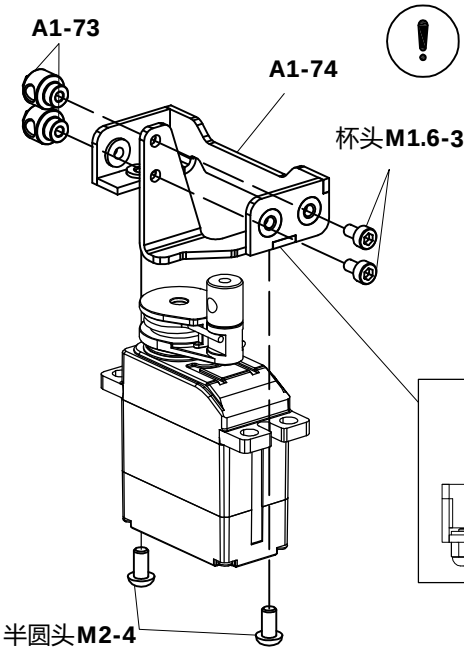


特别注意
Pay Special Attention
注意**A1-71**的安装方向
tPay attention to the installation direction of A1-71

44

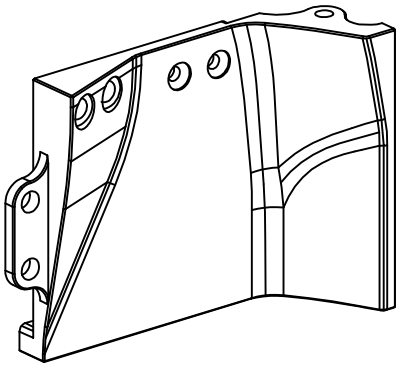


A1-75L

半圆头**M3-6** ×3
Hexagon socket button head screw

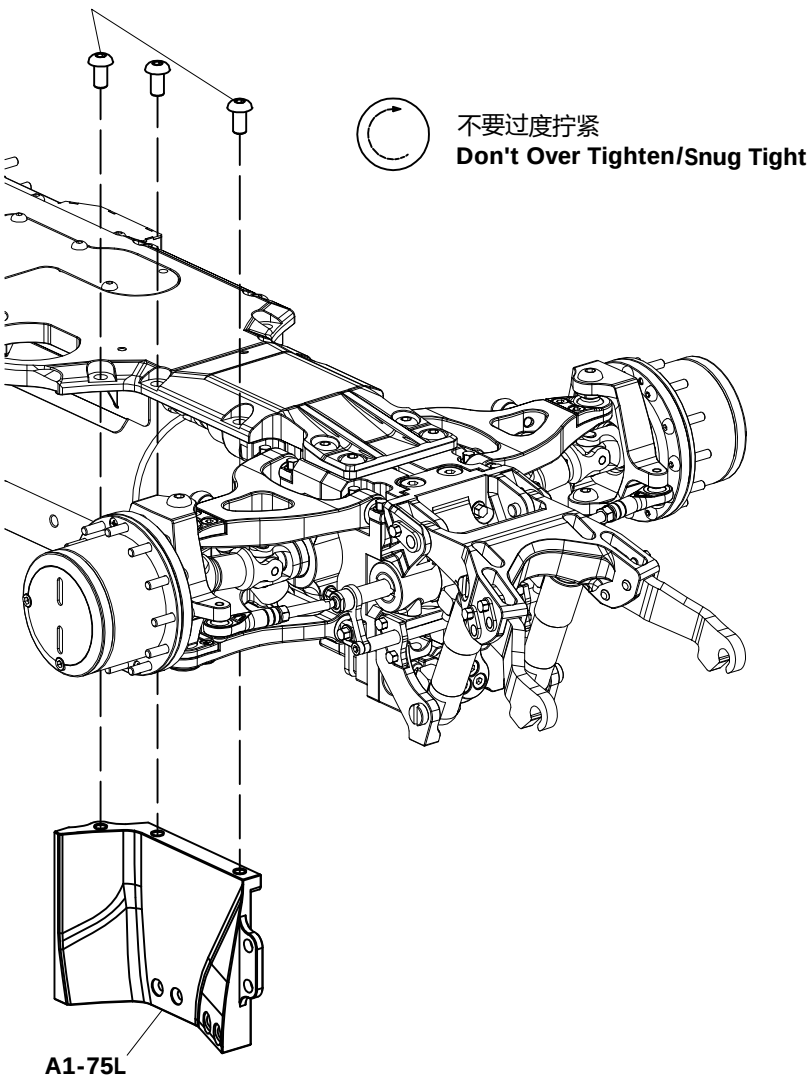

不要过度拧紧
Don't Over Tighten/Snug Tight

45



B1-7




半圆头**M3-6** ×2
Hexagon socket button head screw



法兰外六角**M3-6** ×4
Locking flange nut



法兰外六角**M3-8** ×2
Locking flange nut



法兰外六角**M3-10** ×2
Locking flange nut



不要过度拧紧
Don't Over Tighten/Snug Tight

46



内六角沉头**M2-5** ×4
Hexagon socket countersunk head screw




特别注意
Pay Special Attention
此步骤完成后拧紧步骤45
与步骤46的螺丝
After completing this step, tighten the screws from steps 45 and 46

LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


47

半圆头**M2-4** ×1
Hexagon socket button head screw

杯头**M1.6-3** ×2
Hexagon socket head cap screw

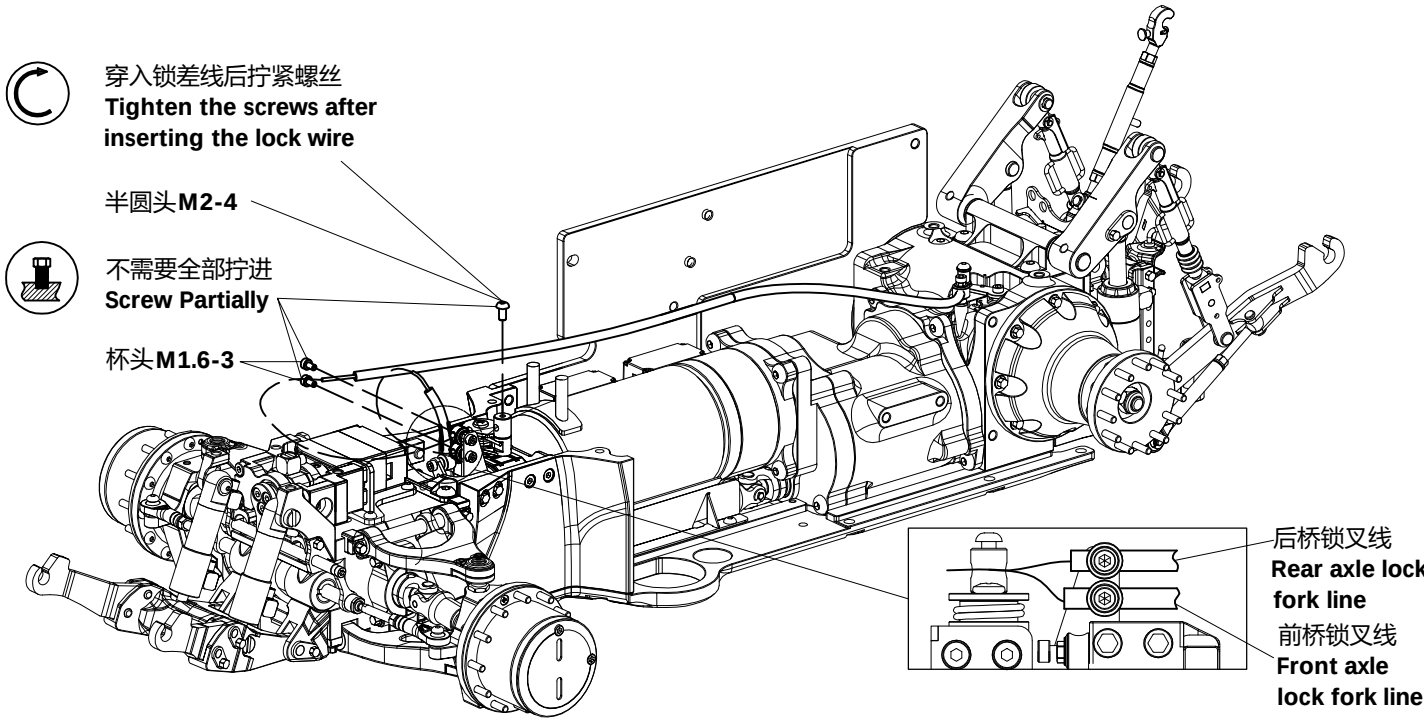


48

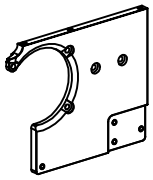

B1-8


半圆头**M3-6** ×1
Hexagon socket button head screw

半圆头**M3-8** ×7
Hexagon socket button head screw

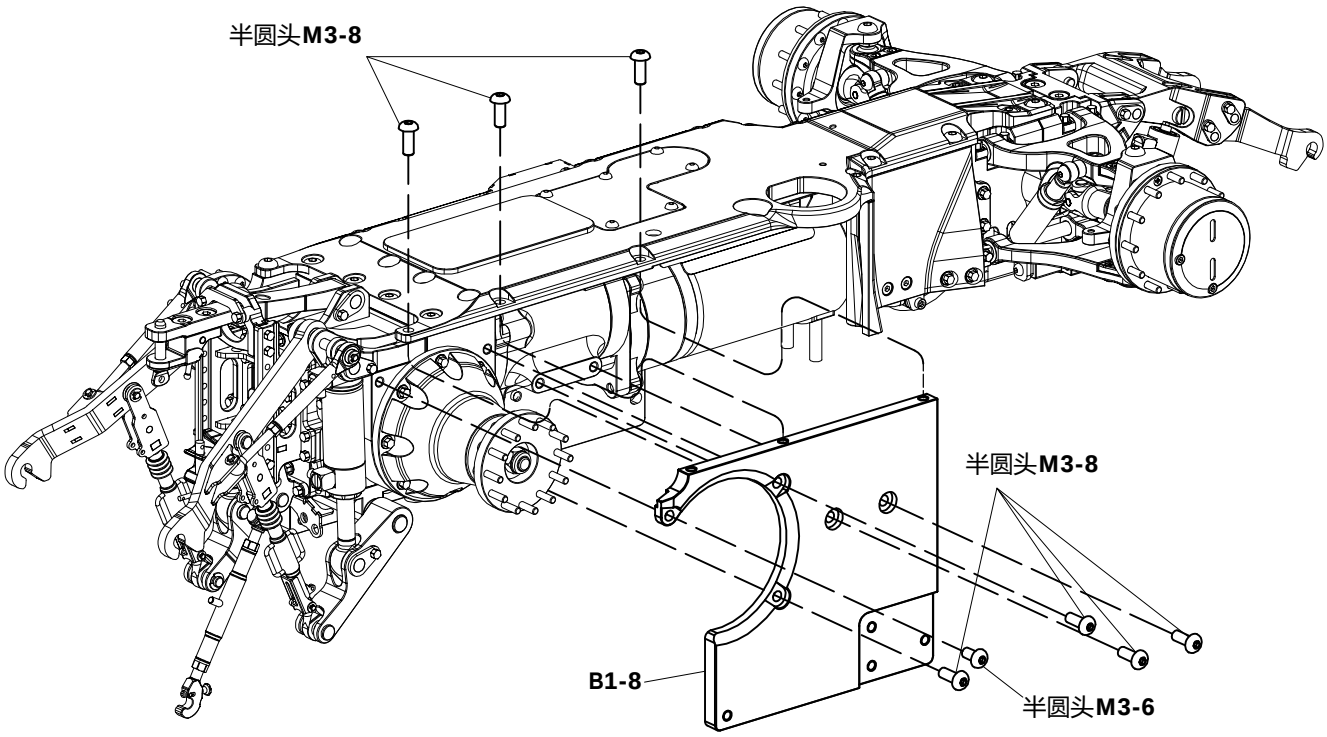


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87
LESU MODEL RACING


49

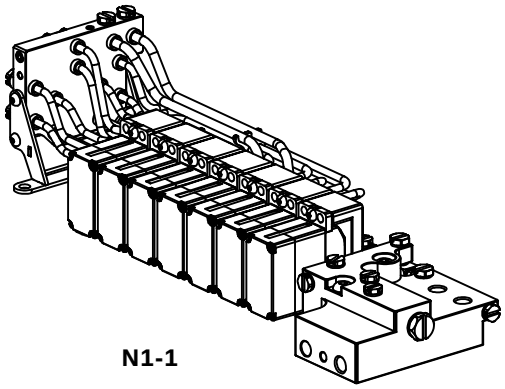


N1-1

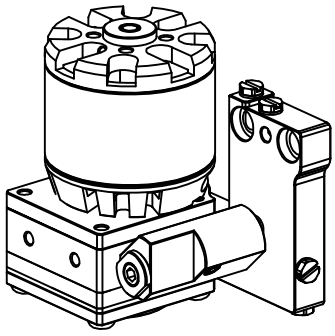


N1-2

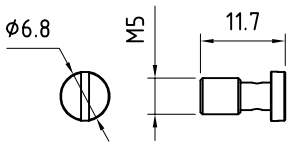


N1-3 ×2

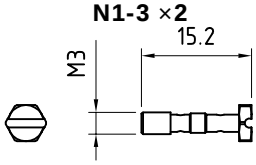

N1-4

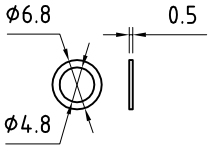



石墨垫片 ×4
Graphite gasket
外径**6.8**内径**4.8**厚度**0.5**
Outer diameter 6.8
inner diameter 4.8
thickness 0.5

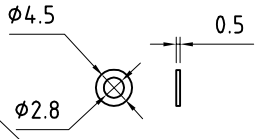


石墨垫片 ×2
Graphite gasket
外径**5**内径**2.8**厚度**0.5**
Outer diameter 5
inner diameter 2.8
thickness 0.5

50

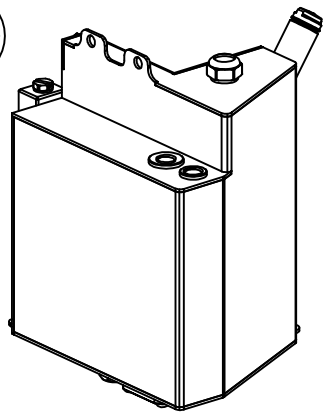




N1-5 N1-6 ×2

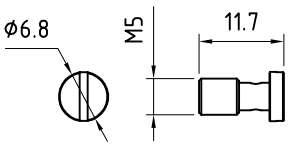


N1-3 ×2

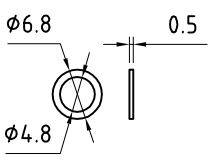

石墨垫片 ×4
Graphite gasket
外径**6.8**内径**4.8**厚度**0.5**
Outer diameter 6.8
inner diameter 4.8
thickness 0.5




不要过度拧紧
Don't Over Tighten/Snug Tight

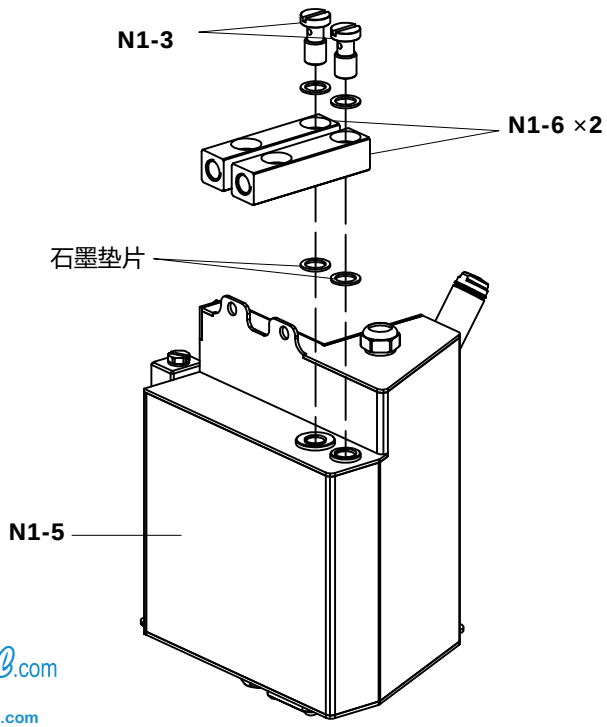


LESU MODEL RACING


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

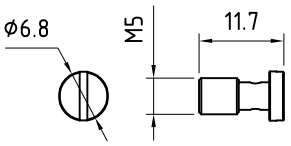

N1-3 ×2

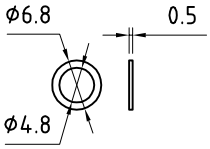

石墨垫片 ×4
Graphite gasket
外径**6.8**内径**4.8**厚度**0.5**
Outer diameter 6.8
inner diameter 4.8
thickness 0.5

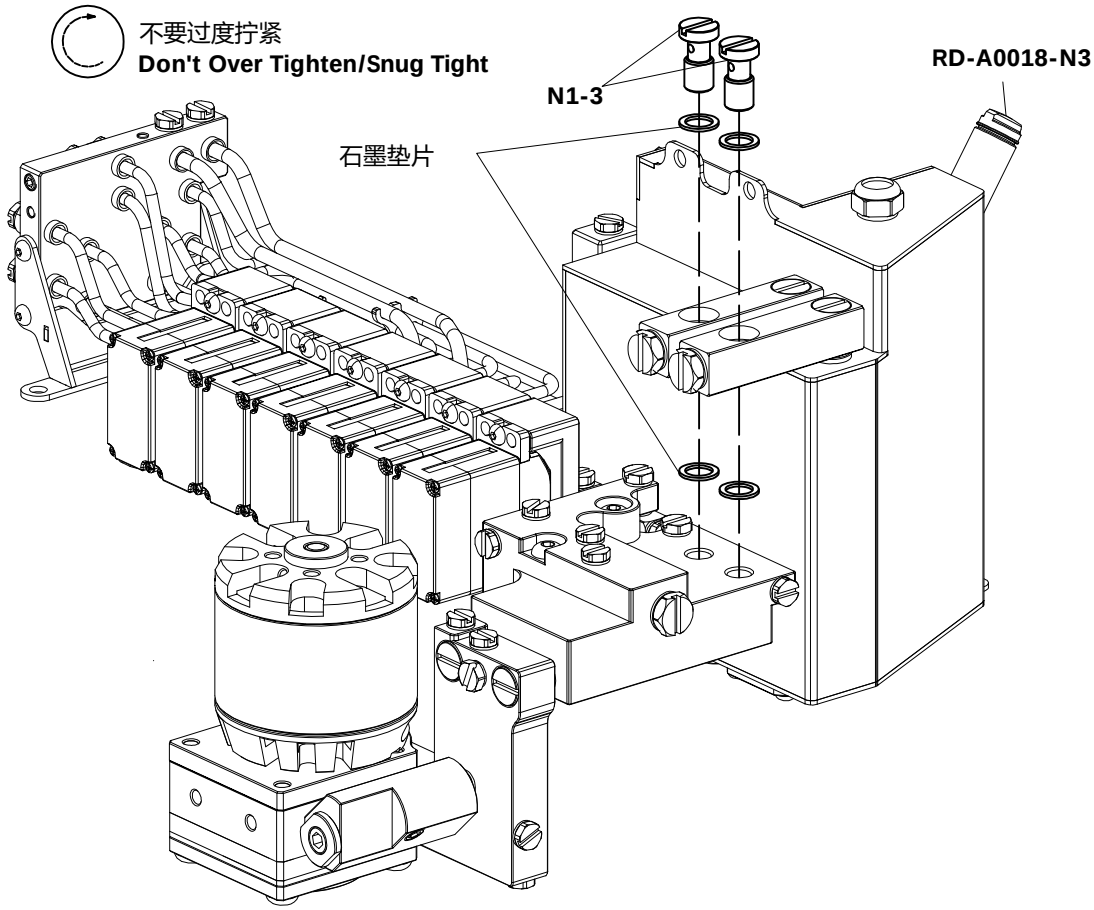


特别注意
Pay Special Attention

安装完成后按照以下步骤对液压工作站进行测试：
1、打开遥控器开关，将连接液压泵通道的控制旋钮调至最低档位
2、打开油箱盖（**RD-A0018-N3**），往油箱里加入液压油，直至油位计中部
3、液压泵参考电子接线图接好线（预留足够长度），通电测试
4、通过调节遥控器控制旋钮，逐渐加大压力，注意观察液压工
作站工作状态（是否漏油、是否压力不足）
5、关闭电源，继续下一个步骤安装


After installation, test the hydraulic workstation according to the following steps:

1. Turn on the remote control switch and adjust the control knob connected to the hydraulic pump channel to the lowest position
2. Open the fuel tank cap (RD-A0018-N3) and add hydraulic oil to the tank until the middle of the oil level gauge is reached
3. Connect the wires of the hydraulic pump according to the electronic wiring diagram (with sufficient length reserved), and conduct a power test
4. By adjusting the remote control knob, gradually increase the pressure and observe the working status of the hydraulic workstation (whether there is oil leakage or insufficient pressure)
5. Turn off the power and proceed to the next step of installation

52




N1-12 ×8




N1-7

半圆头M3-6 ×2
Hexagon socket button head screw

完成此步前需要先将这些零件拆下
Before completing this step, these parts need to be removed first

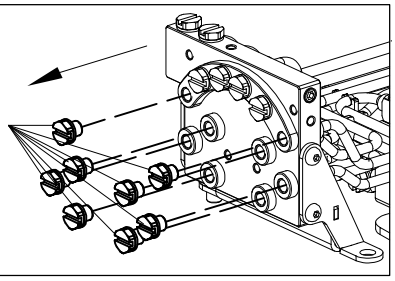


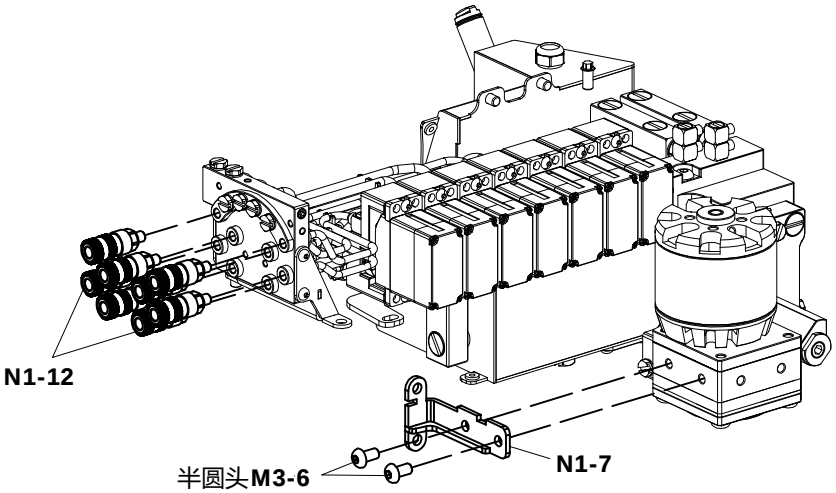

53


半圆头M3-4 ×2
Hexagon socket button head screw

半圆头M3-6 ×3
Hexagon socket button head screw

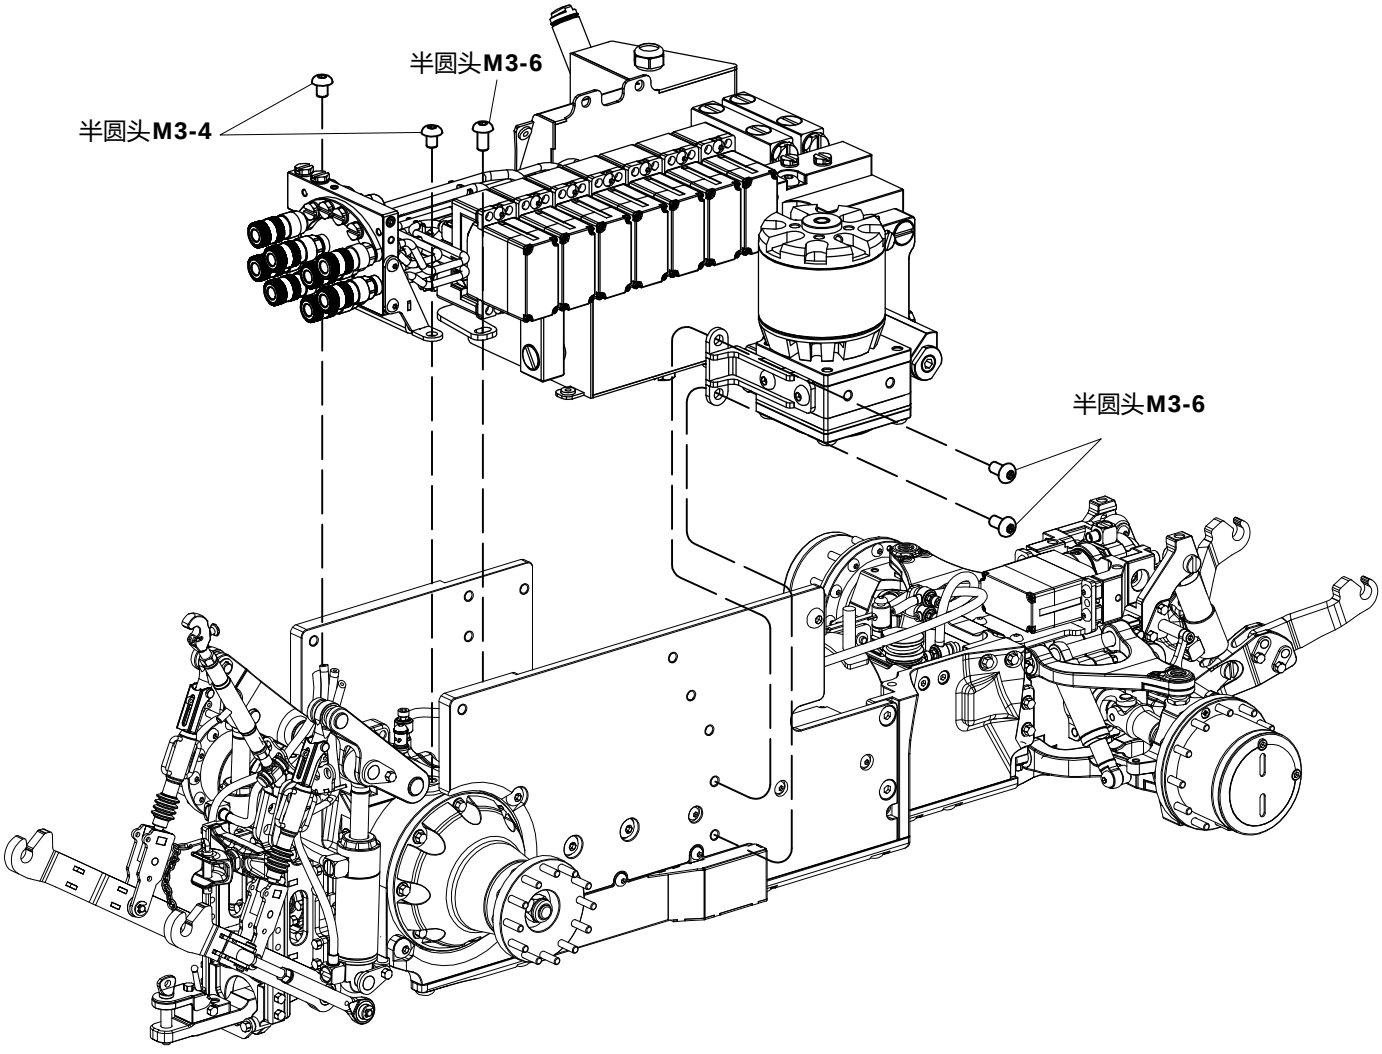


LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

54

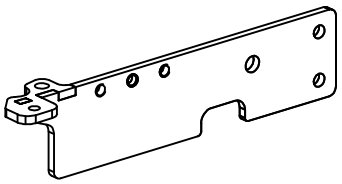


B1-9

半圆头**M3-4** ×2
Hexagon socket button head screw

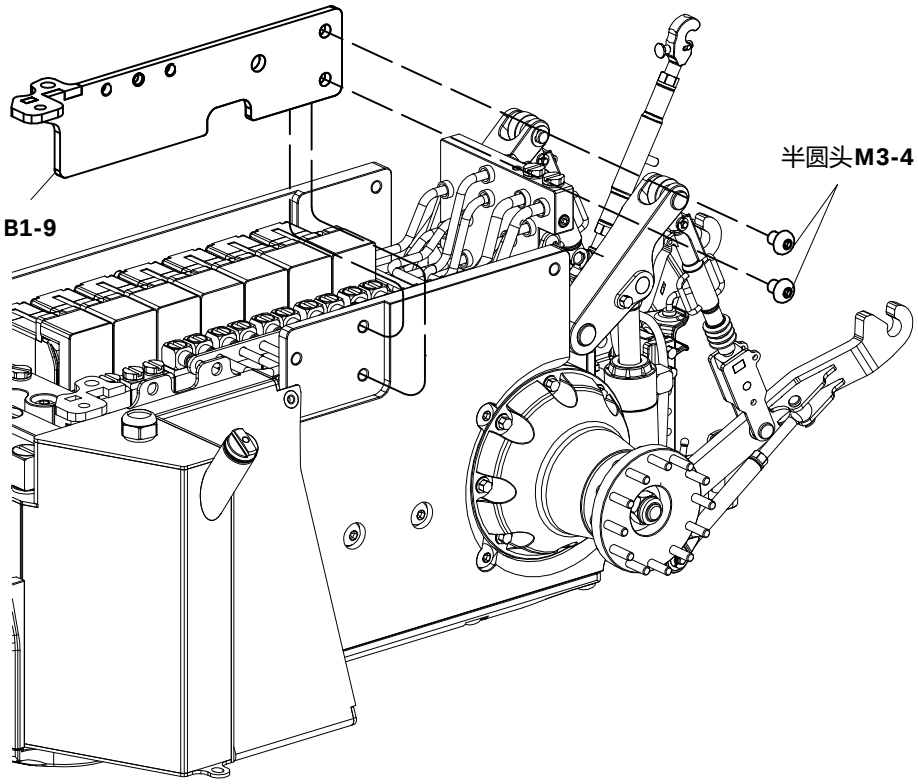


55

法兰外六角**M3-4** ×2
Locking flange nut

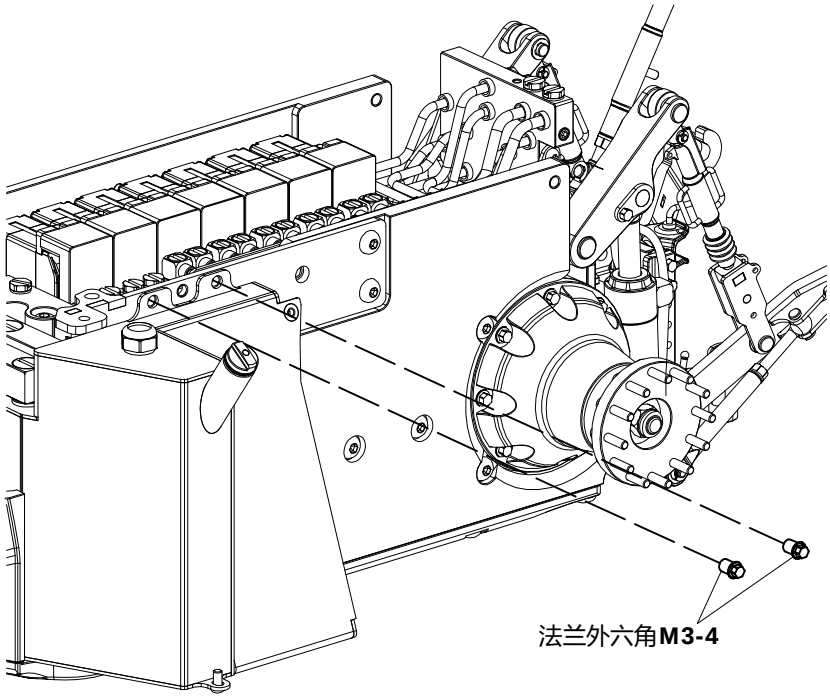

特别注意
Pay Special Attention
如此步骤螺丝难以安装或出现轻微错位情况，
可按以下步骤调整
1、按照步骤把法兰外六角**M3-4**安装好，
但不需要拧紧
2、如图所示把**I**和**II**零件轻微拧松
3、按照图中箭头方向，微调油箱位置，
以便安装法兰外六角**M3-4**
4、把图中**I**和**II**零件重新拧紧
(注意力度，避免损坏底部垫片导致出现漏油情况)
5、测试液压工作站是否能正常运作
6、完成此步骤安装


When the screws in this step cannot be installed, If the screws are difficult to install or slightly misaligned during this step, they can be adjusted according to the following steps
1. Install the flange outer hexagon M3-4 according to the steps, but do not need to tighten it
2. Loosen parts I and II slightly as shown in the diagram
3. Adjust the position of the fuel tank in the direction of the arrow in the diagram to facilitate the installation of the flange outer hexagon M3-4
4. Retighten parts I and II in the diagram (pay attention to the strength to avoid damaging the bottom gasket and causing oil leakage)
5. Test whether the hydraulic workstation can operate normally
6. Complete this step to install

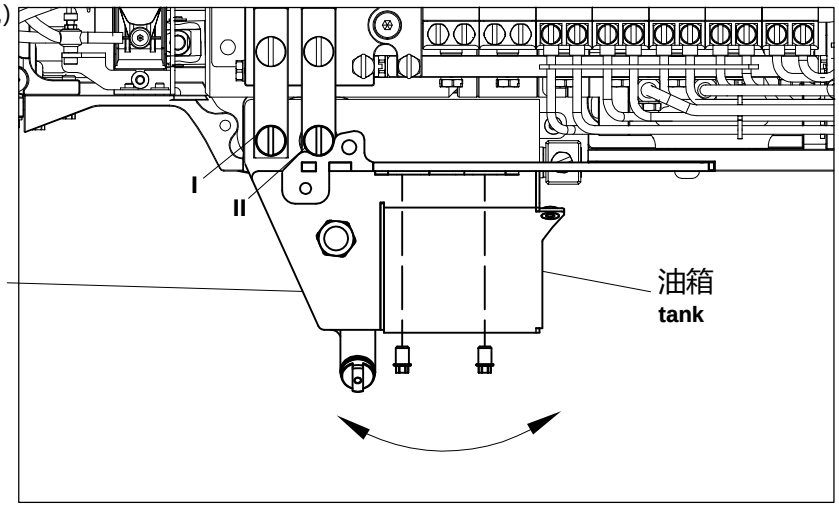

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87
LESU
MODEL RACING

56

半圆头M2-6 ×1
Hexagon socket button head screw

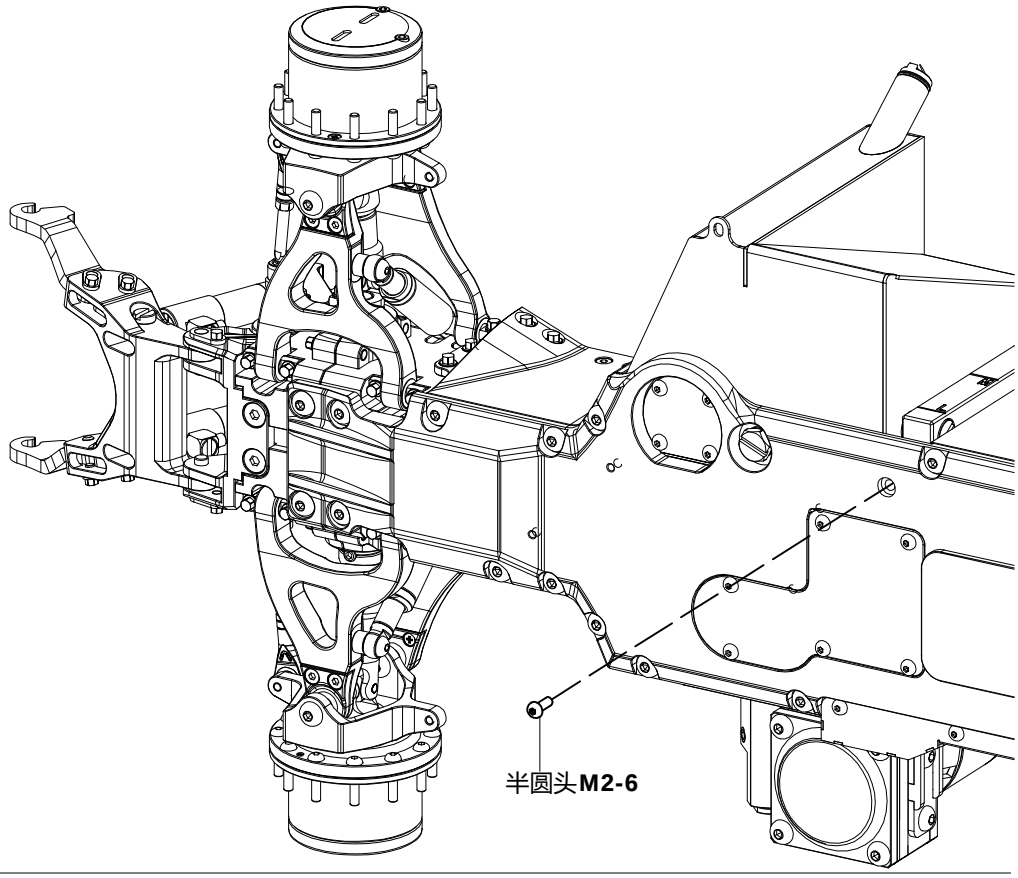

57


Y-1544-B ×4

An-0017-D1 ×4




油管/oil hose
直径2内径1长度 390mm
Diameter 2 inner diameter 1 length 390mm


L13=65mm
L14=65mm
L15=130mm
L16=130mm

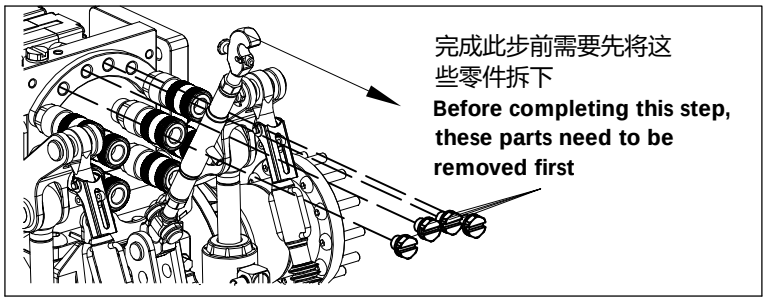


完成此步前需要先将这些零件拆下
Before completing this step, these parts need to be removed first

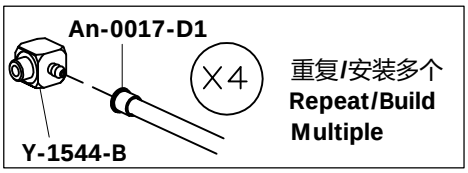

重复/安装多个
Repeat/Build Multiple

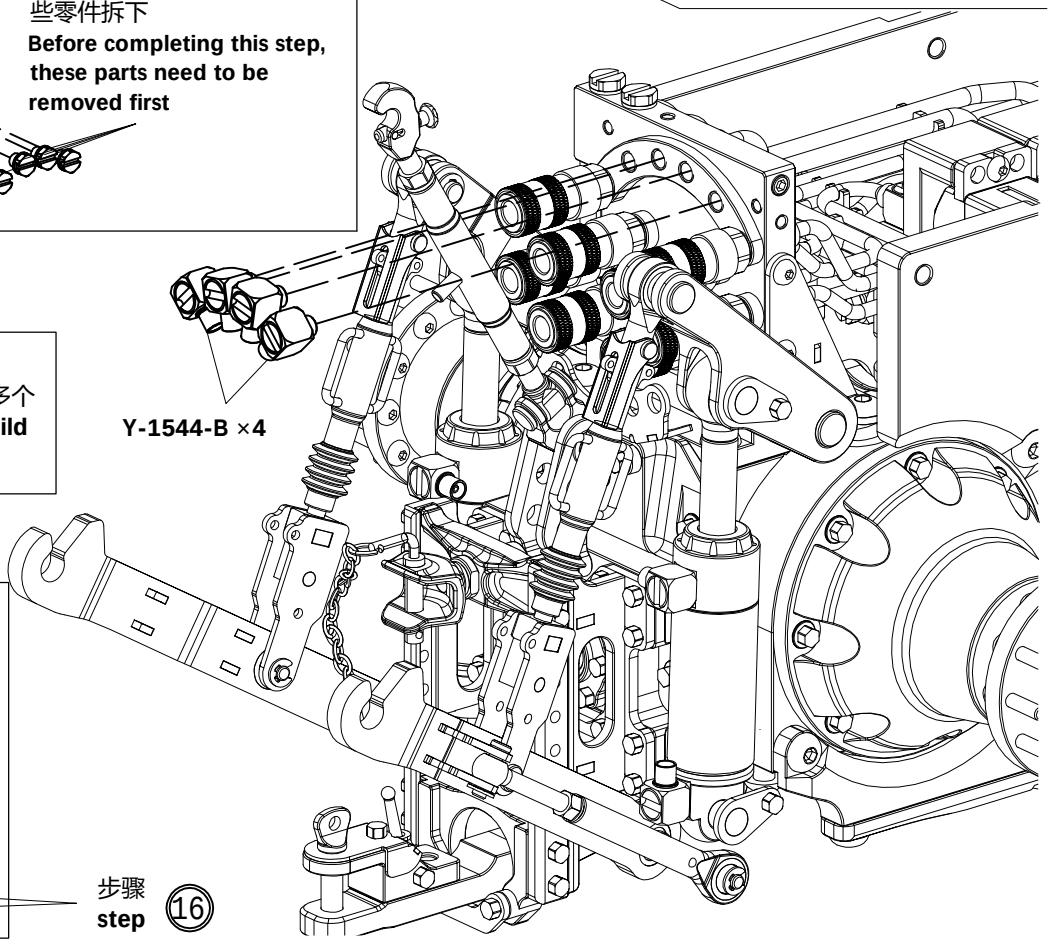

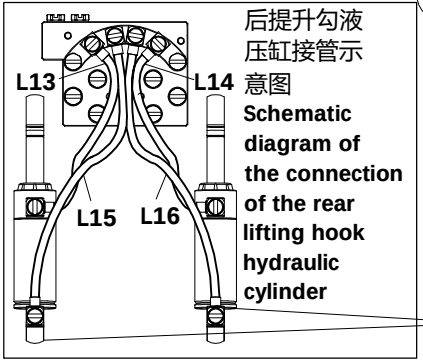


后提升勾液压缸接管示意图
Schematic diagram of the connection of the rear lifting hook hydraulic cylinder

步骤 step 16


LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

58

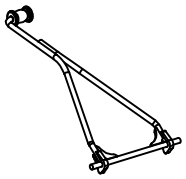


N1-8

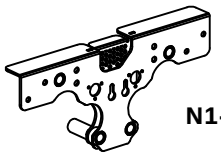

N1-9 ×2

N1-10

外六角M1.2-3 ×4
Hexagon screw

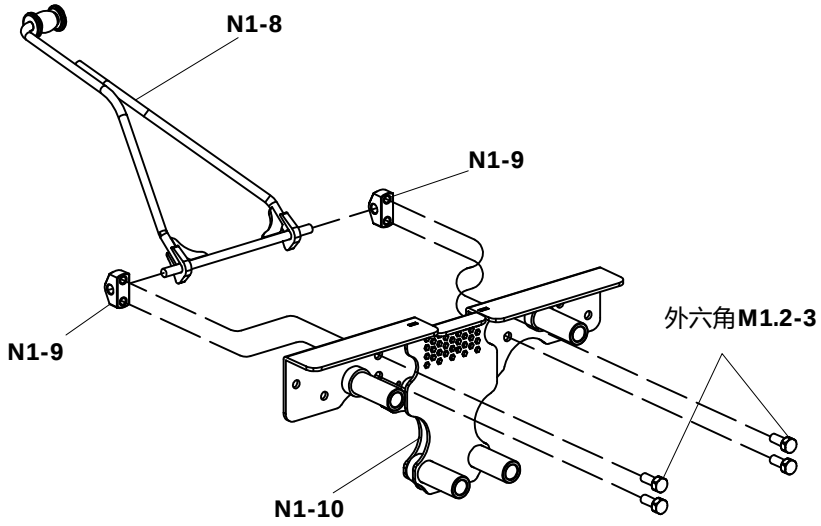


59




N1-11 ×2

十字盘头M1-3 ×4
Cross pan head screw


M1六角螺母 ×4
Hexagon nut

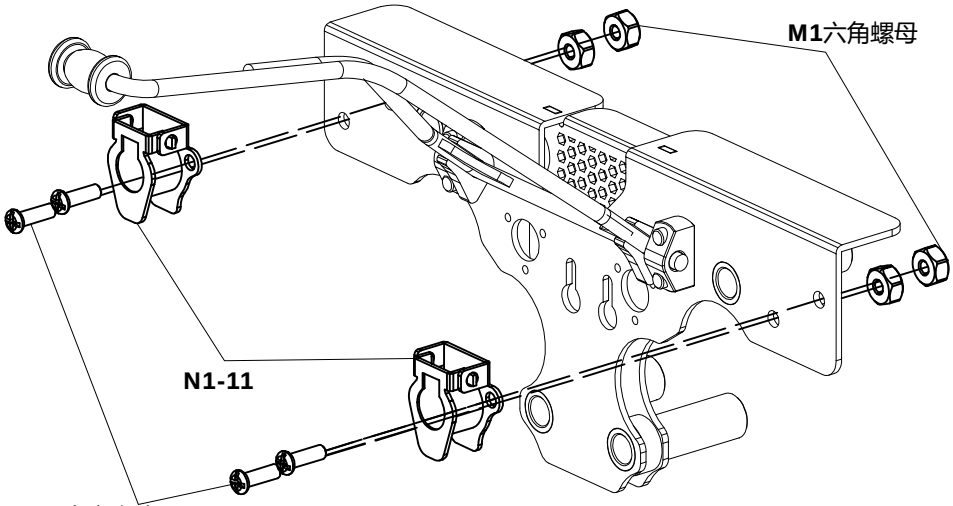

60

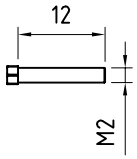


LAT-WM2-LB12-SUS ×4

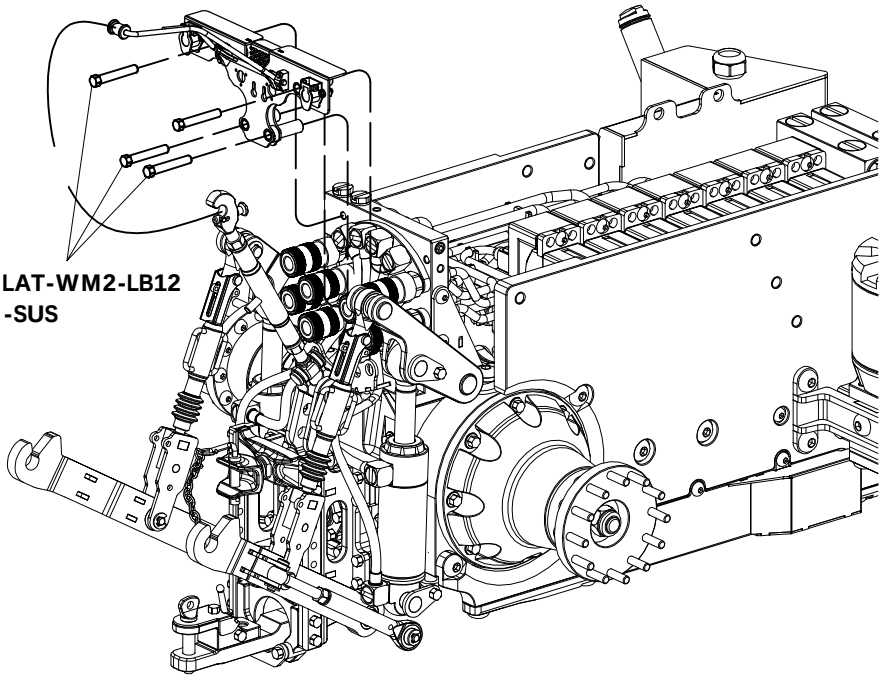


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING

61

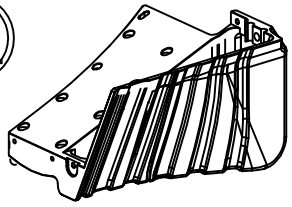


B1-10

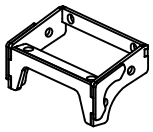

B1-11

半圆头M2-4 ×2
Hexagon socket button head screw

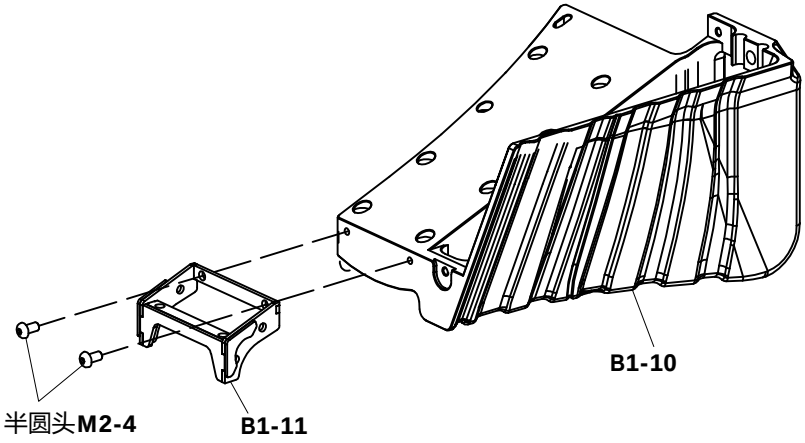


62




B1-12 ×5

内六角沉头M2-5 ×8
Hexagon socket countersunk head screw

半圆头M2-4 ×2
Hexagon socket button head screw

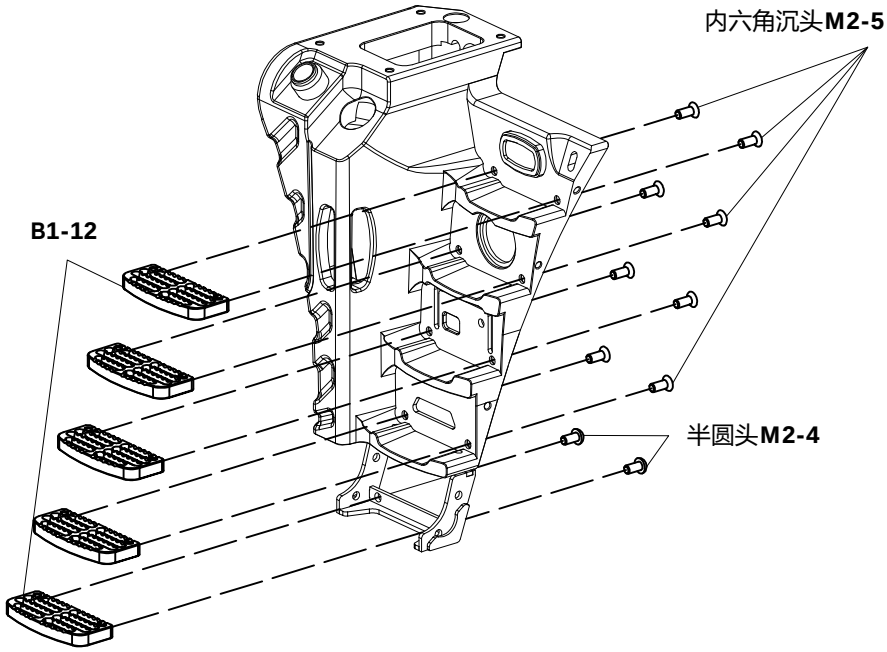

63

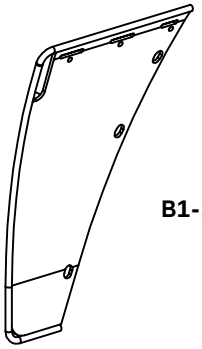


B1-13



B1-14

半圆头M2-4 ×3
Hexagon socket button head screw

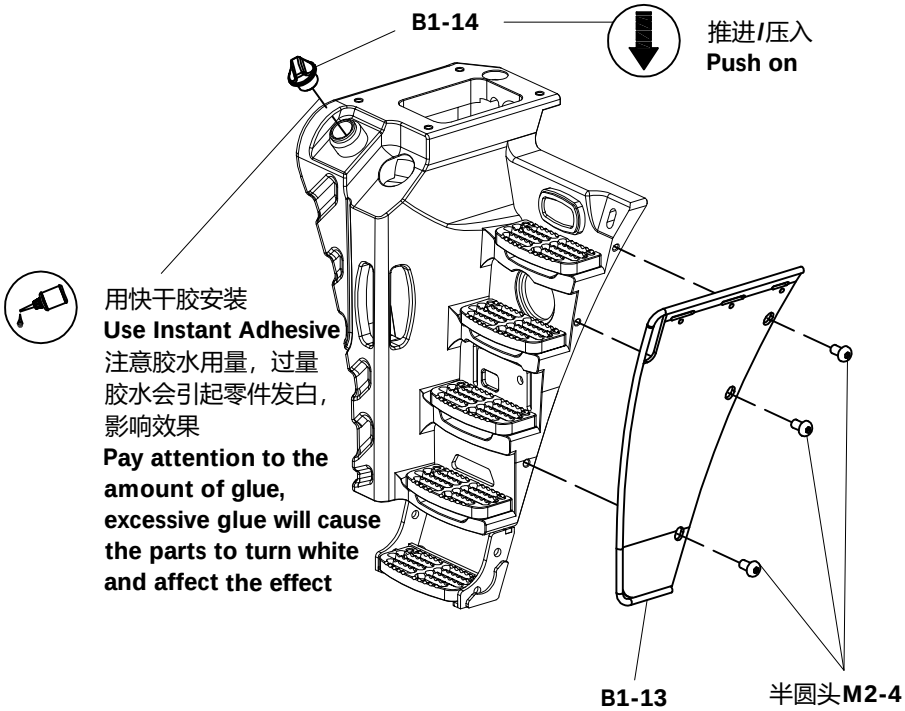


LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

64

半圆头**M2-4** ×1
Hexagon socket button head screw

外六角**M2-8** ×1
Hexagon screw

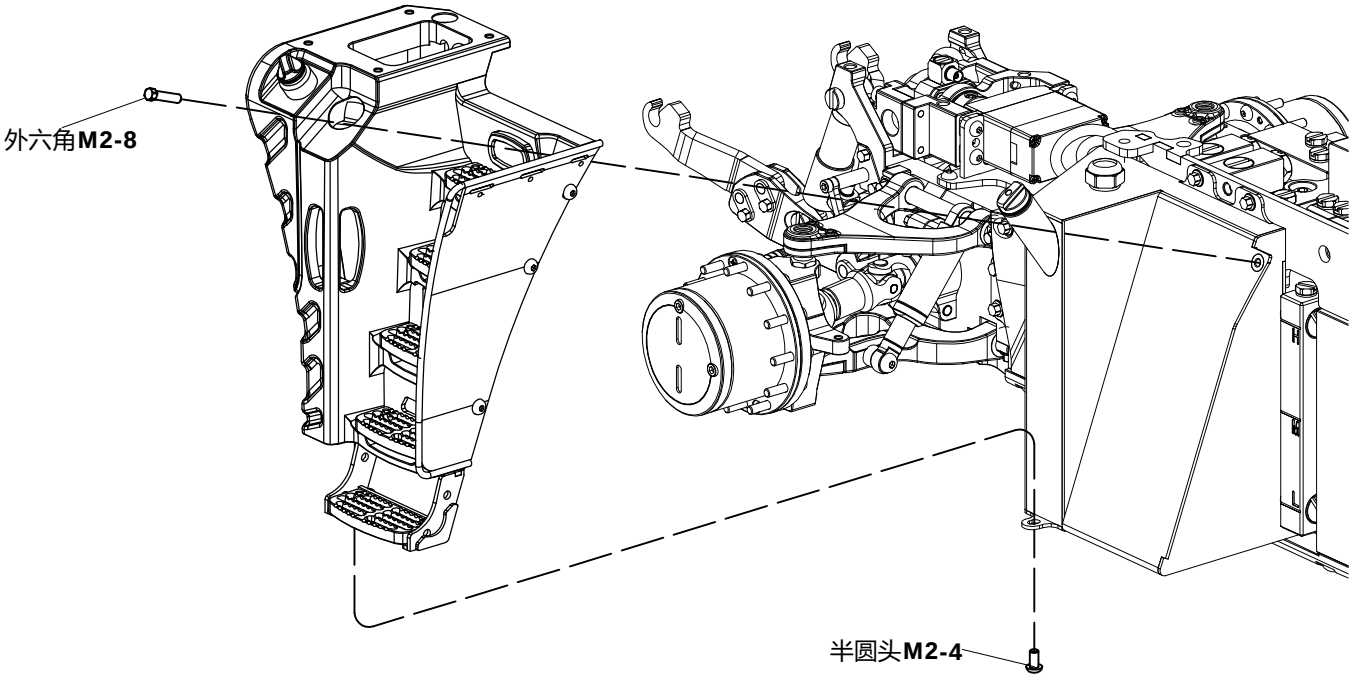


65



B1-15


外六角**M2-3** ×4
Hexagon screw

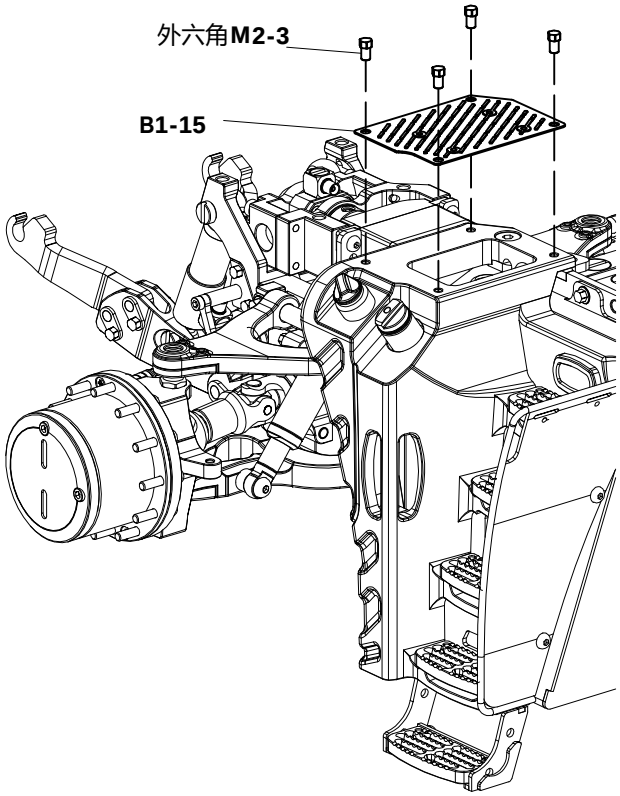


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING

66

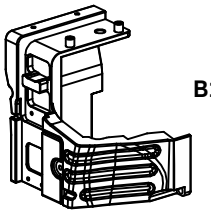

B1-16

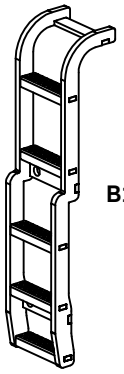

B1-17




B1-18



B1-19




法兰外六角**M2-4** ×4
Hexagon screw

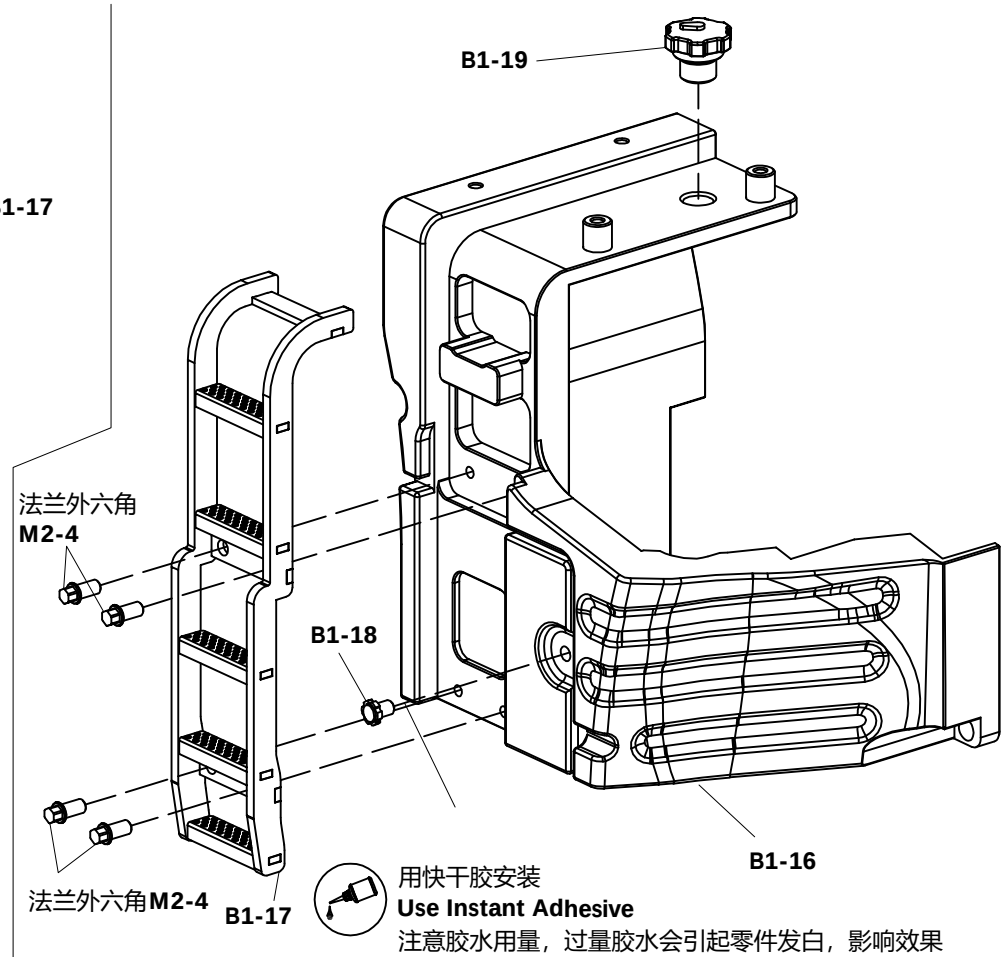

用快干胶安装
Use Instant Adhesive
注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect


67

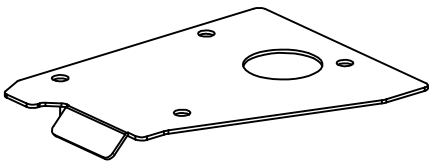

B1-20




外六角**M2-4** ×4
Hexagon screw

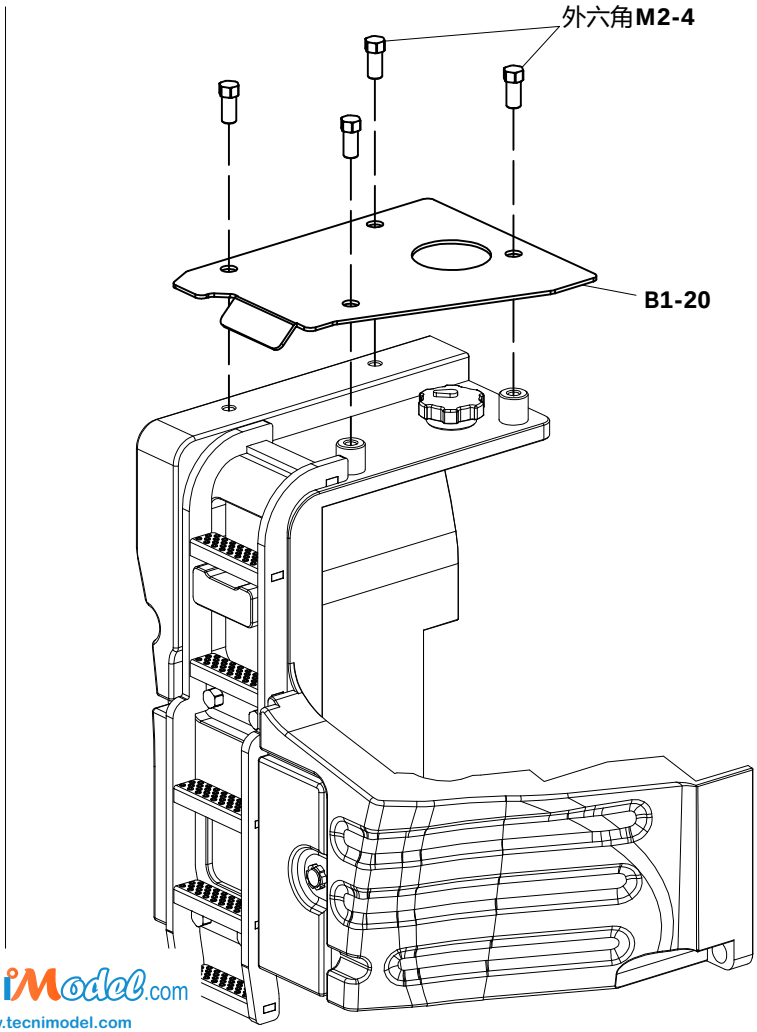


LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

68




B1-21

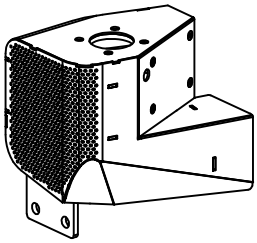

B1-22

半圆头**M2-6** ×4
Hexagon socket button head screw

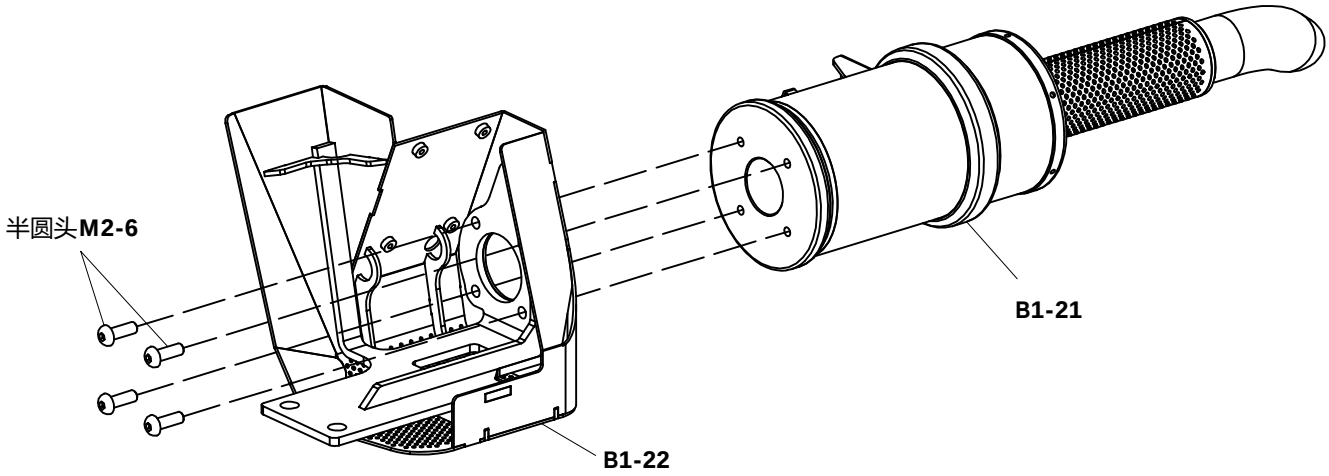


69




B1-23

序号以收货实物为准
The serial number is subject to the actual goods received

外六角**M1.2-3** ×4
Hexagon screw

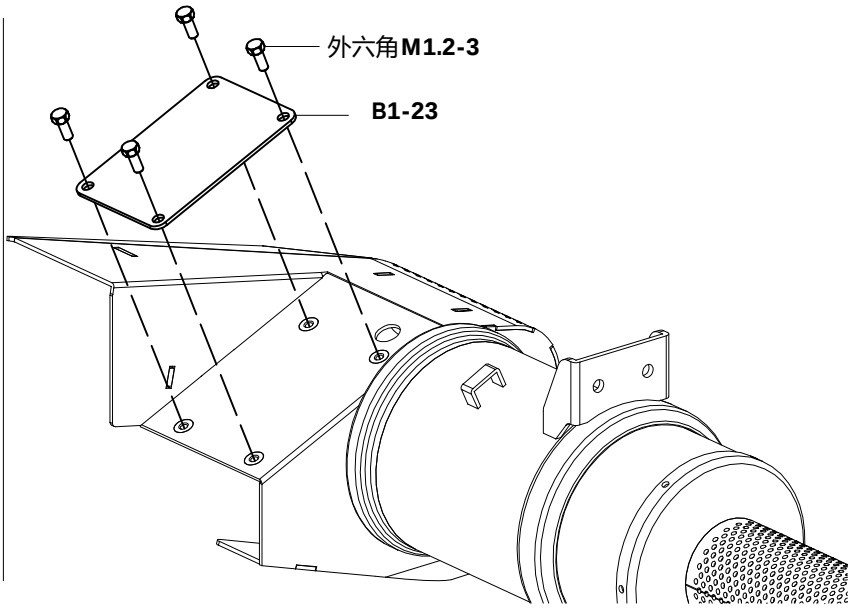

70



B1-24



B1-25



B1-26



LED贴片灯(黄光)
LED surface mount lamp



LED贴片灯 (白光)
LED surface mount lamp




B1-28
(黄色透明)/（yellow transparent)



B1-27
(无色透明)/
(transparent)

十字盘头**M1.2-4** ×2
Cross pan head screw

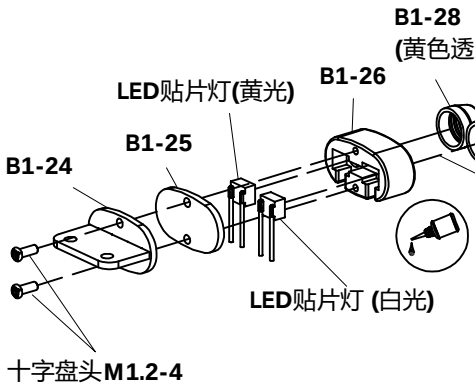

用快干胶安装
Use Instant Adhesive
注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU MODEL RACING

71



S-1231-C ×2

零件S-1231-C为KIT版本，说明书另附
Part S-1231-C is a kit version, see the attachment for the instructions


杯头M1.6-4 ×2
Hexagon socket head cap screw

M1.6六角螺母 ×2
Hexagon nut

热缩管 Heat shrinkable tube
内径0.8×长度 100mm
internal diameter0.8
length 100mm


热缩管 Heat shrinkable tube
内径2×长度 150mm
internal diameter2
length 150mm

PH2.0(公头) ×2
线长200mm

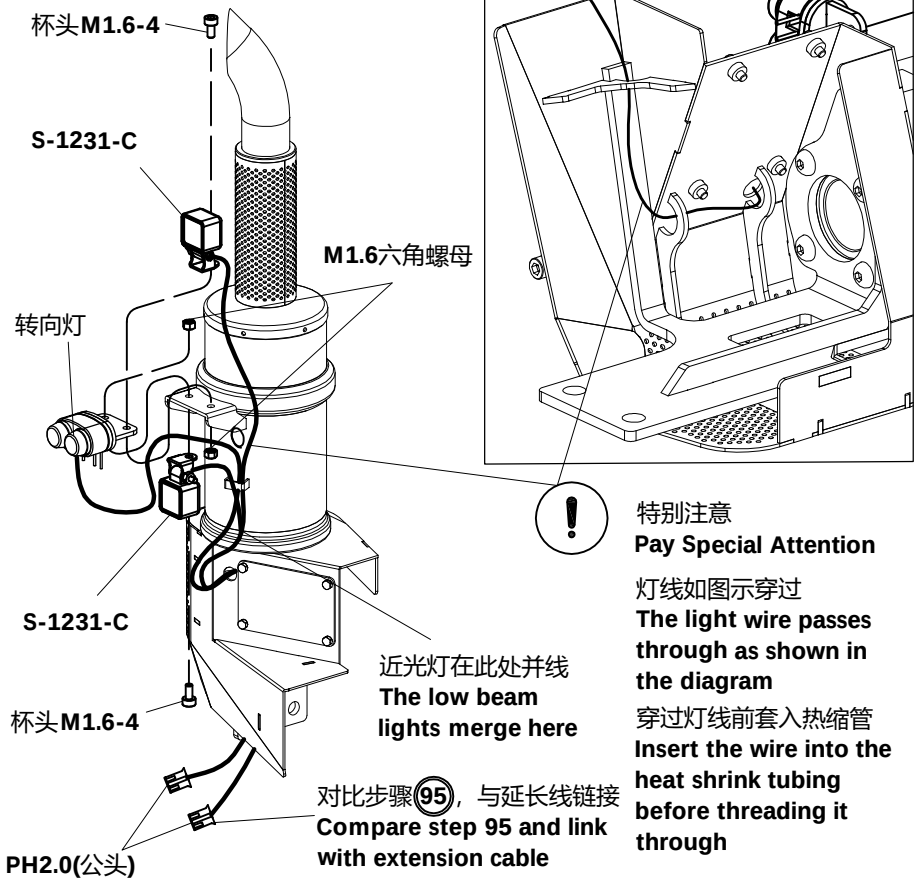

72


半圆头M3-4 ×2
Hexagon socket button head screw

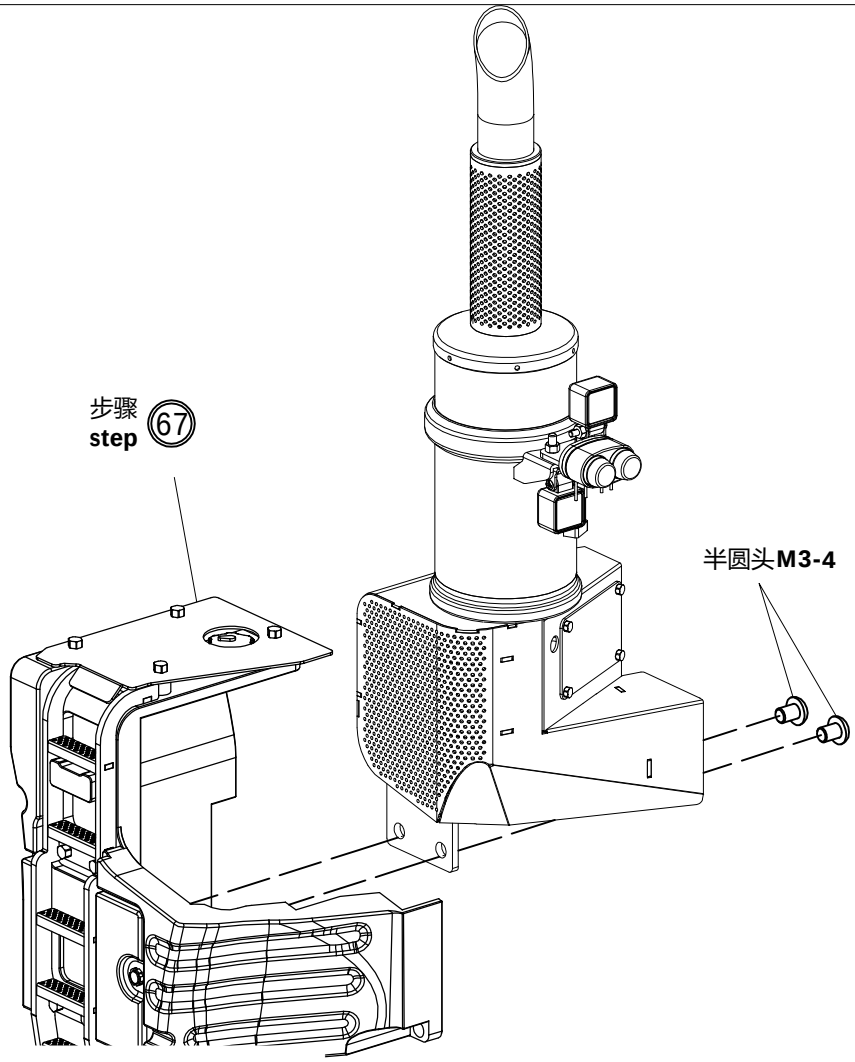


LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

73

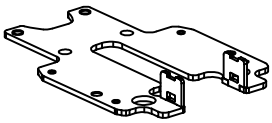


C1-1



C1-2


半圆头M3-4 ×2
Hexagon socket button head screw

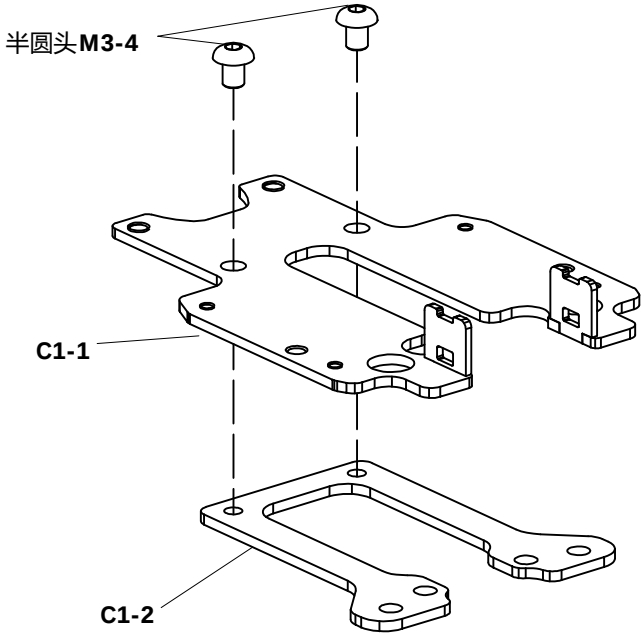

74

半圆头M3-4 ×2
Hexagon socket button head screw

特别注意
Pay Special Attention
扎带可以从这两个孔穿过
The zip tie can pass through these two holes

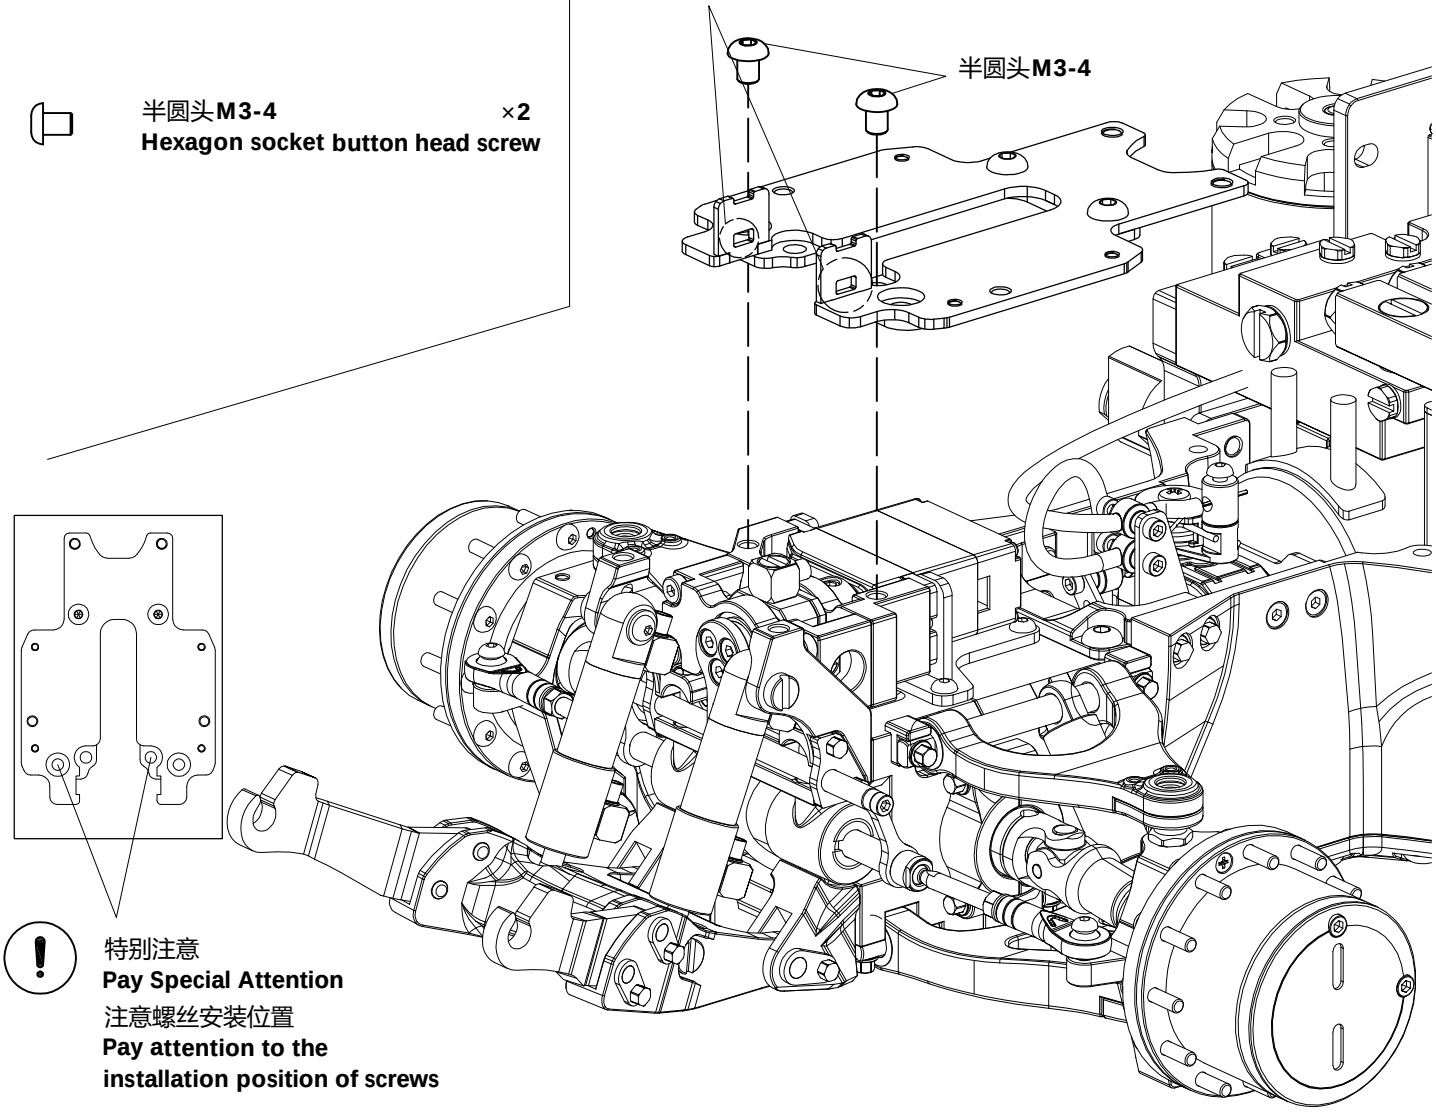


特别注意
Pay Special Attention
注意螺丝安装位置
Pay attention to the installation position of screws

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING

75




Y-1525-D ×2




An-0017-D1 ×4




特别注意
Pay Special Attention
开始此步前先将图示两个油堵拆下
Before starting this step, remove the two oil plugs shown in the diagram

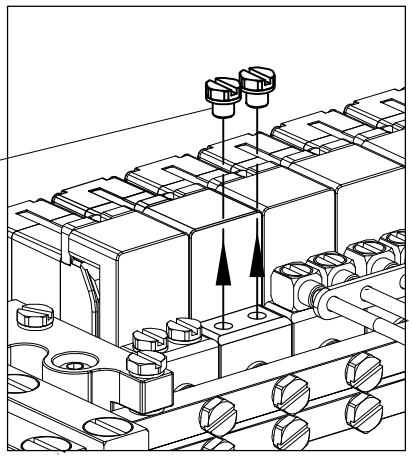


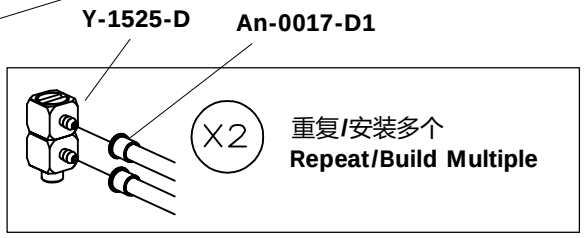


重复/安装多个
Repeat/Build Multiple

油管按照图示位置接好
Connect the oil pipe according to the position shown in the diagram

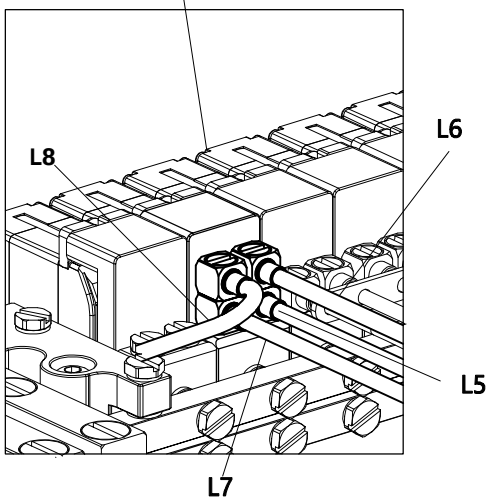

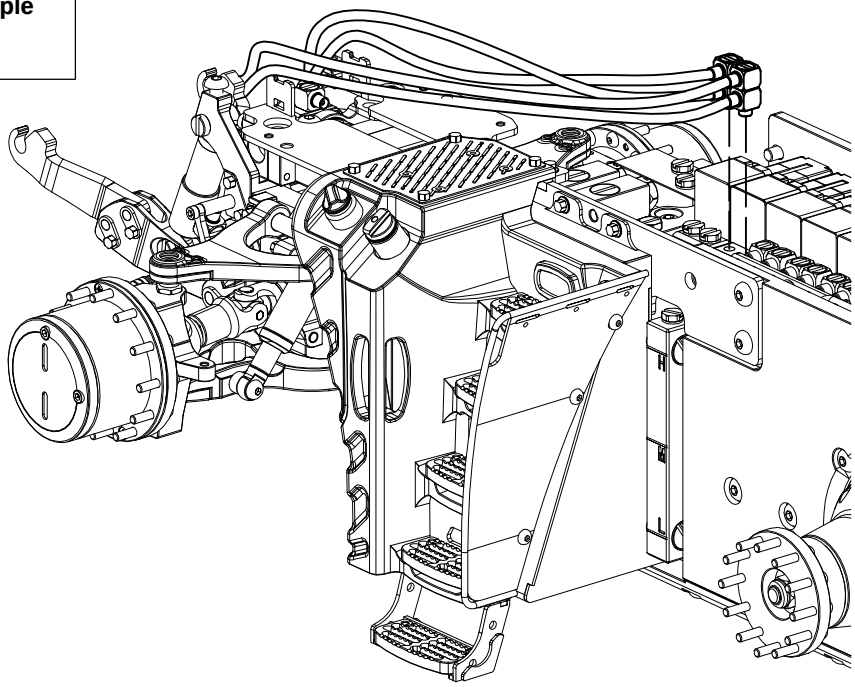

76

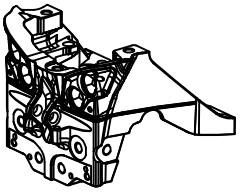


C1-3



N1-12 ×2



M3堵头 ×4
M3 plug

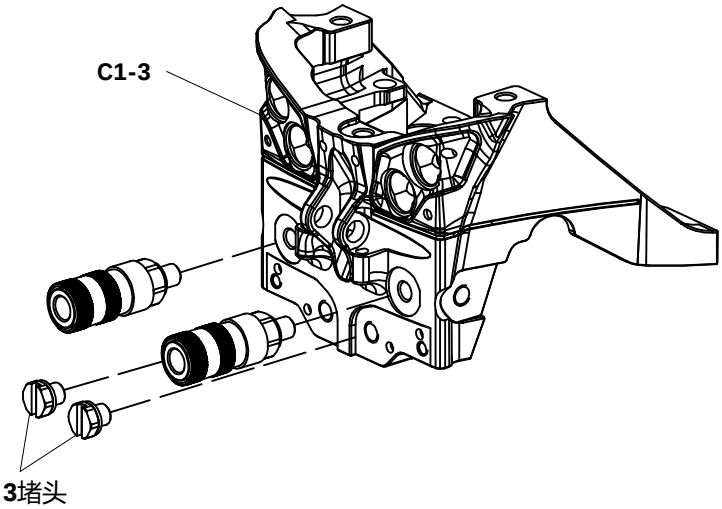


LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

77


M3堵头 ×2
M3 plug

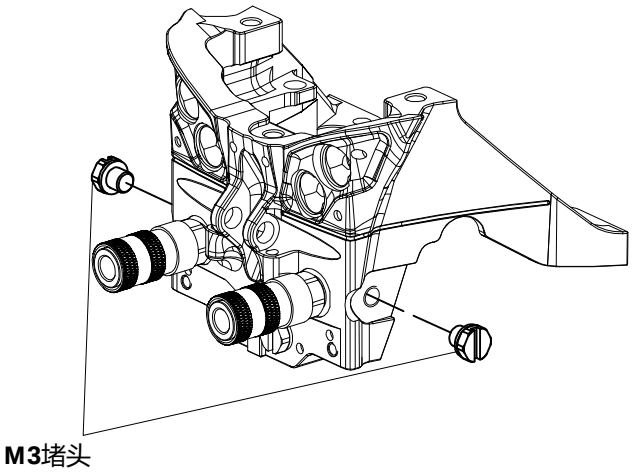

78

C1-4 ×4


用快干胶安装
Use Instant Adhesive
注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect

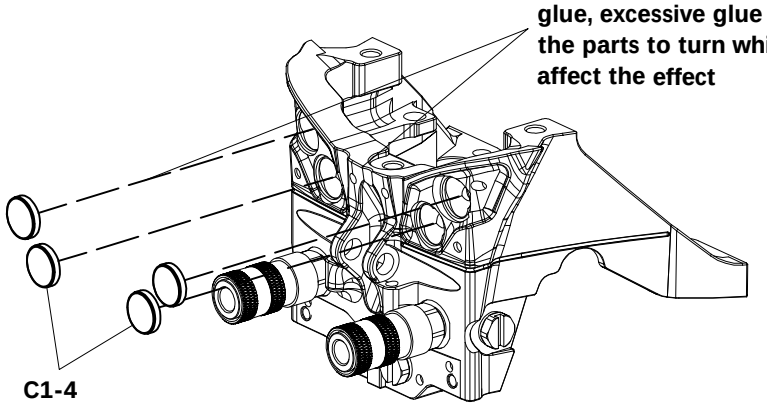

79



C1-5

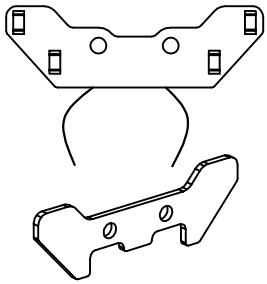

C1-6


C1-7

半圆头M2-4 ×2
Hexagon socket button head screw

热缩管 **Heat shrinkable tube**
内径**0.8**×长度 **190mm**
internal diameter0.8
length 190mm

特别注意
Pay Special Attention


灯线从凹槽位置穿过，
注意不要压到灯线
The light wire passes through the groove position, be careful not to press it on the light wire
穿过灯线前套入热缩管
Insert the wire into the heat shrink tubing before threading it through

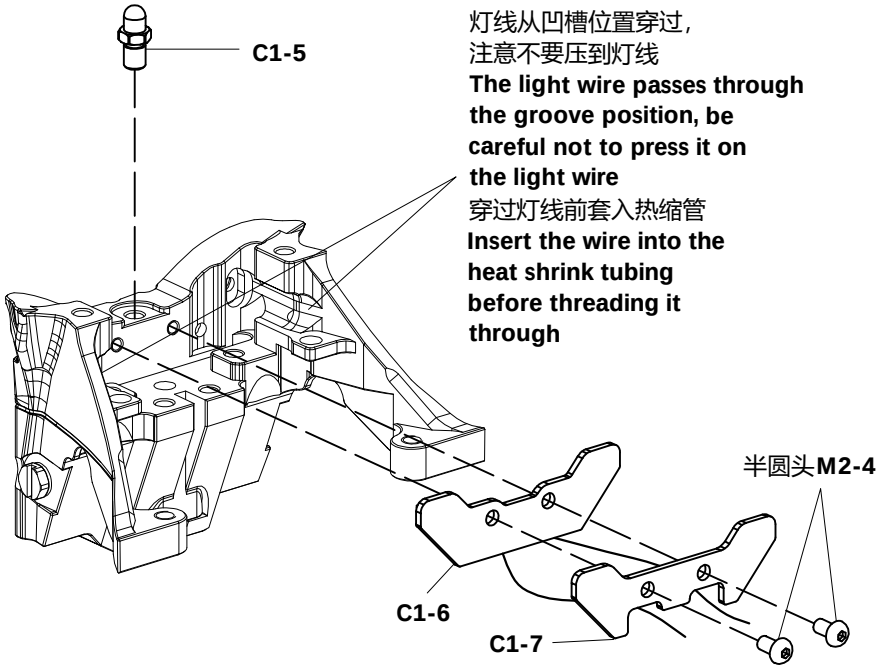


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING


80

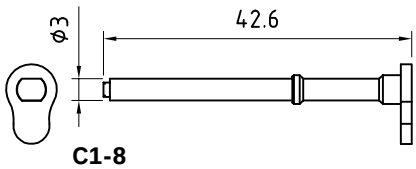


C1-8

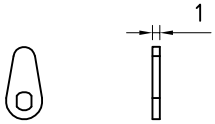

C1-9

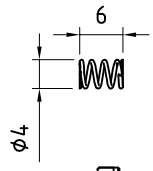


压缩弹簧
compression spring
线径**0.45**×外径**4**×长度**6**
Wire diameter 0.4 x Outer diameter 3 x Length 10



LA-LNM3-3 ×1


杯头**M1.6-3** ×1
Hexagon socket head cap screw

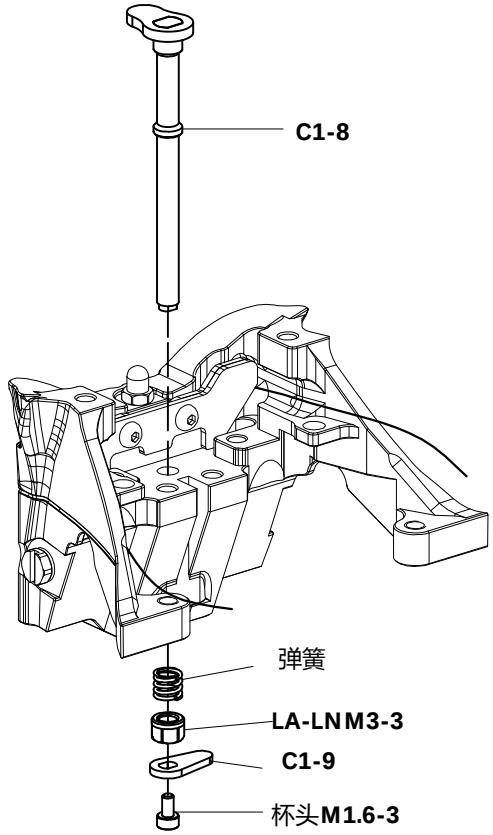

81



半圆头**M3-6** ×2
Hexagon socket button head screw

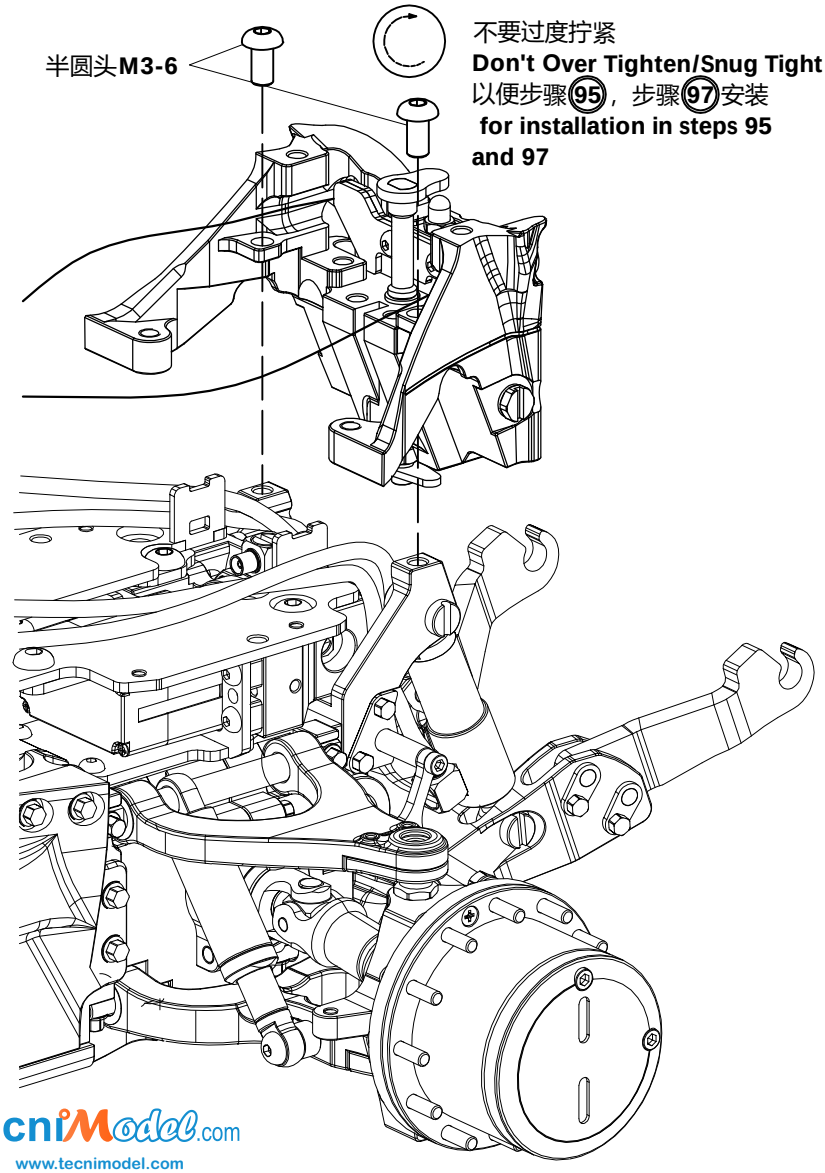

LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


82


Y-1544-B ×2

An-0017-D1 ×2

油管/oil hose
直径2内径1长度 285mm
Diameter 2 inner diameter 1 length 285mm

L9=135mm
L10=155mm

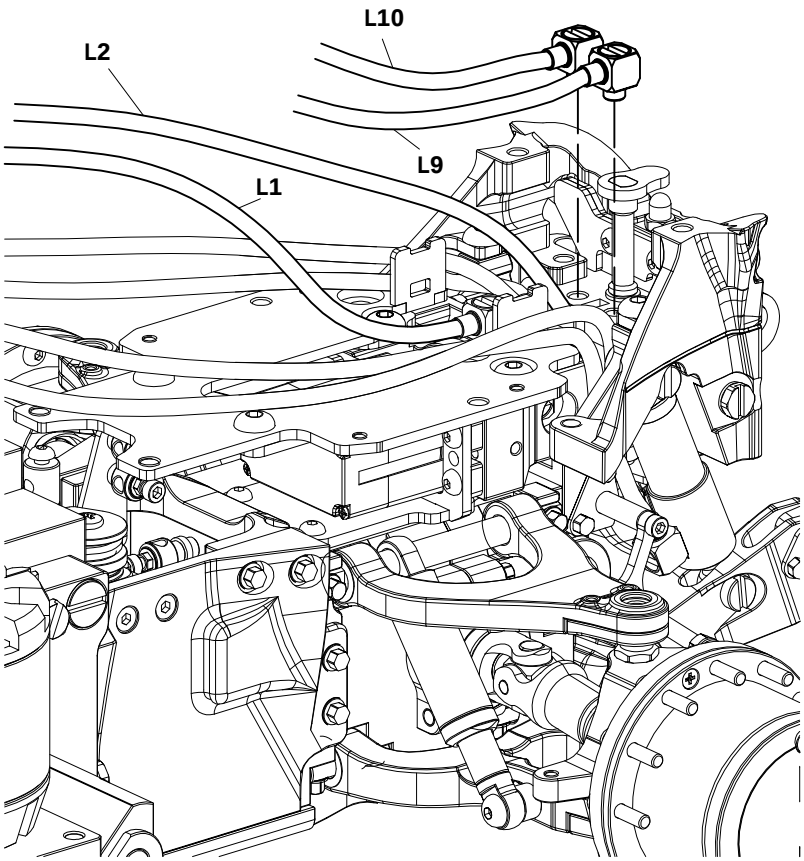

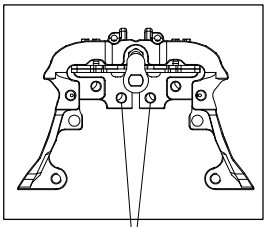


特别注意
Pay Special Attention
注意油嘴安装位置
Pay attention to the installation position of the oil nozzle

83

Y-1525-D ×2


An-0017-D1 ×4

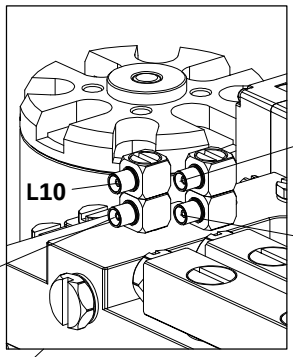




特别注意
Pay Special Attention
管路接好后，使用扎带固定
After connecting the pipeline, fix it with zip ties

特别注意
Pay Special Attention
注意油管安装位置
Pay attention to the installation position of the oil pipe

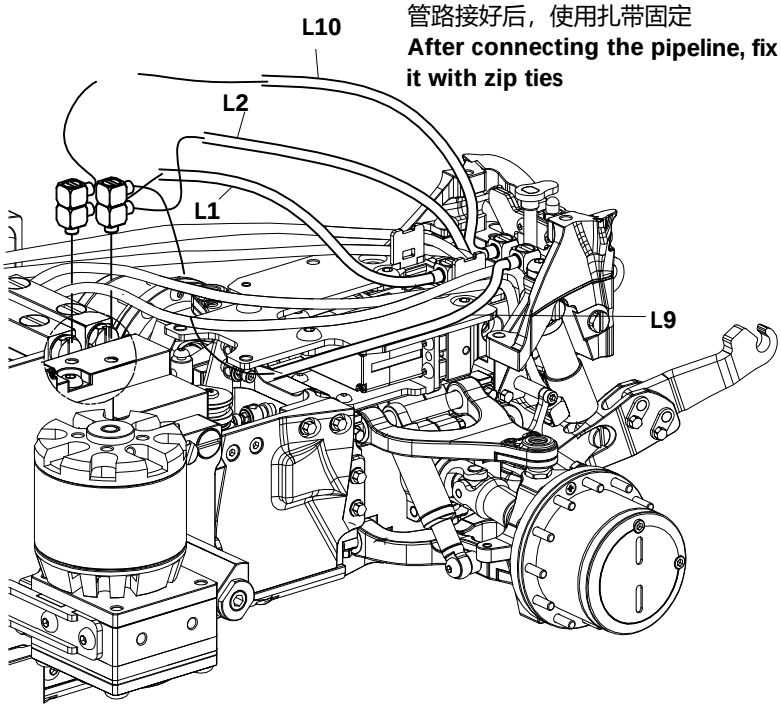

特别注意
Pay Special Attention
开始此步前先将图示两个油堵拆下
Before starting this step, remove the two oil plugs shown in the diagram

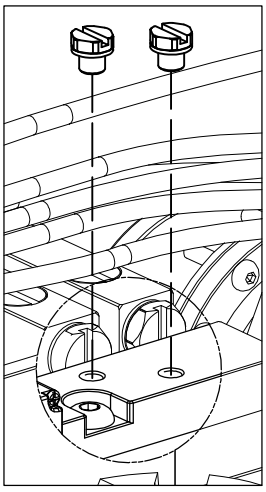

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING

84

Y-1544-B ×2


An-0017-D1 ×2


油管/oil hose
直径2内径1长度 380mm
Diameter 2 inner diameter 1 length 380mm

L11=180mm
L12=200mm

特别注意
Pay Special Attention
油管安装完成后用扎带固定在这两侧
After the installation of the oil pipe is completed, fix it on both sides with zip ties

Y-1544-B
An-0017-D1
×2
重复/安装多个
Repeat/Build Multiple

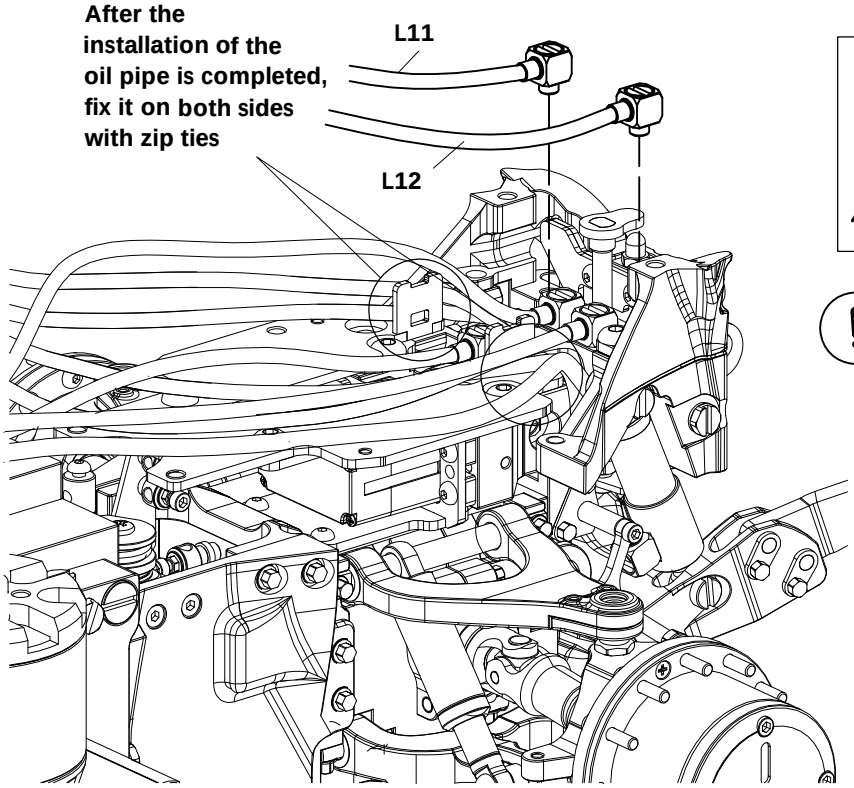

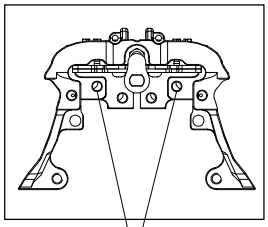

特别注意
Pay Special Attention
注意油嘴安装位置
Pay attention to the installation position of the oil nozzle


85


Y-1544-B ×2

An-0017-D1 ×2


Y-1544-B
An-0017-D1
×2
重复/安装多个
Repeat/Build Multiple

特别注意
Pay Special Attention
开始此步前先将图示两个油堵拆下
Before starting this step, remove the two oil plugs shown in the diagram

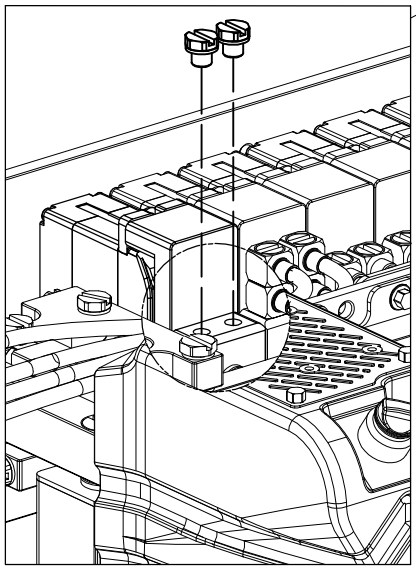


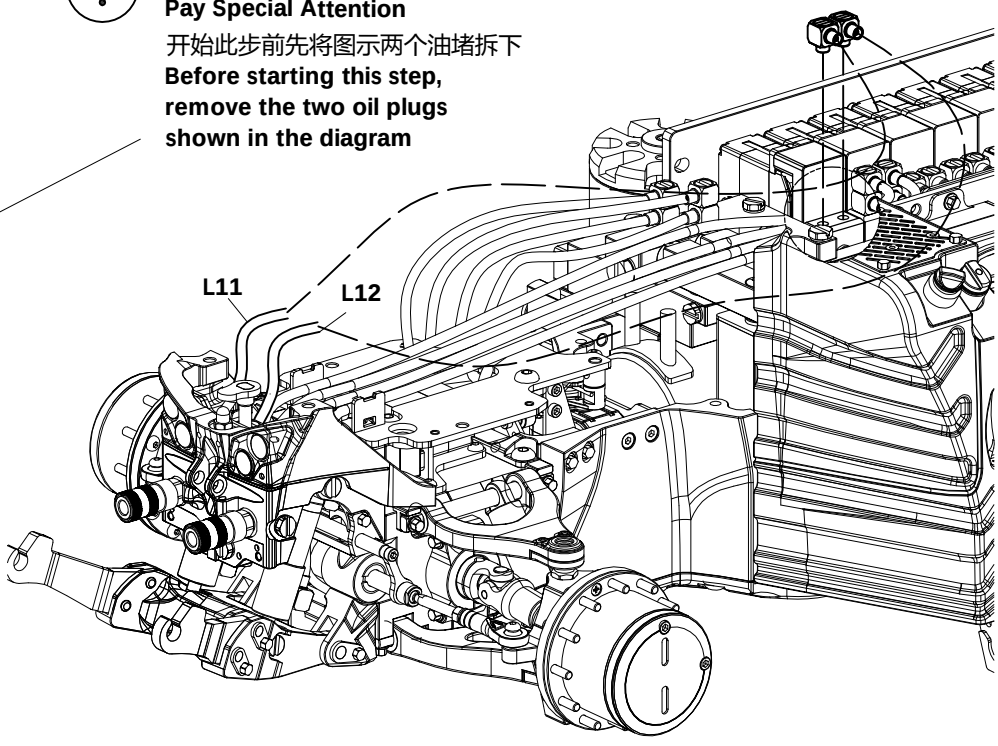

86

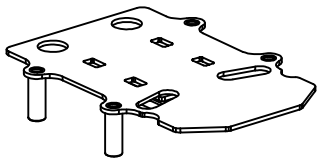


C1-10

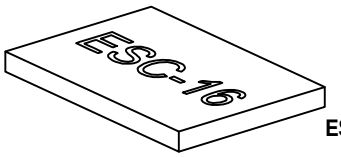

ESC-16

特别注意
Pay Special Attention
使用轧带固定
Secure with Cable Tie

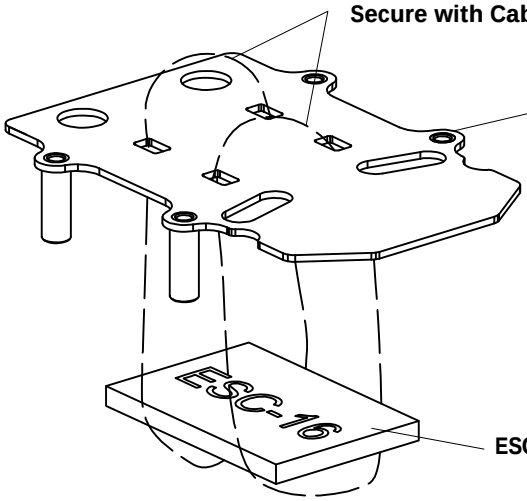


C1-10

ESC-16

特别注意
Pay Special Attention
接线图详见电子设备说明书
For wiring diagram, please refer to the electronic equipment manual


87




半圆头**M2-15** ×**4**
Hexagon socket button head screw


特别注意
Pay Special Attention
电线如图示穿过
he wire passes through as shown in the diagram


半圆头**M2-15**

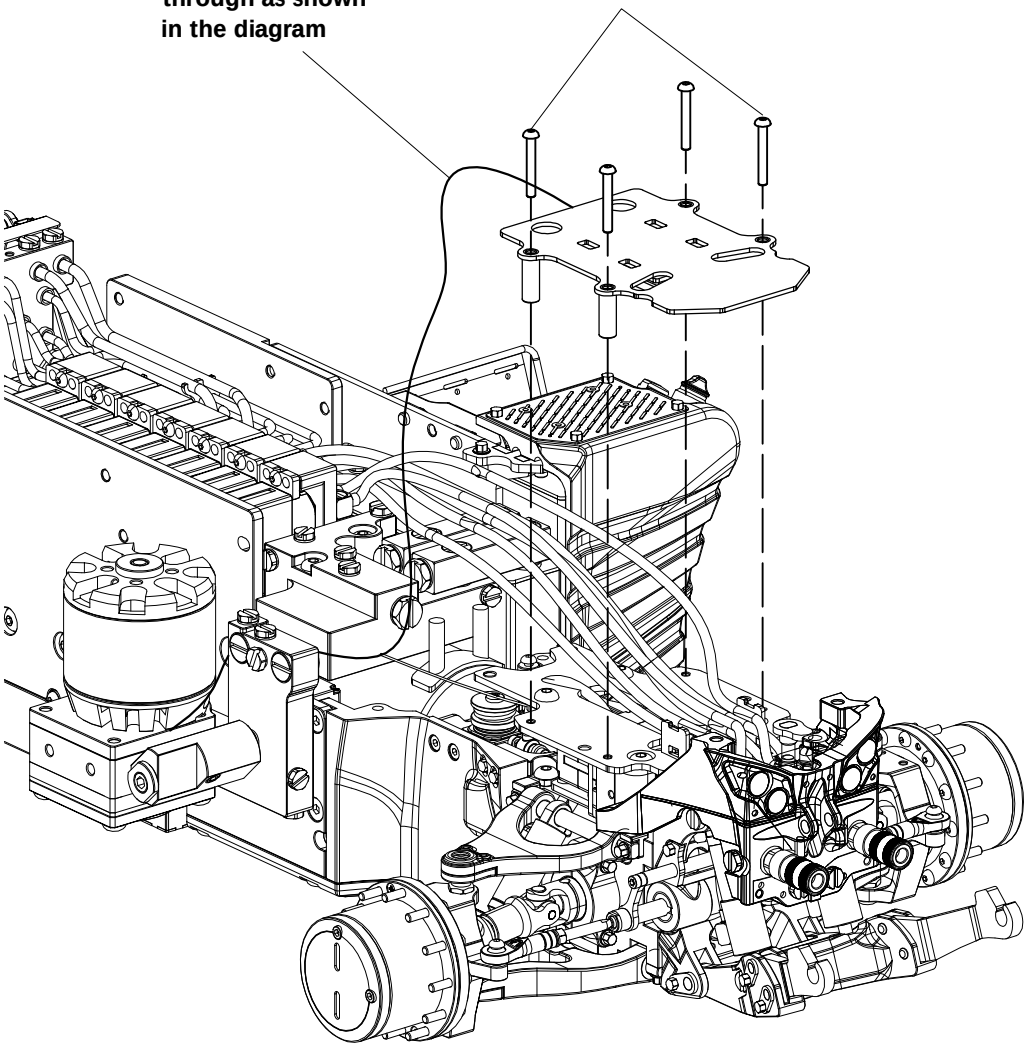


88


C1-11



C1-12


C1-13


C1-14

杯头**M1.6-6** ×2
Hexagon socket head cap screw

具体接线方式根据实际情况焊线
The specific wiring method is to weld the wires according to the actual situation

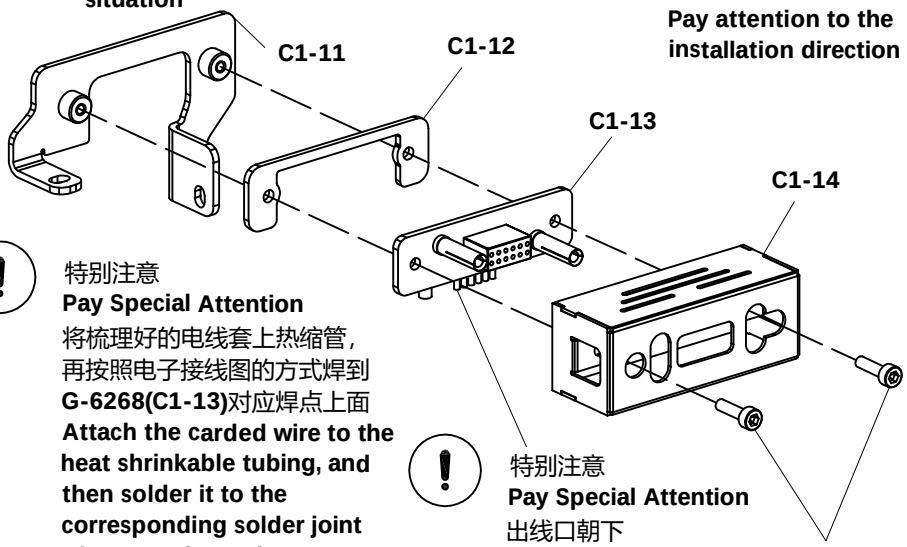

特别注意
Pay Special Attention
将梳理好的电线套上热缩管，再按照电子接线图的方式焊到**G-6268(C1-13)**对应焊点上面
Attach the carded wire to the heat shrinkable tubing, and then solder it to the corresponding solder joint of G-6268 (C1-13) according to the electronic wiring diagram


特别注意
Pay Special Attention
注意安装方向
Pay attention to the installation direction

特别注意
Pay Special Attention
出线口朝下
The wire mouth is facing downwards

杯头**M1.6-6**

89


半圆头**M2-4** ×2
Hexagon socket button head screw

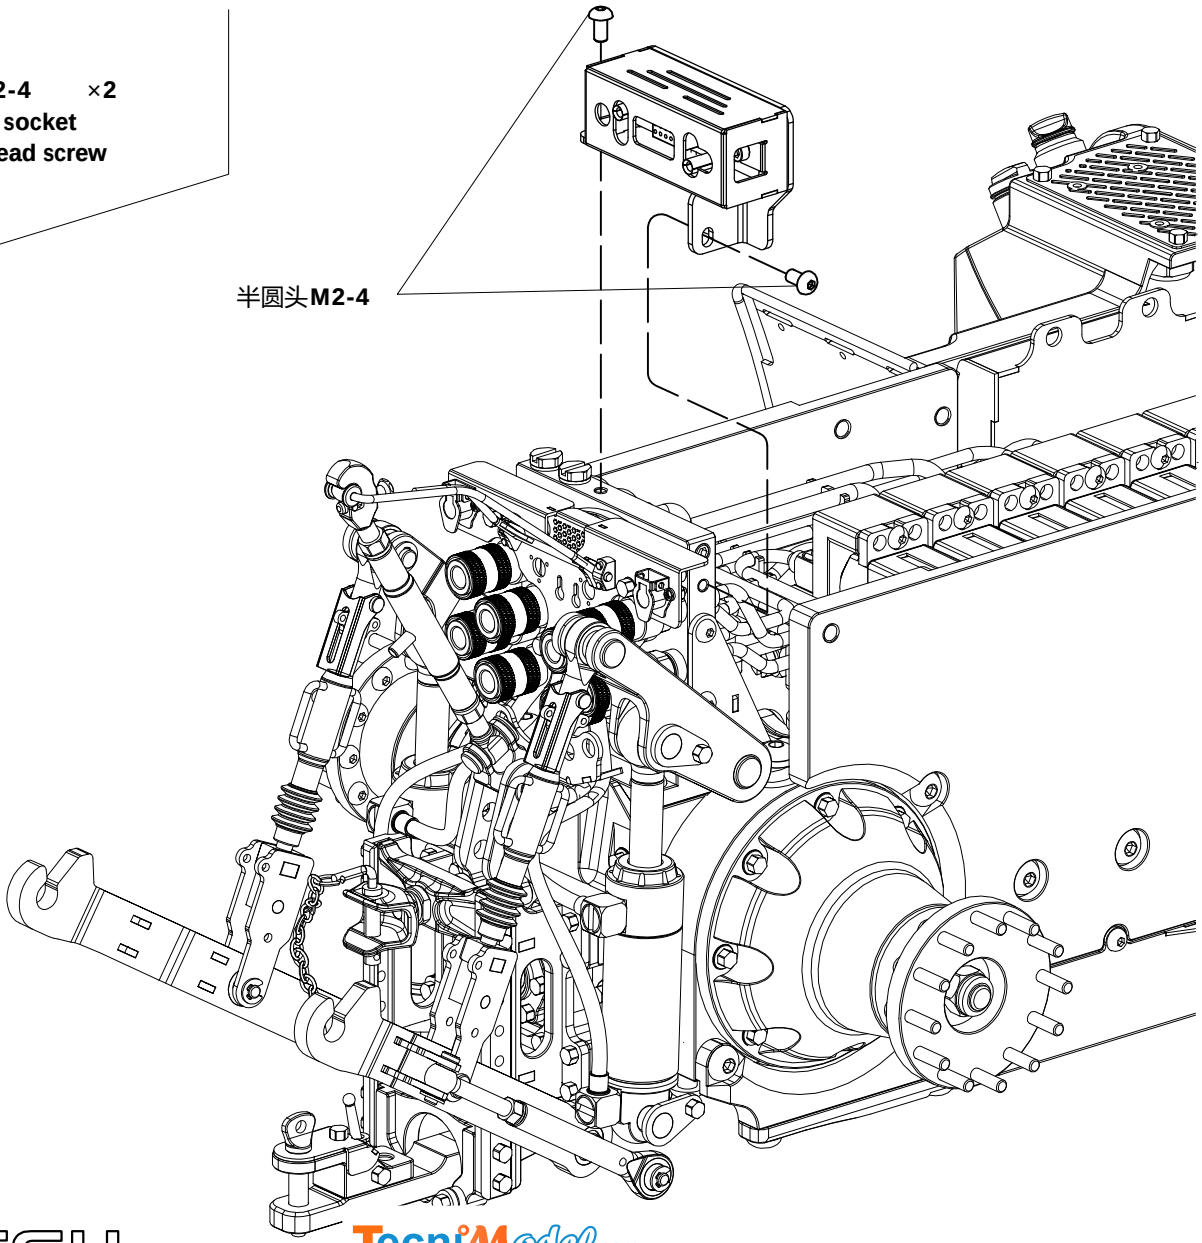

LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


90

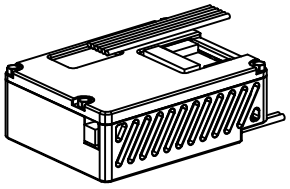

EL-007-B


特别注意
Pay Special Attention
接线图详见电子设备说明书
For wiring diagram, please refer to the electronic equipment manual


特别注意
Pay Special Attention
灯线放在此处
The wires are placed here

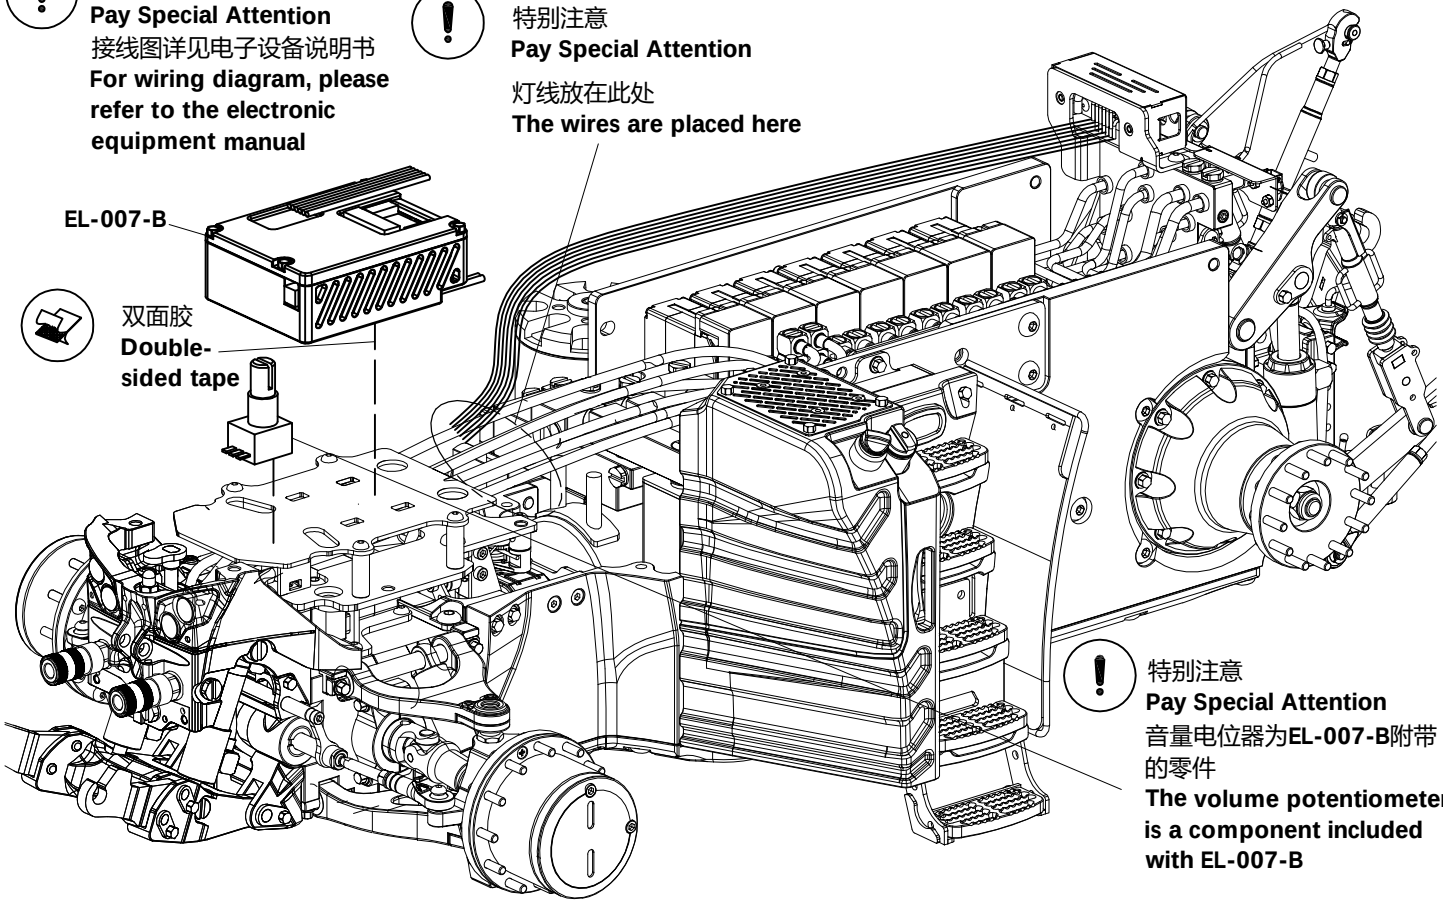


特别注意
Pay Special Attention
音量电位器为**EL-007-B**附带的零件
The volume potentiometer is a component included with EL-007-B

91

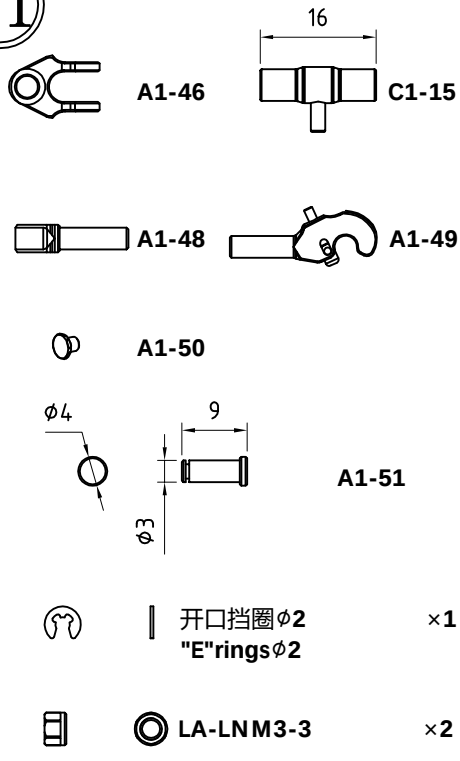

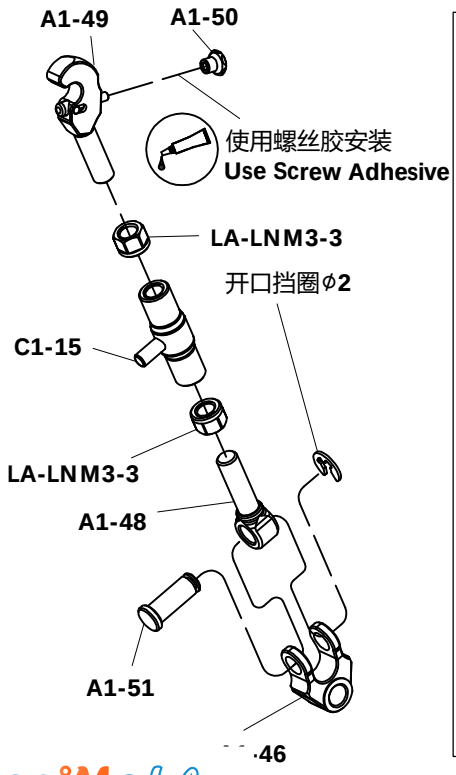


特别注意
Pay Special Attention
安装完成后调节到此长度，此长度仅供参考，请以实际为准
After installation, adjust to this length, which is for reference only. Please refer to the actual length

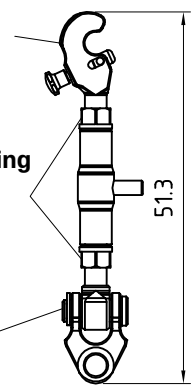


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU MODEL RACING

92

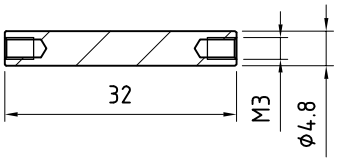


C1-16 ×4





重复/安装多个
Repeat/Build Multiple

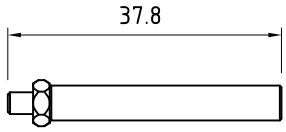

特别注意
Pay Special Attention
安装完成后调节到此长度，此长度仅供参考，请以实际为准
After installation, adjust to this length, which is for reference only. Please refer to the actual length

紧定螺钉**M3-6** ×4
Hexagon socket set screw




M3六角螺母 ×4
Hexagon nut

LESU MODEL RACING


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

93

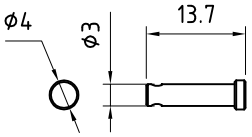


C1-17


步驟 91
step

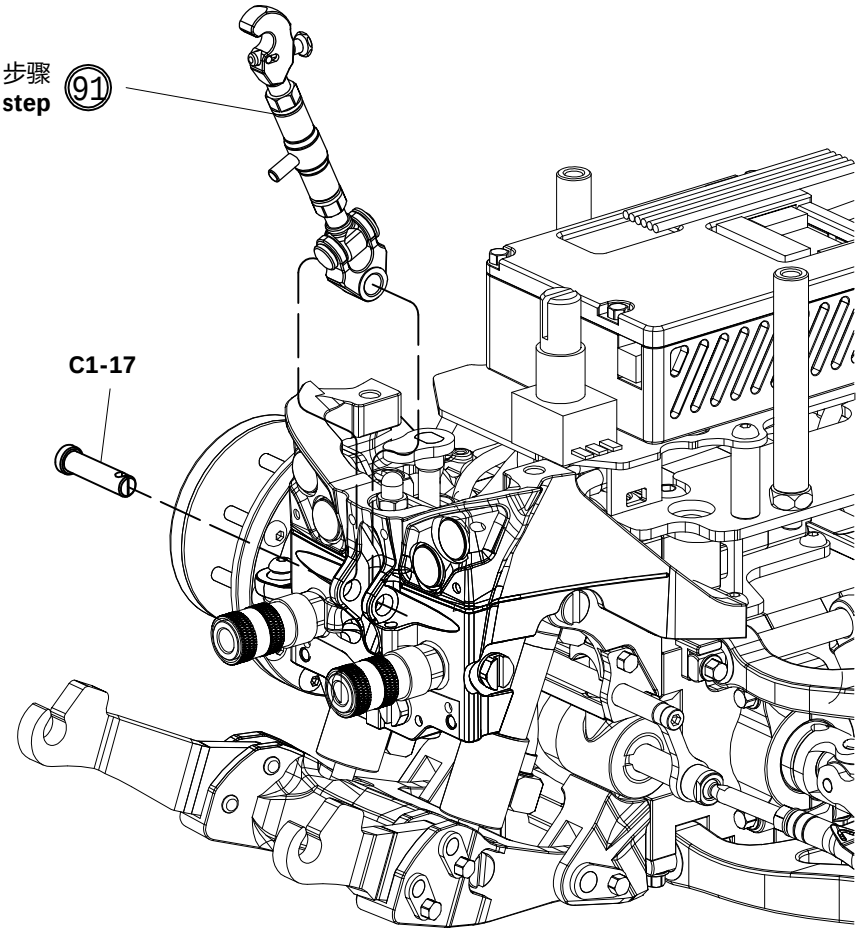

94

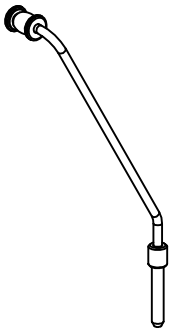


C1-18

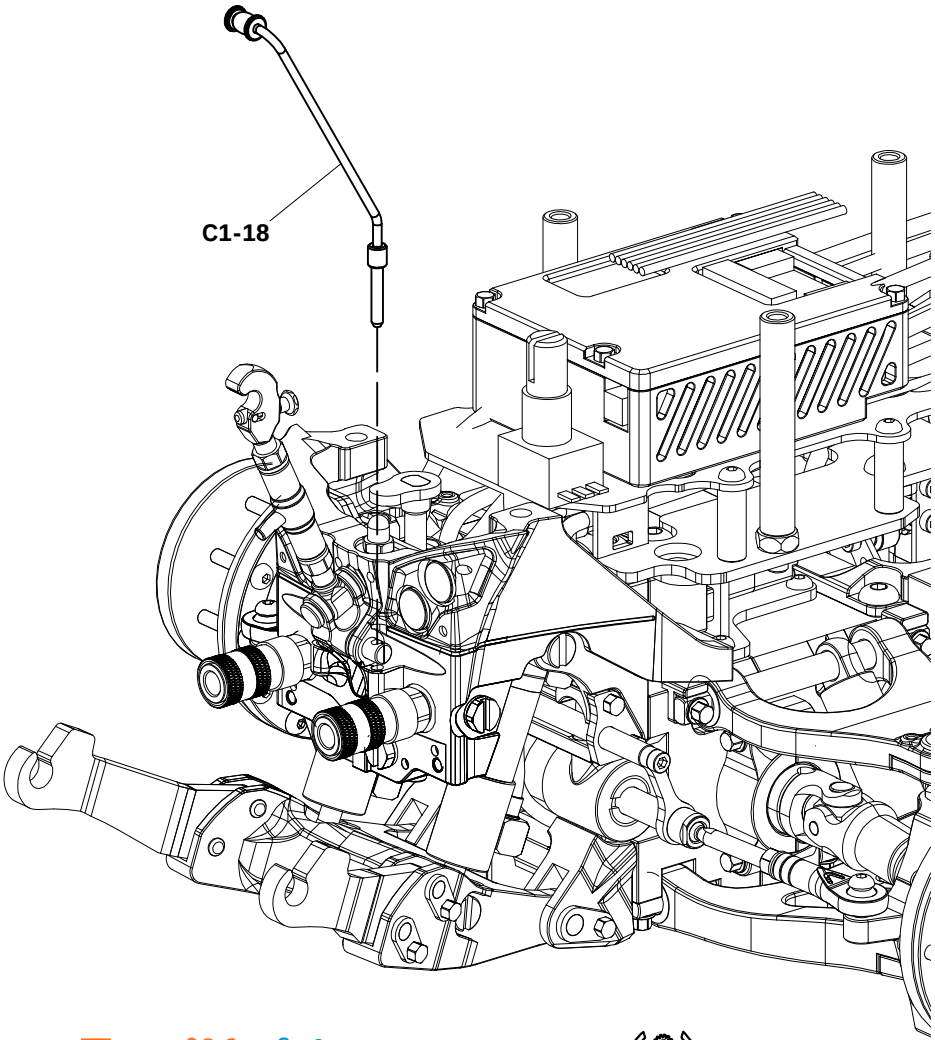

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING

95

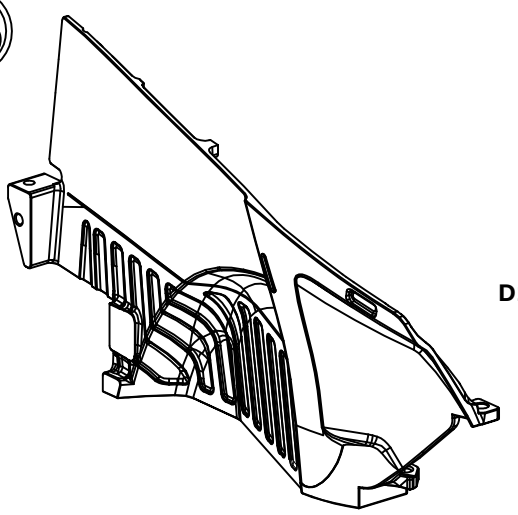


D1-1

半圆头**M3-6** ×3
Hexagon socket button head screw

半圆头**M3-8** ×1
Hexagon socket button head screw

PH2.0(公母头)延长线 ×2
线长**150mm**

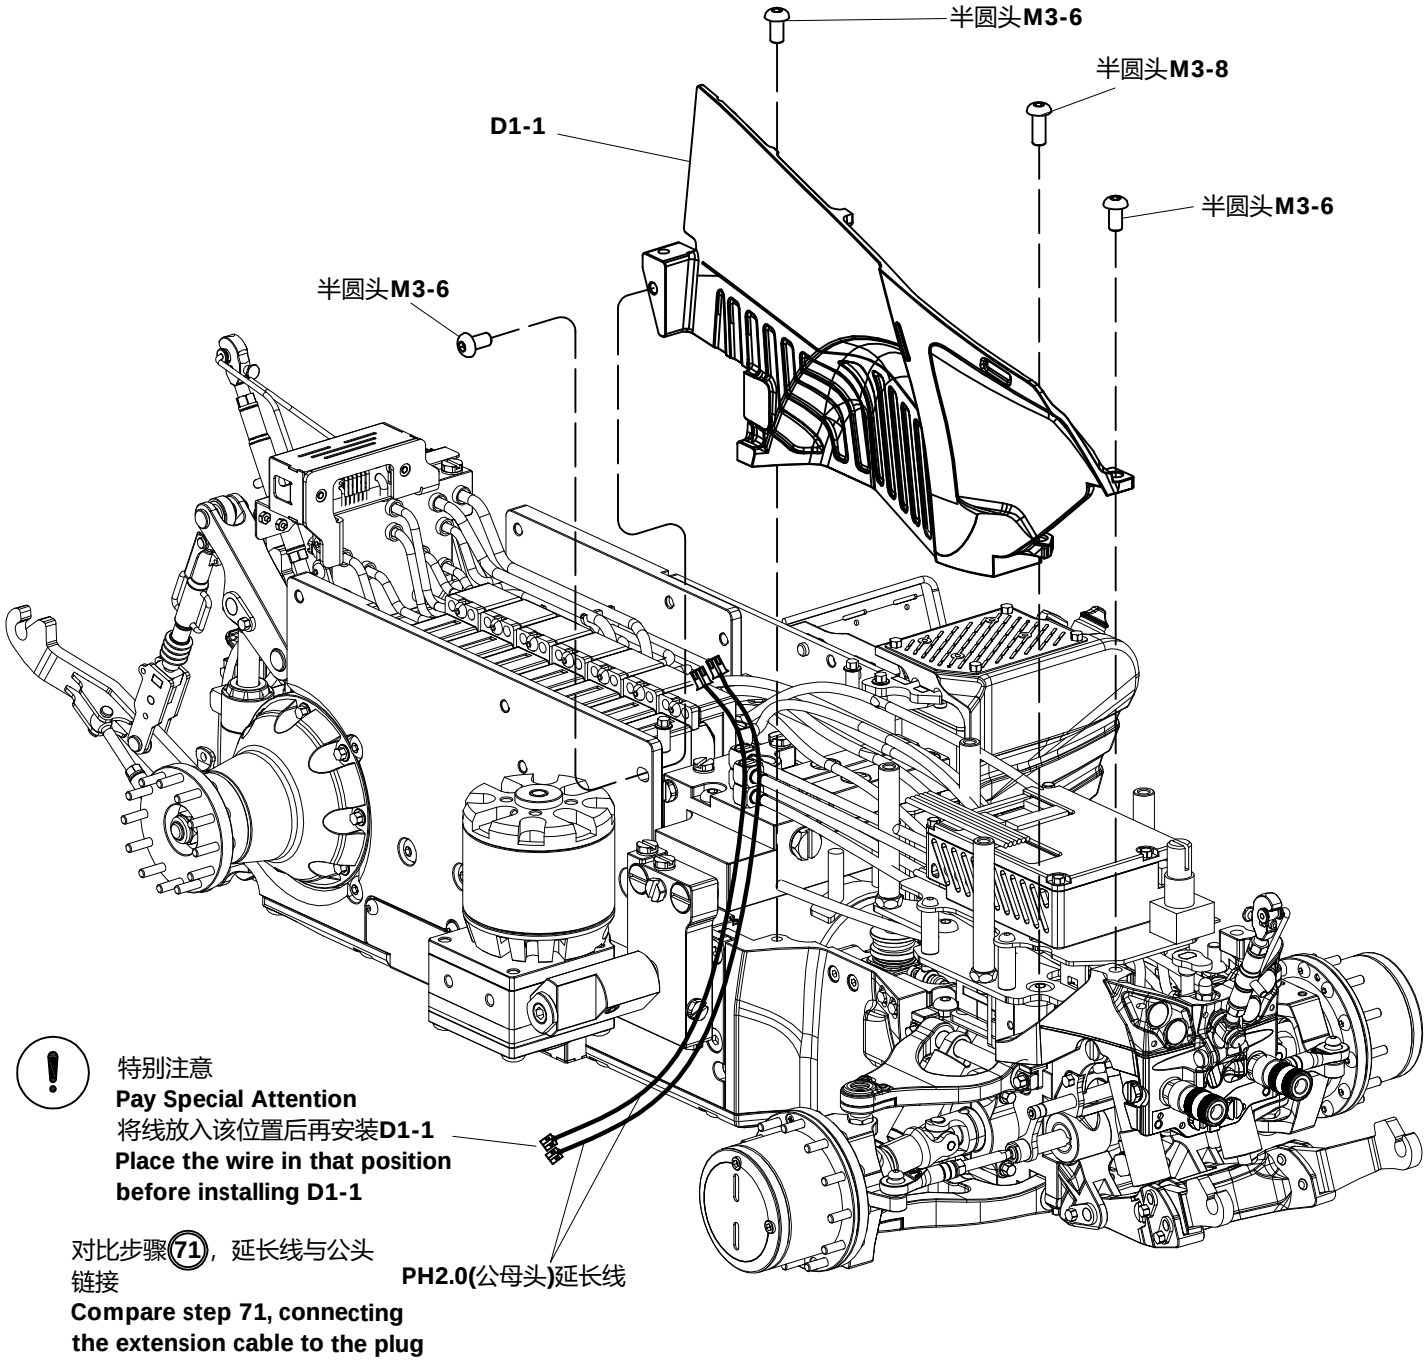

特别注意
Pay Special Attention
将线放入该位置后再安装**D1-1**
Place the wire in that position before installing D1-1

对比步骤(71)，延长线与公头链接
Compare step 71, connecting the extension cable to the plug

PH2.0(公母头)延长线

LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

96


法兰外六角M3-6 ×1
Locking flange nut

法兰外六角M3-10 ×1
Locking flange nut


特别注意
Pay Special Attention


灯线如图示穿过
The light wire passes through as shown in the diagram
穿过灯线前套入热缩管
Insert the wire into the heat shrink tubing before threading it through

步骤 69
step

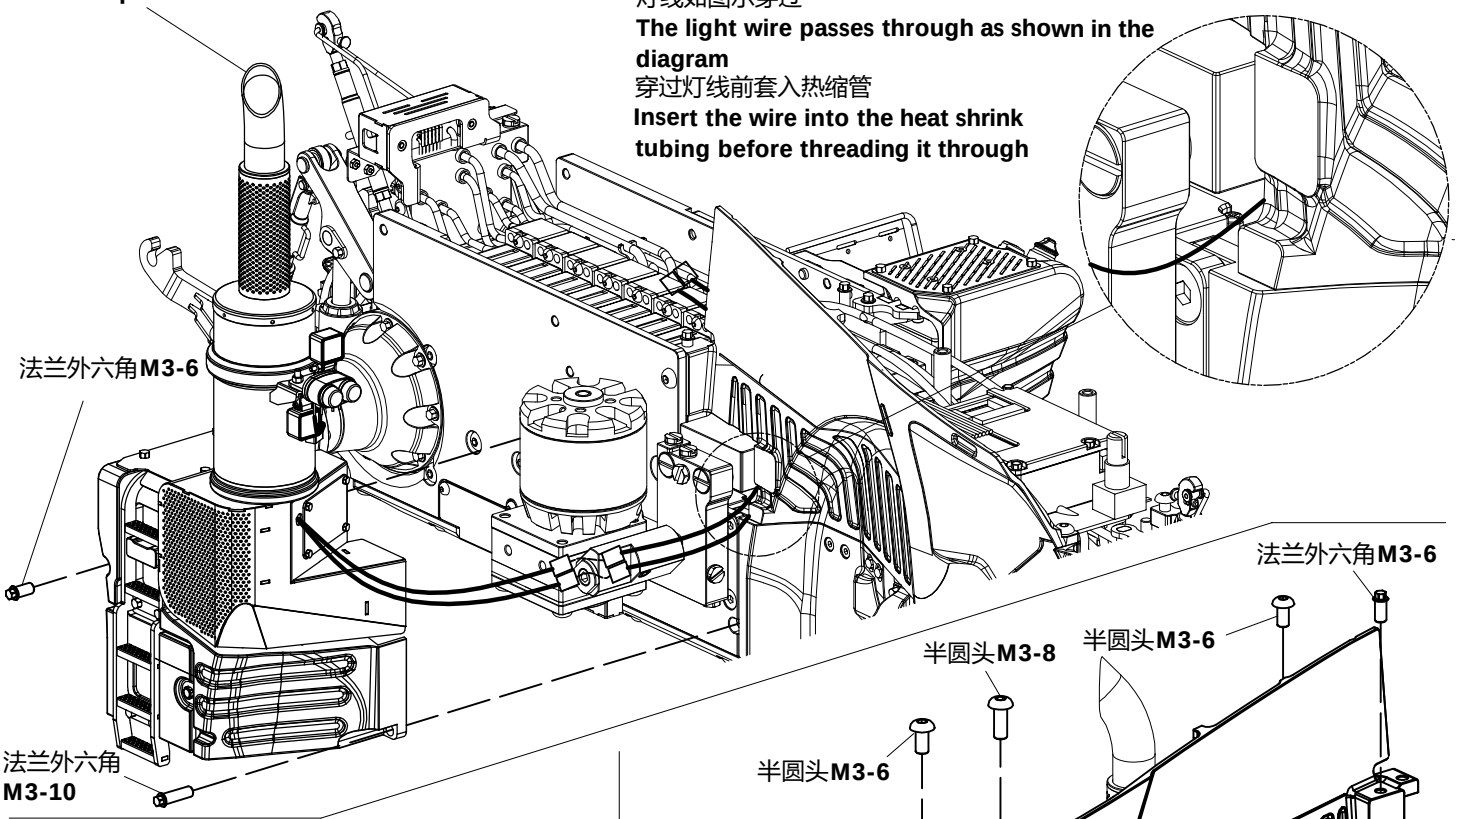

97

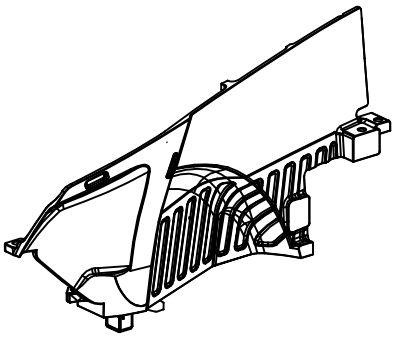

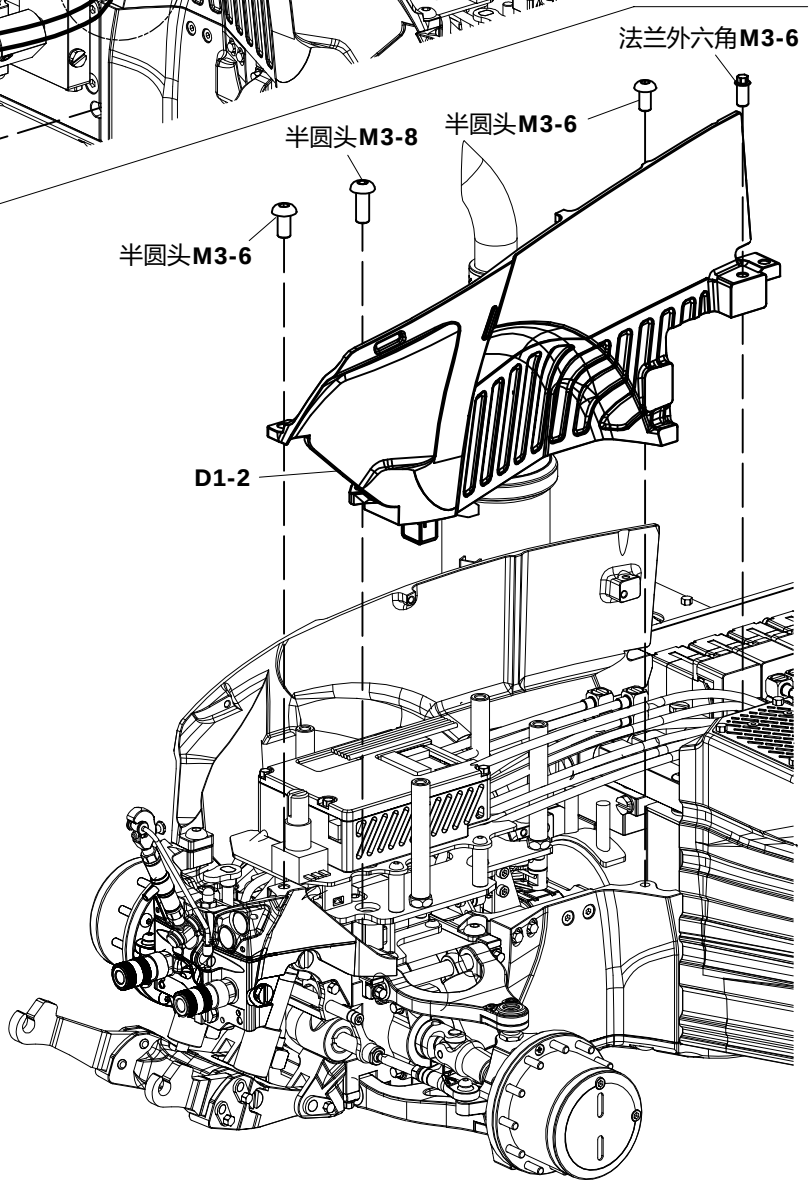

半圆头M3-6 ×2
Hexagon socket button head screw


半圆头M3-8 ×1
Hexagon socket button head screw

法兰外六角M3-6 ×1
Locking flange nut

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING


98




D1-3



半圆头M2-4 ×2
Hexagon socket button head screw

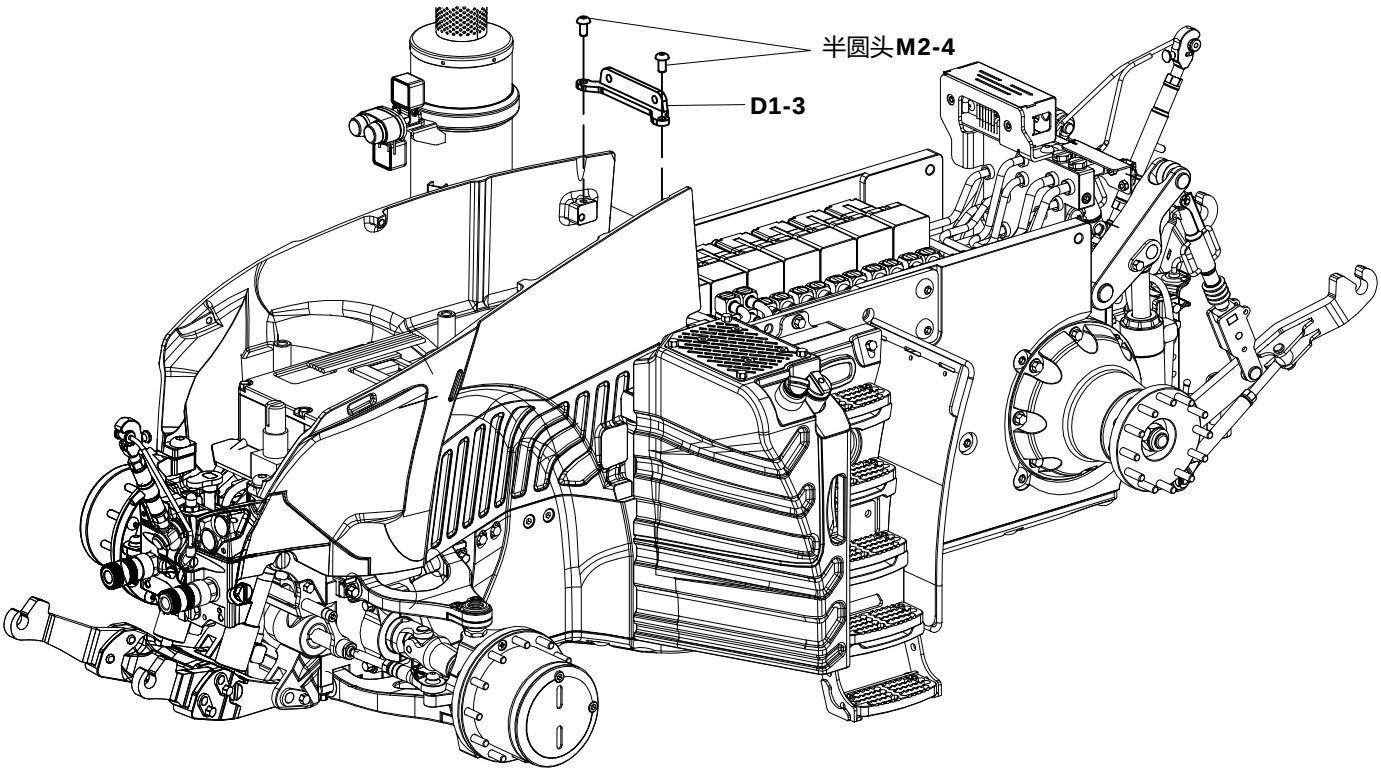

99

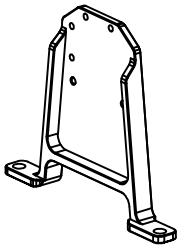


D1-4



法兰外六角M3-6 ×2
Locking flange nut



半圆头M2-4 ×2
Hexagon socket button head screw

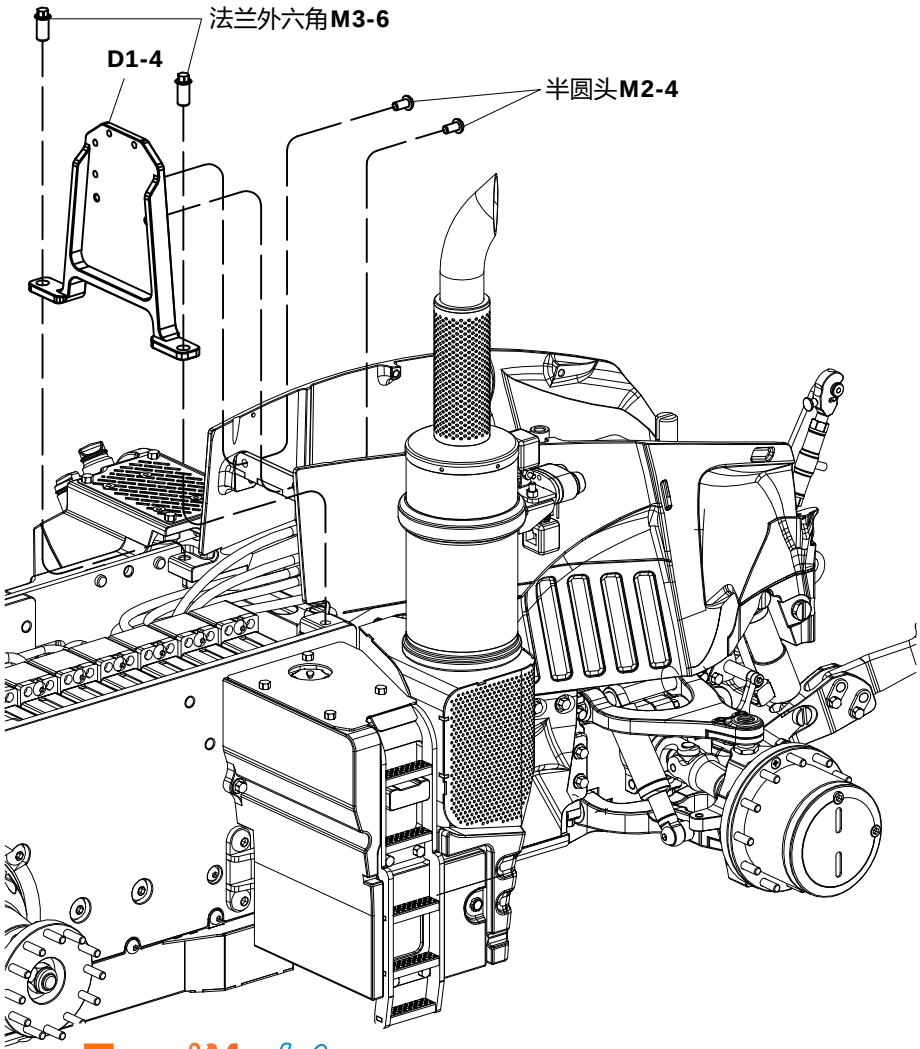




LESU
MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

100

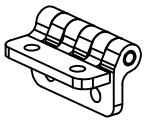


D1-5


半圆头M2-4 ×2
Hexagon socket button head screw

保持合适的方向
Ensure Proper Orientation

注意D1-5方向
Pay attention to the direction of D1-5

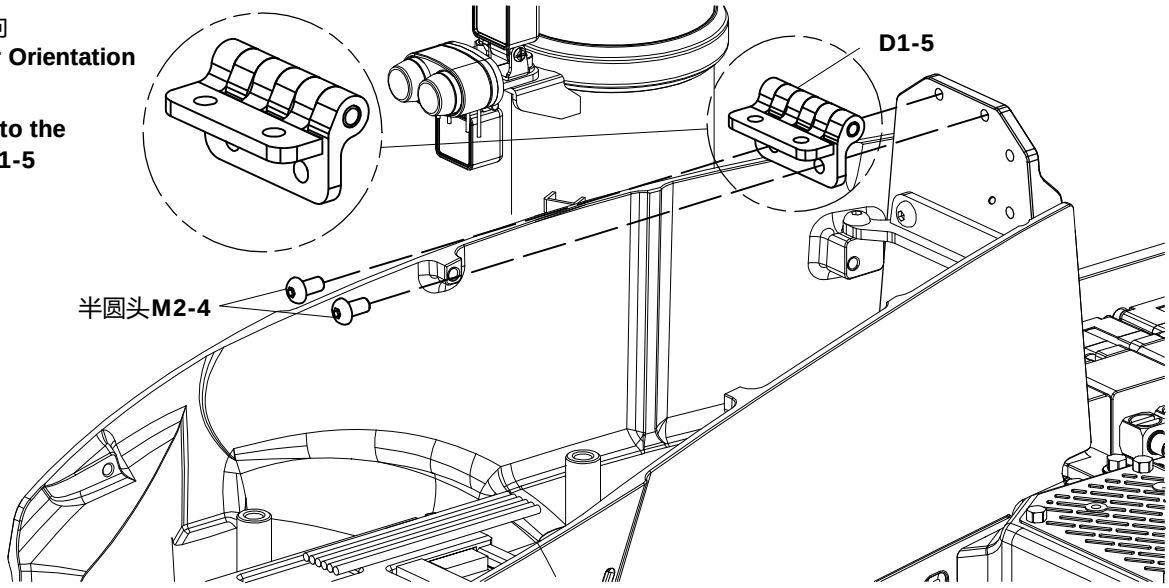

101

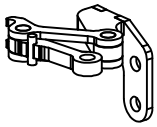


D1-6  D1-7


半圆头M2-8 ×1
Hexagon socket button head screw



M2自锁螺母 ×1
Locking nut

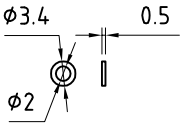

石墨垫片 ×1
Graphite gasket
外径3.4内径2厚度0.5
Outer diameter 4
inner diameter 2
thickness 0.5

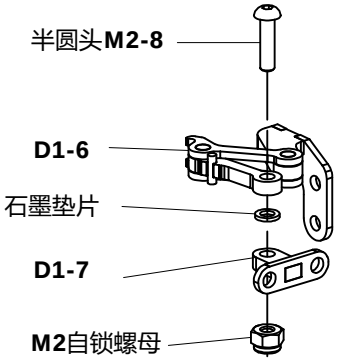




不要过度拧紧
Don't Over Tighten/Snug Tight



确保零件安装后能自由旋转
Ensure Free Rotation

102


半圆头M2-4 ×2
Hexagon socket button head screw

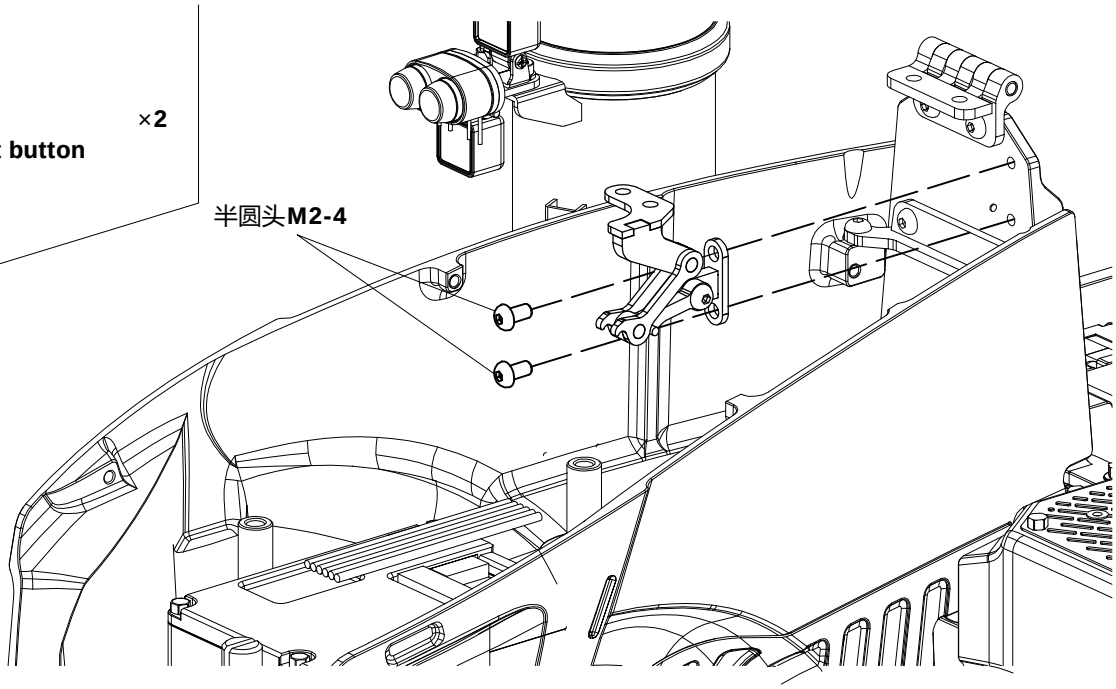


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING


103

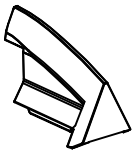

D1-8




D1-9

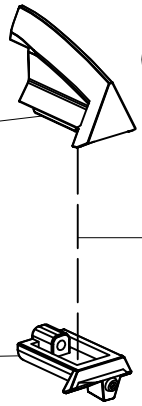

用快干胶安装
Use Instant Adhesive
注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect


104

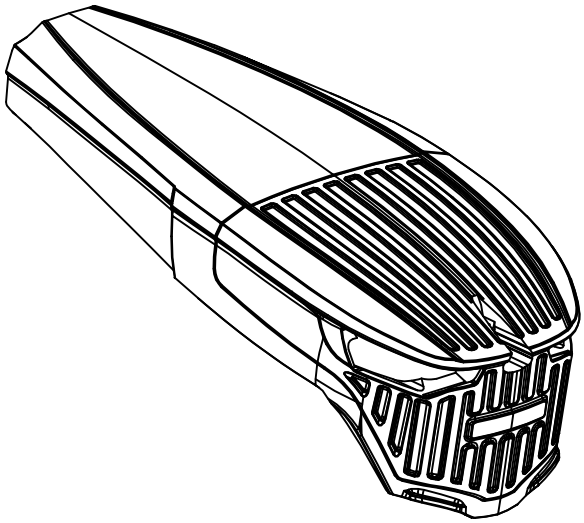

D1-10



杯头**M1.6-4** ×1
Hexagon socket head cap screw

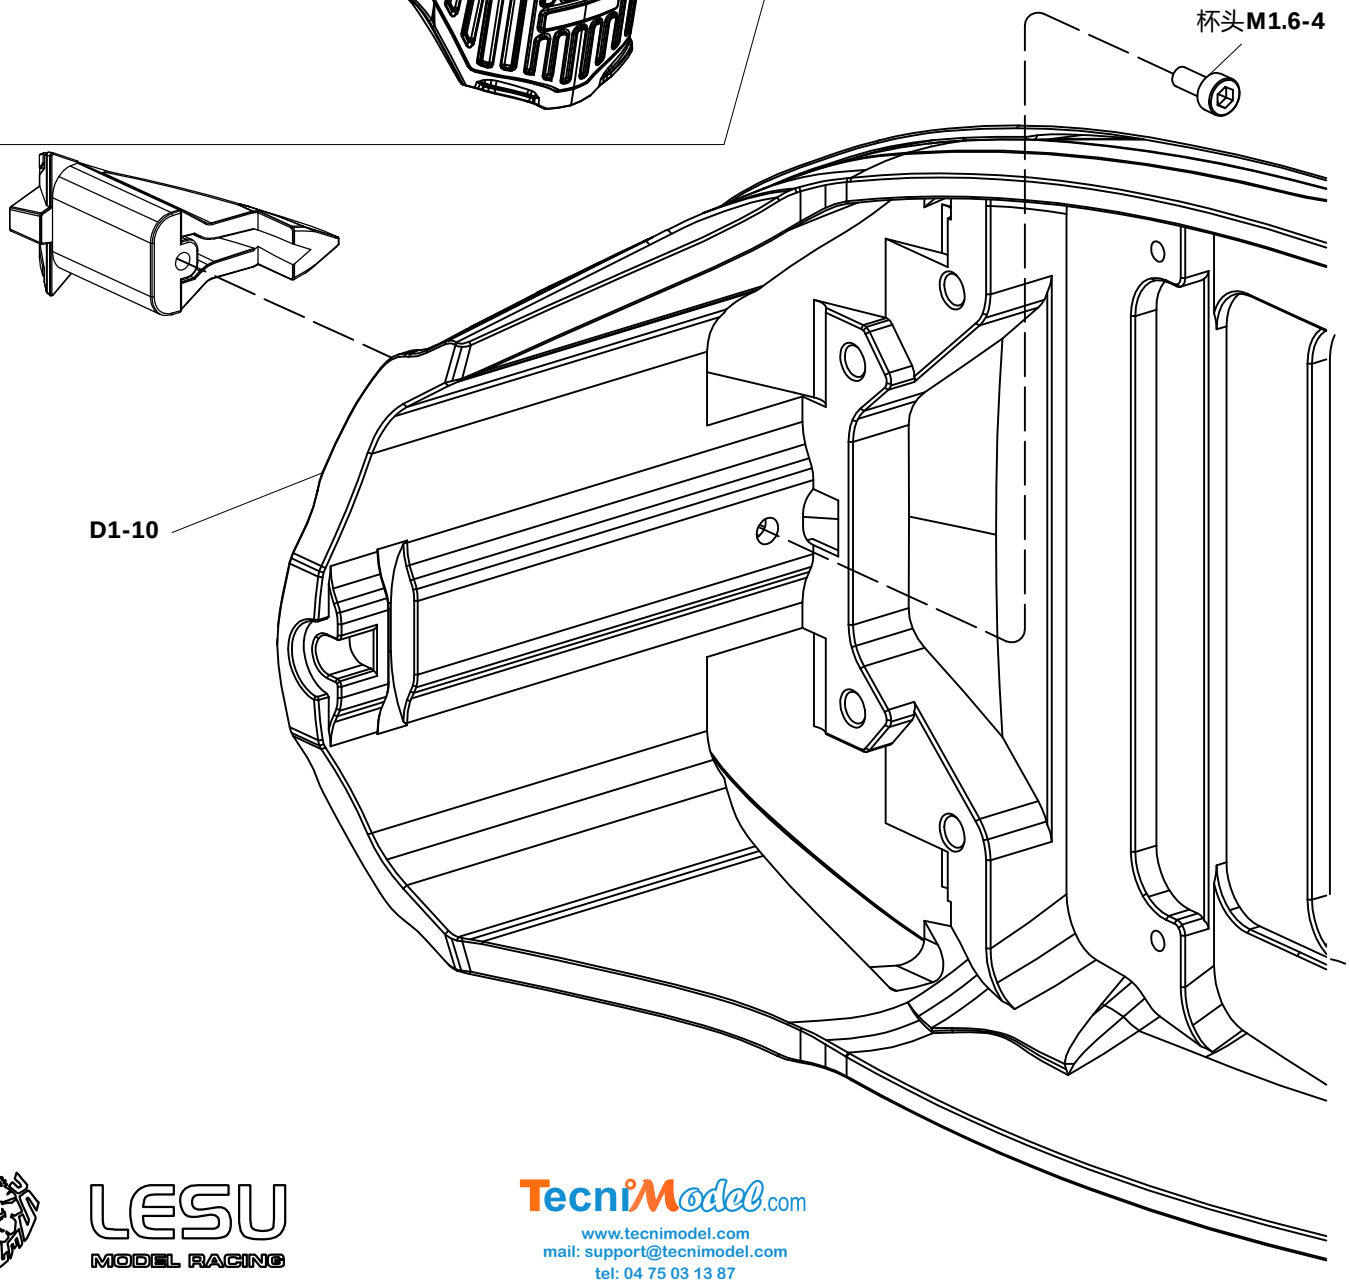

LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


105



D1-11L



D1-12L




D1-13L



D1-14L

十字盘头M1.2-6 ×2
Cross pan head screw cap screw

热缩管 Heat shrinkable tube ×1
内径0.8×长度 170mm
internal diameter0.8
length 170mm

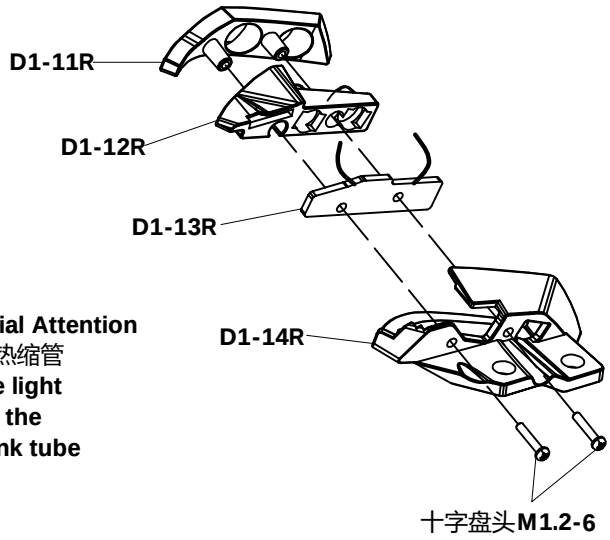

特别注意
Pay Special Attention
灯线套入热缩管
Insert the light wire into the heat shrink tube


106




D1-11R



D1-12R




D1-13R



D1-14R

十字盘头M1.2-6 ×2
Cross pan head screw cap screw


热缩管 Heat shrinkable tube ×2
内径0.8×长度 170mm
internal diameter0.8
length 170mm

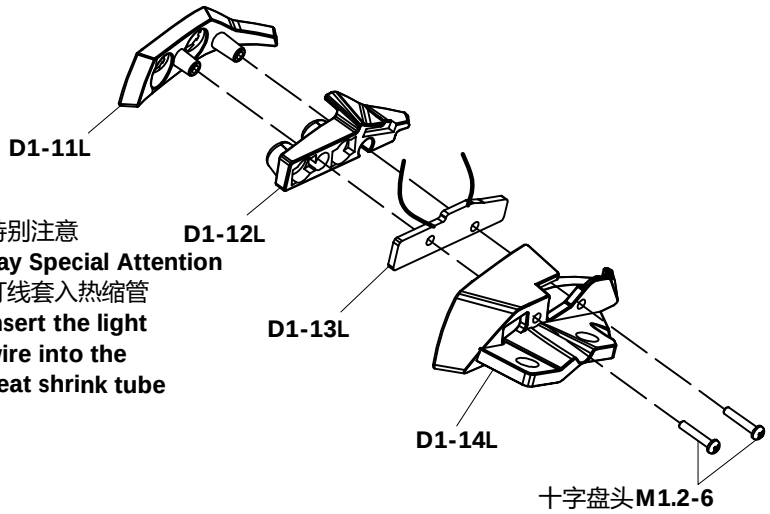

特别注意
Pay Special Attention
灯线套入热缩管
Insert the light wire into the heat shrink tube

107

半圆头M3-6 ×4
Hexagon socket button head screw

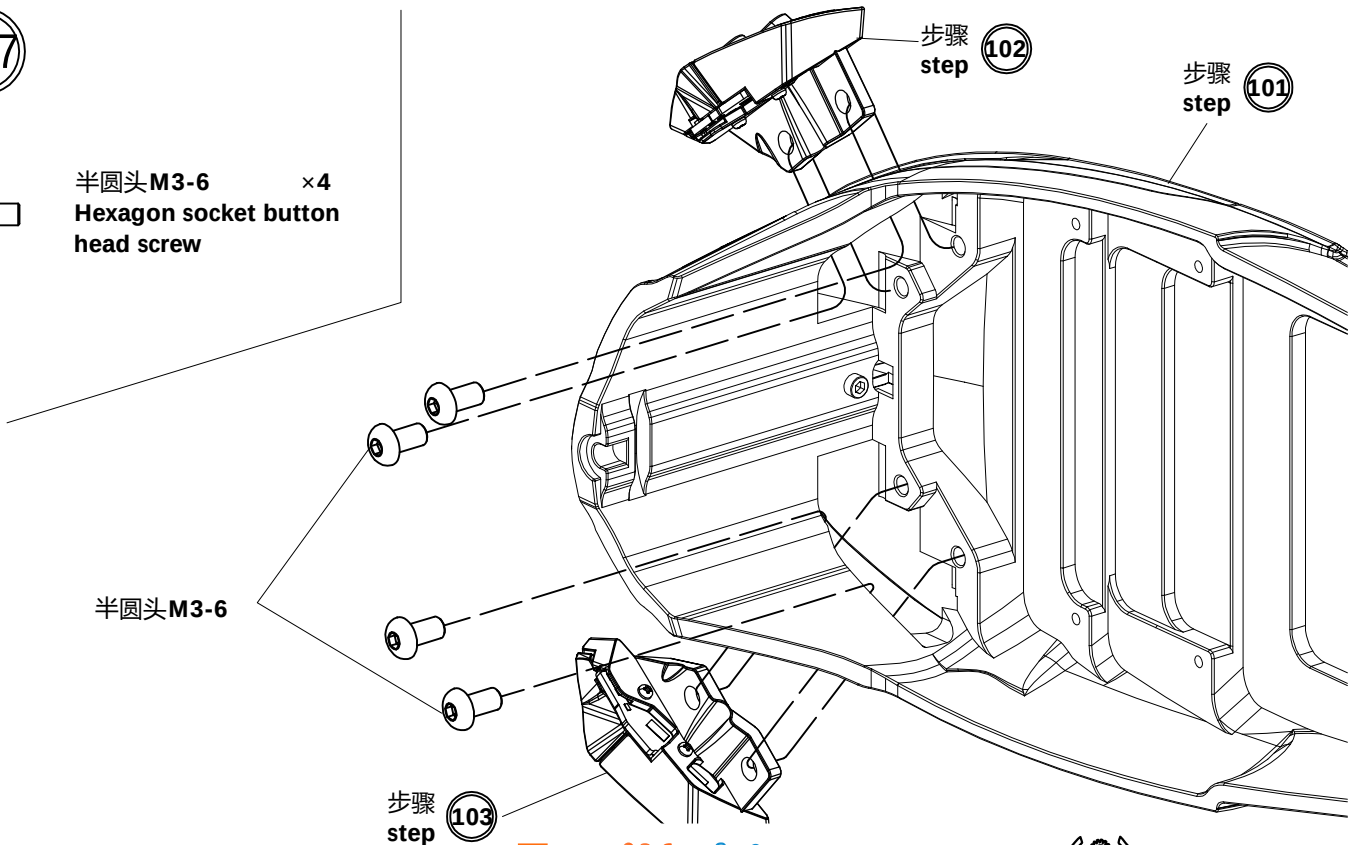


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING


108

D1-15 ×10


外六角M2-3 ×10
Hexagon screw

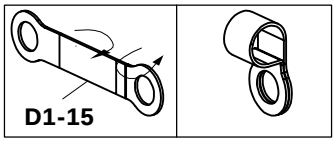

特别注意
Pay Special Attention
D1-15按照图示折弯后再进行安装
Bend D1-15 according to the diagram before installation

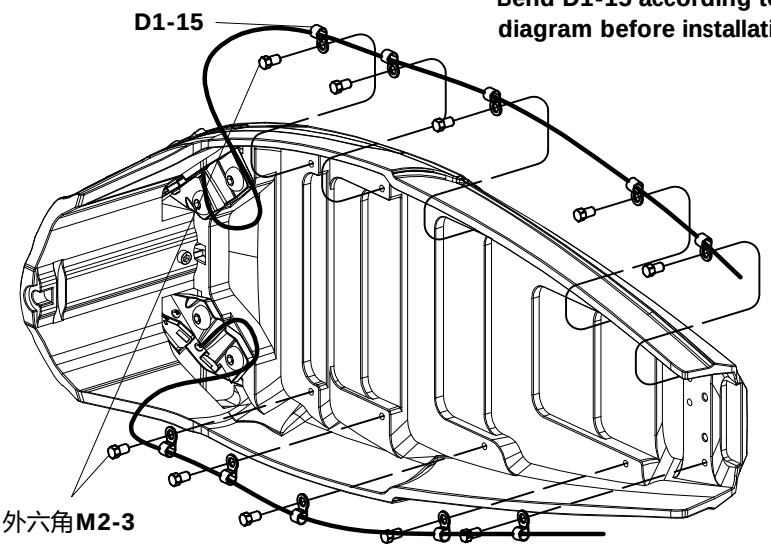



特别注意
Pay Special Attention
安装前先将灯线穿入D1-15
Before installation, thread the light wire into D1-15
灯线从此穿过
The wires pass through here

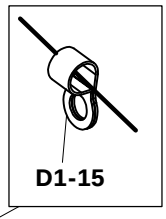

109

半圆头M2-4 ×4
Hexagon socket button head screw

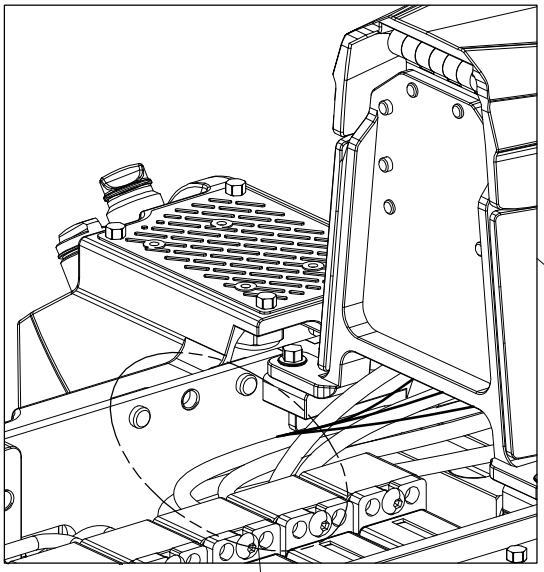

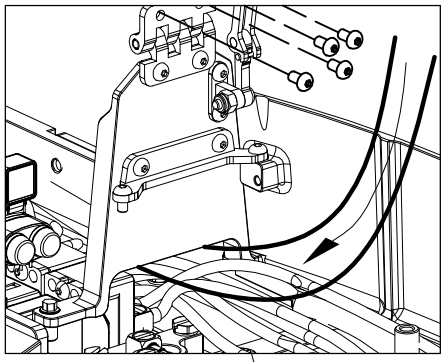

特别注意
Pay Special Attention
灯线从此穿过
The wires pass through here

特别注意
Pay Special Attention
建议将电路板放在此处
Suggest placing the circuit board here

LESU
MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

110




E1-1




E1-2



E1-3

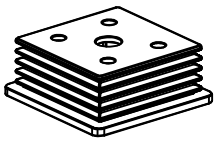


E1-4



E1-5



E1-6

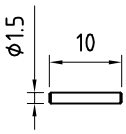


圆柱销ϕ1.5×10 ×2
Cylindrical pin ϕ1.5×10



半圆头M2-5 ×2
Hexagon socket button head screw




半圆头M2-6 ×1
Hexagon socket button head screw

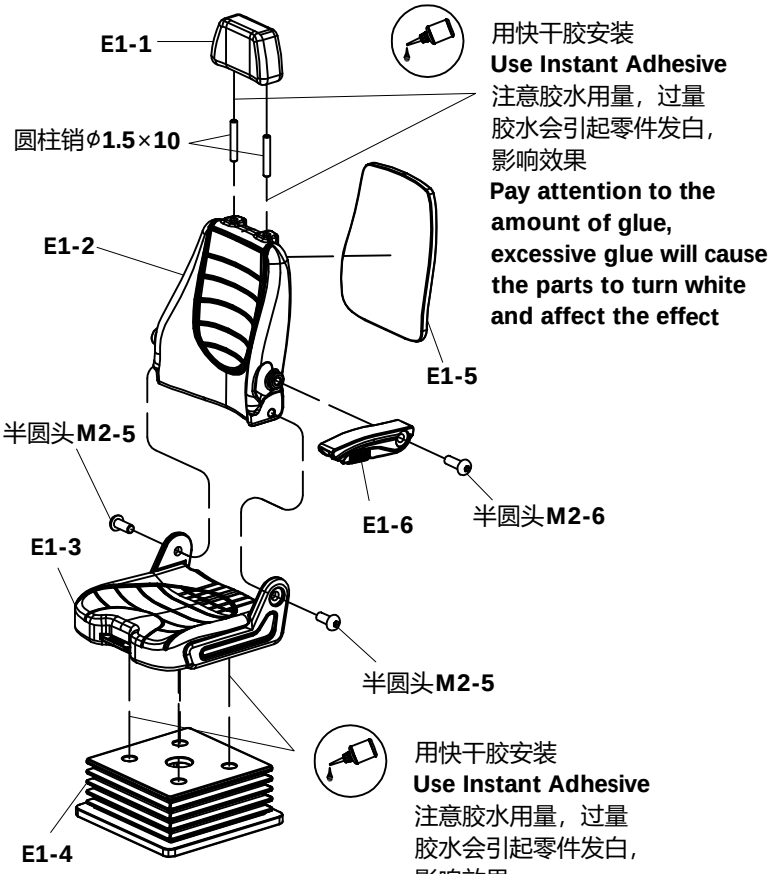

用快干胶安装
Use Instant Adhesive
注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect


用快干胶安装
Use Instant Adhesive
注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect

111

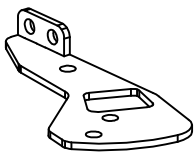

E1-7

半圆头M2-6 ×2
Hexagon socket button head screw

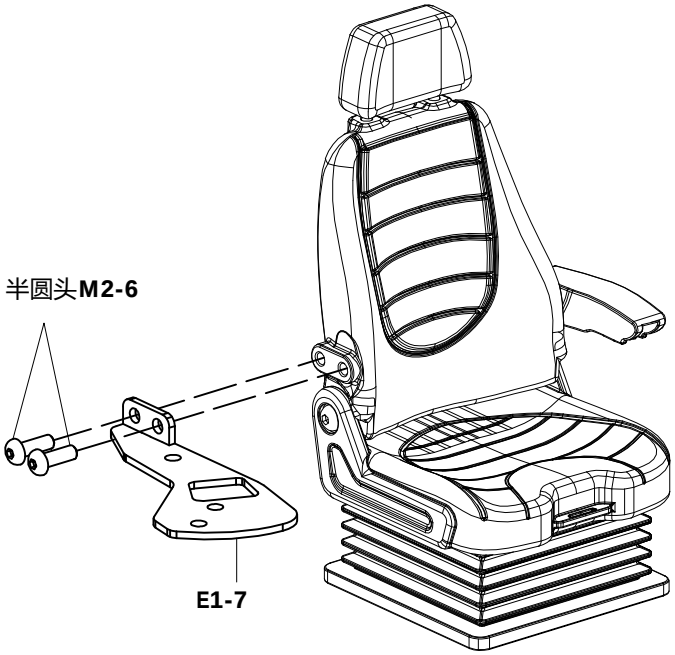

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


LESU
MODEL RACING


112


E1-8


E1-9


E1-10

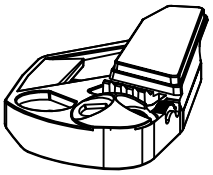

E1-11

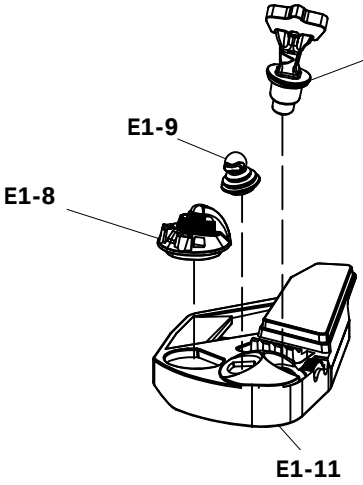





用快干胶安装
Use Instant Adhesive
注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect

113

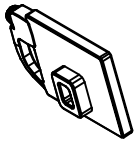
E1-12

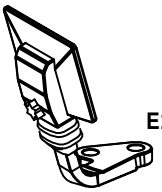
E1-13

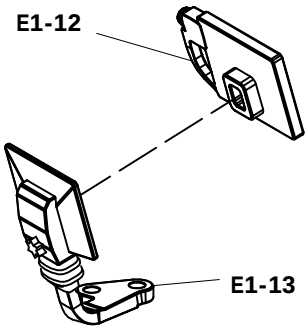




用快干胶安装
Use Instant Adhesive
注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect

114



半圆头**M2-4** ×1
Hexagon socket button head screw


半圆头**M2-6** ×2
Hexagon socket button head screw

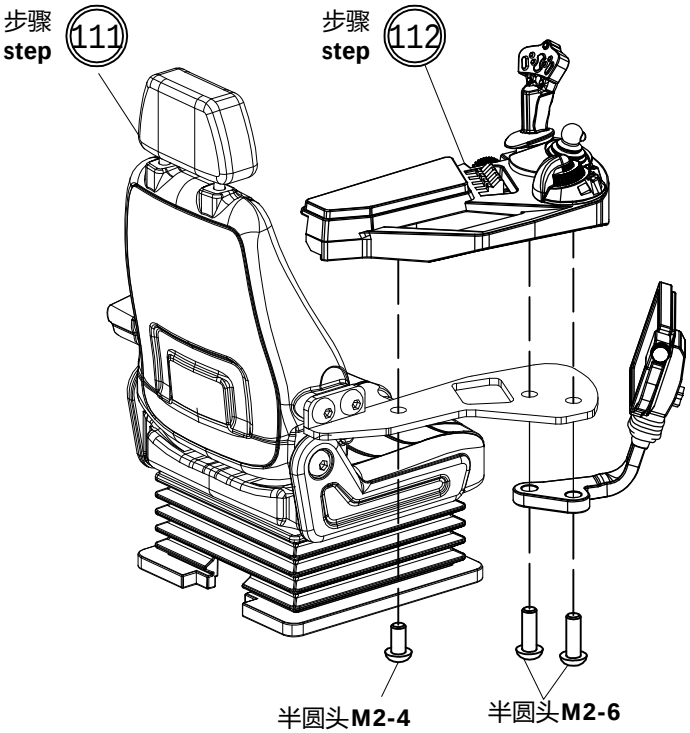


LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

115

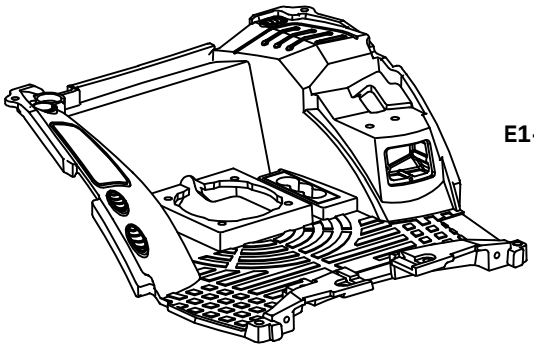

E1-14


半圆头M2-5 ×4
Hexagon socket button head screw

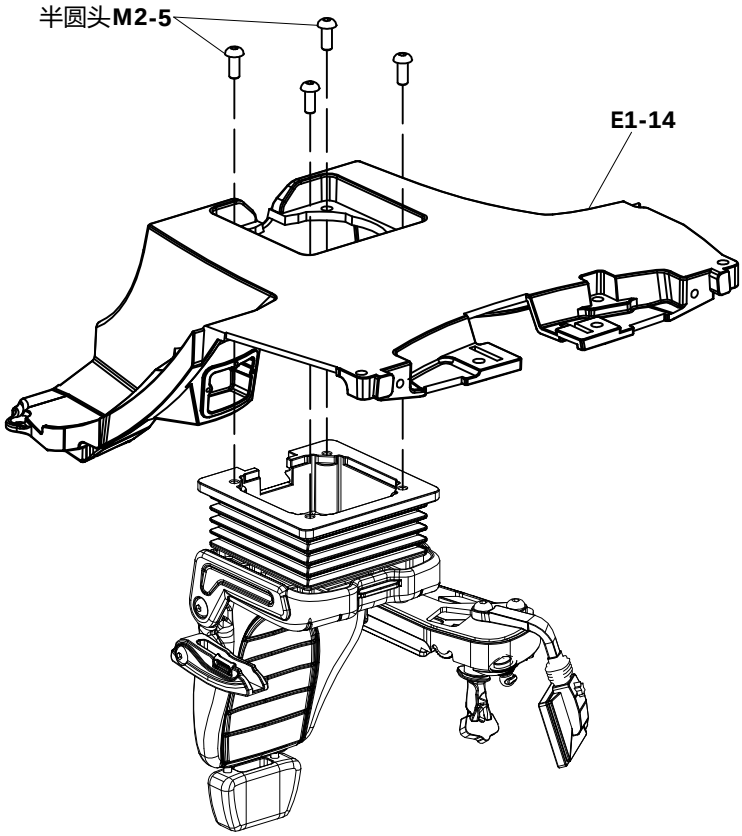

116




E1-15




E1-16

十字沉头M1.6-6 ×2
Cross recessed countersunk head screw

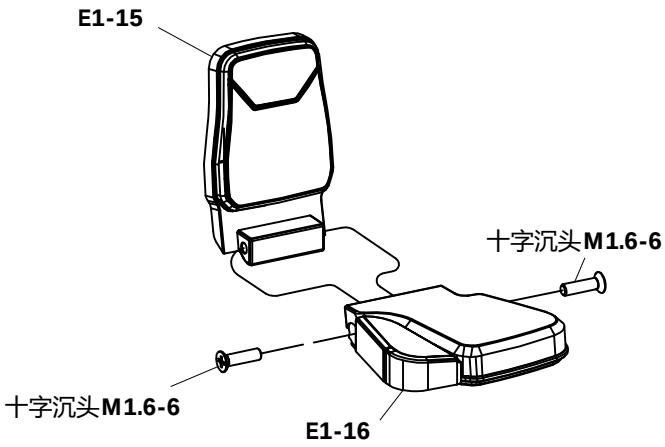

117




E1-17



E1-29

半圆头M2-5 ×2
Hexagon socket button head screw


十字盘头M1-4 ×3
Cross pan head screw

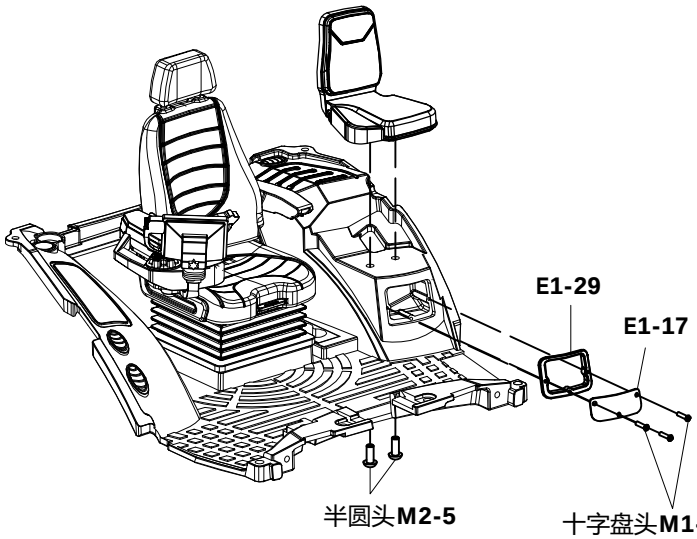

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING


118

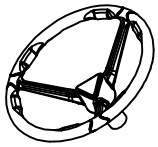


E1-18



E1-19

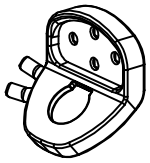

E1-20

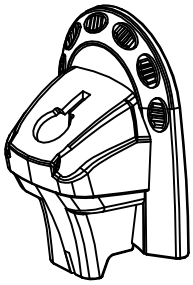


E1-21




E1-23



半圆头**M2.5-6** ×1
Hexagon socket button head screw

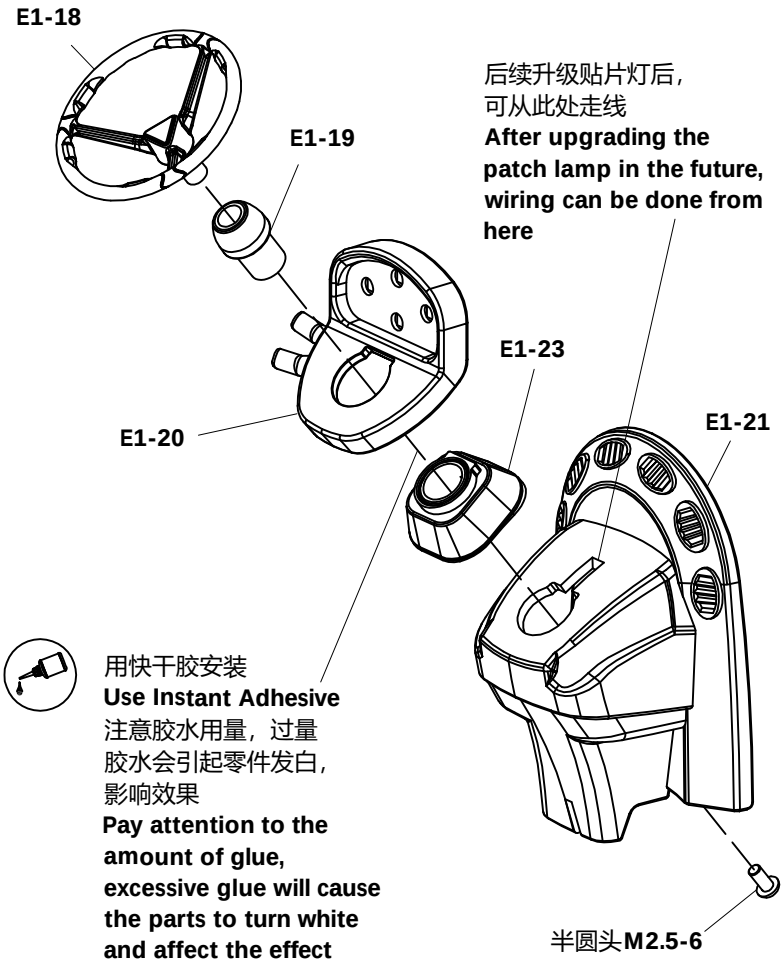


119




E1-24 ×2



E1-25

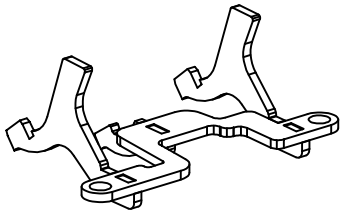

E1-26

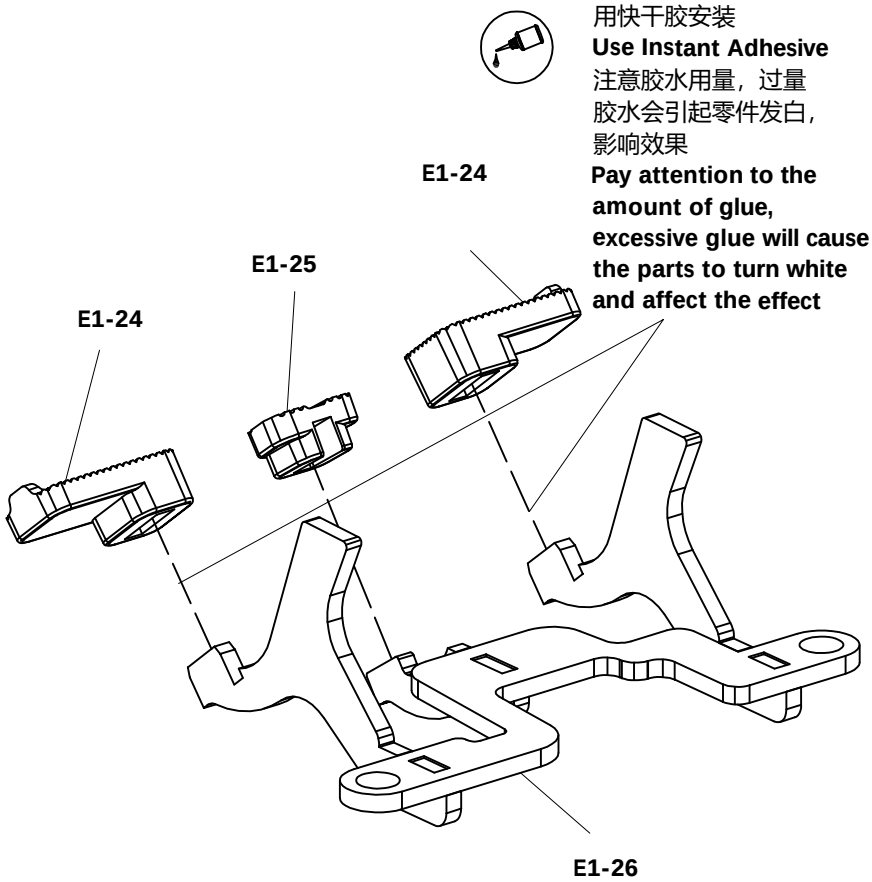


LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


120

半圆头**M2-6** ×2
Hexagon socket button head screw

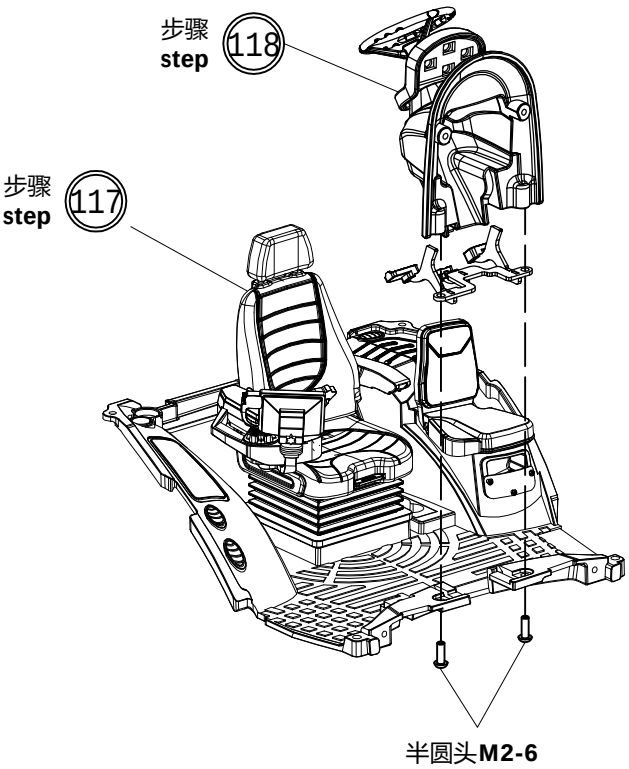



121


E1-27


E1-28

半圆头**M2-6** ×1
Hexagon socket button head screw

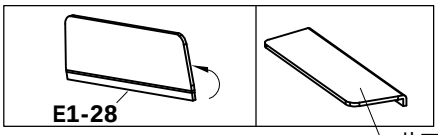


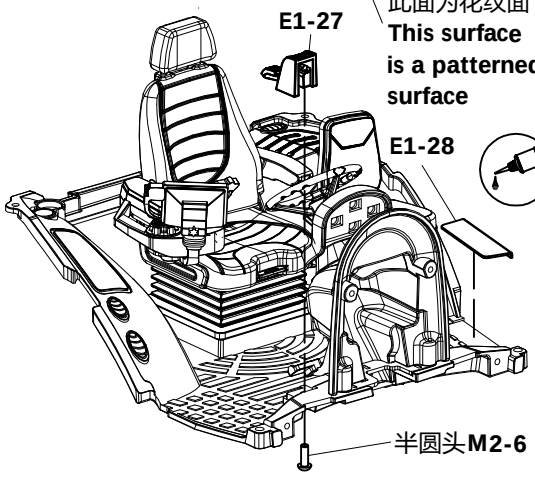


特别注意
Pay Special Attention
E1-28按照图示折弯后再进行安装
Bend E1-28 according to the diagram before installation

用快干胶安装
Use Instant Adhesive
注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect

122

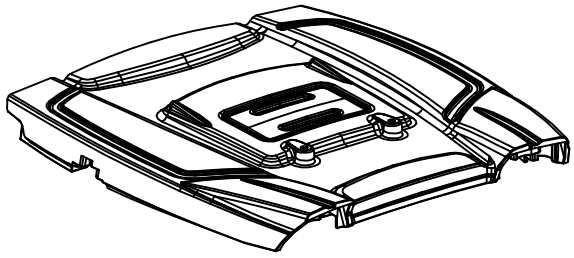
F1-1

外六角**M2-3** ×2
Hexagon screw

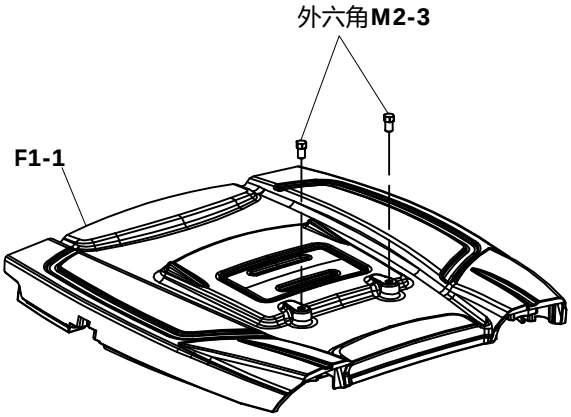

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87
LESU MODEL RACING

123




F1-2L




F1-2R



3mm灯珠(白光) ×4
3mm LED beads



F1-3L



F1-3R



C1-4 ×4


半圆头M2-3 ×2
Hexagon socket button head screw


热缩管 Heat shrinkable tube
内径7×长度 40mm
internal diameter7
length 40mm



修剪
CUT/Trim
将热缩管按照F1-2L和F1-2R的轮廓裁剪后套入F1-2L与F1-2R防止短路
Cut the heat shrink tubing according to the contours of F1-2L and F1-2R and insert it into F1-2L and F1-2R to prevent short circuits

套入热缩管后优先完成这个步骤
After inserting the heat shrink tubing, prioritize completing this step

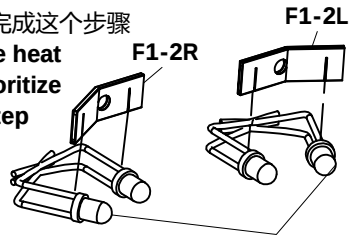

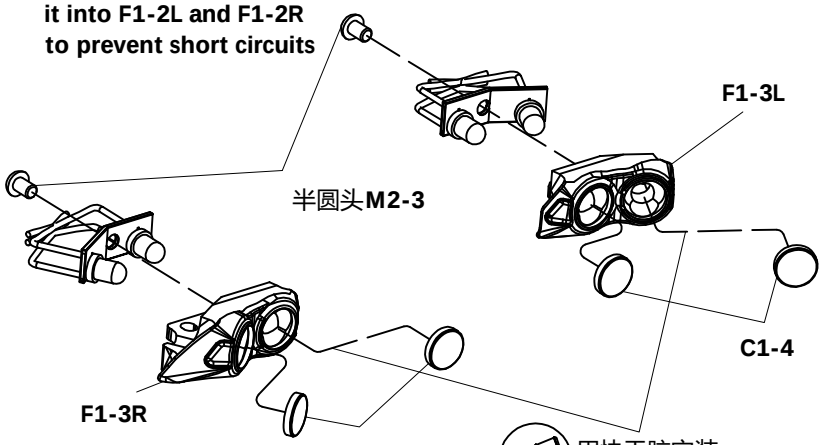



用快干胶安装
Use Instant Adhesive
注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect

124

半圆头M2-4 ×4
Hexagon socket button head screw


热缩管 Heat shrinkable tube
内径0.8×长度 20mm
internal diameter0.8
length 10mm

热缩管 Heat shrinkable tube
内径1×长度 280mm
internal diameter1
length 280mm

半圆头M2-4




特别注意
Pay Special Attention
灯线如图示穿过
The wire passes through as shown in the diagram
穿过灯线前套入热缩管
Insert the wire into the heat shrink tubing before threading it through

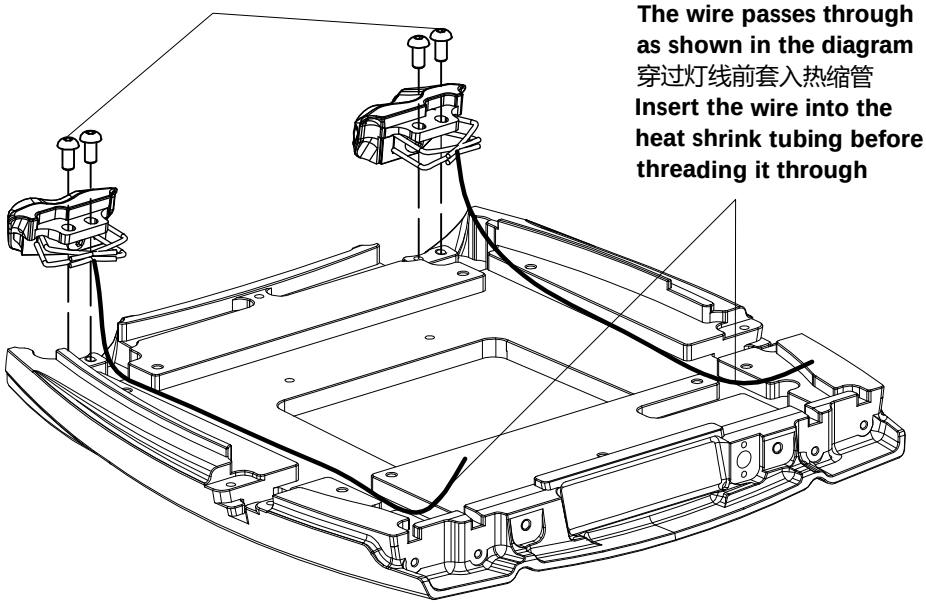


LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

125

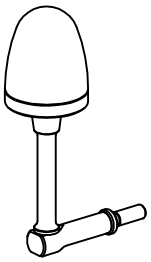


F1-4 ×2



F1-5 ×2




M2自锁螺母 ×2
Locking nut

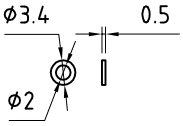

石墨垫片 ×2
Graphite gasket
外径**3.4**内径**2**厚度**0.5**
Outer diameter 4
inner diameter 2
thickness 0.5

热缩管 **Heat shrinkable tube**
内径**0.8**×长度 **370mm**
internal diameter1
length 370mm

热缩管 **Heat shrinkable tube**
内径**1**×长度 **50mm**
internal diameter1
length 50mm

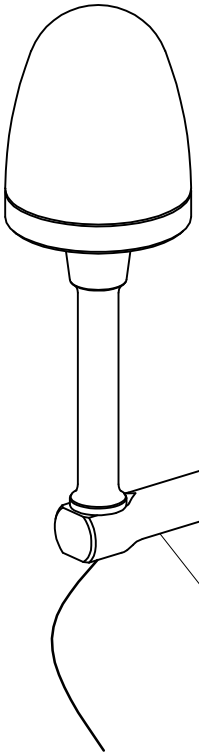


X2 重复/安装多个
Repeat/Build Multiple


使用螺丝胶安装
Use Screw Adhesive

126


半圆头**M2-4** ×4
Hexagon socket button head screw

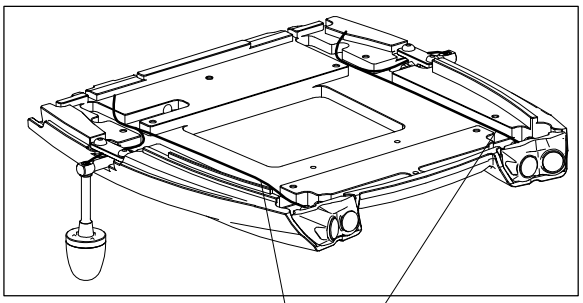

特别注意
Pay Special Attention
灯线如图示穿过
The wire passes through as shown in the diagram

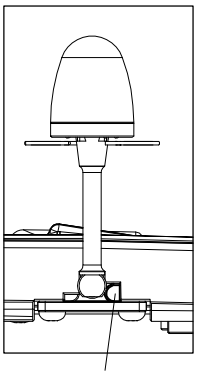

特别注意
Pay Special Attention
灯线从此穿过
The light line passes through from now on

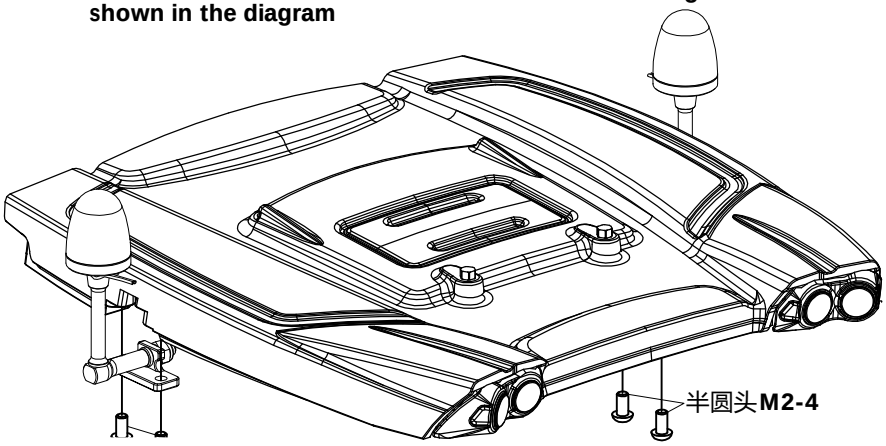

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING

127



S1231-C ×4


零件S-1231-C为KIT版本，说明书另附
Part S-1231-C is a kit version, see the attachment for the instructions



杯头M1.6-3 ×4
Hexagon socket head cap screw


热缩管 **Heat shrinkable tube**
内径0.8×长度 20mm
internal diameter0.8
length 20mm

热缩管 **Heat shrinkable tube**
内径1×长度 80mm
internal diameter1
length 80mm

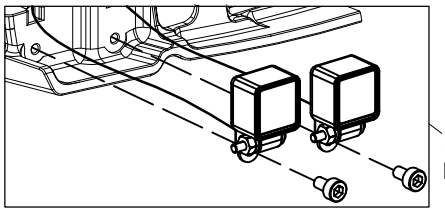

注意灯的安装方法
Pay attention to the installation method of the amp


特别注意
Pay Special Attention
灯线如图示穿过
The wire passes through as shown in the diagram
穿过灯线前套入热缩管
Insert the wire into the heat shrink tubing before threading it through

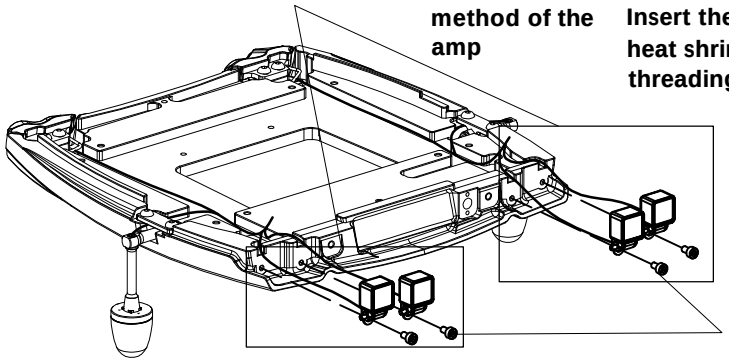

杯头M1.6-3

128


安装此步前，
优先完成这个步骤
Before installing this step, prioritize completing it

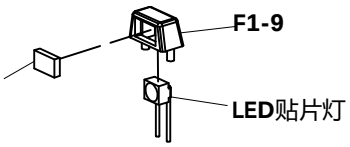



用快干胶安装
Use Instant Adhesive 注意
胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect

特别注意
Pay Special Attention
灯线如图示穿过
The wire passes through as shown in the diagram

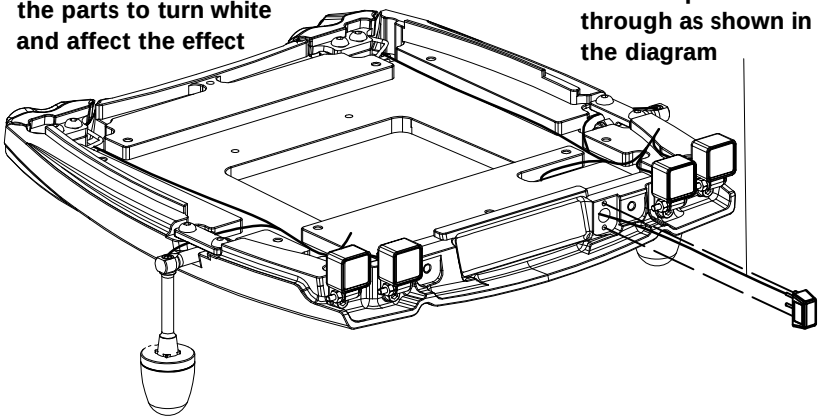



F1-8




F1-9



LED贴片灯 ×1
LED surface mount lamp

热缩管 **Heat shrinkable tube**
内径0.8×长度 20mm
internal diameter0.8
length 20mm

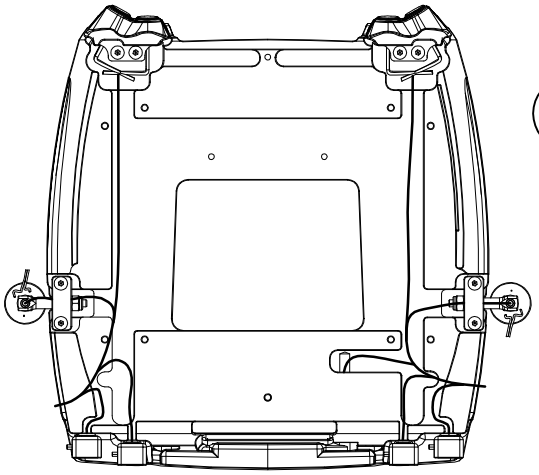

补充视图
Supplementary View

特别注意
Pay Special Attention
该步骤安装完成后线路如图示放置
After the installation is completed, place the circuit as shown in the diagram
穿过灯线前套入热缩管
Insert the wire into the heat shrink tubing before threading it through

LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


129




F1-10




用快干胶安装
Use Instant Adhesive 注意
胶水用量，过量胶水会引起
零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect

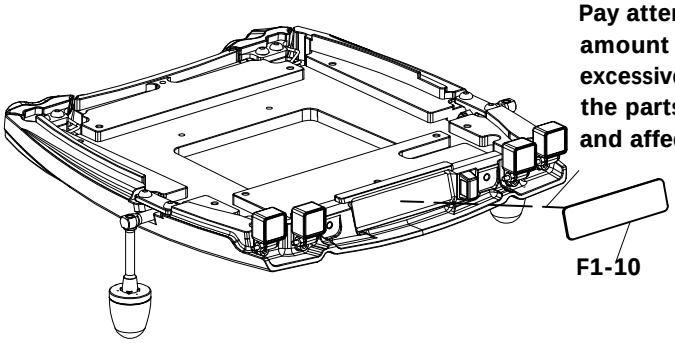


130

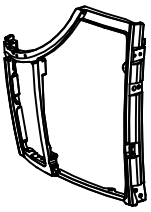


F1-11

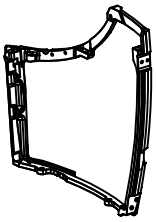

F1-12



F1-13




F1-14



内六角沉头**M2-6** ×2
Hexagon socket countersunk head screw



内六角沉头**M2-8** ×2
Hexagon socket countersunk head screw

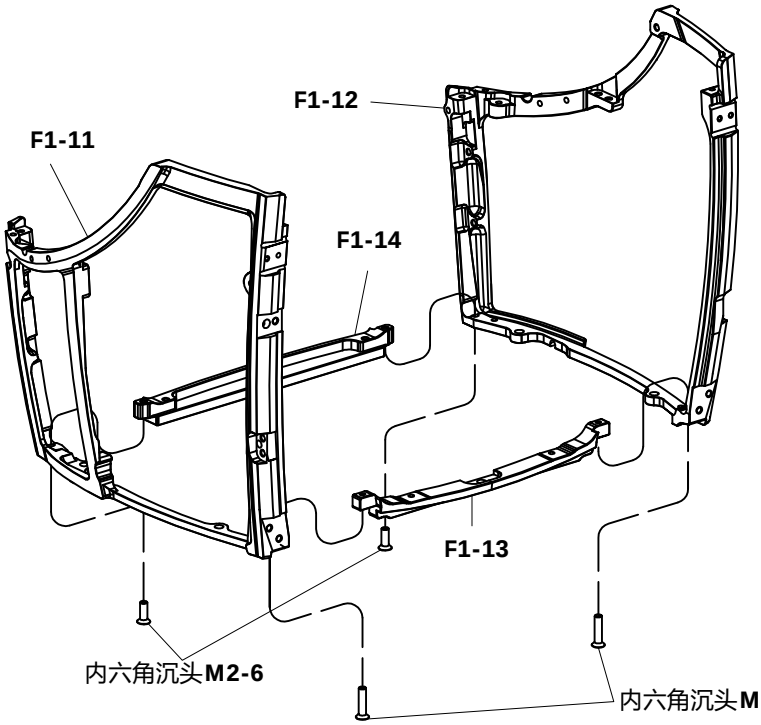


131



半圆头**M2-4** ×4
Hexagon socket button head screw



半圆头**M2-6** ×2
Hexagon socket button head screw

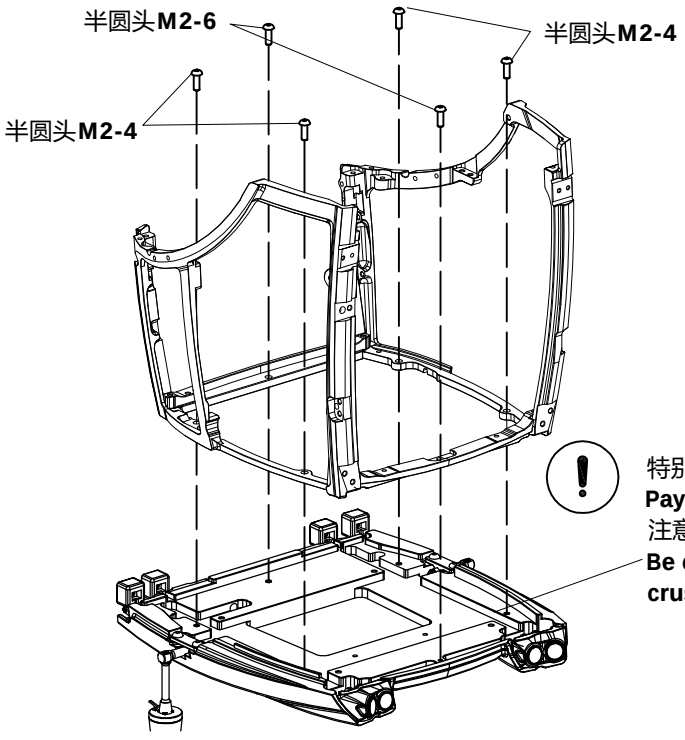


特别注意
Pay Special Attention
注意不要压坏电线
Be careful not to crush the wires


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING


132

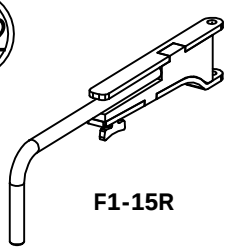


F1-15R



F1-16

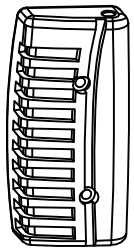


F1-17R



F1-18R




F1-19R

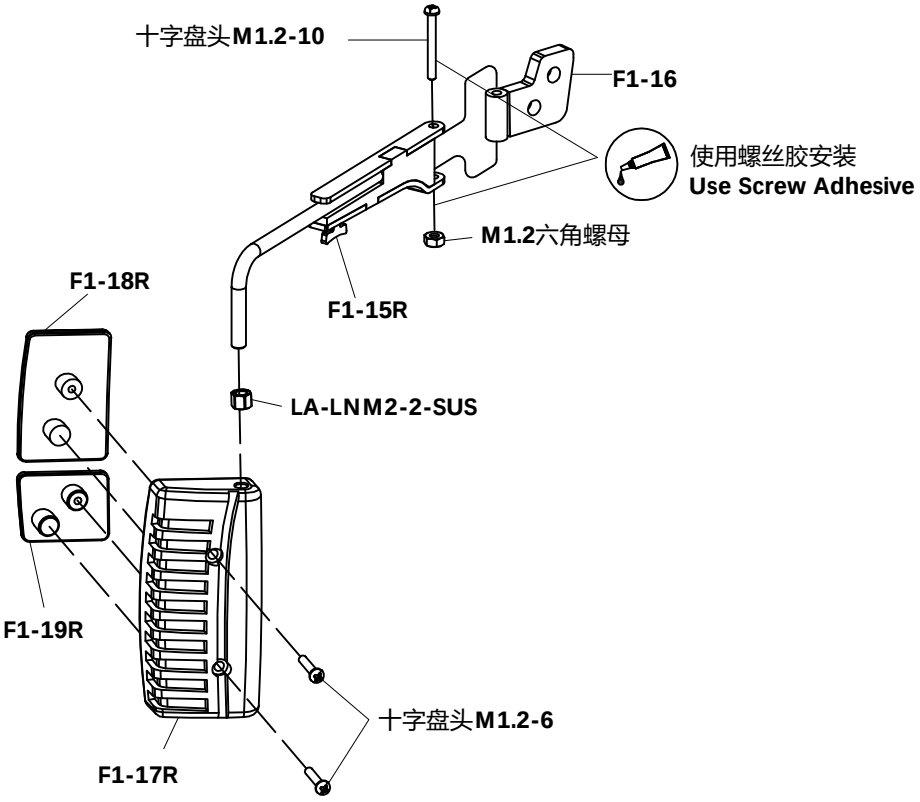


	十字盘头M1.2-6 Cross pan head screw	×2
	十字盘头M1.2-10 Cross pan head screw	×1
	M1.2六角螺母 Hexagon nut	×1
	LA-LNM2-2-SUS	×1


133

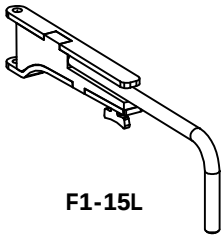

F1-15L

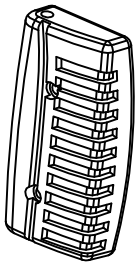

F1-17L




F1-16



F1-18L



F1-19L

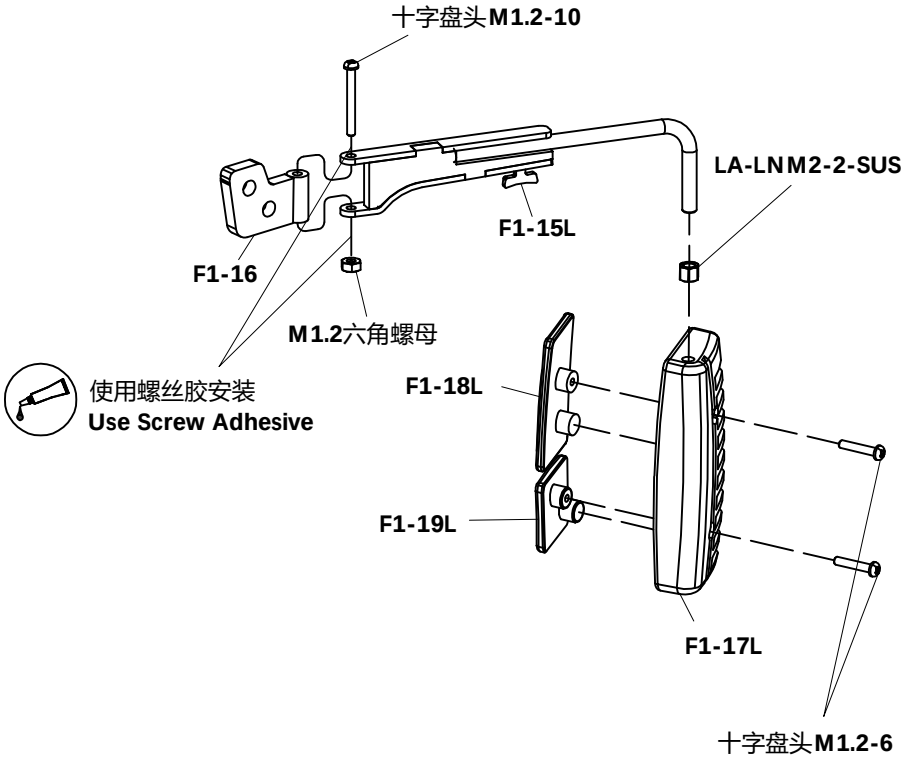


	十字盘头M1.2-6 Cross pan head screw	×2
	十字盘头M1.2-10 Cross pan head screw	×1
	M1.2六角螺母 Hexagon nut	×1
	LA-LNM2-2-SUS	×1

LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

134

外六角M2-4 ×4
Hexagon screw

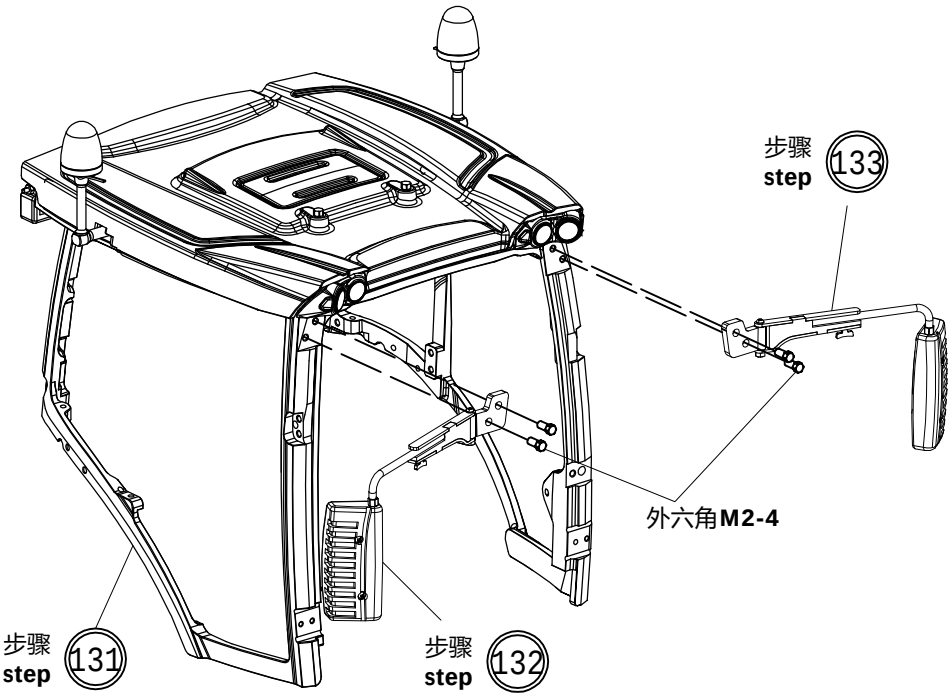

135



F1-20 ×2


F1-21 ×2


LED贴片灯 ×2
LED surface mount lamp


C1-4 ×2


保持合适的方向
Ensure Proper Orientation

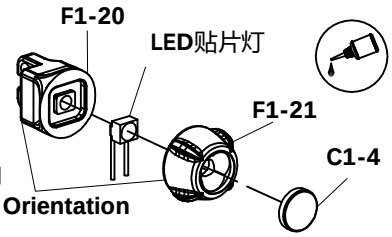

X2 重复/安装多个
Repeat/Build Multiple

用快干胶安装
Use Instant Adhesive 注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect


136

外六角M2-6 ×4
Hexagon screw

热缩管 Heat shrinkable tube
内径0.8×长度 40mm
internal diameter0.8
length 40mm

热缩管 Heat shrinkable tube
内径1×长度 20mm
internal diameter1
length 20mm

特别注意
Pay Special Attention
灯线如图示穿过
The wire passes through as shown in the diagram
穿过灯线前套入热缩管
Insert the wire into the heat shrink tubing before threading it through

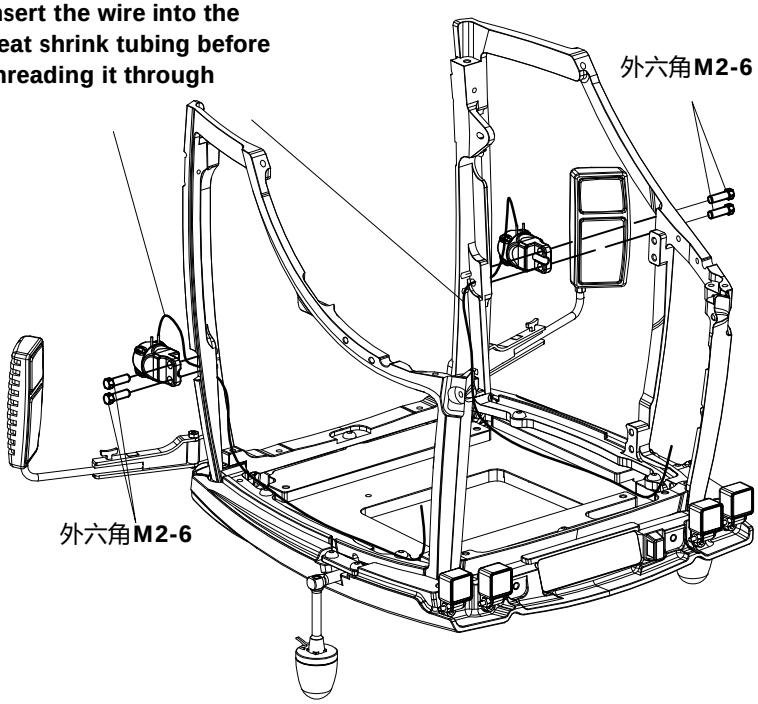

137



F1-22



B1-25



B1-26



LED贴片灯(黄光)
LED surface mount lamp



LED贴片灯(白光)
LED surface mount lamp



B1-27
(无色)
(transparent)




B1-28
(黄色透明)
(yellow transparent)

十字盘头M1.2-4 ×2
Cross pan head screw



用快干胶安装
Use Instant Adhesive 注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect

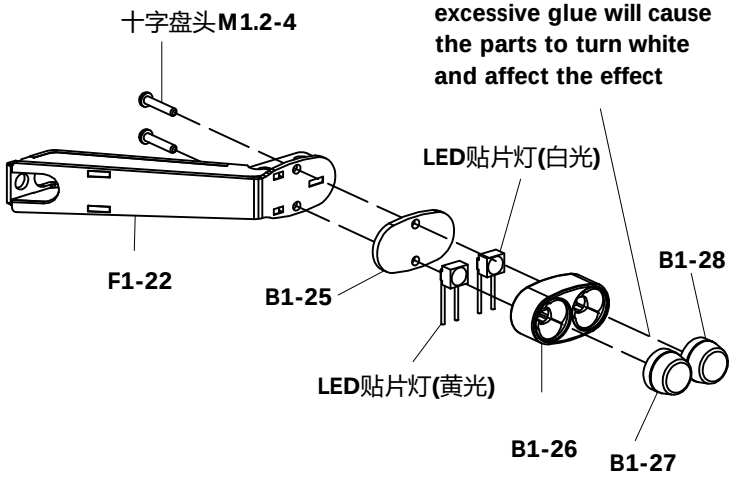

138



S1231-C ×2

零件S-1231-C为KIT版本，说明书另附
Part S-1231-C is a kit version, see the attachment for the instructions



杯头M1.6-4 ×2
Hexagon socket head cap screw




M1.6六角螺母 ×2
Hexagon nut

热缩管 Heat shrinkable tube
内径0.8×长度 600mm
internal diameter0.8
length 600mm

热缩管 Heat shrinkable tube
内径1×长度 50mm
internal diameter1
length 50mm




特别注意
Pay Special Attention
灯线如图示穿过
The wire passes through as shown in the diagram
穿过灯线前套入热缩管
Insert the wire into the heat shrink tubing before threading it through

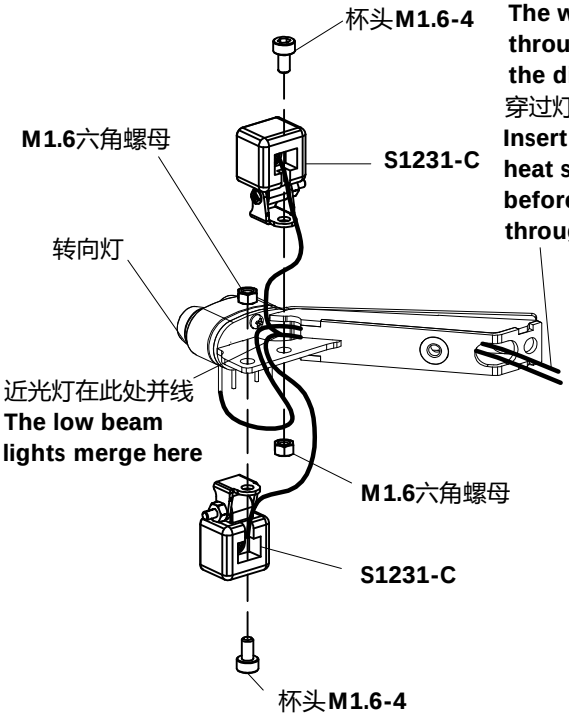

LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


139

外六角**M2-4** ×1
Hexagon screw

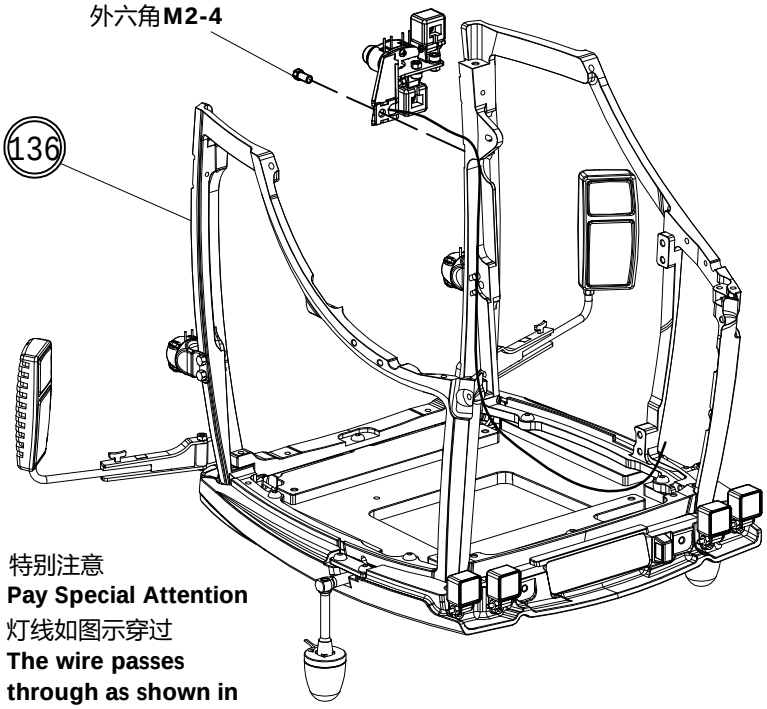

特别注意
Pay Special Attention
灯线如图示穿过
The wire passes through as shown in the diagram


140

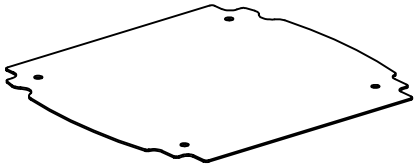

F1-23

半圆头**M2-4** ×4
Hexagon socket button head screw


特别注意
Pay Special Attention
安装时注意不要压坏电线
Be careful not to crush the wires during installation

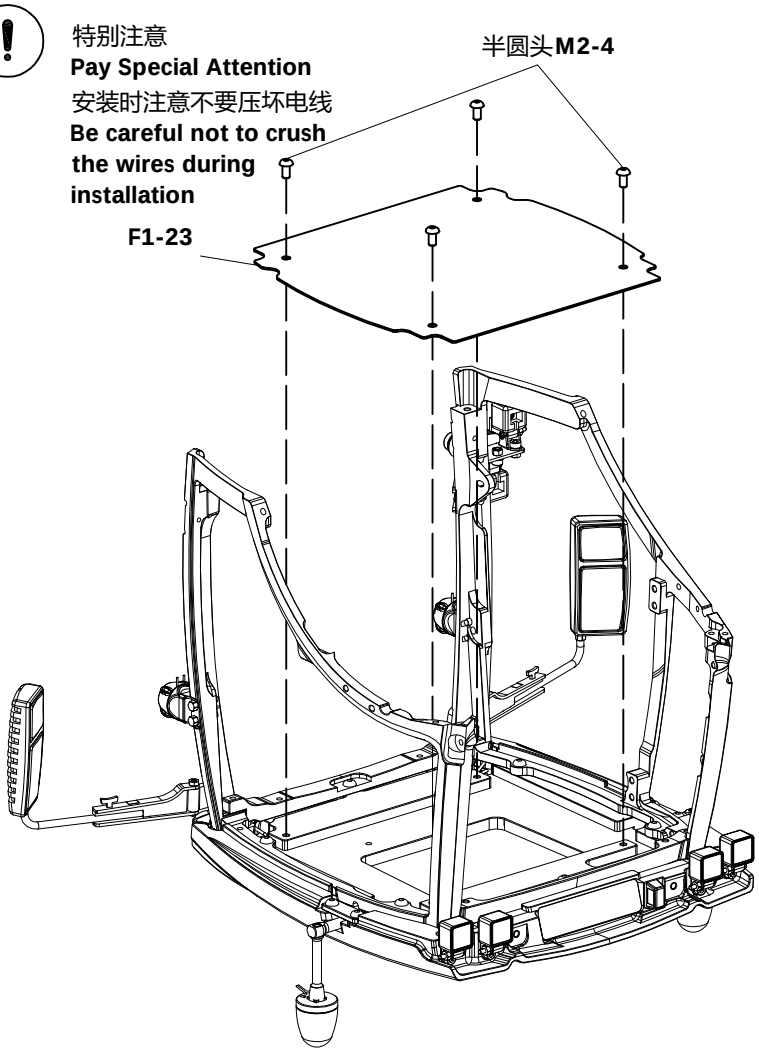


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING

141

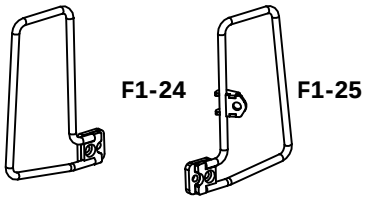


杯头**M1.6-4** ×**4**
Hexagon socket head cap screw

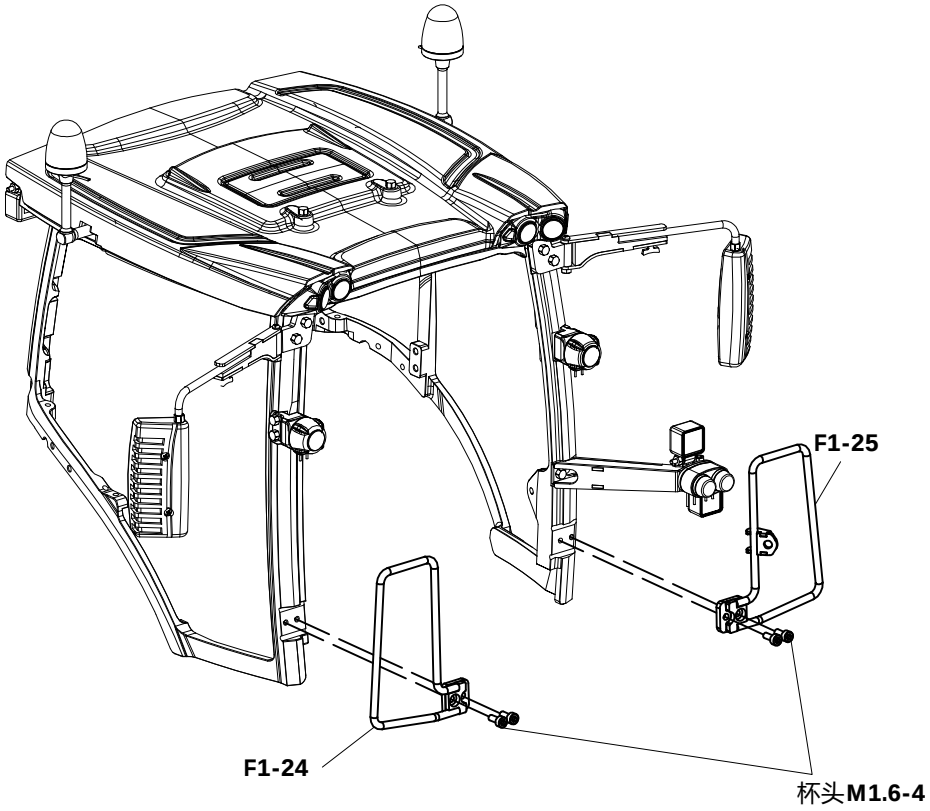

142

外六角**M2-3** ×**1**
Hexagon screw

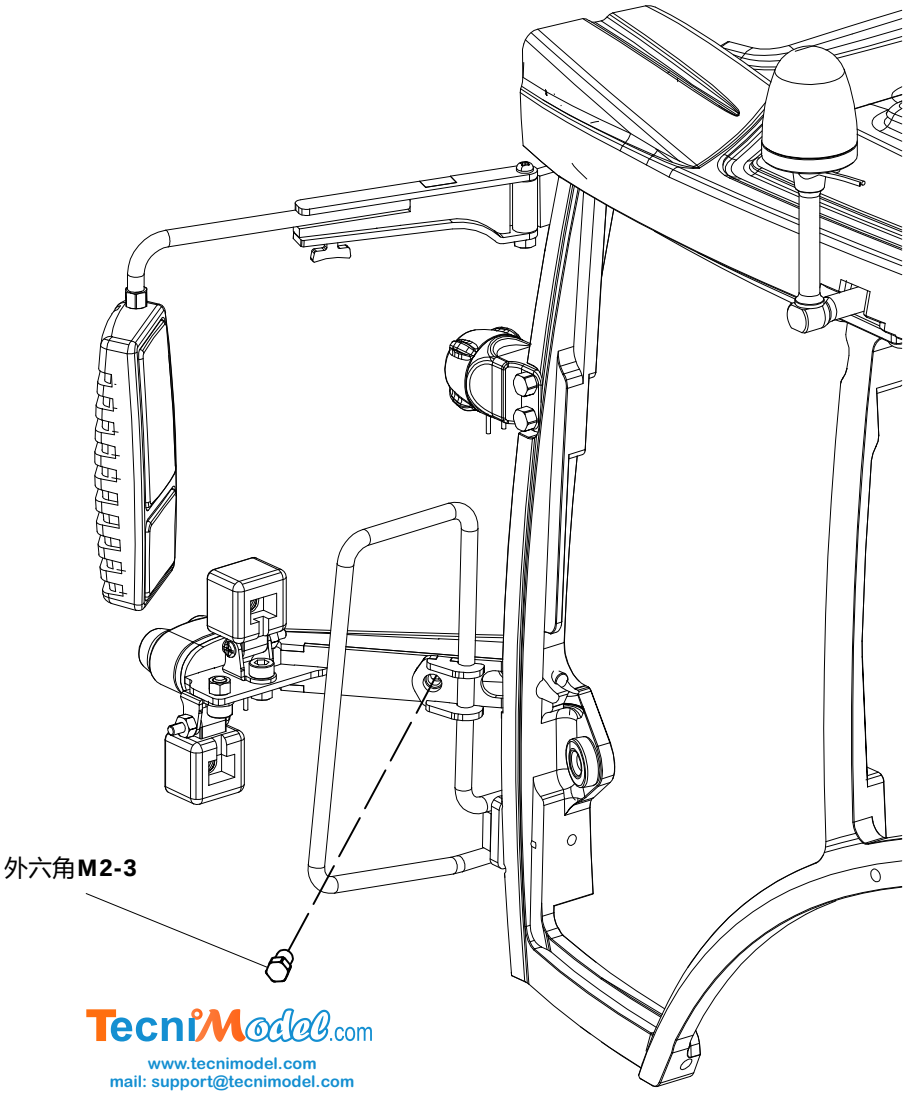



LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

143


F1-29



F1-30


F1-33


F1-34



杯头M1.6-8 ×2
Hexagon socket head cap screw


M1.6六角螺母 ×2
Hexagon nut

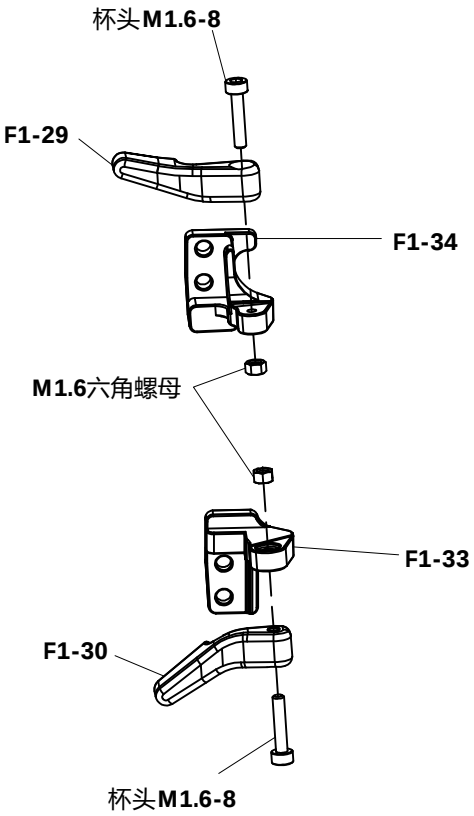


144


半圆头M2-5 ×4
Hexagon socket button head screw

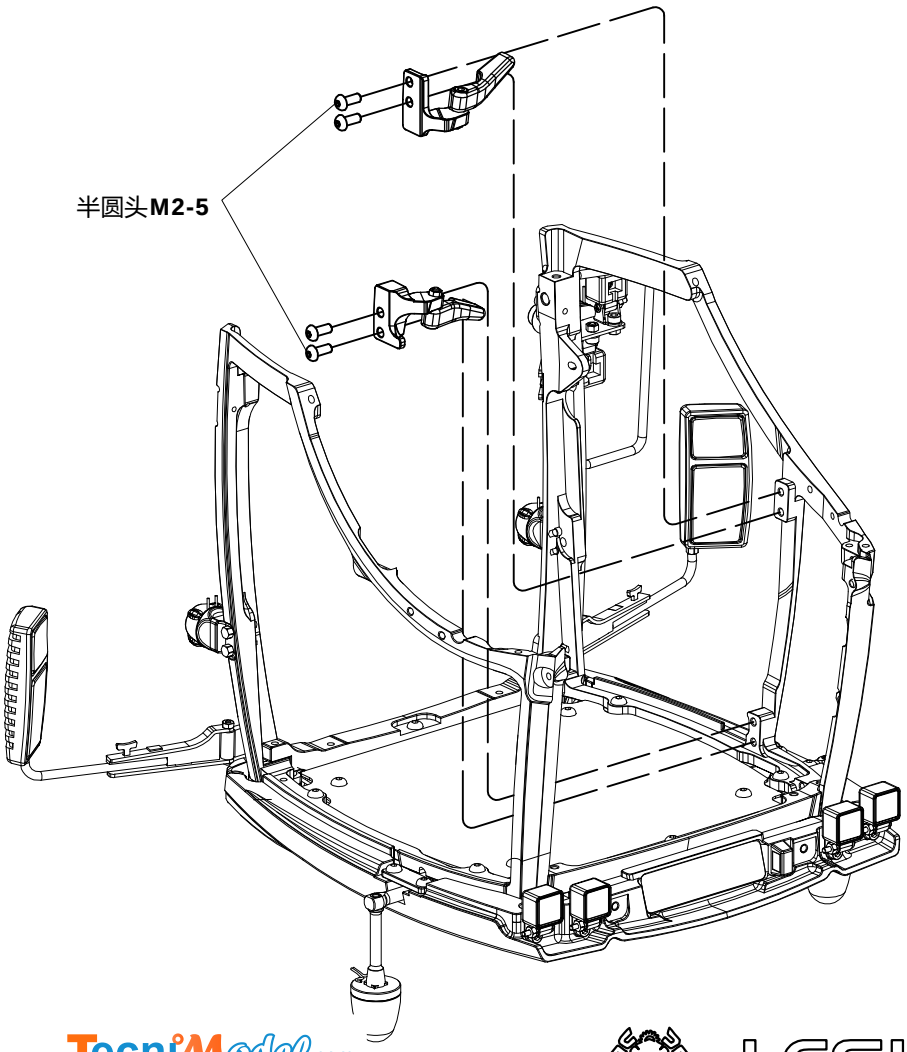


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87
LESU
MODEL RACING

145

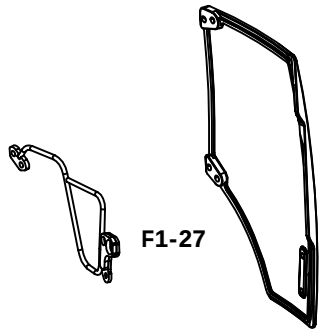

F1-27 F1-28

半圆头M2-6 ×4
Hexagon socket button head screw

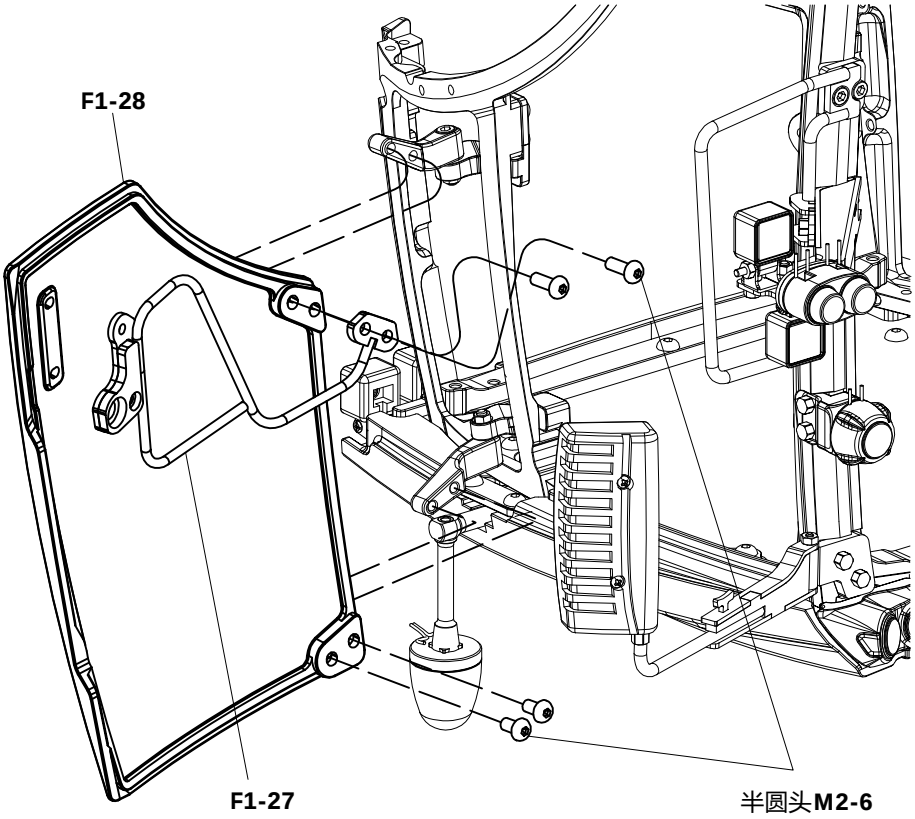


146



F1-31


杯头M1.6-6 ×1
Hexagon socket head cap screw

杯头M1.6-8 ×1
Hexagon socket head cap screw



磁铁 ×1
Magnet


用快干胶安装
Use Instant Adhesive 注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect

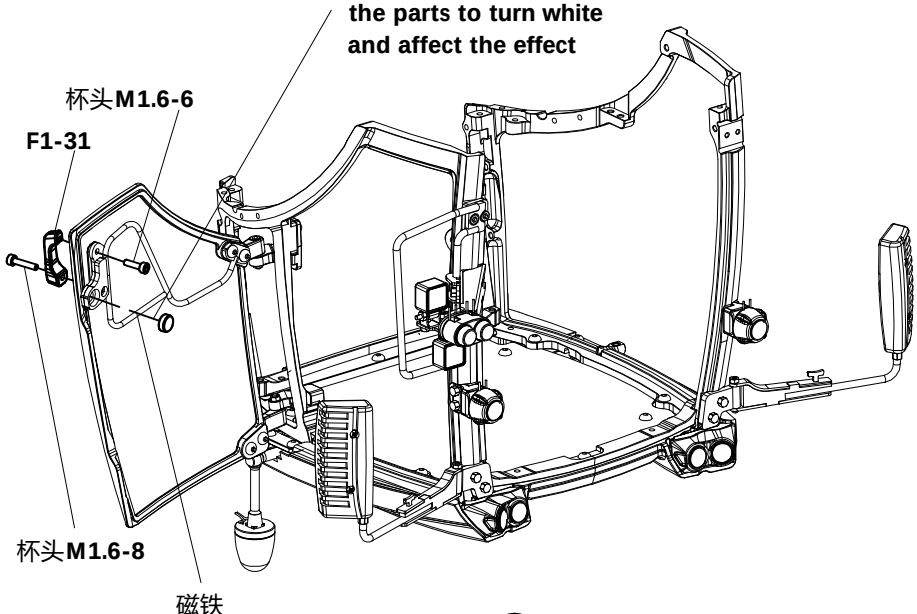

对比步骤 147
Control step
注意磁极方向
Pay attention to the magnetic pole direction

LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

147

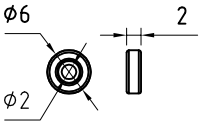


磁铁 ×1
Magnet



M1.6六角螺母 ×1
Hexagon nut




十字沉头**M1.6-6 ×1**
Hexagon socket countersunk head screw

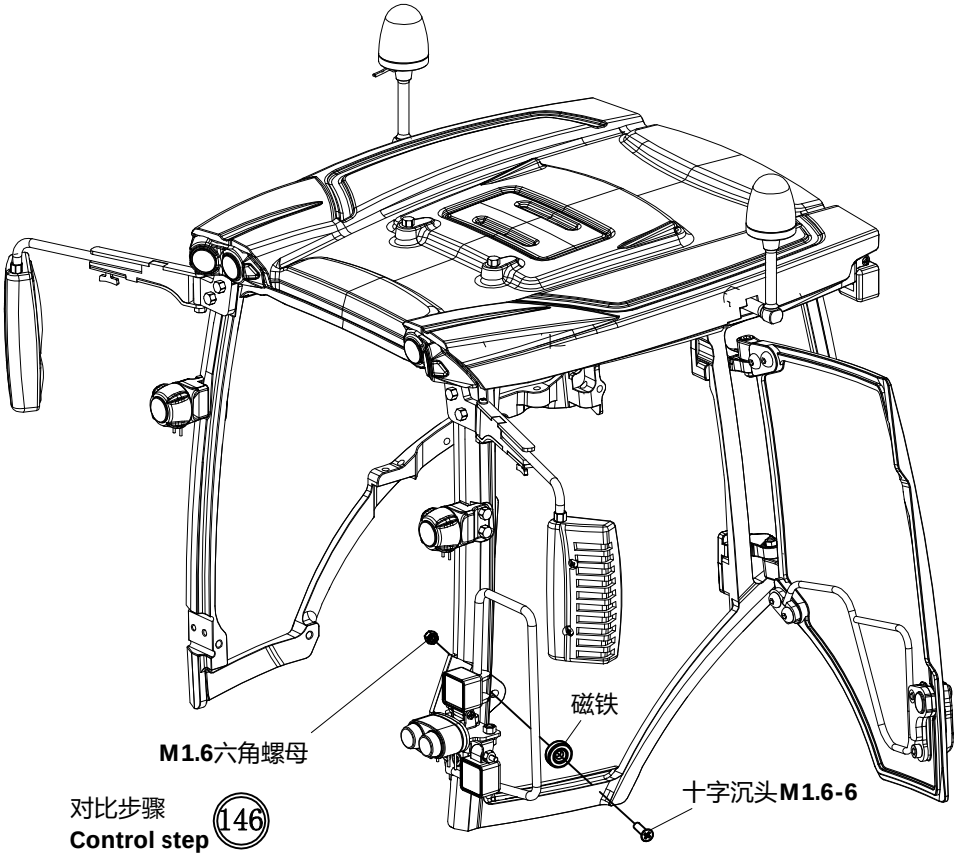

对比步骤 146
Control step
注意磁极方向
Pay attention to the magnetic pole direction


148

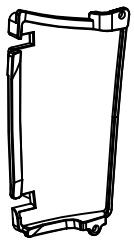

F1-32




半圆头**M2-4 ×2**
Hexagon socket button head screw

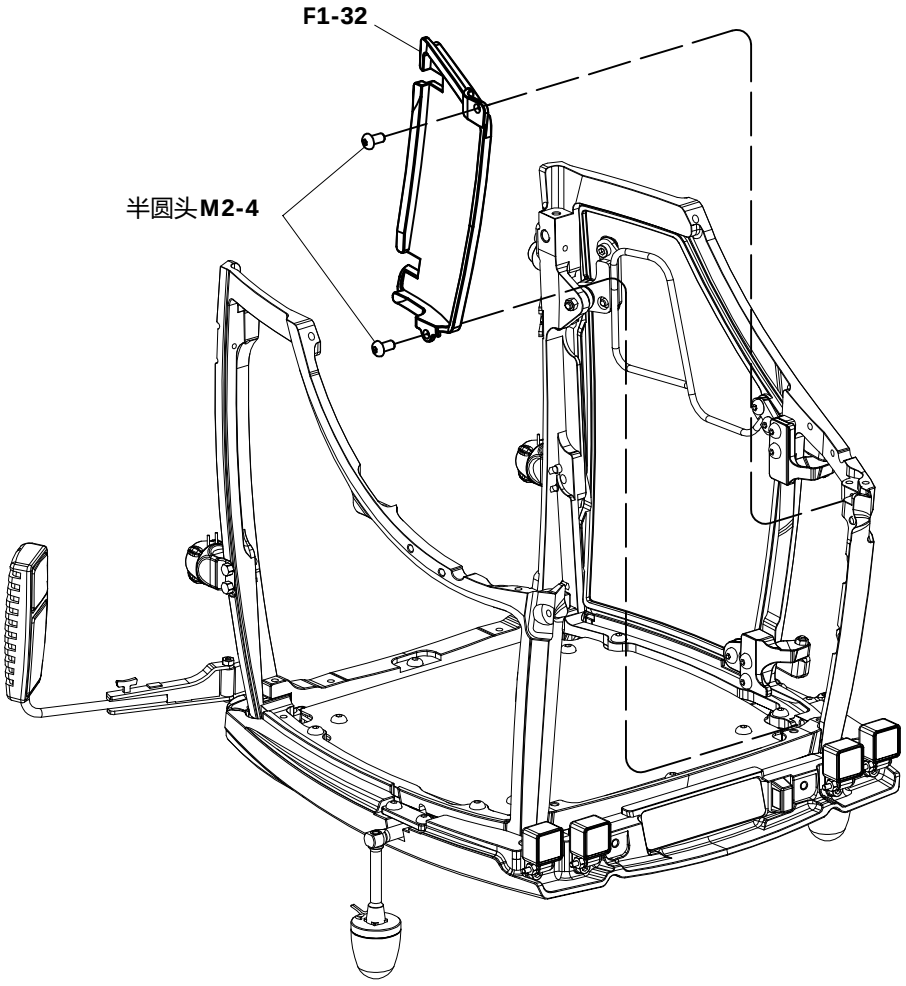

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87
LESU MODEL RACING

149

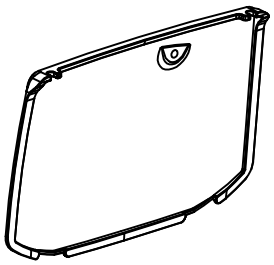


F1-40



F1-38


外六角M2-6 ×1
Hexagon screw

LA-LNM2-2-SUS ×1

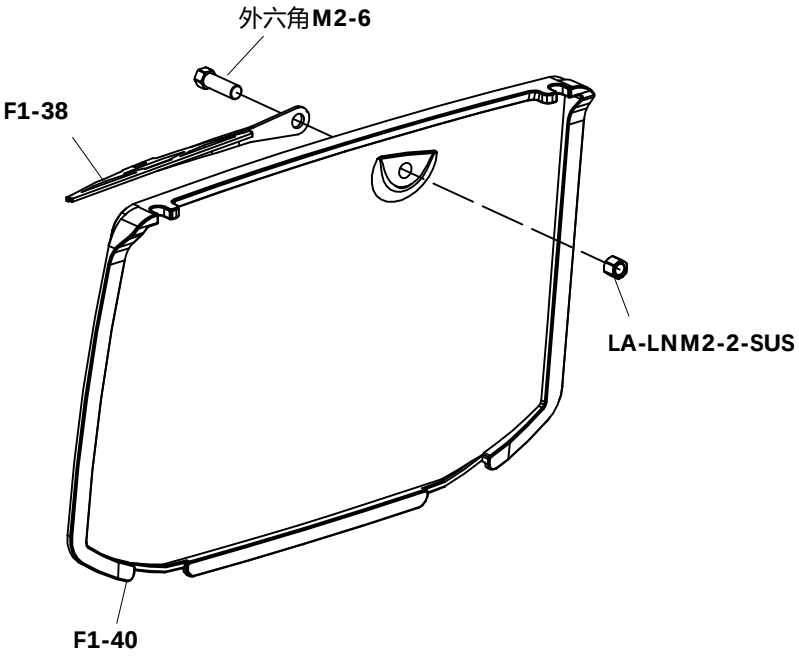

150


半圆头M2-5 ×2
Hexagon socket button head screw

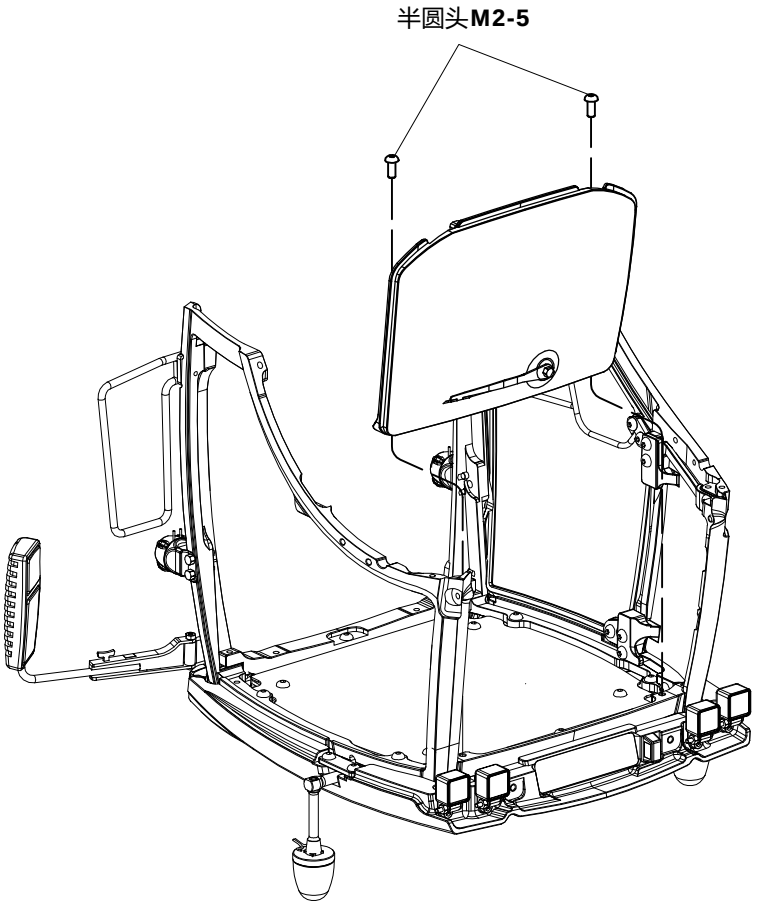


LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

151




F1-26L



F1-26R


半圆头M2-3 ×4
Hexagon socket button head screw

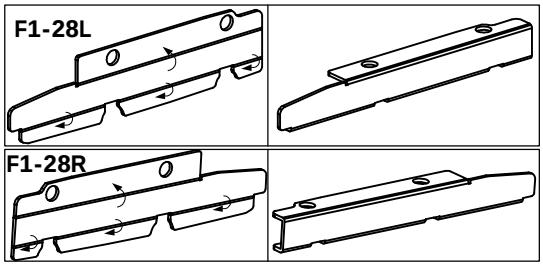

特别注意
Pay Special Attention


F1-26L,F1-26R按照图示折弯后再进行安装，注意不要完全折弯，留下开口以便装入灯线。当灯线及该零件安装完成后再将这些零件按照图示完全折弯

F1-26L and F1-26R should be bent according to the diagram before installation. Be careful not to completely bend and leave an opening for installing the light wire. After the installation of the light wire and the component is completed, fully bend these parts according to the diagram

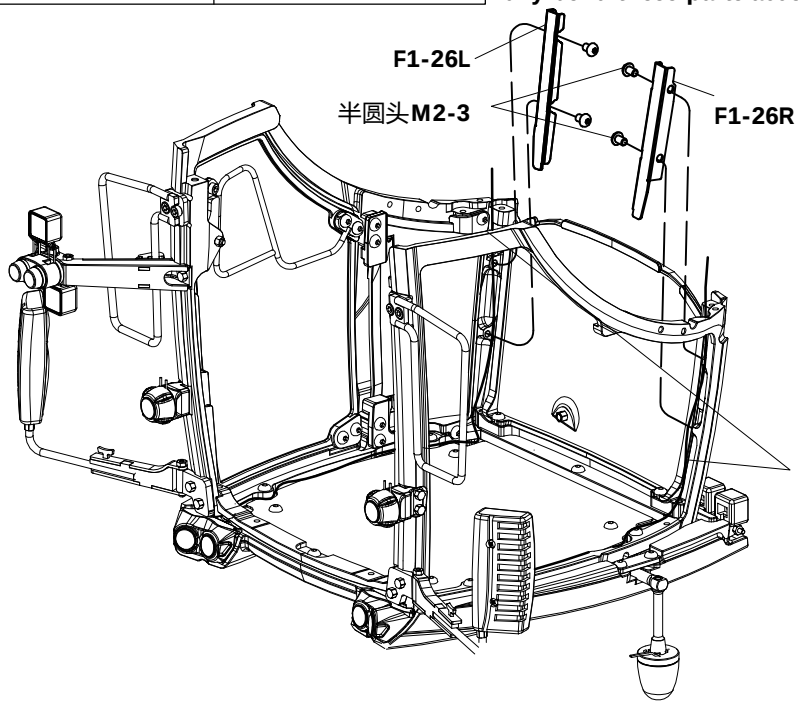

特别注意
Pay Special Attention
灯线如图示穿过
The wire passes through as shown in the diagram


152

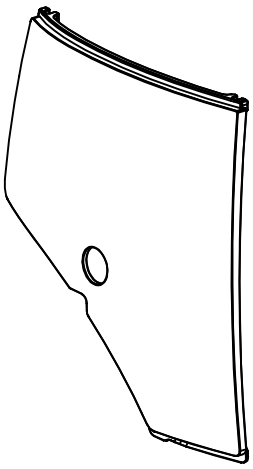

F1-35

半圆头M2-5 ×1
Hexagon socket button head screw

半圆头M2-6 ×2
Hexagon socket button head screw

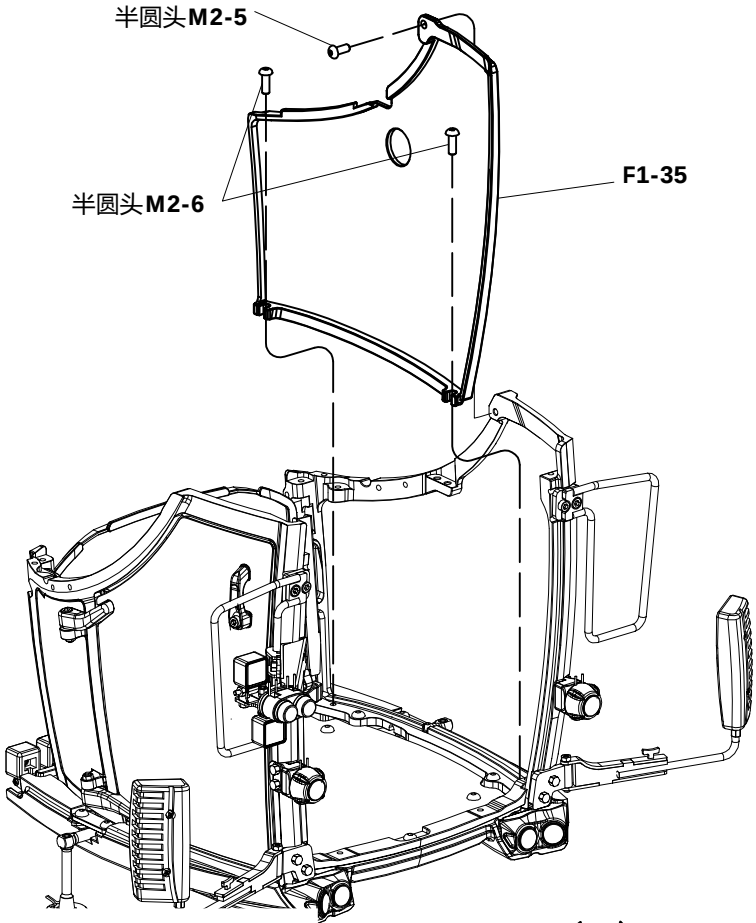

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING


153



F1-36



半圆头M2-4 ×2
Hexagon socket button head screw

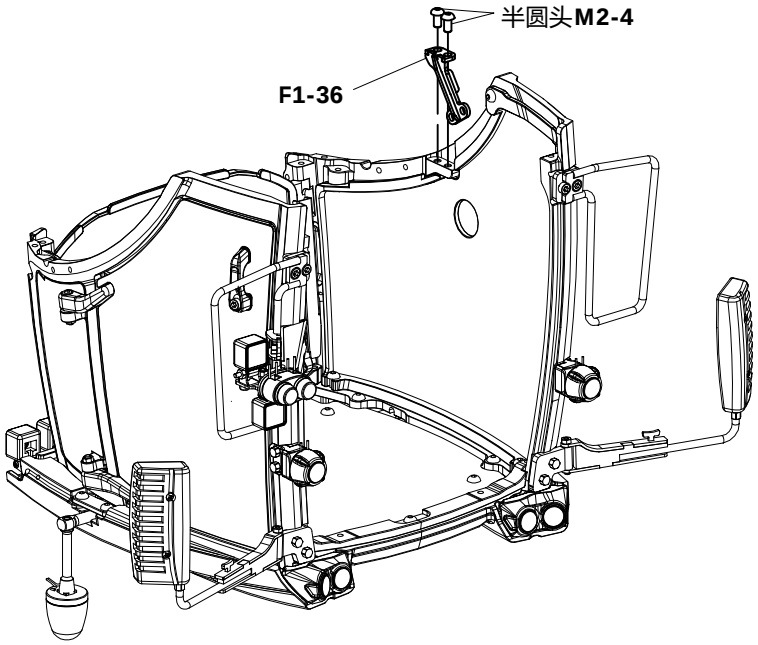

154



F1-37



F1-38



半圆头M2-3 ×2
Hexagon socket button head screw




外六角M2-3 ×1
Hexagon screw



特别注意
Pay Special Attention
打开门以便安装
Open the door for installation


155

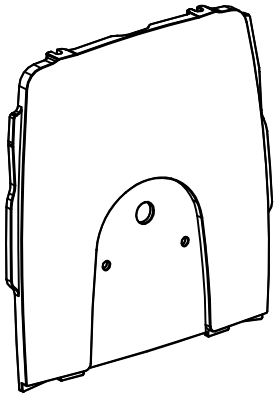

F1-39



半圆头M2-6 ×2
Hexagon socket button head screw

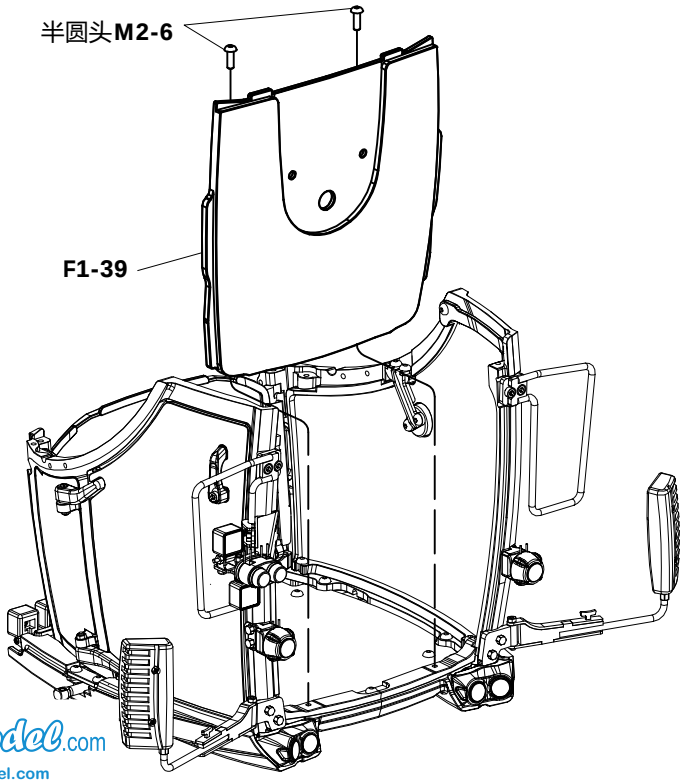


LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

156

内六角沉头**M2-6**

步骤 120
step

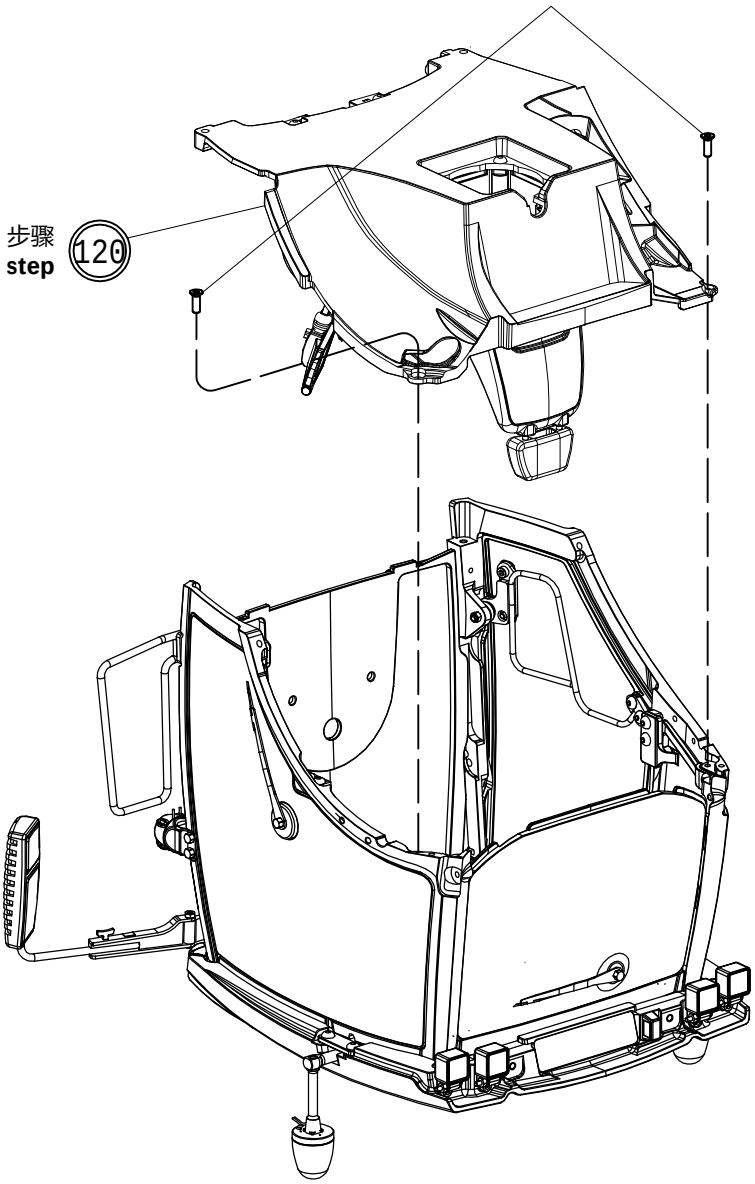


内六角沉头**M2-6** ×2
Hexagon socket countersunk head screw

157



F1-41

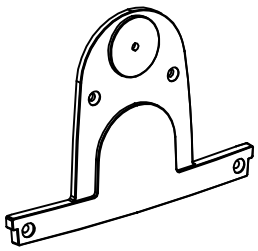


F1-42

M2自锁螺母 ×1
Locking nut

M2自锁螺母


F1-42

F1-41

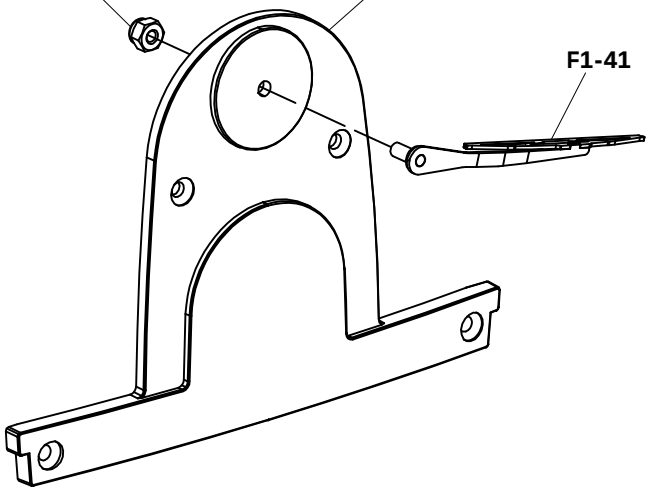


158

步骤 157
step

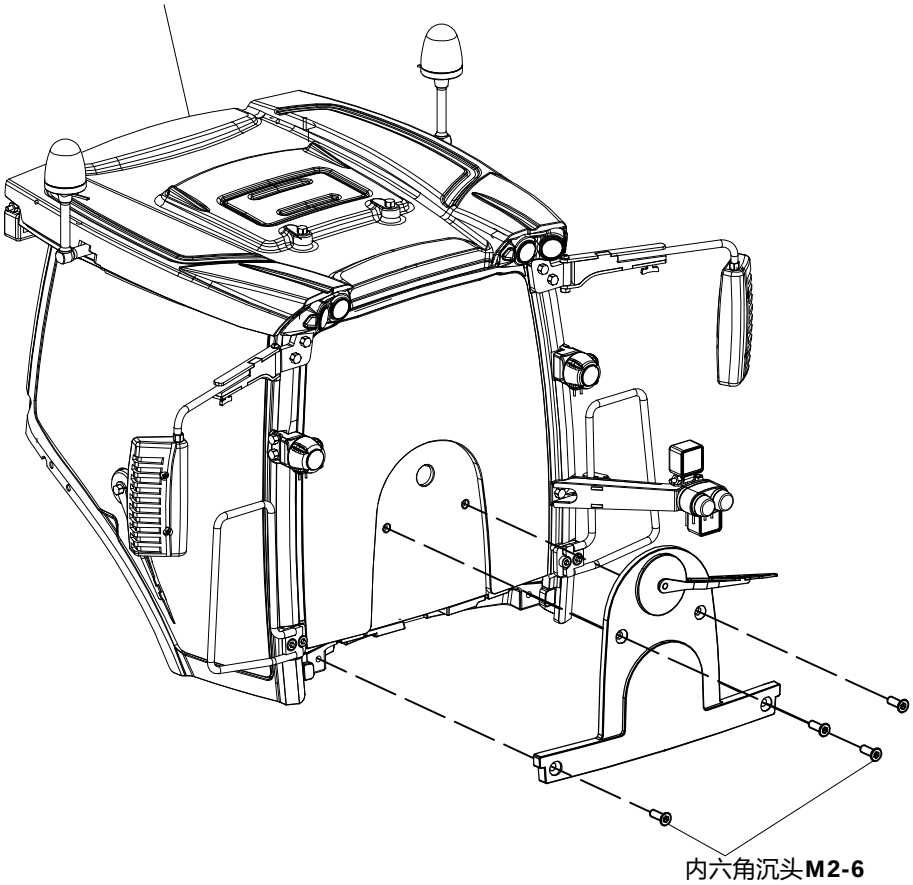


内六角沉头**M2-6** ×**4**
Hexagon socket countersunk head screw

159



F1-43

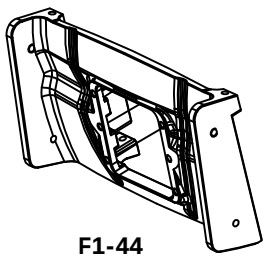


F1-44

外六角**M1.2-4** ×**6**
Hexagon screw

M1.2六角螺母 ×**6**
Hexagon nut

半圆头**M2-6** ×**2**
Hexagon socket button head screw


特别注意
Pay Special Attention
扬声器为**EL-007-B**附带的零件
The speaker is a component that comes with EL-007-B

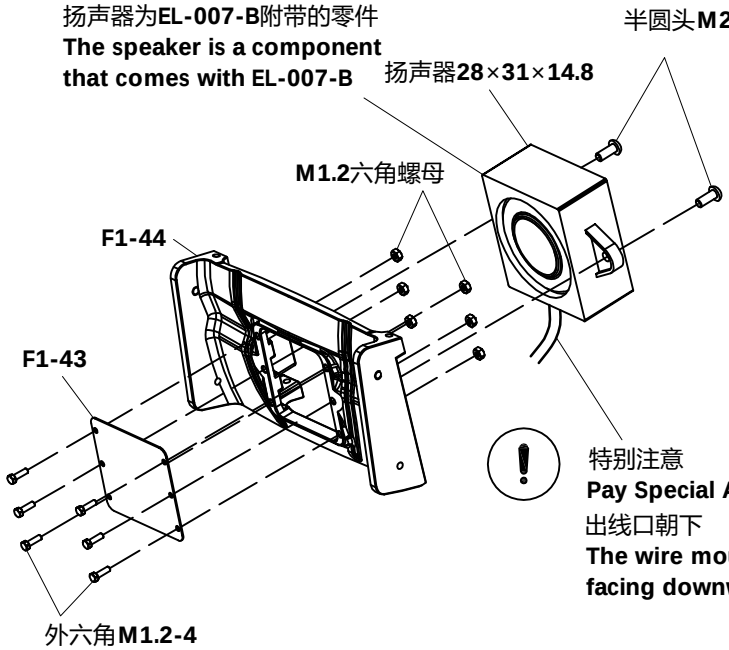

特别注意
Pay Special Attention
出线口朝下
The wire mouth is facing downwards


LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

160

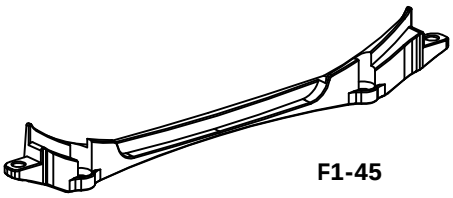


F1-45

内六角沉头**M2-6** ×2
Hexagon socket countersunk head screw

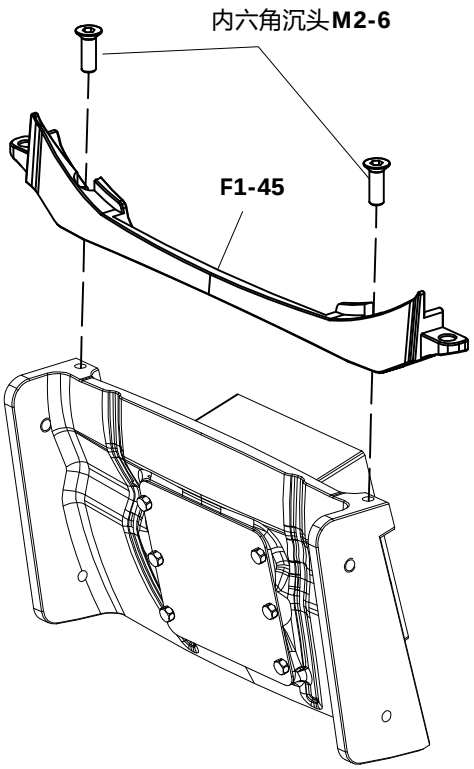

161


内六角沉头**M2-6** ×2
Hexagon socket countersunk head screw

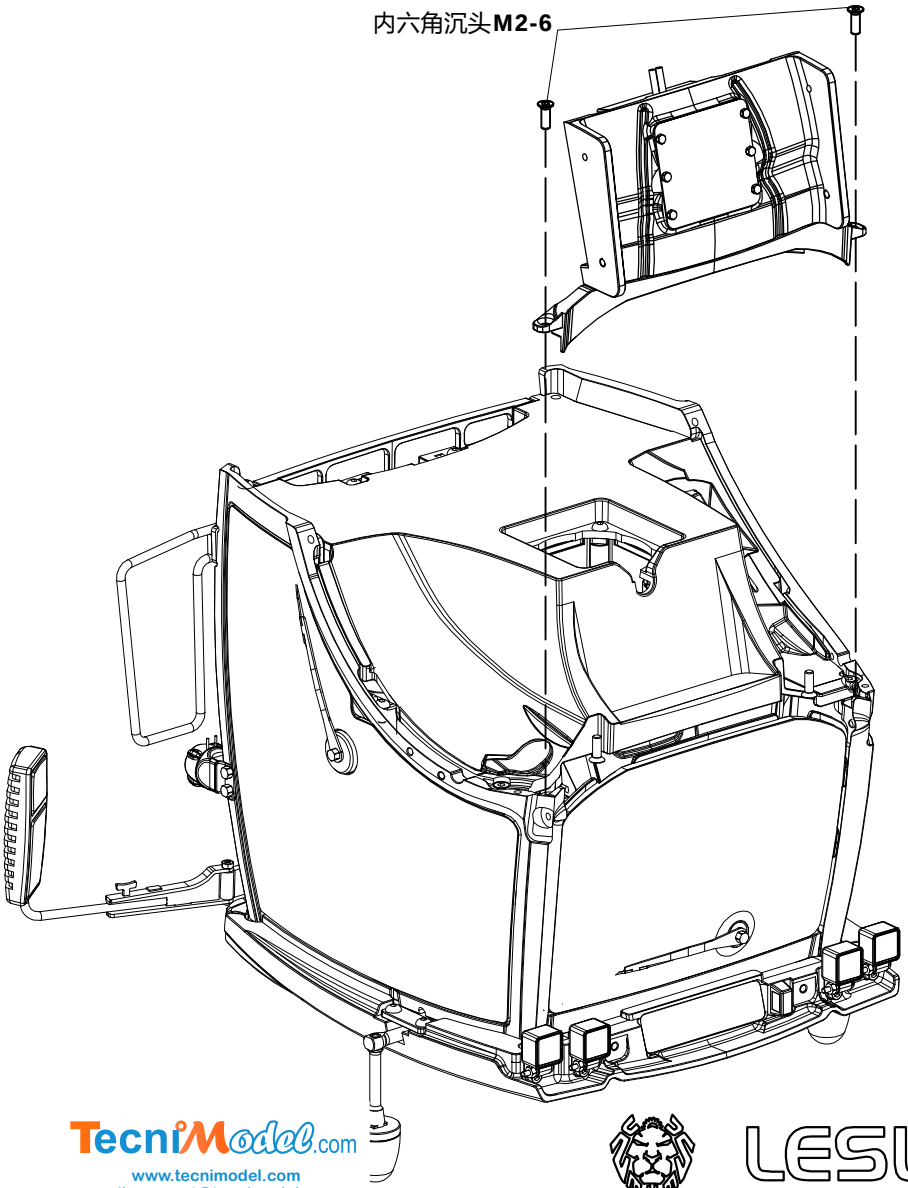

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING

162

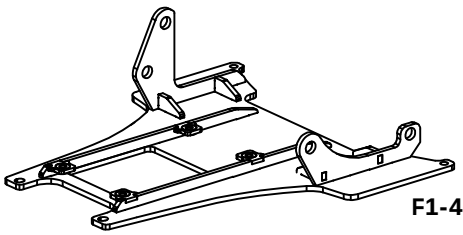


F1-46


半圆头M2-6 ×2
Hexagon socket button head screw

半圆头M2-10 ×2
Hexagon socket button head screw

特别注意
Pay Special Attention
安装时注意不要压坏电线
Be careful not to crush the wires during installation

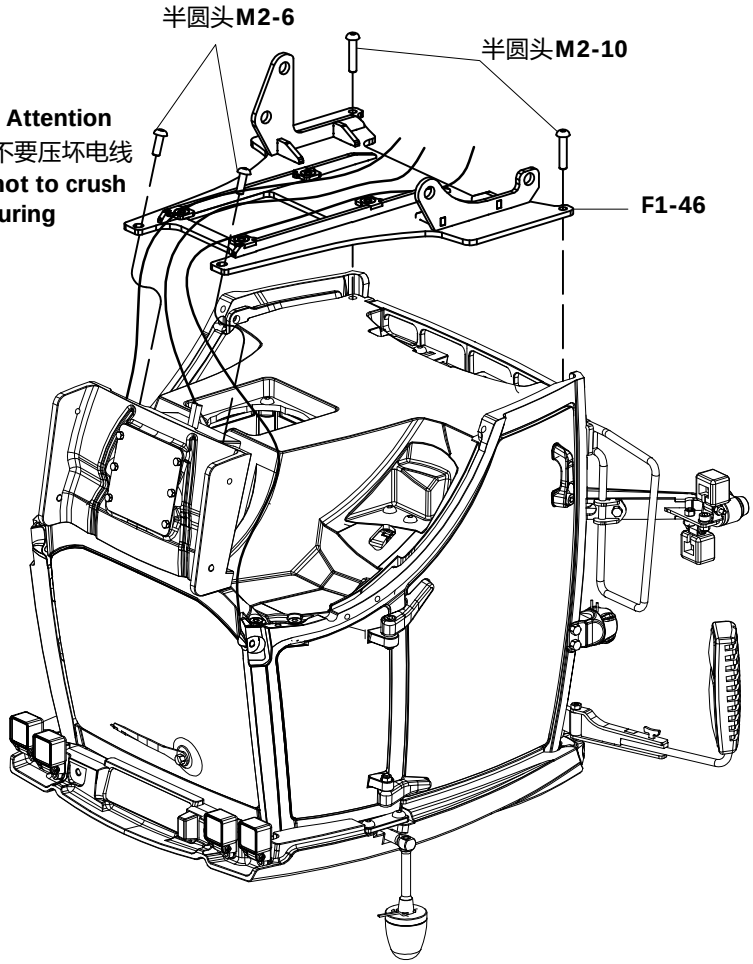

163

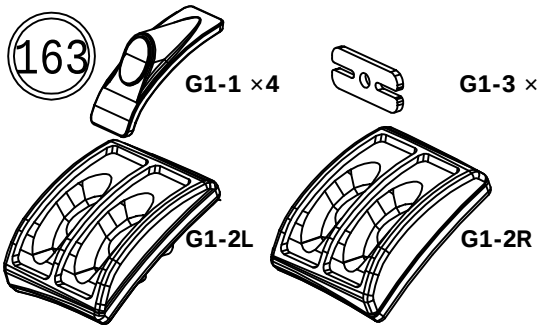

3mm灯珠(红光) ×2
3mm LED beads


3mm灯珠(黄光) ×2
3mm LED beads

热缩管 **Heat shrinkable tube** 内径0.8×长度 50mm
internal diameter0.8 length 50 mm

热缩管 **Heat shrinkable tube** 内径1×长度 400mm
internal diameter1 length 400mm

半圆头M2-4 ×2
Hexagon socket button head screw

用快干胶安装
Use Instant Adhesive
注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect

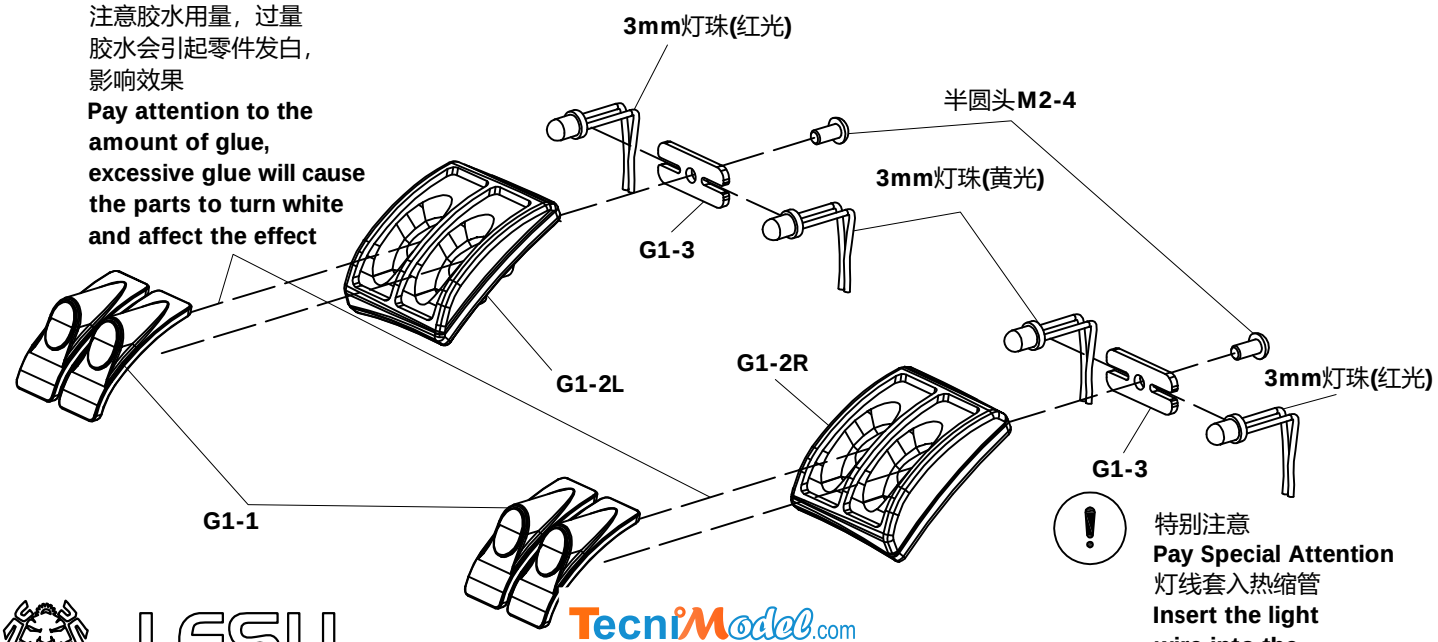

特别注意
Pay Special Attention
灯线套入热缩管
Insert the light wire into the heat shrink tube

LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

164



G1-4L



G1-4R



G1-5 ×2



G1-6 ×2


十字盘头M1.2-4 ×4
Cross pan head screw

热缩管 Heat shrinkable tube
内径0.8×长度 50mm
internal diameter0.8
length 50mm

热缩管 Heat shrinkable tube
内径1×长度 20mm
internal diameter1
length 20mm




用快干胶安装
Use Instant Adhesive
注意胶水用量，过量胶水会引起零件发白，影响效果
Pay attention to the amount of glue, excessive glue will cause the parts to turn white and affect the effect

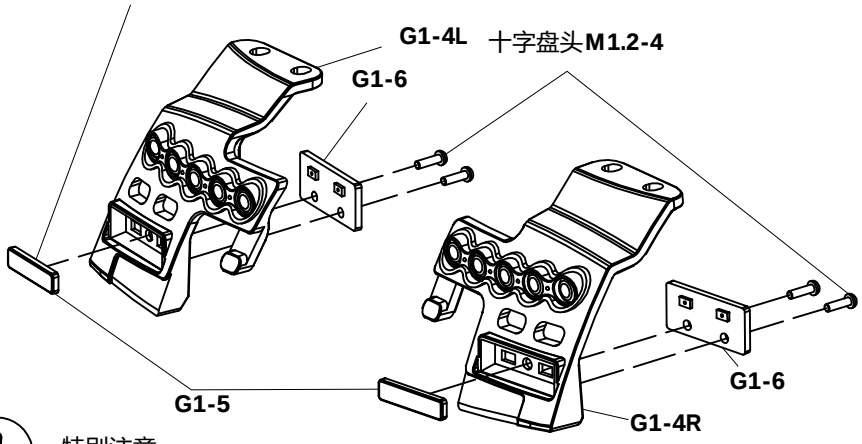




特别注意
Pay Special Attention
灯线套入热缩管
Insert the light wire into the heat shrink tube


165



D1-15 ×4

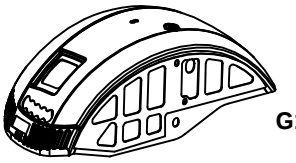

G1-7L

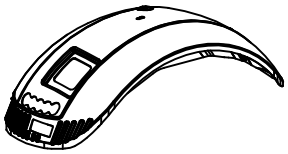


G1-7R



G1-13 ×2




半圆头M2-4 ×14
Hexagon socket button head screw

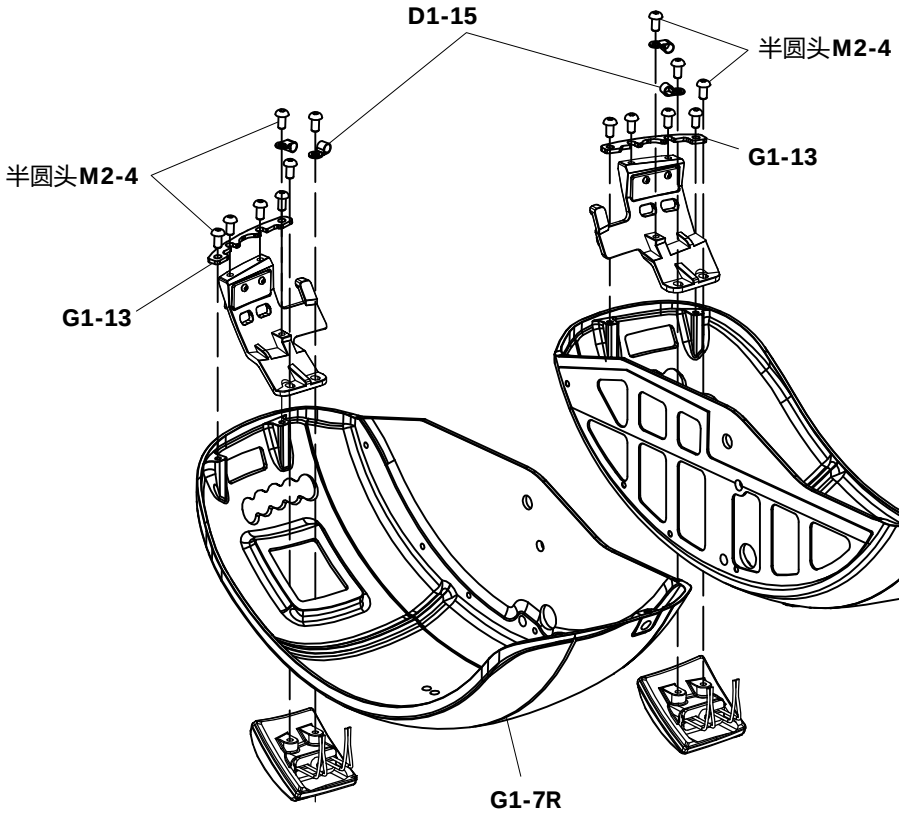



特别注意
Pay Special Attention
D1-15按照图示折弯后再进行安装
Bend D1-15 according to the diagram before installation

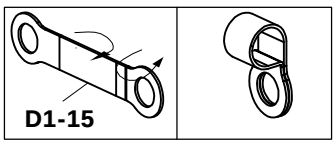


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


LESU
MODEL RACING

166

D1-15 ×4

半圆头M2-3 ×4
Hexagon socket button head screw

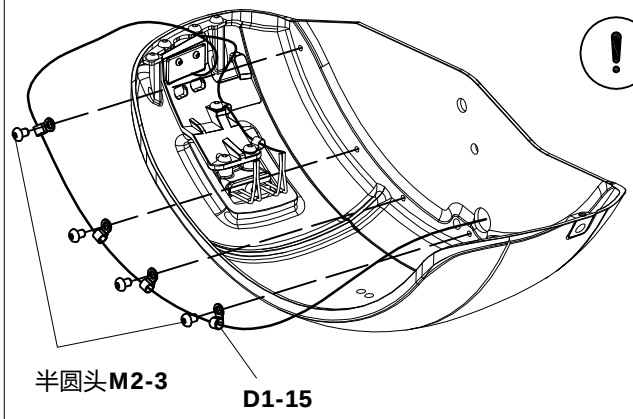

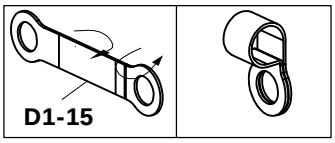


特别注意
Pay Special Attention
D1-15按照图示折弯后再进行安装
Bend D1-15 according to the diagram before installation

特别注意
Pay Special Attention
灯线如图示穿过
The wire passes through as shown in the diagram

167


D1-15 ×4

半圆头M2-3 ×4
Hexagon socket button head screw

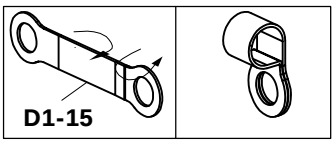

特别注意
Pay Special Attention
D1-15按照图示折弯后再进行安装
Bend D1-15 according to the diagram before installation

特别注意
Pay Special Attention
灯线如图示穿过
The wire passes through as shown in the diagram

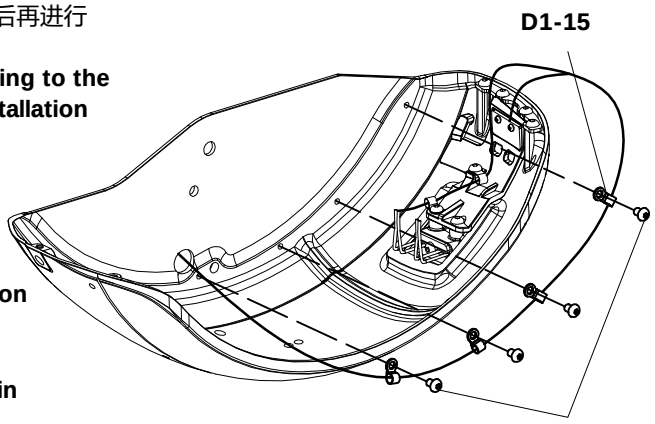

168


G1-8L

G1-8R

S-1231-C ×2

零件S-1231-C为KIT版本，说明书另附
Part S-1231-C is a kit version, see the attachment for the instructions

杯头M1.6-6 ×2
Hexagon socket head cap screw

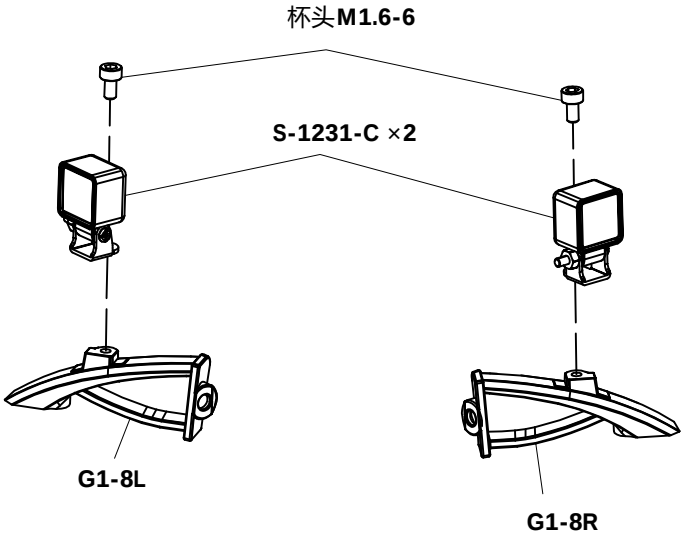

LESU MODEL RACING


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

169

半圆头**M2-4** ×2
Hexagon socket button head screw

热缩管 **Heat shrinkable tube**
内径**0.8**×长度 **200mm**
internal diameter0.8
length 700mm

热缩管 **Heat shrinkable tube**
内径**1**×长度 **250mm**
internal diameter1
length 250mm

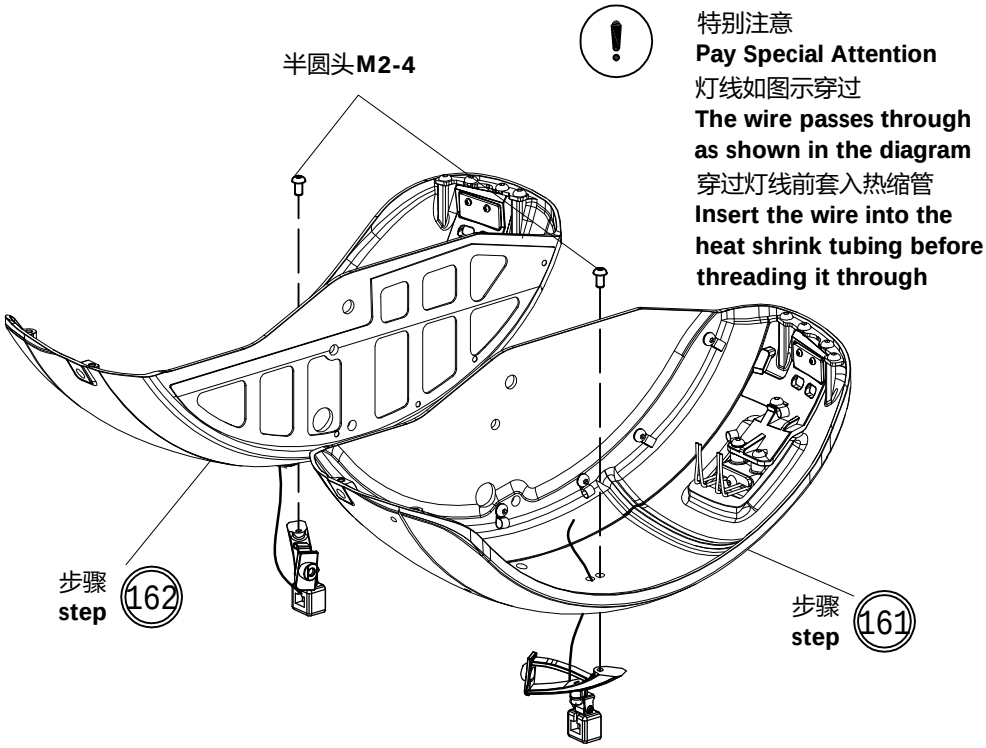

特别注意
Pay Special Attention
灯线如图示穿过
The wire passes through as shown in the diagram
穿过灯线前套入热缩管
Insert the wire into the heat shrink tubing before threading it through


170



G1-9

外六角**M1.2-4** ×2
Hexagon screw


M1.2六角螺母 ×2
Hexagon nut

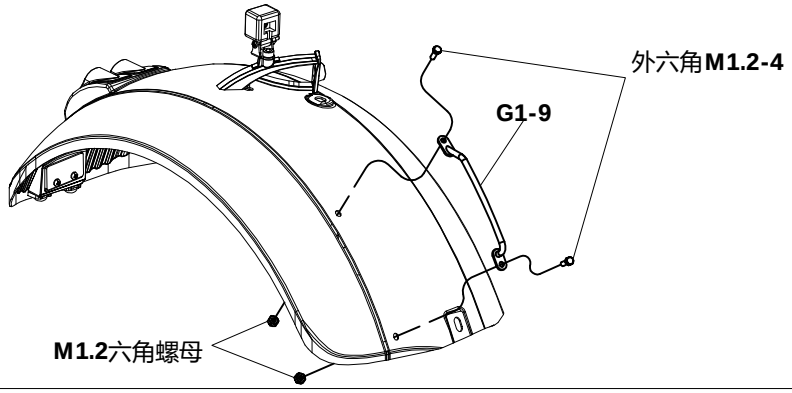

171

半圆头**M2-6** ×2
Hexagon socket button head screw

半圆头**M2-4** ×4
Hexagon socket button head screw

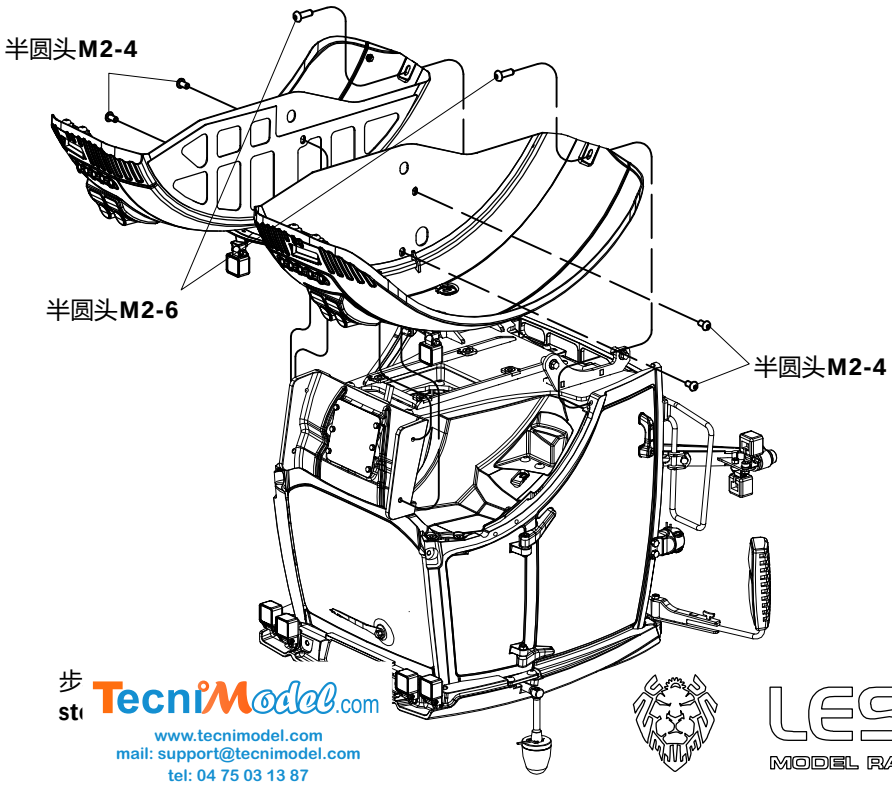

步
st


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87
LESU
MODEL RACING


172

D1-15 ×2

半圆头M2-4 ×2
Hexagon socket button head screw


特别注意
Pay Special Attention
D1-15按照图示折弯后再进行安装
Bend D1-15 according to the diagram before installation

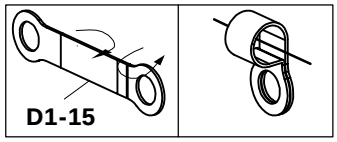

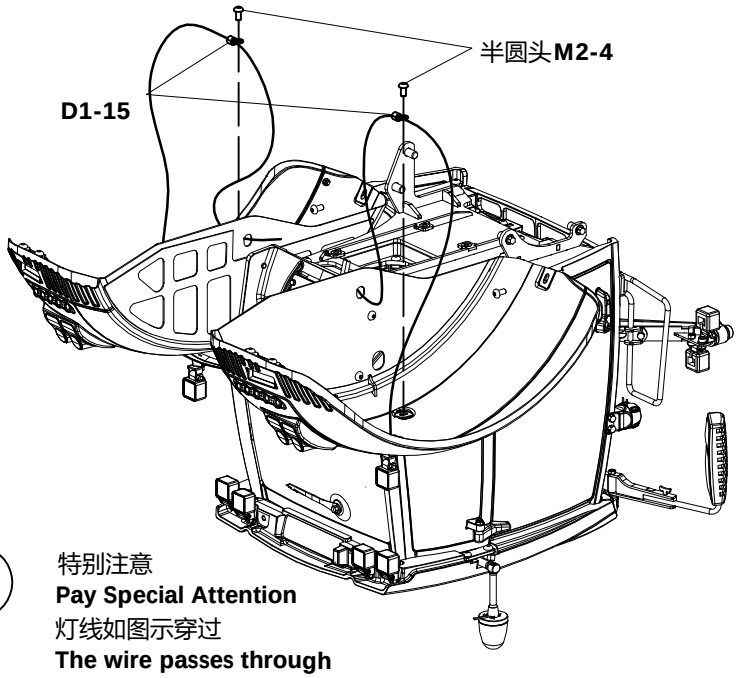


特别注意
Pay Special Attention
灯线如图示穿过
The wire passes through as shown in the diagram

173

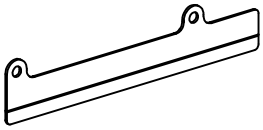


F1-47L

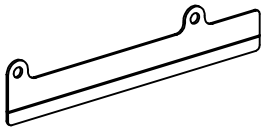


F1-47R

半圆头M2-3 ×4
Hexagon socket button head screw

特别注意
Pay Special Attention
D1-15按照图示折弯后再进行安装
Bend D1-15 according to the diagram before installation

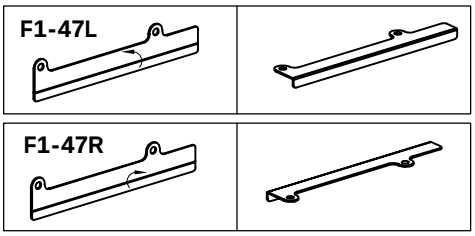

特别注意
Pay Special Attention
安装时注意不要压坏电线
Be careful not to crush the wires during installation

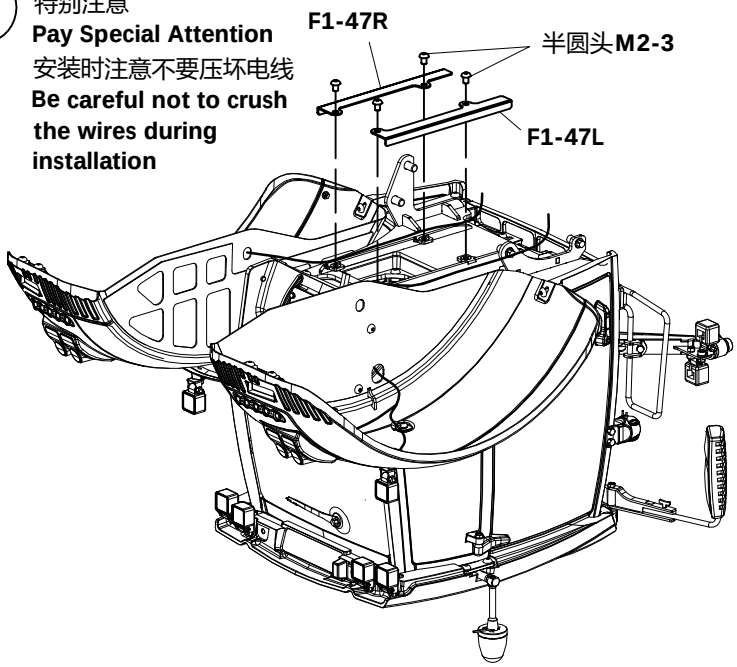


LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

174


法兰外六角**M3-6** ×4
Locking flange nut

半圆头**M3-4** ×2
Hexagon socket button head screw

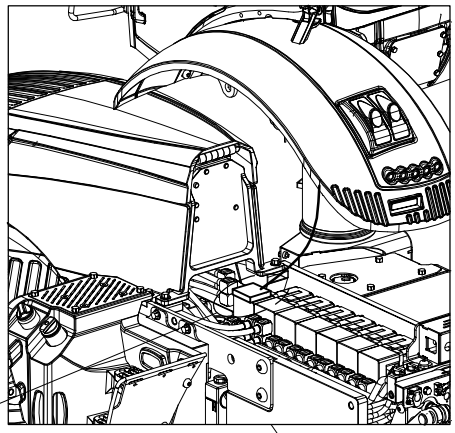


特别注意
Pay Special Attention
将线束插入此处的电路板中
Insert the wiring harness into the circuit board at this location

特别注意
Pay Special Attention
接线图详见电子设备说明书
For wiring diagram, please refer to the electronic equipment manual

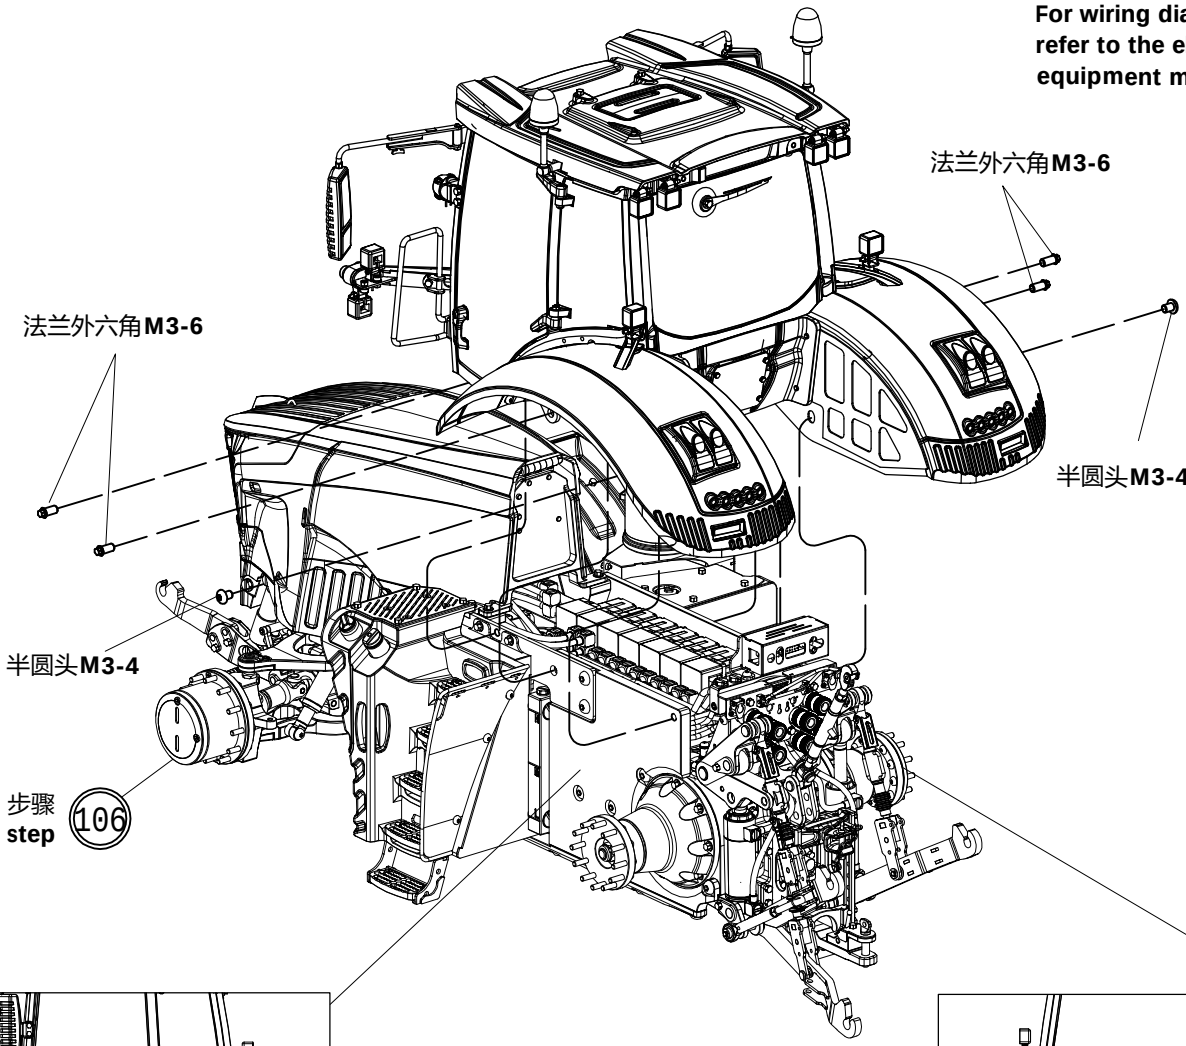


步骤 106
step

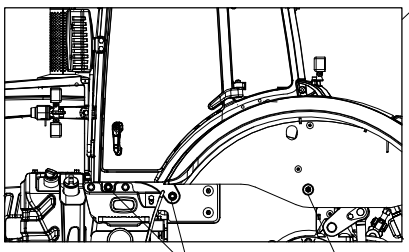

法兰外六角**M3-6**安装孔位
Locking flange nut Installation hole position

半圆头**M3-4**安装孔位
Hexagon socket button head screw Installation hole position

半圆头**M3-4**安装孔位
Hexagon socket button head screw Installation hole position

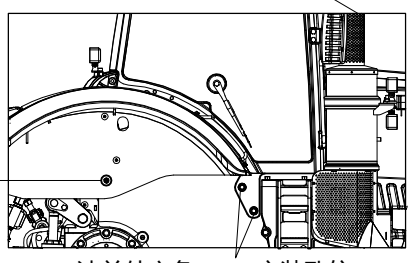


法兰外六角**M3-6**安装孔位
Locking flange nut Installation hole position

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87


LESU
MODEL RACING

175

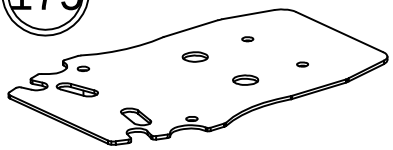


D1-16

半圆头M3-4 ×4
Hexagon socket button head screw

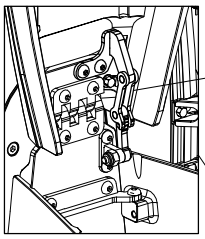


当引擎盖支撑架处于这个状态下引擎盖处于锁止状态，请不要关闭引擎盖，以防损坏
When the hood support bracket is in this state and the hood is locked, please do not close the hood to prevent damage

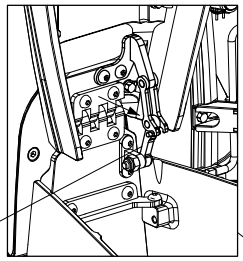

当支撑架处于锁止状态下，请拨动支撑架到图示状态，再关闭引擎盖
When the support frame is in the locked state, please move the support frame to the position shown in the diagram, and then close the engine hood

半圆头M3-4


特别注意
Pay Special Attention
打开引擎盖后再进行此步
Open the hood before proceeding with this step

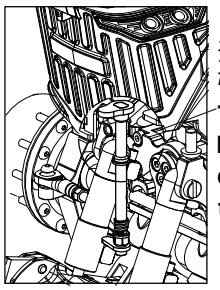

开关在此状态下引擎盖锁止
The switch locks the engine hood in this state

整理好电线，注意不要压坏电线
Organize the wires and be careful not to crush them

D1-16

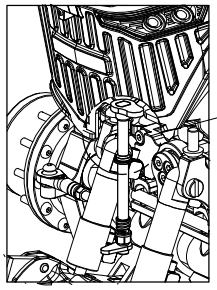


开关在此状态下可以开启或关闭引擎盖
The switch can open or close the hood in this state

如图示逆时针拨动C1-9来开启或关闭引擎盖
Rotate C1-9 counterclockwise as shown in the diagram to open or close the engine hood

176




G1-10

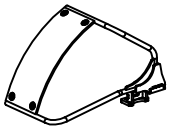

G1-11L

外六角M2-3 ×4
Hexagon screw

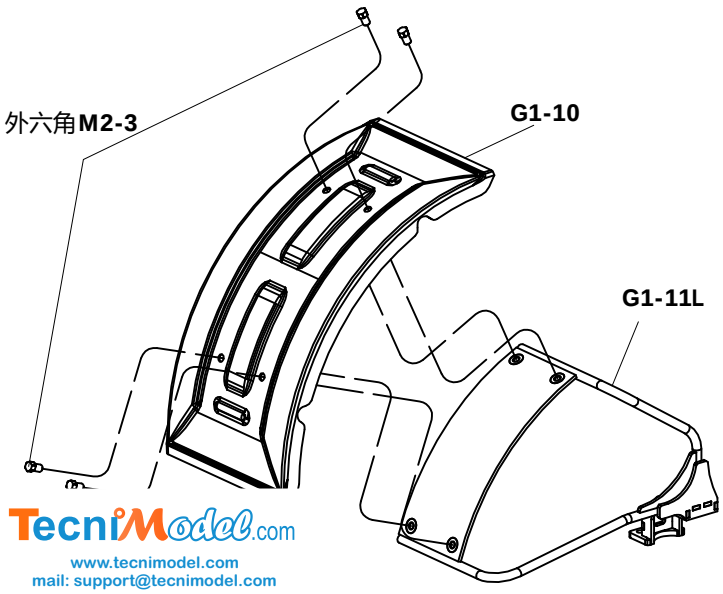

LESU MODEL RACING

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

177




G1-10




G1-11R

外六角M2-3 ×4
Hexagon screw

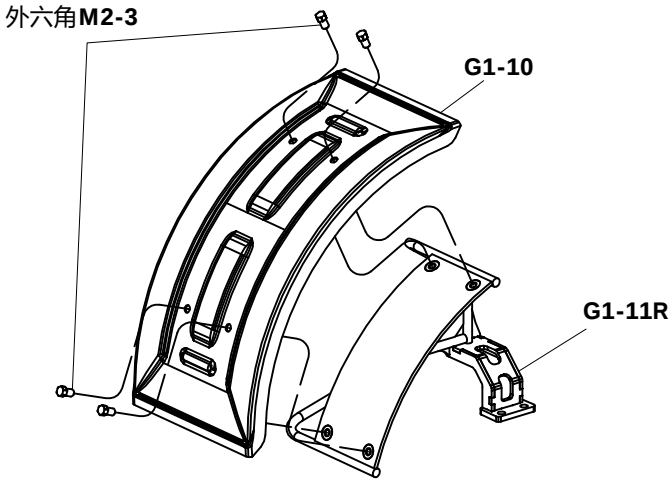


178

外六角M2-6 ×4
Hexagon screw

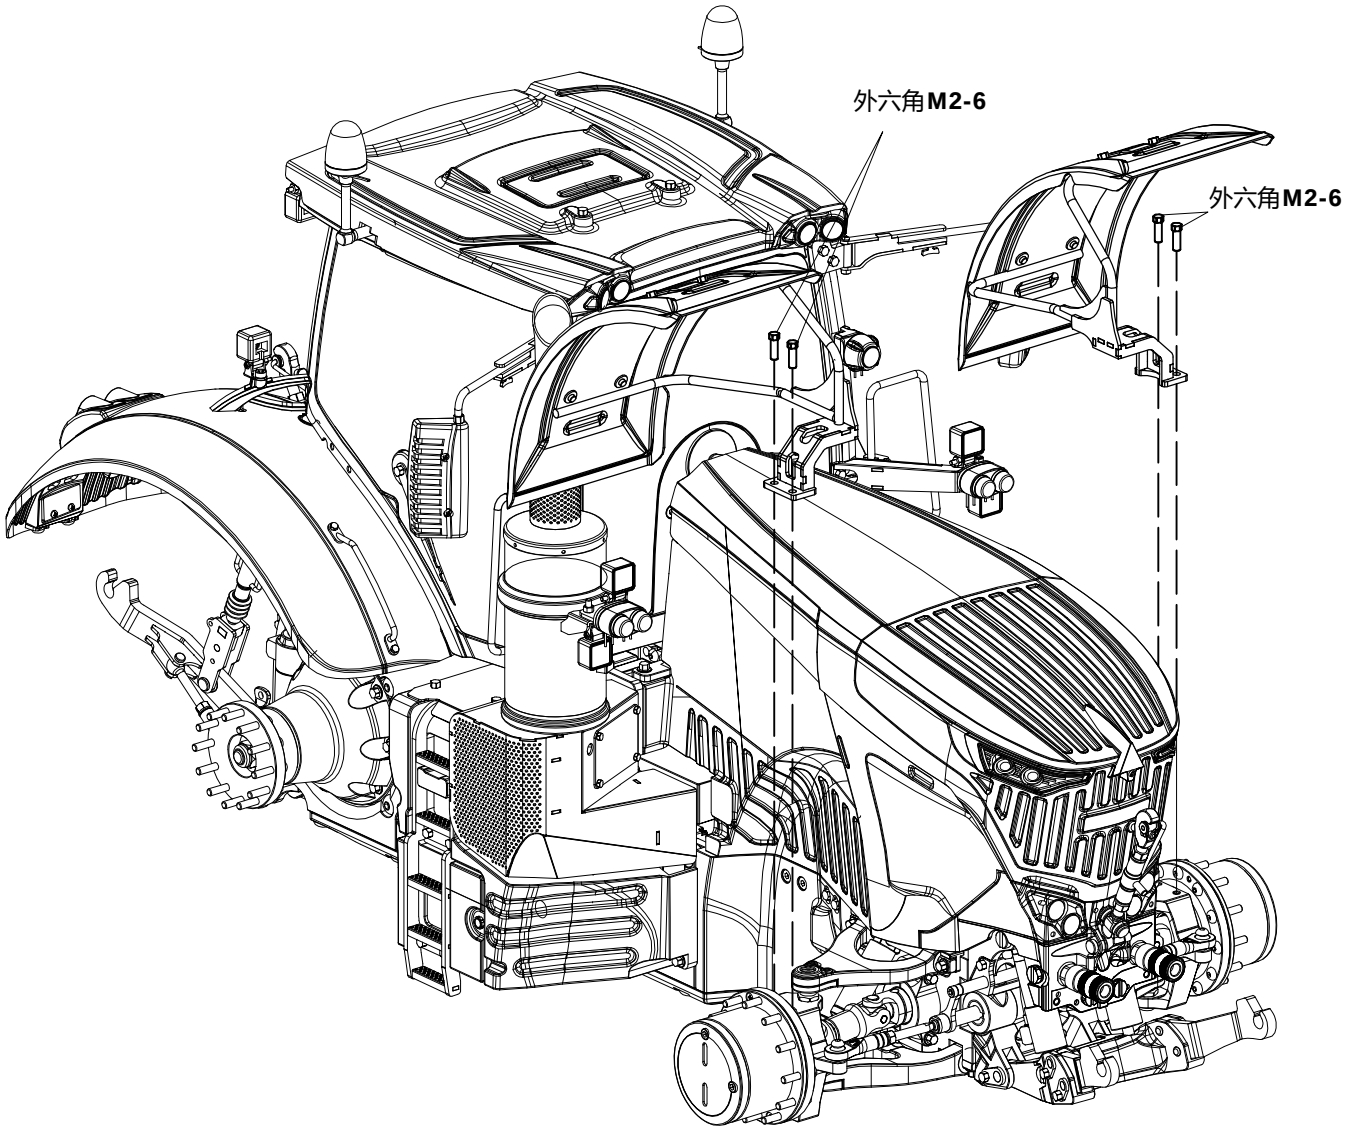


TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING

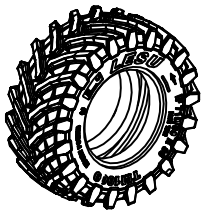


RD-2031-1 ×2

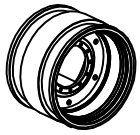


RD-2029-1 ×2

法兰外六角M3-4 **Locking flange nut** ×12

LA-LNM2-2-SUS ×12

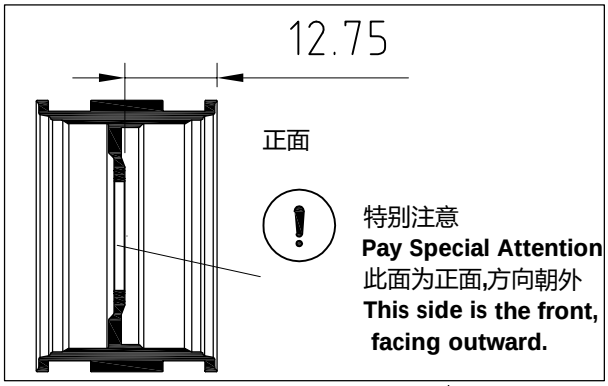

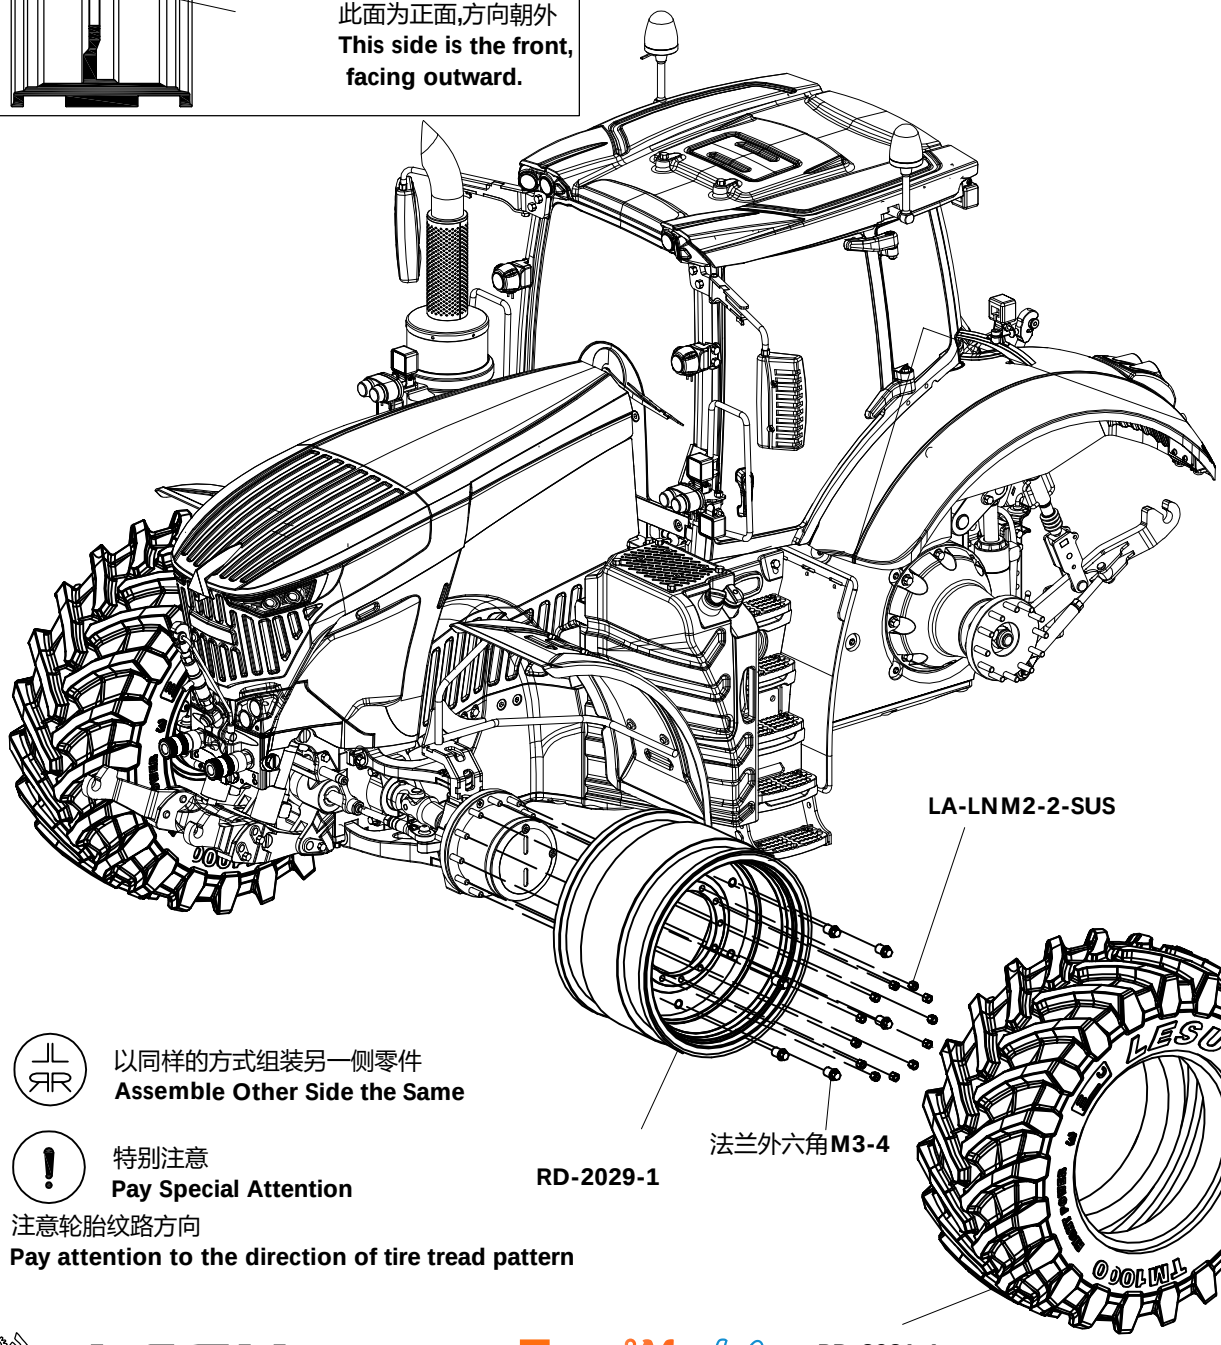


以同样的方式组装另一侧零件
Assemble Other Side the Same

特别注意
Pay Special Attention


注意轮胎纹路方向
Pay attention to the direction of tire tread pattern

LESU MODEL RACING
TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

180

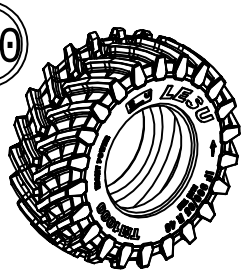

RD-2032-1 ×2

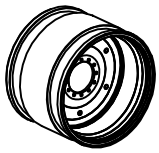

RD-2030-1 ×2



G1-12 ×2

法兰外六角**M3-4** ×12
Locking flange nut

LA-LNM2-2-SUS ×12



以同样的方式组装另一侧零件
Assemble Other Side the Same

特别注意
Pay Special Attention
注意轮胎纹路方向
Pay attention to the direction of tire tread pattern

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87

LESU
MODEL RACING



LESU

MODEL RACING

RD-A0018

2024092101

Designed by LESU

Website：**www.rclesu.com** **Tel**：**15913171757**
lesu168.taobao.com

Email：**rclesu@163.com** **Fax**：**0757-86611162**

Address：**Nanhai District of Foshan City，Guangdong Province，Danzao Town，NanshaDevelopment Zone.**

LESU Model Technology Co., Ltd.

TecniModel.com
www.tecnimodel.com
mail: support@tecnimodel.com
tel: 04 75 03 13 87